

MAXIM

MAX2247 Evaluation Kit

Evaluates: MAX2247

General Description

The MAX2247 evaluation kit (EV kit) simplifies evaluation of the MAX2247 power amplifier (PA). The kit enables testing of the device's RF performance and requires no additional support circuitry. The EV kit input and output use SMA connectors to facilitate the connection to RF test equipment.

Each kit is assembled with the MAX2247 and incorporates all matching components optimized for the 2.4GHz to 2.5GHz RF frequency band, and $P_{OUT} = +24\text{dBm}$. For lower power applications, see Table 2 for appropriate matching components.

Component List

DESIGNATION	QTY	DESCRIPTION
C1, C8, C10, C12, C32	5	22pF ceramic capacitors (0402) GRP1555C1H220J
C2, C6, C7, C9	4	10nF ceramic capacitors (0402) GRP155R71C103K
C3	1	2.7pF ceramic capacitor (0402) GRP1555C1H2R7B
C4, C5	2	47pF ceramic capacitors (0402) GRP1555C1H470J
C11	1	4.7 μF tantalum capacitor JMK212BJ475MG-B
C31	—	Open
C33	1	0.75pF ceramic capacitor (0402) GJ61555C1HR75B
L1	1	3.9nH inductor (0402) LL1005_FH3N95
R1	1	3k Ω $\pm 5\%$ resistor
R2	1	7.5k Ω $\pm 5\%$ resistor
R8	1	51k Ω $\pm 5\%$ resistor

Component Suppliers

SUPPLIER	PHONE	FAX
EFJohnson	402-474-4800	402-474-4858
Kamaya	260-489-1533	260-489-2261
Murata	800-831-9172	814-238-0490
Taiyo Yuden	800-348-2496	408-434-0375
Toko	800-715-8656	408-943-9790

Features

- ◆ Easy Evaluation of MAX2247
- ◆ +2.7V to +3.6V Single-Supply Operation
- ◆ Output Matched for 2.4GHz to 2.5GHz Operation
- ◆ Fully Assembled and Tested

Ordering Information

PART	TEMP RANGE	IC PACKAGE
MAX2247EVKIT	-40°C to +85°C	3 × 4 UCSP

Quick Start

The MAX2247 EV kit is fully assembled and factory tested. Follow the instructions in the *Connections and Setup* section for proper device evaluation.

Test Equipment Required

Table 1 lists the required test equipment to verify MAX2247 operation. It is intended as a guide only, and some substitutions are possible.

Connections and Setup

This section provides a step-by-step guide to operating the EV kit and testing the device's functions. Do not turn on DC power or RF signal generators until all connections are made.

Testing the Supply Current

- 1) Connect a 20dB attenuator to the OUT SMA connector on the EV kit. This prevents overloading of the power sensor and power meter.
- 2) Connect a DC supply set to +3.3V (through an ammeter, if desired) and connect a voltmeter to the EV kit's VCC and GND terminals. Do not turn on the supply.
- 3) Connect an RF signal generator to the IN SMA connector. Calibrate the generator to produce an 802.11b compatible -10dBm signal, at 2.45GHz output frequency. Do not turn on the output.
- 4) Connect the power sensor to the power meter. Calibrate the power sensor for 2.45GHz. Set the power meter offset to compensate the 20dB attenuator, the coupler, and any cable loss (from 0.5dB to 2dB), and circuit board losses (approximately 0.3dB).

MAX2247 Evaluation Kit

Table 1. Test Equipment Required

EQUIPMENT	QTY	DESCRIPTION
Power Supply	1	Capable of delivering up to 500mA at +2.7V to +3.6V
RF Signal Generator	1	Capable of delivering +10dBm of output power up to 2.5GHz with 802.11b-compatible source
RF Power Sensor	1	Capable of handling +20dBm of output power at the operating frequency (HP 8482A, or equivalent)
20dB High-Power Attenuator	1	—
Power Meter	1	Capable of handling +20dBm of output power at the operating frequency (HP EPM-441A, or equivalent)
Coupler	1	Capable of operating at the desired frequency
RF Spectrum Analyzer	1	Capable of measuring ACPR/ALT and covering the MAX2247's operating frequency range (Rohde and Schwarz FSEA20, or equivalent)
Ammeter/Voltmeter	2	—
50Ω SMA Cables	2	—
Network Analyzer (Optional)	1	For measuring small-signal return loss and gain

- 5) Connect the power sensor to the coupler. Connect one of the remaining terminals of the coupler to the 20dB high-power attenuator and another end to the spectrum analyzer.
- 6) Place the $\overline{\text{SHDN}}$ jumper in the ON position.
- 7) Turn on the DC supply. The idle current should read approximately 250mA.
- 8) Activate the RF generator output. Set the RF generator's output to produce a reading of +23dBm on the power meter. Adjust the supply voltage so that the voltmeter reads +3.3V. Adjust the output of the generator until the power meter reads +24dBm.
 - The supply current should increase to approximately 315mA.
 - The ACPR/ALT measurements should meet the MAX2247 EC table specifications.

Lower Power Applications

This evaluation kit can be easily modified for $P_{\text{OUT}} = +21\text{dBm}$, $+18\text{dBm}$, and $+15\text{dBm}$ applications by changing the position of C3 and the bias current and removing C33. (See Table 2 and Applications Notes.)

Layout

The EV kit's PC board can serve as a guide for laying out a board using the MAX2247.

Keep RF signal lines as short as possible to minimize losses and radiation. Always use controlled impedance lines on all high-frequency inputs and outputs, and use low-inductance connections to ground on all GND pins. Each VCC node on the PC board should have its own decoupling capacitor. Using a star topology for the supply layout, in which each VCC_ node on the circuit has a separate connection to a central VCC node, can further minimize coupling between the sections of the IC. (Refer to the MAX2247 data sheet.)

Table 2. EV Kit Modifications for $P_{\text{OUT}} = +21\text{dBm}$, $+18\text{dBm}$, and $+15\text{dBm}$ Applications

P_{OUT} (dBm)	C3 LOCATION	R1 (IBIAS)
+21	7	6.1kΩ (135mA)
+18	6	12kΩ (75mA)
+15	6	13kΩ (65mA)

MAX2247 Evaluation Kit

Evaluates: MAX2247

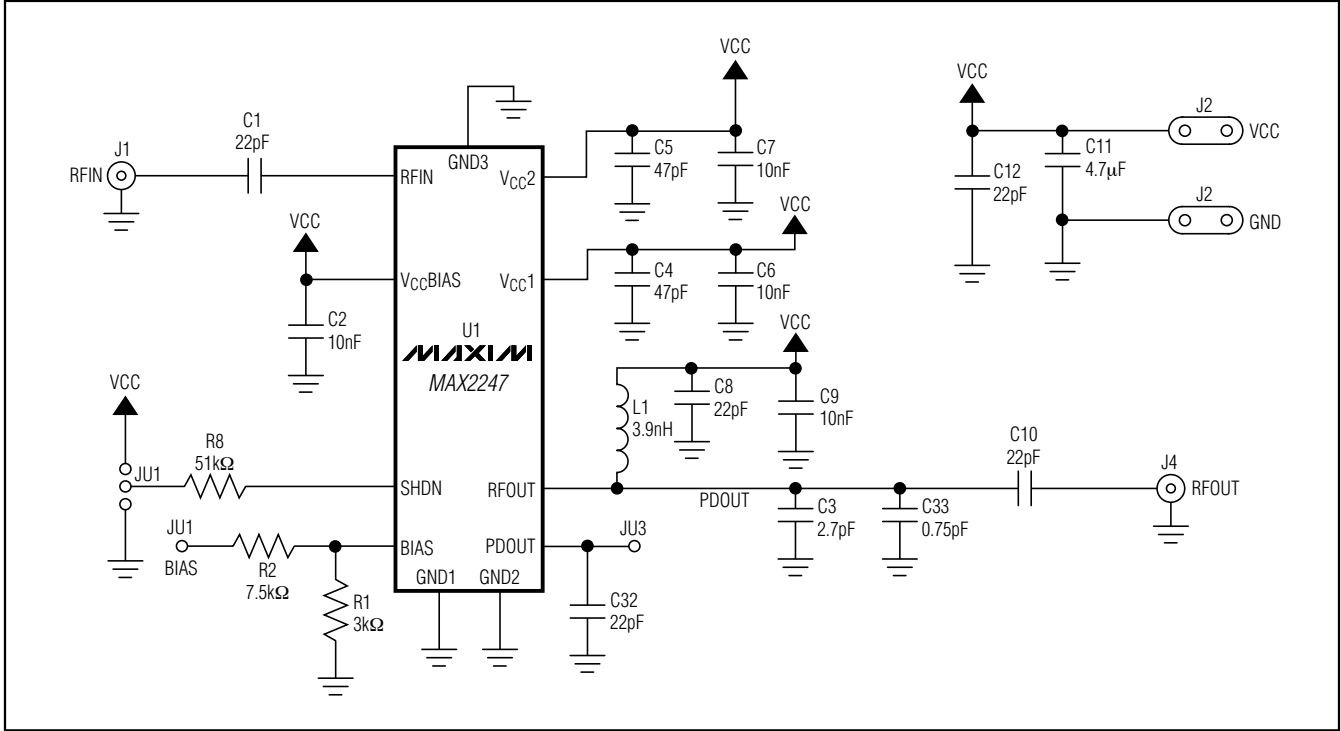


Figure 1. MAX2247 EV Kit Schematic

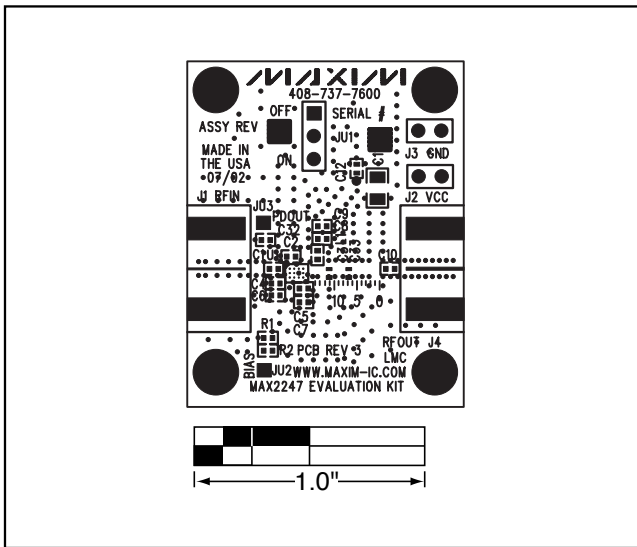


Figure 2. MAX2247 EV Kit Component Placement Guide—Primary-Side Silkscreen

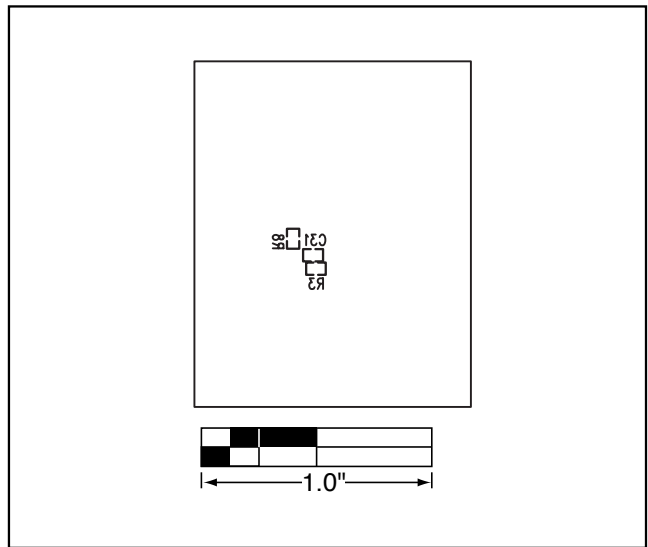


Figure 3. MAX2247 EV Kit Component Placement Guide—Secondary-Side Silkscreen

MAX2247 Evaluation Kit

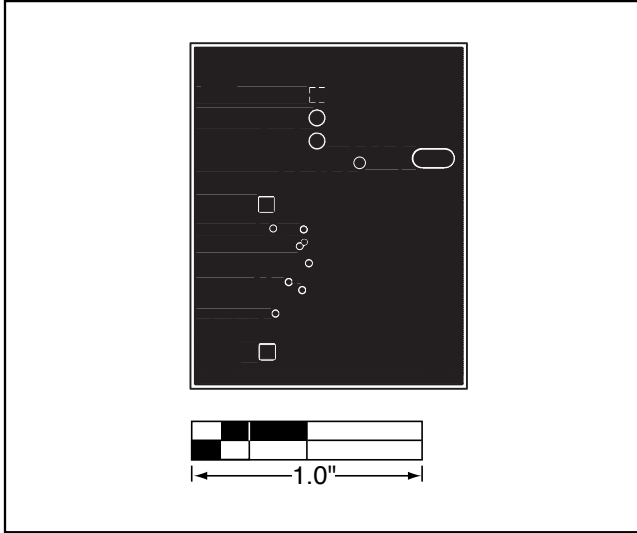


Figure 4. MAX2247 EV Kit PC Board Layout—Layer 2

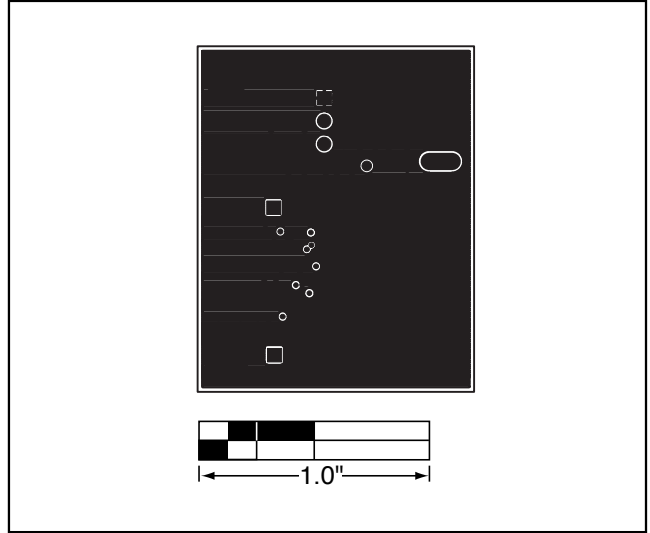


Figure 5. MAX2247 EV Kit PC Board Layout—Layer 3

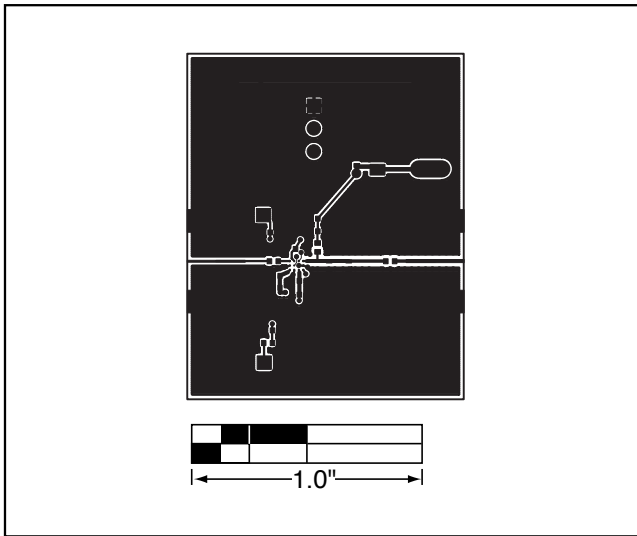


Figure 6. MAX2247 EV Kit PC Board Layout—Primary Component Side

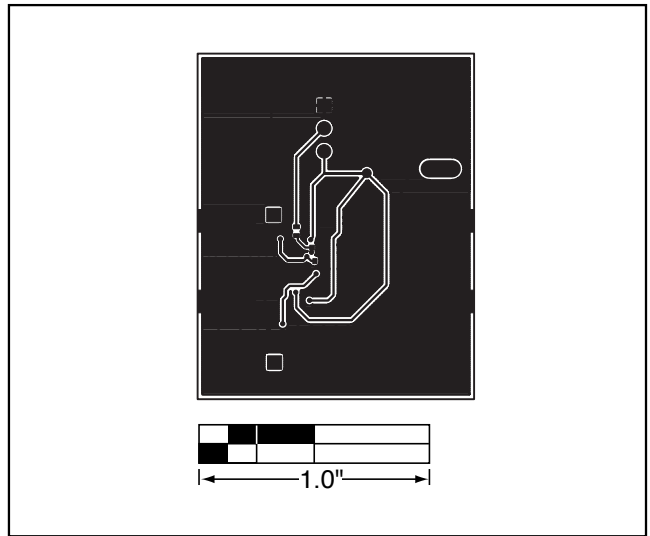


Figure 7. MAX2247 EV Kit PC Board Layout—Secondary Component Side

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

4 **Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600**