


Inductive Proximity Sensor

E2CA

Linear Output Proximity Sensor with High-accuracy Resolution


- Resolution is 0.05% of the maximum sensing distance. The model with a sensing distance of 1.2 mm ensures a resolution of 0.6 μm.
- Models with response frequencies ranging from 10 to 3 kHz are available.
- The M30-size model ensures a sensing distance of 10 mm.
- Satisfies IEC IP67 requirements, thus detecting the displacement of metal objects without being influenced by water and oil spray.
- The E2CA has a standard linear output of 4 to 20 mA and connects to the Linear Discrimination Unit, Digital Panel Meter, and I/O Unit of the Programmable Controller.
- The E2CA's compact amplifier can be plugged into surface mounting sockets thus greatly reducing wiring effort and ensuring easy mounting.

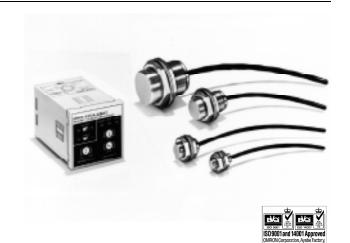



Ordering Information


Shield	Size	Sensing	Response frequency		Sensor Unit	Amplifier Unit	
		distance (Sn)	Linear output	Switching output		DC	AC
Shielded	M8	0.3 to 1.5 mm	10 kHz	1 kHz	E2CA-XIR5A	E2CA-AL4C	E2CA-AN4C
	M12	0.4 to 2 mm	10 kHz	800 Hz	E2CA-X2A	E2CA-AL4D	E2CA-AN4D
	M18	1 to 5 mm	5 kHz	350 Hz	E2CA-X5A	E2CA-AL4E	E2CA-AN4E
	M30	2 to 10 mm	3 kHz	100 Hz	E2CA-X10A	E2CA-AL4F	E2CA-AN4F


Application Examples

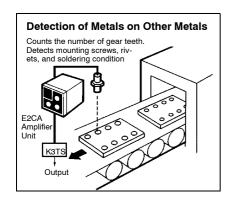


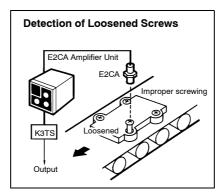


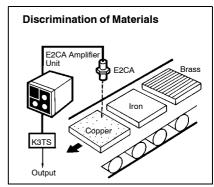


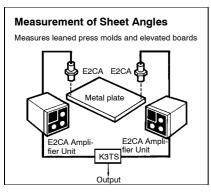

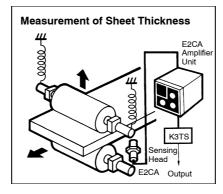

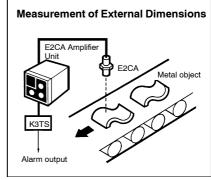

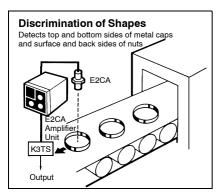

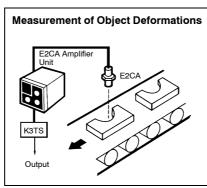

Specifications —


		Sensoi	r model	E2CA-	X1R5A	E20	CA-X2A		
Item Amplifier model			E2CA-AN4C	E2CA-AL4C	E2CA-AN4D	E2CA-AL4D			
Supply voltage (operating voltage range)			100 to 240 VAC 50/60 Hz (90 to 264 VAC)	12 to 24 VDC (10 to 30 VDC), ripple (p-p): 10% max.	100 to 240 VAC 50/60 Hz (90 to 264 VAC)	12 to 24 VDC (10 to 30 VDC), ripple (p-p): 10% max.			
Current consumption			60 mA max.	70 mA max.	60 mA max.	70 mA max.			
Sensing object			Ferrous metal						
Sensing range (with standard sensing object)			0.3 to 1.5 mm (8 x 8 x 1 mm iron) 0.4 to 2 mm (12 x 12 x 1 mm iron)			2 x 1 mm iron)			
Linear output		Resolution		0.05% FS					
characteristic	cs	Linearity		±2% FS ±1.5% FS					
		Response free (see note 1)	quency	10 kHz (-1 dB)		10 kHz (-1 dB)			
Switching ou characteristic		Differential tra	avel	2% to 5% of rated se	ensing distance	1			
		Response free (see note 2)		1 kHz		800 Hz			
Sensitivity adjustment function	(swite	itivity adjustme ching output)		Adjustments of switc					
iunction	Linea	ar output	4 mA	4-mA adjustment at 2	20% of rated sensing	distance			
		stment	20 mA	20-mA adjustment at	rated sensing distan	ce			
Output		Linear output (see note 3)	I	4 to 20 mA (with permissible load resistance of 0 to 300 Ω)					
	•	Switching out	put	100 mA max. transistor photocoupler output at 40 VDC with max. residual voltage of 2 V					
Switching ou	tput n	node		Normally open or nor	rmally closed (selecta	ble with selector on fro	ont panel)		
Cord length o	compe	ensation		3 or 5 m (selectable	with selector on front	panel)			
Indicators				POWER, SPAN (line	ar range), and OPER	(switching output) ind	icators		
Ambient tem	peratu	ire		Operating: -25°C to	70°C (Sensor) and -	0°C to 55°C (Amplifie	r) with no icing		
Ambient hum	nidity			Operating: 35% to 95	5% (Sensor) and 35%	to 85% (Amplifier)			
Temperature	influe	nce		±10% FS max. of line temperature range of		23°C in the rated ambi olifier Units	ent operating		
Voltage influ	ence			DC power supply model: ±0.5% FS max. of linear output current at a voltage between 80% and 120% of the rated power supply voltage AC power supply model: ±0.5% FS max. of linear output current at a voltage between 90% and 110% of the rated power supply voltage					
Insulation res	sistan	ce		50 MΩ min. (at 500 VDC) between the case and current carry parts					
Dielectric str	ength			DC power supply model: 1,000 VAC (50/60 Hz) for 1 min between current carry parts and case AC power supply model: 1,500 VAC (50/60 Hz) for 1 min between current carry parts and case					
Vibration resistance				Sensor (destruction): 10 to 55 Hz, 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions Amplifier (destruction): 10 to 25 Hz, 2-mm double amplitude for 2 hours each in X, Y, and Z directions					
Shock resistance				Sensor (destruction): 500 m/s² (approx. 50G) 3 times each in X, Y, and Z directions Amplifier (destruction): 100 m/s² (approx. 10G) 3 times each in X, Y, and Z directions					
Degree of pro	otectic	on		Sensor: IEC60529 IP67 (JEM IP67g waterproof and oil-proof)					
Cord length	-			Sensor: 2-conductor,	3-m-long (standard I	ength) or 5-m-long shi	elded cord		
Weight		Sensor		Approx. 40 g					
(see note 4)	·	Amplifier		Approx. 250 g	Approx. 140 g	Approx. 250 g	Approx. 140 g		
Material		Case		Brass					
		Sensing surfa	ce	ABS resin					
		Cord		Polyethylene		Polyethylene			


Sensor model		E2CA-X5A		E2CA-X10A			
Item Amplifier model		E2CA-AN4E	E2CA-AL4E	E2CA-AN4F	E2CA-AL4F		
Supply voltage (operating voltage range)			100 to 240 VAC 50/60 Hz (90 to 264 VAC)	12 to 24 VDC (10 to 30 VDC), ripple (p-p): 10% max.	100 to 240 VAC 50/60 Hz (90 to 264 VAC)	12 to 24 VDC (10 to 30 VDC), ripple (p-p): 10% max.	
Current consumption			60 mA max.	70 mA max.	60 mA max.	70 mA max.	
Sensing object			Ferrous metal			·	
Sensing range (with standard sensing object)			1 to 5 mm (18 x 18 x 1 mm iron) 2 to 10 mm (30 x 30 x 1 mm iron)			x 1 mm iron)	
Linear output		Resolution		0.05% FS			
characteristic	CS	Linearity		±1.5% FS		±2% FS	
		Response free (see note 1)	quency	5 kHz (-1 dB) 3 kHz (-1 dB)			
Switching ou		Differential tra	vel	2% to 5% of rated se	nsing distance		
characteristic	cs	Response free (see note 2)	quency	350 Hz 100 Hz			
Sensitivity adjustment	(swit	itivity adjustme ching output)	ent	Adjustments of switc	hing output within se	nsing range	
function	Linea	ar output	4 mA	4-mA adjustment at 20% of rated sensing distance			
		stment	20 mA	20-mA adjustment at rated sensing distance			
Output	Output Linear output (see note 3)			4 to 20 mA (with permissible load resistance of 0 to 300 $\Omega)$			
	•	Switching out	put	100 mA max. transistor photocoupler output at 40 VDC with max. residual voltage of 2 V			
Switching ou	ıtput n	node		Normally open or normally closed (selectable with selector on front panel)			
Cord length	compe	ensation		3 or 5 m (selectable	with selector on front	panel)	
Indicators				POWER, SPAN (line	ar range), and OPER	(switching output) ind	licators
Ambient tem	•	ıre		, ,	, ,	10°C to 55°C (Amplifie	r) with no icing
Ambient hun				Operating: 35% to 95			
Temperature	influe	nce		±10% FS max. of ser range of -10°C and 4		C in the rated ambient	operating temperature
Voltage influ	ence			DC power supply model: ±0.5% FS max. of linear output current at a voltage between 80% and 120% of the rated power supply voltage AC power supply model: ±0.5% FS max. of linear output current at a voltage between 90% and 110% of the rated power supply voltage			
Insulation res				50 M Ω min. (at 500 \	/DC) between the ca	se and current carry page	arts
Dielectric str	ength			DC power supply model: 1,000 VAC (50/60 Hz) for 1 min between current carry parts and case AC power supply model: 1,500 VAC (50/60 Hz) for 1 min between current carry parts and case			
Vibration resistance				Sensor (destruction): 10 to 55 Hz, 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions Amplifier (destruction): 10 to 25 Hz, 2-mm double amplitude for 2 hours each in X, Y, and Z directions			
Shock resistance				Sensor (destruction): 500 m/s² (approx. 50G) 3 times each in X, Y, and Z directions Amplifier (destruction): 100 m/s² (approx. 10G) 3 times each in X, Y, and Z directions			
Degree of Protection				Sensor: IEC60529 IP67 (JEM IP67g waterproof and oil-proof)			
Cord length		T		Sensor: 2-conductor,	3-m-long (standard I	ength) or 5-m-long shi	elded cord
Weight (see note 4)		Sensor		Approx. 60 g Approx. 160 g			
		Amplifier		Approx. 250 g	Approx. 140 g	Approx. 250 g	Approx. 140 g
Material		Case		Brass			
		Sensing surfa	ce	ABS resin			
		Cord		Polyethylene			


- Note: 1. This is a frequency decreasing the level of linear output current by 1 dB.
 - 2. This is a response frequency measured in accordance with CENELEC standards.
 - 3. The maximum load impedance of the E2CA-AL4 is 150 Ω at a supply voltage of 12 V.
 - 4. The weight includes the 3-m-long cord. The weights of the Amplifiers do not include connecting sockets.


Engineering Data

Sensing Distance vs. Output Current (Typical)

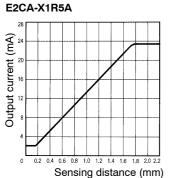

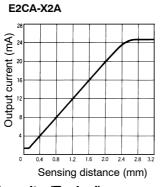

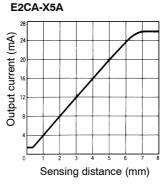


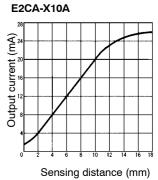


Sensing Object Size vs. Linearity (Typical) E2CA-X2A

E2CA-X1R5A

Sensing object material: Iron t= Linearity (% of full scale) Sensing distance X (mm)

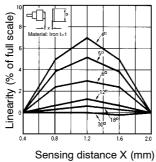


E2CA-X5A Linearity (% of full scale) Sensing distance X (mm)

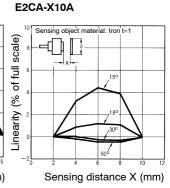


Column Diameter vs. Linearity (Typical)

E2CA-X1R5A

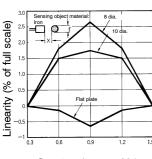


Sensing distance X (mm)

E2CA-X2A

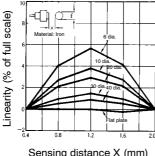


Sensing distance X (mm)

E2CA-X5A

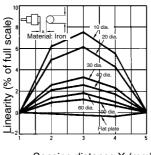

Sensing distance X (mm)

E2CA-X10A

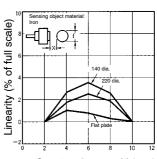


Sensing distance X (mm)


Nomenclature

Selector and Adjuster Settings

(1) Operation Mode Selector

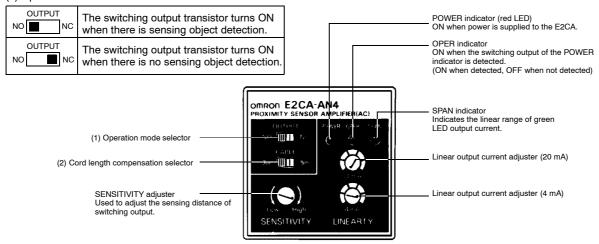

 (2) Cord Length Compensation Selector Set the selector to 3 m or 5 m according to the length of the Sensor cord in use.



Linear Output Adjustment (LINEARITY Adjuster)

Step	1	2	3	Remarks
Positioning		20% of rated sensing distance Standard object	Rated sensing distance Standard object	
LINEARITY adjuster		4 mA	20 mA	
Adjustment procedure	Connect an ammeter across terminals 1 and 2. Shielded cord 8 7 6 5 output output (h) (photocoupler output) P2CF-11 Front-connecting Socket Unit connected to the Amplifier Unit with the P2CF-11 Front-connecting Socket mounted.	Place the standard object at 20% of the rated sensing distance away from the Sensor Unit. Turn the 4 mA LINEARITY adjuster slowly clockwise (the output current is increased) or counterclockwise (the output current is decreased) to set the output current to 4 mA. (SPAN indicator is ON.)	Fasten the standard object at the rated sensing distance. Turn the 20-mA LINEARITY adjuster slowly clockwise (the output current is increased) or counterclockwise (the output current is decreased) to set the output current to 20 mA. (SPAN indicator is ON.)	To further improve the adjustment accuracy, set again the position of the standard object in the order of steps 2 and 3. Perform minute adjustment of the output current.

Sensitivity (Distance) Adjustment

Detecting	Standard target (See Note at below right.)
condition	S
	Standard object
SENSITIVITY	
adjuster	
	Low High
	SENSITIVITY
Adjustment	Place the standard object at the specified
procedure	position. Slowly turn the SENSITIVITY
l'	adjuster clockwise (toward "High") and stop
	it when the OPER. indicator illuminates.
	Move the object to confirm that the OPER.
	indicator is ON when the object is at the
	specified position and that it is OFF when
	the object is moved away from that
	position.


Compensation of Cord Length Difference

Set the CABLE selector to the required position according to the length of the cord being used (3 m or 5 m).


CABLE	3-m cord
3 m 📕 5 m	
CABLE	5-m cord
3 m 📕 5 m	

Operation

Output Circuit

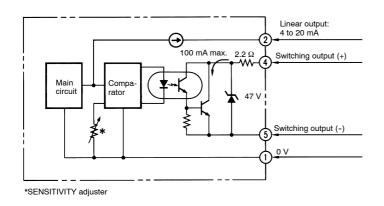

Timing Chart

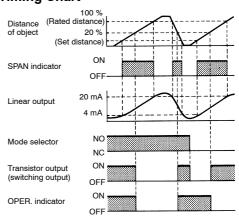


■ Connections


Connections between Sensor Units and Amplifier Units

E2CA-AL4□+Sensor Unit


E2CA-AN4□+Sensor Unit

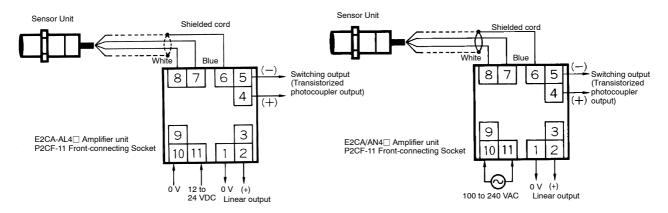


Note: The above illustrations show the terminal arrangement viewed from the rear of the socket, which is coupled to the Amplifier Unit.

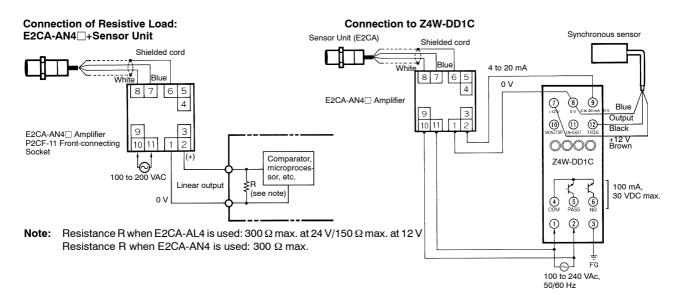


Connection to K3TS-SD12

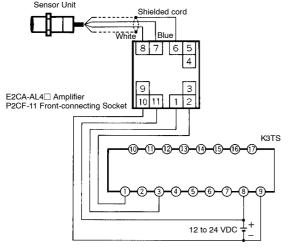

Connection to K3TX-AD22

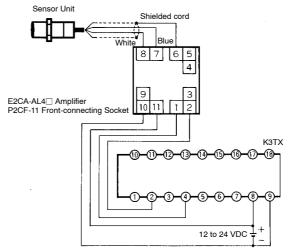


CQM1 Linear Sensor Interface Unit

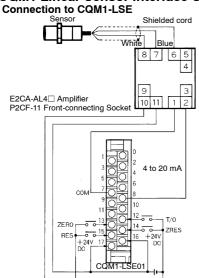


Dimensions


Note: All units are in millimeters unless otherwise indicated.

Sensor Units

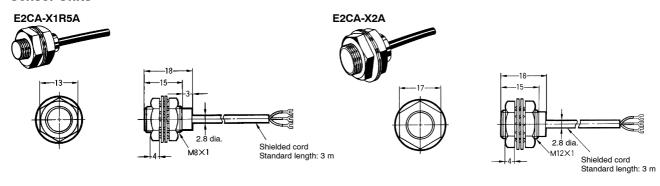

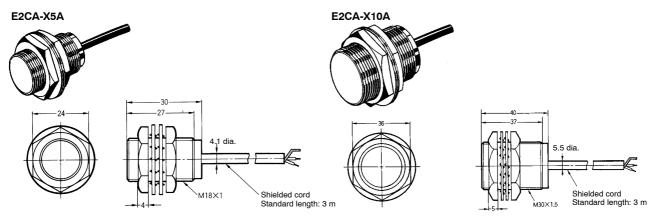

Amplifier Units

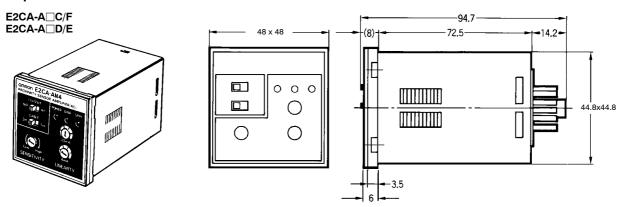

Mounting Hole Dimensions



Model	F (mm)
E2CA-X1R5A	8.5 ^{+0.5} dia.
E2CA-X2A	12.5 ^{-0.5} dia.
E2CA-X5A	18.5 ^{+0.5} dia.
E2CA-X10A	30.5 ^{-0.5} dia.


Accessories (Order Separately)



Mounting Fixture (Y92E-B Series)

Four types of exclusive resin mounting fixtures are optionally available. Select the type suited to the dimensions of the Sensor.

Y92F-30 Adapter for Flush Mounting

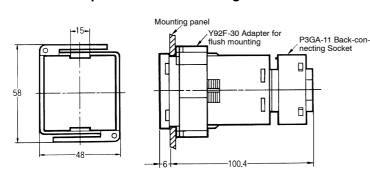


Y92A-48B Protective Cover

The protective hard plastic cover shields the front panel, particularly the setting section, from dust, dirt, and water drip.




Connecting Sockets for E2CA-A□4□


P2CF-11 Front-connecting Socket (Track Mounted)

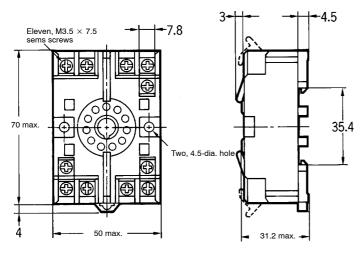

Terminal Arrangement (Top View)

 



Mounting Holes

 


Note: The Socket can be mounted to a track.

P3GA-11 Back-connecting Socket

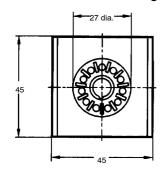


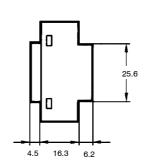

Terminal Arrangement (Bottom View)

 


PL11 Back-connecting Socket (Solder Terminal)

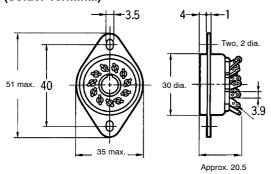

Terminal Arrangement (Bottom View)



Mounting Holes

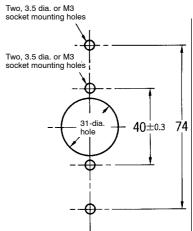

Precautions

Correct Use

Mounting

Do not tighten the nut of the Sensor with excessive force. Be sure to use the washer with the nut when tightening.




Model	Tightening torque
E2CA-X1R5A	1.96 N • m (20 kgf • cm)
E2CA-X2A	5.9 N • m (60 kgf • cm)
E2CA-X5A	14.7 N • m (150 kgf • cm)
E2CA-X10A	39.2 N • m (400 kgf • cm)

Note: The above tightening torque applies when a toothed washer is used.

Effects of Surrounding Metal

 Be sure to separate the Sensor from surrounding metal objects as shown in the following illustration if the Sensor is embedded.




Model/Distance	ℓ	d	D	m
E2CA-X1R5A	0	(8)	0	4.5
E2CA-X2A	0	(12)	0	6
E2CA-X5A	0	(18)	0	15
E2CA-X10A	0	(30)	0	30

Note: The values for "d" indicate distances for the outer diameter of the shielded models.

Mutual Interference

 If the Sensors are mounted in parallel or face-to-face, be sure to keep the clearance between the Sensors as specified in the table.




Model/Distance	Α	В
E2CA-X1R5A	30	20
E2CA-X2A	30	20
E2CA-X5A	50	35
E2CA-X10A	100	75

Sensor Cord

The Sensor cord must be either 3 or 5 m. Do not cut or extend the Sensor cord, otherwise the E2CA may not provide the specified output.


Mounting the Amplifier Unit

When mounting more than one amplifier vertically, it is recommended that a margin of approximately 20 mm above and below the Socket be provided in consideration of the space required by the hook of the Socket.

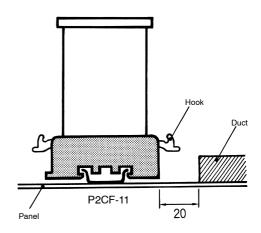


Enclosed Mounting


If the Y92F-30 Adapter is used, insert the E2CA into the square hole from the front side of the panel and slide the Y92F-30 onto the E2CA from the rear side of the E2CA. Then press the Y92F-30 so that the space between the Y92F-30 and the panel is reduced as much as possible. Finally, secure the Y92F-30 with screws.

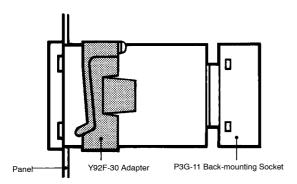

Removing the Amplifier Unit

If the Y92F-30 is used, loosen the screws of the Y92F-30, spread out the hooks, and remove the Y92F-30.

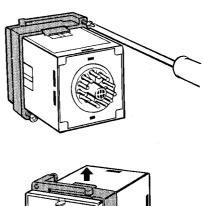

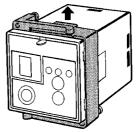

Others

The accuracy of the E2CA will vary with the on-site environment. The resolution, temperature characteristics, and voltage characteristic linearity are especially affected. Therefore, keep the on-site environment as suitable for the E2CA as possible.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

Cat. No. D77-E1-1 In the interest of product improvement, specifications are subject to change without notice.

OMRON Corporation

Industrial Sensors Division
Sensing Devices and Components Division H.Q.
28th Fl., Crystal Tower Bldg.
1-2-27, Shiromi, Chuo-ku,
Osaka 540-6028 Japan

Phone: (81)6-949-6012 Fax: (81)6-949-6021

Printed in Japan 0398-0.5M (0398) a