


M58PR512LE M58PR001LE

512-Mbit or 1-Gbit (× 16, multiple bank, multilevel, burst) 1.8 V supply Flash memories

Features

- Supply voltage
 - V_{DD} = 1.7 V to 2.0 V for program, erase and read
 - V_{DDQ} = 1.7 V to 2.0 V for I/O buffers
 - V_{PP} = 9 V for fast program
- Synchronous/asynchronous read
 - Synchronous burst read mode: 108 MHz, 66 MHz
 - Asynchronous page read mode
 - Random access: 96 ns
- Programming time
 - 4.2 µs typical word program time using Buffer Enhanced Factory Program command
- Memory organization
 - Multiple bank memory array:
 64 Mbit banks (512 Mb devices)
 128 Mbit banks (1 Gb devices)
 - Four EFA (extended flash array) blocks of 64 Kbits
- Dual operations
 - Program/erase in one bank while read in others
 - No delay between read and write operations
- Block locking
 - All blocks locked at power-up
 - Any combination of blocks can be locked with zero latency
 - WP for block lock-down
 - Absolute Write protection with V_{PP} = V_{SS}

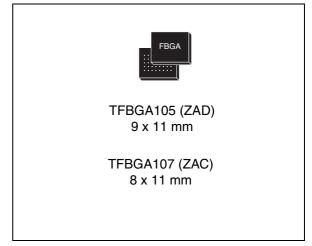

- Security
 - 64 bit unique device number
 - 2112 bit user programmable OTP cells
- CFI (common flash interface)
- 100 000 program/erase cycles per block
- Electronic signature
 - Manufacturer code: 20h
 - 512 Mbit device: 8819
 - 1 Gbit device: 880F
- ECOPACK® package available.

Contents

1	Desci	ription	. 9
2	Signa	al descriptions	17
	2.1	Address inputs (A0-Amax)	17
	2.2	Data inputs/outputs (DQ0-DQ15)	17
	2.3	Chip Enable (\overline{E})	17
	2.4	Output Enable (\overline{G})	17
	2.5	Write Enable (\overline{W})	17
	2.6	Write Protect (WP)	17
	2.7	Reset (RP)	18
	2.8	Deep power-down (DPD)	18
	2.9	Latch Enable (\overline{L})	18
	2.10	Clock (K)	18
	2.11	Wait (WAIT)	18
	2.12	V _{DD} supply voltage	19
	2.13	V _{DDQ} supply voltage	19
	2.14	V _{PP} program supply voltage	19
	2.15	V _{SS} ground	19
	2.16	V _{SSQ} ground	19
3	Bus c	pperations	20
	3.1	Bus Read	20
	3.2	Bus Write	20
	3.3	Address Latch	20
	3.4	Output Disable	20
	3.5	Standby	21
	3.6	Reset	21
	3.7	Deep power-down (DPD)	21
4	Comr	mand interface	23
	4.1	Read Array command	24
	4.2	Read Status Register command	24

	4.3	Read El	lectronic Signature command	25
	4.4	Read C	FI Query command	25
	4.5	Clear S	tatus Register command	26
	4.6	Block E	rase command	26
	4.7	Progran	n command	27
	4.8	Buffer P	Program command	28
	4.9	Buffer E	nhanced Factory Program command	29
		4.9.1	Setup phase	29
		4.9.2	Program and verify phase	30
		4.9.3	Exit phase	30
	4.10	Progran	n/Erase Suspend command	31
	4.11	Progran	n/Erase Resume command	32
	4.12	Protecti	on Register Program command	32
	4.13	Set Cor	figuration Register command	33
	4.14	Block Lo	ock command	33
	4.15	Block U	nlock command	33
	4.16	Block Lo	ock-down command	34
	4.17	Blank C	heck command	34
	4.18	Set Enh	anced Configuration Register command	35
	4.19	Read E	FA Block command	35
	4.20	Progran	n EFA Block command	36
	4.21	Erase E	FA Block command	36
	4.22	Suspen	d EFA Block command	37
	4.23	Resume	e EFA Block command	38
	4.24	Lock EF	FA Block command	38
	4.25	Unlock l	EFA Block command	39
	4.26	Lock-do	wn EFA Block command	39
5	Droam	ıom ono	rations	42
J	•	•	rations	
	5.1	_	n regions	
	5.2	Ū	n modes	
		5.2.1	Control program mode	
	E 0	5.2.2 Dragran		
	5.3	Progran	n methods	45

		5.3.1	Single word program method	46
		5.3.2	Buffer program method	46
		5.3.3	Buffer enhanced factory program method	47
6	Statu	ıs regist	ter	18
	6.1	Control	program mode status bit (SR9)	48
	6.2	Object	program mode status bit (SR8)	49
	6.3	Prograr	m/Erase Controller status bit (SR7)	49
	6.4	Erase s	suspend status bit (SR6)	49
	6.5	Erase s	status bit (SR5)	50
	6.6	Prograr	m status bit (SR4) t	50
	6.7	V _{PP} sta	itus bit (SR3)	50
	6.8	Prograr	m Suspend Status bit (SR2)	51
	6.9	Block p	rotection status bit (SR1)	51
	6.10	Bank w	rite/multiple word program status bit (SR0)	51
7	Conf	iguratio	n register	53
	7.1	Read s	elect bit (CR15)	53
	7.2	X laten	cy bits (CR14-CR11)	53
	7.3	Wait po	olarity bit (CR10)	54
	7.4	Wait co	onfiguration bit (CR8)	54
	7.5	Burst le	ength bits (CR2-CR0)	54
8	Enha	nced co	onfiguration register	58
	8.1	Deep p	ower-down mode bit (ECR15)	58
	8.2	Deep p	ower-down polarity bit (ECR14)	58
	8.3	Output	driver control bits (ECR2-ECR0)	58
9	Exte	nded fla	sh array (EFA)	60
10	Read	l modes		31
	10.1	Asynch	ronous read mode	61
	10.2	Synchro	onous burst read mode	62
	10.3	Single	synchronous read mode	62

11	Dual operations and multiple bank architecture63
12	Block locking
	12.1 Reading a block's lock status
	12.2 Locked state 65
	12.3 Unlocked state 65
	12.4 Lock-down state
	12.5 Locking operations during erase suspend
13	Program and erase times and endurance cycles 68
14	Maximum ratings
15	DC and AC parameters
16	Package mechanical
17	Part numbering90
Appendix	A Block address tables
Appendix	B Common flash interface
Appendix	C Flowcharts and pseudocodes
Appendix	D Command interface state tables
18	Revision history122

List of tables

Table 1.	Signal names	11
Table 2.	M58PR512LE bank architecture	14
Table 3.	M58PR001LE bank architecture	14
Table 4.	EFA memory map	15
Table 5.	Bus operations	22
Table 6.	Command codes	23
Table 7.	Standard commands	40
Table 8.	Factory Program command	41
Table 9.	Electronic signature codes	41
Table 10.	Protection Register locks	42
Table 11.	Program methods available with each program mode	47
Table 12.	Relationships between program methods and program modes	47
Table 13.	Status register bits	
Table 14.	X latency settings	54
Table 15.	Configuration register	55
Table 16.	Burst type definition	56
Table 17.	Enhanced configuration register	59
Table 18.	Dual operations allowed in other banks	63
Table 19.	Dual operations allowed in same bank	64
Table 20.	Dual operation limitations	64
Table 21.	Lock status	67
Table 22.	Program/erase times and endurance cycles	68
Table 23.	Absolute maximum ratings	70
Table 24.	Operating and AC measurement conditions	71
Table 25.	Capacitance	72
Table 26.	DC characteristics - currents	73
Table 27.	DC characteristics - voltages	74
Table 28.	Asynchronous read AC characteristics	
Table 29.	Synchronous read AC characteristics	80
Table 30.	Write AC characteristics, write enable controlled	82
Table 31.	Write AC characteristics, Chip Enable controlled	84
Table 32.	Reset and power-up AC characteristics	85
Table 33.	Deep power-down AC characteristics	86
Table 34.	TFBGA105 9 \times 11 mm - 9 \times 12 active ball array, 0.8 mm pitch, mechanical data	88
Table 35.	Stacked TFBGA107 8 \times 11 mm - 9 \times 12 active ball array, 0.8 mm pitch,	
	package mechanical data	
Table 36.	Ordering information scheme	90
Table 37.	M58PR512LE - bank base addresses	91
Table 38.	M58PR001LE - bank base addresses	92
Table 39.	M58PR512LE - block addresses	93
Table 40.	M58PR001LE - block addresses	94
Table 41.	Query structure overview	
Table 42.	CFI query identification string	
Table 43.	CFI query system interface information	
Table 44.	Device geometry definition	
Table 45.	Primary algorithm-specific extended query table	
Table 46.	Protection Register information	
Table 47.	Burst Read information	. 101

M58PR512LE, M58PR001LE

List of tables

Table 48.	Bank and erase block region information	102
Table 49.	Bank and erase block region 1 information	102
Table 50.	Extended flash array bank and erase block region information	103
Table 51.	Extended flash array bank and erase block region 1 information	104
Table 52.	Command interface states - modify table, next state 1	115
Table 53.	Command interface states - modify table, next state 2	117
Table 54.	Command interface states - modify table, next output 1	119
Table 55.	Command interface states - modify table, next output 2	120
Table 56.	Document revision history	122

№ numonyx 7/123

List of figures

Figure 1.	Logic diagram	
Figure 2.	TFBGA105 connections (top view through package)	12
Figure 3.	TFBGA107 connections (top view through package)	
Figure 4.	Memory map	15
Figure 5.	Main array architecture	16
Figure 6.	Protection Register memory map	42
Figure 7.	Program regions configured in control or object program mode	45
Figure 8.	X latency and data output configuration example	56
Figure 9.	Wait configuration example	57
Figure 10.	AC measurement I/O waveform	71
Figure 11.	AC measurement load circuit	72
Figure 12.	Asynchronous random access read AC waveforms	75
Figure 13.	Asynchronous page read AC waveforms	76
Figure 14.	Synchronous burst read AC waveforms	78
Figure 15.	Single synchronous read AC waveforms	79
Figure 16.	Clock input AC waveform	79
Figure 17.	Write AC waveforms, write enable controlled	81
Figure 18.	Write AC waveforms, Chip Enable controlled	83
Figure 19.	Reset and power-up AC waveforms	85
Figure 20.	Deep power-down AC waveforms	86
Figure 21.	Reset during deep power-down AC waveforms	86
Figure 22.	TFBGA105 9 \times 11 mm - 9 \times 12 active ball array, 0.8 mm pitch, package outline	87
Figure 23.	TFBGA107 8 \times 11 mm - 9 \times 12 active ball array, 0.8 mm pitch, package outline	88
Figure 24.	Program and EFA block program flowchart and pseudocode	106
Figure 25.	Buffer program flowchart and pseudocode	
Figure 26.	Program suspend and resume flowchart and pseudocode	108
Figure 27.	Block erase and EFA block erase flowchart and pseudocode	
Figure 28.	Erase suspend and resume flowchart and pseudocode	
Figure 29.	Main array and EFA locking operations flowchart and pseudocode	
Figure 30.	Blank check flowchart and pseudocode	
Figure 31.	Protection Register program flowchart and pseudocode	113
Figure 32.	Buffer enhanced factory program flowchart and pseudocode	114

1 Description

The M58PR512LE and M58PR001LE are 512 Mbit (32 Mbit x 16) and 1 Gbit (64 Mbit x 16) non-volatile flash memories. They are collectively referred to as the M58PRxxxLE in the rest of the document, unless otherwise specified.

The M58PRxxxLE may be erased electrically at block level and programmed in-system on a word-by-word basis using a 1.7 V to 2.0 V V_{DD} supply for the circuitry and a 1.7 V to 2.0 V V_{DDQ} supply for the input/output pins. An optional 9 V V_{PP} power supply is provided to speed up factory programming.

The M58PRxxxLE has a uniform block architecture and is based on a multilevel cell technology:

- The M58PR512LE has an array of 256 blocks, and is divided into 64 Mbit banks. There
 are 8 banks each containing 32 blocks of 128 KWords.
- The M58PR001LE has an array of 512 blocks, and is divided into 128 Mbit banks.
 There are 8 banks each containing 64 blocks of 128 KWords.

Each block contains 256 program regions of 1 Kbyte each, that are divided into 32 segments of 16 words. Each segment is split into two halves (A and B), according by the value on address input A3.

The memory map is illustrated in Figure 4 and the main array architecture in Figure 5.

The multiple bank architecture allows dual operations. While programming or erasing in one bank, read operations are possible in other banks. Only one bank at a time is allowed to be in program or erase mode. It is possible to perform burst reads that cross bank boundaries. The bank architectures are summarized in *Table 2* and *Table 3*, and the memory maps are shown in *Figure 4* and .

Each block can be erased separately. Erase can be suspended to perform a program or read operation in any other block, and then resumed. Program can be suspended to read data at any memory location except for the one being programmed, and then resumed. Each block can be programmed and erased over 100 000 cycles using the supply voltage V_{DD} . There is a buffer enhanced factory programming command available to speed up programming.

Program and erase commands are written to the command interface of the memory. An internal Program/Erase Controller takes care of the timings necessary for program and erase operations. The end of a program or erase operation can be detected and any error conditions identified in the status register. The command set required to control the memory is consistent with JEDEC standards.

The device supports synchronous burst read and asynchronous read from all blocks of the memory array; at power-up the device is configured for asynchronous read. In synchronous burst read mode, data is output on each clock cycle at frequencies of up to 108 MHz.

The device features an automatic standby mode and deep power-down mode. When the bus is inactive during asynchronous read operations, the device automatically switches to automatic standby mode. In this state the power consumption is reduced to the standby value and the outputs are still driven.

The DPD (deep power-down) mode starts when the device is properly configured (ECR bit 15 is set) and the DPD signal is asserted. In DPD mode the device has the lowest power consumption.

The M58PRxxxLE features an instant, individual block locking scheme that allows any block to be locked or unlocked with no latency, enabling instant code and data protection. All blocks have three levels of protection. They can be locked and locked-down individually preventing any accidental programming or erasure. There is an additional hardware protection against program and erase. When $V_{PP} \leq V_{PPLK}$ all blocks are protected against program or erase. All blocks are locked at power-up.


In addition to the main memory array, the M58PRxxxLE features an extended flash array (EFA) divided into 4 blocks of 64 Kbits each.

The EFA blocks are accessed through a separate set of commands. The operations available in the EFA blocks are asynchronous read (in non-page mode), single word program, erase and block locking. See *Section 4: Command interface* for details of the EFA commands set.

See *Table 4* for an extended flash array memory map. *Table 18* and *Table 19* describe the simultaneous operations allowed in the EFA blocks and the main memory array.

The device includes 17 protection registers and 2 protection register locks, one for the first protection register and the other for the 16 OTP (one-time-programmable) protection registers of 128 bits each. The first protection register is divided into two areas: a 64-bit area containing a unique device number written by ST, and a 64-bit area one-time-programmable by the user. The user programmable area can be permanently protected. *Figure 6*, shows the Protection Register memory map.

The memory is available in TFBGA105 or TFBGA107 packages, and is supplied with all the bits erased (set to '1').

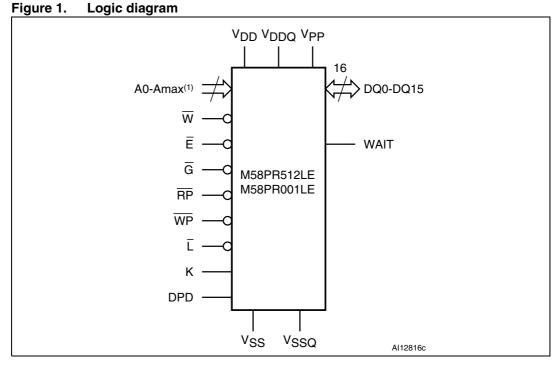

1. Amax is equal to A24 in the M58PR512LE and to A25 in the M58PR001LE.

Table 1. Signal names

Signal name Function Direction					
_	Function	Direction			
A0-Amax ⁽¹⁾	Address inputs	Inputs			
DQ0-DQ15	Data input/outputs, command inputs	I/O			
Ē	Chip Enable	Input			
G	Output Enable	Input			
W	Write Enable	Input			
RP	Reset	Input			
WP	Write Protect	Input			
К	Clock	Input			
Ī	Latch Enable	Input			
WAIT	Wait	Output			
DPD	Deep power-down	Input			
V_{DD}	Supply voltage				
V_{DDQ}	Supply voltage for input/output buffers				
V _{PP}	Optional supply voltage for fast program and erase				
V _{SS}	Ground				
V _{SSQ}	Ground input/output supply				
DU	Do not use				
NC	Not connected				

^{1.} Amax is equal to A24 in the M58PR512LE and to A25 in the M58PR001LE.

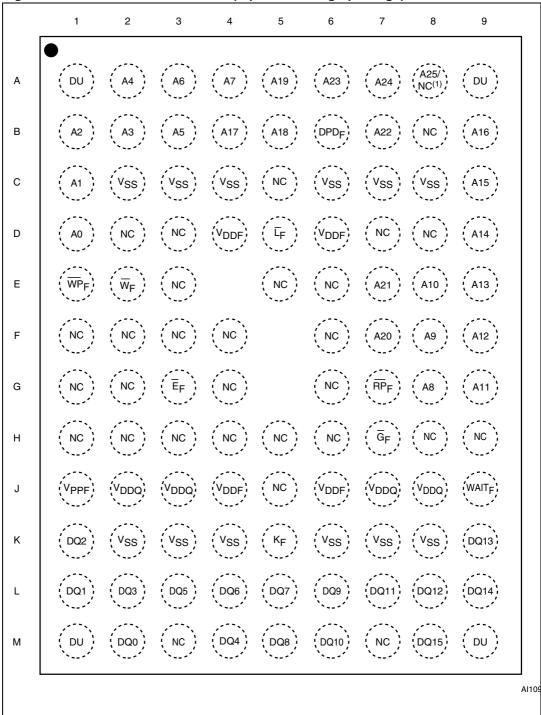


Figure 2. TFBGA105 connections (top view through package)

1. Ball A8 is A25 in the M58PR0001LE and it is not connected internally (NC) in the M58PR512LE.

1 2 3 6 8 9 В С D Ε F G DQ12 J Κ NC L DU М AI11098d

Figure 3. TFBGA107 connections (top view through package)

1. Ball E4 is A25 in the M58PR0001LE and is not connected internally (NC) in the M58PR512LE.

Table 2. M58PR512LE bank architecture

Number	Bank size	Blocks
Bank 0	64 Mbits	32 blocks of 128 KWords
Bank 1	64 Mbits	32 blocks of 128 KWords
Bank 2	64 Mbits	32 blocks of 128 KWords
Bank 7	64 Mbits	32 blocks of 128 KWords

Table 3. M58PR001LE bank architecture

Number	Bank size	Blocks
Bank 0	128 Mbits	64 blocks of 128 KWords
Bank 1	128 Mbits	64 blocks of 128 KWords
Bank 2	128 Mbits	64 blocks of 128 KWords
Bank 7	128 Mbits	64 blocks of 128 KWords

Figure 4. Memory map

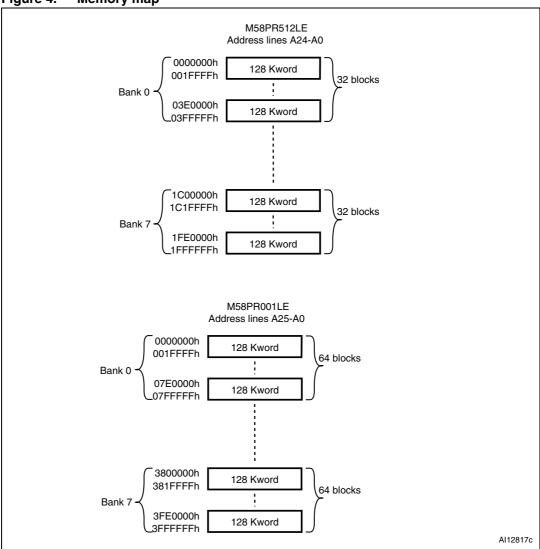


Table 4. EFA memory map

EFA block	Size	Address range
3	4 KWords (64 Kbits)	0003000 - 0003FFF
2	4 KWords (64 Kbits)	0002000 - 0002FFF
1	4 KWords (64 Kbits)	0001000 - 0001FFF
0	4 KWords (64 Kbits)	0000000 - 0000FFF

MAIN ARRAY 128 Kword block **BLOCK** Program region 0 512 words Program region 1 Bank 0 PROGRAM REGION 128 Kword block Segment 31 - 16 words 512 words Segment 30 - 16 words Segment 2 - 16 words Program region 254 512 words Program region 255 512 words Segment 1 - 16 words Segment 0 - 16 words 128 Kword block Bank 7 128 Kword block 512 Mbits or 1 Gbits ai12886b

Figure 5. Main array architecture

2 Signal descriptions

See Figure 1: Logic diagram and Table 1: Signal names for a brief overview of the signals connected to this device.

2.1 Address inputs (A0-Amax)

Amax is the highest order address input. Amax is A24 in the M58PR512LE and A25 in the M58PR001LE. The address inputs select the cells in the memory array to access during bus read operations. During bus write operations they control the commands sent to the command interface of the Program/Erase Controller.

2.2 Data inputs/outputs (DQ0-DQ15)

The data I/O output the data stored at the selected address during a bus read operation or input a command or the data to be programmed during a bus write operation.

2.3 Chip Enable (\overline{E})

The Chip Enable input activates the memory control logic, input buffers, decoders and sense amplifiers. When Chip Enable is at V_{IL} and Reset is at V_{IH} the device is in active mode. When Chip Enable is at V_{IH} the memory is deselected, the outputs are high impedance and the power consumption is reduced to the standby level.

2.4 Output Enable (\overline{G})

The Output Enable input controls data outputs during the bus read operation of the memory.

2.5 Write Enable (\overline{W})

The Write Enable input controls the bus write operation of the memory's command interface. The data and address inputs are latched on the rising edge of Chip Enable or Write Enable, whichever occurs first.

2.6 Write Protect (WP)

Write Protect is an input that gives an additional hardware protection for each block. When Write Protect is at V_{IL} , the lock-down is enabled and the protection status of the locked-down blocks cannot be changed. When Write Protect is at V_{IH} , the lock-down is disabled and the locked-down blocks can be locked or unlocked (refer to *Table 21: Lock status*).

2.7 Reset (RP)

The Reset input provides a hardware reset of the memory. When Reset is at V_{IL} , the memory is in reset mode, this means the outputs are high impedance and the current consumption is reduced to the reset supply current I_{DD2} . Refer to *Table 26: DC characteristics - currents* for the value of I_{DD2} . After Reset, all blocks are in the locked state and the configuration register is reset. When Reset is at V_{IH} , the device is in normal operation. Exiting reset mode the device enters asynchronous read mode, but a negative transition of Chip Enable or Latch Enable is required to ensure valid data outputs.

The Reset pin can be interfaced with 3 V logic without any additional circuitry, and can be tied to V_{RPH} (refer to *Table 27: DC characteristics - voltages*).

2.8 Deep power-down (DPD)

The deep power-down input is used to put the device in deep power-down mode.

When the device is in standby mode and the enhanced configuration register bit ECR15 is set, asserting the deep power-down input will cause the memory to enter the deep power-down mode.

When the device is in the deep power-down mode, the memory cannot be modified and the data is protected.

The polarity of the DPD pin is determined by ECR14. The deep power-down input is active Low by default.

2.9 Latch Enable (\overline{L})

Latch Enable latches the address bits on its rising edge. The address latch is transparent when Latch Enable is at V_{IL} and it is inhibited when Latch Enable is at V_{IH} . Latch Enable can be kept Low (also at board level) when the Latch Enable function is not required or supported.

2.10 Clock (K)

The clock input synchronizes the memory to the microcontroller during synchronous read operations; the address is latched on a Clock edge when Latch Enable is at V_{IL} . Clock is ignored during asynchronous read and in write operations.

2.11 Wait (WAIT)

Wait is an output signal used during synchronous read to indicate whether the data on the output bus are valid. This output is high impedance when Chip Enable is at V_{IH} , Output Enable is at V_{IH} , or Reset is at V_{IL} . It can be configured to be active during the wait cycle or one data cycle in advance.

2.12 V_{DD} supply voltage

V_{DD} provides the power supply to the internal core of the memory device. It is the main power supply for all operations (Read, Program and Erase).

2.13 V_{DDQ} supply voltage

 V_{DDQ} provides the power supply to the I/O pins and enables all outputs to be powered independently of V_{DD} . V_{DDQ} can be tied to V_{DD} or can use a separate supply.

 V_{DDQ} is sampled at the beginning of program/erase operations. If V_{DDQ} is lower than V_{LKOO} , the device is reset.

2.14 V_{PP} program supply voltage

 V_{PP} is both a control input and a power supply pin. The two functions are selected by the voltage range applied to the pin.

If V_{PP} is kept in a low voltage range (0 V to V_{DDQ}) V_{PP} is seen as a control input. In this case a voltage lower than V_{PPLK} gives an absolute protection against program or erase, while $V_{PP} > V_{PP1}$ enables these functions (see Tables 26 and 27, DC characteristics for the relevant values). V_{PP} is only sampled at the beginning of a program or erase; a change in its value after the operation has started does not have any effect and program or erase operations continue.

If V_{PP} is in the range of V_{PPH} it acts as a power supply pin. In this condition V_{PP} must be stable until the program/erase algorithm is completed.

2.15 V_{SS} ground

V_{SS} ground is the reference for the core supply. It must be connected to the system ground.

2.16 V_{SSQ} ground

 V_{SSQ} ground is the reference for the input/output circuitry driven by V_{DDQ} . V_{SSQ} must be connected to V_{SS} .

Note:

Each device in a system should have V_{DD} , V_{DDQ} and V_{PP} decoupled with a 0.1 μ F ceramic capacitor close to the pin (high frequency, inherently low inductance capacitors should be as close as possible to the package). See Figure 11: AC measurement load circuit. The PCB track widths should be sufficient to carry the required V_{PP} program and erase currents.

3 Bus operations

There are seven standard bus operations that control the device. These are Bus Read, Bus Write, Address Latch, Output Disable, Standby, Reset and deep power-down. See *Table 5: Bus operations*, for a summary.

Typically glitches of less than 5 ns on Chip Enable or Write Enable are ignored by the memory and do not affect bus write operations.

3.1 Bus Read

Bus Read operations are used to output the contents of the memory array, the Electronic signature, the status register and the common flash interface. Both Chip Enable and Output Enable must be at $V_{\rm IL}$ in order to perform a read operation. The Chip Enable input should be used to enable the device. Output Enable should be used to gate data onto the output. The data read depends on the previous command written to the memory (see *Section 4: Command interface*). See figures *12, 13, 14* and *15*, Read AC waveforms, and tables *28* and *29*, Read AC characteristics, for details of when the output becomes valid.

3.2 Bus Write

Bus Write operations write commands to the memory or latch input data to be programmed. A Bus Write operation is initiated when Chip Enable and Write Enable are at V_{IL} with Output Enable at V_{IH} . Commands, input data and addresses are latched on the rising edge of Write Enable or Chip Enable, whichever occurs first. The addresses can also be latched prior to the Write operation by toggling Latch Enable. In this case the Latch Enable should be tied to V_{IH} during the Bus Write operation.

See figures 17 and 18, Write AC waveforms, and tables 30 and 31, Write AC characteristics, for details of the timing requirements.

3.3 Address Latch

Address Latch operations input valid addresses. Both Chip Enable and Latch Enable must be at $V_{\rm IL}$ during Address Latch operations. The addresses are latched on the rising edge of Latch Enable.

3.4 Output Disable

The outputs are high impedance when the Output Enable is at V_{IH}.

3.5 Standby

Standby disables most of the internal circuitry allowing a substantial reduction of the current consumption. The memory is in standby when Chip Enable and Reset are at V_{IH} . The power consumption is reduced to the standby level I_{DD3} and the outputs are set to high impedance, independently from the Output Enable or Write Enable inputs. If Chip Enable switches to V_{IH} during a program or erase operation, the device enters Standby mode when finished.

3.6 Reset

During Reset mode the memory is deselected and the outputs are high impedance. The memory is in Reset mode when Reset is at V_{IL} . The power consumption is reduced to the reset level, independently from the Chip Enable, Output Enable or Write Enable inputs. If Reset is pulled to V_{SS} during a Program or Erase, this operation is aborted and the memory content is no longer valid.

3.7 Deep power-down (DPD)

The memory enters the deep power-down mode from the Standby mode (\overline{RP} and \overline{E} are deasserted, V_{IH}) by setting ECR15 High (set to '1') and asserting the DPD pin (these two events can be done in any order).

The DPD pin polarity is determined by the value of ECR14 when:

- ECR14 is cleared ('0') the DPD pin is active Low. The DPD pin is active Low by default.
- ECR14 is set ('1'), the DPD pin is active High.

While in DPD mode, the:

- Values of the configuration register, enhanced configuration register, block lock bits, and bank states are preserved.
- Status register is reset to 80h.

If the status register contains errors before entering the DPD mode, the error bits are lost after exiting DPD mode.

The device should not be put in deep power-down mode while a program, erase or suspend operation is in progress, otherwise the operation aborts, and the memory contents are no longer valid.

The deep power-down mode is exited t_{DPHEL} after de-asserting the DPD pin. Upon exiting the deep power-down mode, the memory reverts to standby mode.

If the \overline{RP} pin is asserted while in DPD mode, the device exits DPD mode after t_{PHEL} and ECR15 is reset to 0.

Table 5. Bus operations⁽¹⁾

Operation	Ē	G	W	Ī	RP	DPD ⁽²⁾	WAIT ⁽³⁾	DQ15-DQ0
Bus read	V _{IL}	V _{IL}	V _{IH}	V _{IL} ⁽⁴⁾	V _{IH}	De- asserted ⁽⁵⁾		Data output
Bus write	V _{IL}	V _{IH}	V _{IL}	V _{IL} ⁽⁴⁾	V _{IH}	De- asserted ⁽⁵⁾		Data input
Address latch	V _{IL}	Х	V _{IH}	V _{IL}	V _{IH}	De- asserted ⁽⁵⁾		Data output or Hi-Z ⁽⁶⁾
Output disable	V _{IL}	V _{IH}	V _{IH}	Х	V _{IH}	De- asserted ⁽⁵⁾	Hi-Z	Hi-Z
Standby	V _{IH}	Х	Х	Х	V _{IH}	De- asserted ⁽⁵⁾	Hi-Z	Hi-Z
Reset	Х	Х	Х	Х	V _{IL}	De- asserted ⁽⁵⁾	Hi-Z	Hi-Z
Deep power- down	V _{IH}	Х	Х	Х	V _{IH}	Asserted ⁽⁷⁾	Hi-Z	Hi-Z

- 1. X = Don't care.
- 2. The DPD signal polarity depends on the value of the ECR14 bit.
- 3. WAIT signal polarity is configured using the Set Configuration Register command.
- 4. \overline{L} can be tied to $V_{\mbox{\scriptsize IH}}$ if the valid address has been previously latched.
- 5. If ECR15 is set to '0', the device cannot enter the deep power-down mode, even if DPD is asserted.
- 6. Depends on \overline{G} .
- 7. ECR15 has to be set to '1' for the device to enter deep power-down.

4 Command interface

All bus write operations to the memory are interpreted by the command interface. Commands consist of one or more sequential bus write operations. An internal Program/Erase Controller handles all timings and verifies the correct execution of the program and erase commands. The Program/Erase Controller provides a status register, whose output may be read at any time to monitor the progress or the result of the operation.

The command interface is reset to read mode when power is first applied, when exiting from Reset, or whenever V_{DD} is lower than V_{LKO} . Command sequences must be followed precisely. Any invalid combination of commands are ignored.

Refer to *Table 6: Command codes*, *Table 7: Standard commands*, *Table 8: Factory Program command* for a summary of the command interface.

Table 6. Command codes

Hex code	Command
01h	Block Lock Confirm and EFA Block Lock Confirm
03h	Set Configuration Register Confirm
04h	Set Enhanced Configuration Register Confirm
20h	Block Erase Setup
24h	EFA Block Erase Setup
2Fh	Block Lock-down Confirm and EFA Block Lock-down Confirm
41h	Program Setup
44h	EFA Program Setup
50h	Clear Status Register
60h	Block Lock Setup, Block Unlock Setup, Block Lock-down Setup, Set Configuration Register Setup and Enhanced Configuration Register Setup
64h	EFA Block Lock, EFA Block Lock-down, EFA Block Unlock
70h	Read Status Register
80h	Buffer Enhanced Factory Program
90h	Read Electronic Signature
94h	Read EFA
98h	Read CFI query
B0h	Program/Erase Suspend
BCh	Blank Check Setup
C0h	Protection Register Program
D0h	Program/Erase Resume, Block Erase Confirm, Block Unlock Confirm or Buffer Program Confirm, Buffer Enhanced Factory Program Confirm, Blank Check Confirm, Unlock EFA Block Confirm, EFA Block Erase Confirm
E9h	Buffer Program
FFh	Read Array

4.1 Read Array command

The Read Array command returns the addressed bank to read array mode.

One bus write cycle is required to issue the Read Array command. Once a bank is in read array mode, subsequent read operations output the data from the memory array.

A Read Array command can be issued to any banks while programming or erasing in another bank.

If the Read Array command is issued to a bank currently executing a program or erase operation, the bank returns to read array mode but the program or erase operation continues. However, the data output from the bank is not guaranteed until the program or erase operation has finished. The read modes of other banks are not affected.

4.2 Read Status Register command

The device contains a status register that monitors program or erase operations.

The Read Status Register command reads the contents of the status register for the addressed bank.

One bus write cycle is required to issue the Read Status Register command. Once a bank is in read status register mode, subsequent read operations output the contents of the status register.

The status register data is latched on the falling edge of the Chip Enable or Output Enable signals. Either Chip Enable or Output Enable must be toggled to update the status register data.

The Read Status Register command can be issued at any time, even during program or erase operations. The Read Status Register command only changes the read mode of the addressed bank. The read modes of other banks are not affected. Only asynchronous read and single synchronous read operations should be used to read the status register. A Read Array command is required to return the bank to read array mode.

See *Table 13* for the description of the status register bits.

4.3 Read Electronic Signature command

The Read Electronic Signature command reads the manufacturer and device codes, the lock status of the addressed bank, the Protection Register, the configuration register, and the enhanced configuration register.

One bus write cycle is required to issue the Read Electronic Signature command. Once a bank is in read electronic signature mode, subsequent read operations in the same bank output the manufacturer code, the device code, the lock status of the addressed bank, the Protection Register, the configuration register, or the enhanced configuration register (see *Table 9*).

The Read Electronic Signature command can be issued at any time, even during program or erase operations, except during protection register program operations. Dual operations between the EFA and the electronic signature locations are not allowed (see *Table 20: Dual operation limitations* for details).

If a Read Electronic Signature command is issued to a bank that is executing a program or erase operation the bank goes into read electronic signature mode. Subsequent bus read cycles output the electronic signature data and the Program/Erase Controller continues to program or erase in the background.

The Read Electronic Signature command only changes the read mode of the addressed bank. The read modes of other banks are not affected. Only asynchronous read and single synchronous read operations should be used to read the electronic signature. A Read Array command is required to return the bank to read array mode.

4.4 Read CFI Query command

The Read CFI Query command is used to read data from the CFI (common flash interface).

One bus write cycle is required to issue the Read CFI Query command. Once a bank is in read CFI query mode, subsequent bus read operations in the same bank output the contents of the CFI.

The Read CFI Query command can be issued at any time, even during program or erase operations.

If a Read CFI Query command is issued to a bank that is executing a program or erase operation the bank goes into read CFI query mode. Subsequent bus read cycles output the CFI data and the Program/Erase Controller continues to program or erase in the background.

The Read CFI Query command only changes the read mode of the addressed bank. The read modes of other banks are not affected. Only asynchronous read and single synchronous read operations should be used to read from the CFI. A Read Array command is required to return the bank to read array mode.

Dual operations between the EFA and the CFI memory space are not allowed (see *Table 20: Dual operation limitations* for details).

4.5 Clear Status Register command

The Clear Status Register command can be used to reset (set to '0') all error bits (SR1, SR3, SR4, SR5, SR8 and SR9) in the status register.

One bus write cycle is required to issue the Clear Status Register command. The Clear Status Register command does not affect the read mode of the bank.

The error bits in the status register do not automatically return to '0' when a new command is issued. The error bits in the status register should be cleared before attempting a new program or erase command.

4.6 Block Erase command

The Block Erase command erases a block. It sets all the bits within the selected block to '1', and all previous data in the block is lost.

If the block is protected then the erase operation aborts, the data in the block is not changed, and the status register outputs the error.

Two bus write cycles are required to issue the command.

- The first bus cycle sets up the Block Erase command.
- The second latches the block address and starts the Program/Erase Controller.

If the second bus cycle is not the block erase confirm code, status register bits SR4 and SR5 are set and the command is aborted.

Once the command is issued, the bank enters read status register mode and any read operation within the addressed bank outputs the contents of the status register. A Read Array command is required to return the bank to read array mode.

During block erase operations the bank containing the block being erased only accepts the Read Array, Read Status Register, Read Electronic Signature, Read CFI Query and the Program/Erase Suspend command; all other commands are ignored.

The block erase operation aborts if Reset, \overline{RP} , goes to V_{IL} . As data integrity cannot be guaranteed when the block erase operation is aborted, the block must be erased again.

Refer to *Chapter 11* for detailed information about simultaneous operations allowed in banks not being erased.

Typical erase times are provided in Table 22: Program/erase times and endurance cycles.

See Appendix C, Figure 27: Block erase and EFA block erase flowchart and pseudocode for a suggested flowchart for using the Block Erase command.

4.7 Program command

The Program command programs a single word to the memory array. It is supported only by program regions configured in control program mode. If a Program command is issued to a program region configured in object program mode, the program operation is aborted and the SR4 and SR8 status register bits are set (see *Section 5: Program operations*).

Two bus write cycles are required to issue the Program command.

- The first bus cycle sets up the Program command.
- The second latches the address and data to be programmed and starts the P/EC (Program/Erase Controller).

The Program command has to be written to the 'A' segment halves (address bit A3 = 0) in the 1 Kbyte program region, whereas the data to be programmed is written to the specific address of the bank to be programmed.

Once the programming has started, read operations in the bank being programmed output the status register contents. Programming can be performed in one bank at a time, meanwhile the other banks must be in Read or Erase Suspend mode.

The status register P/EC bit, SR7, indicates the progress of the program operation. It should be read to check whether the operation has completed or not.

After completion of the program operation (SR7 = 1), one of the error bits (SR4, SR3 and SR1) going High means that an error was detecte. Either a failure occurred during programming, V_{PP} is outside the allowed voltage range, or an attempt to program a locked block was made. See *Section 6: Status register* for detailed information.

During a program operation, the bank containing the word being programmed only accepts the Read Array, Read Status Register, Read Electronic Signature, Read CFI Query and the Program/Erase Suspend command; all other commands are ignored. A Read Array command is required to return the bank to read array mode.

Refer to *Chapter 11* for detailed information about simultaneous operations allowed in banks not being programmed.

Typical program times are given in Table 22: Program/erase times and endurance cycles.

The program operation aborts if Reset, \overline{RP} , goes to V_{IL} . As data integrity cannot be guaranteed when the program operation is aborted, the word must be reprogrammed.

See Appendix C, Figure 24: Program and EFA block program flowchart and pseudocode for the flowchart for using the Program command.

4.8 Buffer Program command

The Buffer Program command uses the device's 1 Kbyte write buffer to speed up programming. Up to 1 Kbyte can be loaded into the write buffer and programmed into the specified 1 Kb aligned location in the main array. The Buffer Program command dramatically reduces in-system programming time compared to the standard non-buffered program command.

The Buffer Program command is supported in both object program mode and control program mode.

When using the Buffer Program command in a region configured in object mode, the start programming address must be aligned to the 1 Kb buffer.

When using the Buffer Program command in a region configured in control program mode, the programmed address must be within the 'A' segment halves of the program region (addresses with A3 = 0) and the 'B' segment halves of the program region (addresses with A3 = 1) must be filled only with FFFFh data.

Before issuing the Buffer Program Setup command, the status register bit SR7 at the bank address should be read to ensure that the buffer is available (SR7=1).

Four successive steps are required to issue the Buffer Program command:

- 1. The first bus write cycle sets up the Buffer Program command. The setup code can be addressed to any location within the targeted block.
- 2. The second bus write cycle sets up the number of words to be programmed. Value n is written to the same block address, where n+1 is the number of words to be programmed. The maximum buffer count is 1FF (512 words).
- 3. Use n+1 bus write cycles to load the address and data for each word into the write buffer. Addresses must lie within the range from the start address to the start address + n, where the start address is the location of the first data to be programmed. The start address must be aligned to a 1 Kb boundary.
- 4. The final bus write cycle confirms the Buffer Program command and starts the program operation.

All the addresses used in the buffer program operation must lie within the same block.

The buffer program operation does not change the read status of the banks until the Buffer Program Confirm command is issued. The Buffer Program Confirm command changes the read status of the bank to read status register, therefore, after the Buffer Program Confirm command, read operations in the bank output the contents of the status register.

Invalid address combinations or failure to follow the correct sequence of bus write cycles sets an error in the status register and aborts the operation without affecting the data in the memory array.

If the block being programmed is protected, an error is set in the status register and the operation aborts without affecting the data in the memory array.

During buffer program operations the bank being programmed only accepts the Read Array, Read Status Register, Read Electronic Signature, Read CFI Query and the Program/Erase Suspend commands; all other commands are ignored.

Refer to *Chapter 11* for detailed information about simultaneous operations allowed in banks not being programmed.

See *Appendix C*, *Figure 25: Buffer program flowchart and pseudocode* for a suggested flowchart on using the Buffer Program command.

4.9 Buffer Enhanced Factory Program command

The Buffer Enhanced Factory Program command has been specially developed to speed up programming in manufacturing environments where programming time is critical.

This command programs one or more write buffer(s) of 1 Kb to an aligned 1 Kb program region. Once the device enters buffer enhanced factory program mode, the write buffer can be reloaded any number of times as long as the address remains within the same main array block. Only one block can be programmed at a time.

When programming a program region configured in control program mode with the Buffer Enhanced Factory Program command, the 'B' half segment addresses (A3 = 1) should not contain '0' values. When writing to a program region configured in object program mode, the B half may contain some '0' values.

If the number of bytes to program is less than 1 Kbyte, the remaining addresses must be filled with FFFFh.

The use of the Buffer Enhanced Factory Program command requires the following operating conditions:

- V_{PP} must be set to V_{PPH}
- V_{DD} must be within operating range
- Ambient temperature T_A must be 30 °C ± 10 °C
- The targeted block must be unlocked
- The start address must be aligned with the start of a 1 Kb buffer boundary
- The address must remain the start address throughout programming.

Dual operations are not supported during the Buffer Enhanced Factory Program operation, and the command cannot be suspended.

The Buffer Enhanced Factory command programs one block at a time. All data to be programmed must be contained in a single block. If the internal address counter is incremented beyond the highest block address, addressing wraps around to the beginning of the block.

The Buffer Enhanced Factory Program command consists of three phases: the setup phase, the program and verify phase, and the exit phase (please refer to *Table 8: Factory Program command* for detailed information).

4.9.1 Setup phase

The Buffer Enhanced Factory Program command requires two bus write cycles to initiate the command.

- The first bus write cycle sets up the Buffer Enhanced Factory Program command.
- The second bus write cycle confirms the command.

After the confirm command is issued, read operations output the contents of the status register. The Read Status Register command must not be issued or it is interpreted as data to program.

The status register P/EC bit SR7 should be read to check that the P/EC is ready to proceed to the next phase. If an error is detected, SR4 goes high (set to '1') and the buffer enhanced factory program operation is terminated. See *Chapter 6: Status register* for details on the error.

4.9.2 Program and verify phase

The program and verify phase requires 512 cycles to program the 512 words to the write buffer. The data is stored sequentially, starting at the first address of the write buffer, until the write buffer is full (512 words). To program less than 512 words, the remaining words should be programmed with FFFFh.

Three successive steps are required to issue and execute the program and verify phase of the command.

- 1. Use one bus write operation to latch the start address and the first word to be programmed. The status register bank write status bit SR0 should be read to check that the P/EC is ready for the next word.
- 2. Each subsequent word to be programmed is latched with a new bus write operation. The address must remain the start address as the P/EC increments the address location. If any address is given that is not in the same block as the start address, the program and verify phase terminates. status register bit SR0 should be read between each bus write cycle to check the P/EC is ready for the next word.
- 3. Once the write buffer is full, the data is programmed sequentially to the memory array. After the program operation the device automatically verifies the data and reprograms if necessary.

The program and verify phase can be repeated, without re-issuing the command, to program additional 512 word locations as long as the address remains in the same block.

4. Finally, after all words, or the entire block have been programmed, write FFFFh to any address outside the block containing the start address to terminate the program and verify phase.

Status register bit SR0 must be checked to determine whether the program operation is finished. The status register may be checked for errors at any time but it must be checked after the entire block has been programmed.

4.9.3 Exit phase

When status register P/EC bit SR7 is set to '1' this indicates that the device has exited the buffer enhanced factory program operation.

Upon exiting the buffered enhanced factory program algorithm by writing FFFh to an address outside the block containing the start address, the Read mode of the programmed and addressed banks remains unchanged.

A full status register check should be done to ensure that the block has been successfully programmed. See *Chapter 6: Status register* for more details.

For optimum performance the Buffer Enhanced Factory Program command should be limited to a maximum of 100 program/erase cycles per block. If this limit is exceeded the internal algorithm continues to work properly but some degradation in performance is possible. Typical program times are provided in *Table 22*.

See *Appendix C*, *Figure 32: Buffer enhanced factory program flowchart and pseudocode* for a suggested flowchart on using the Buffer Enhanced Factory Program command.

4.10 Program/Erase Suspend command

The Program/Erase Suspend command pauses a program or block erase operation. The command can be addressed to any bank and is required to restart a suspended operation.

One bus write cycle is required to issue the Program/Erase Suspend command. Once the Program/Erase Controller has paused, bits SR7, SR6 and/ or SR2 of the status register are set to '1'.

The following commands are accepted during Program/Erase Suspend:

- Program/Erase Resume
- Read Array (data from erase-suspended block or program-suspended word is not valid)
- Read Status Register
- Read Electronic Signature
- Read CFI Query
- Read EFA
- Clear Status Register

Additionally, if the suspended operation is a block erase then the following commands are also accepted:

- Set Configuration Register
- Program (except in erase-suspended block)
- Buffer Program (except in erase-suspended blocks)
- Block Lock
- Block Lock-Down
- Block Unlock
- Program EFA

During an erase suspend the block being erased can be protected by issuing the Block Lock or Block Lock-down commands. When the Program/Erase Resume command is issued the operation completes.

It is possible to accumulate multiple suspend operations. For example, it is possible to suspend an erase operation, start a program operation, suspend the program operation, and then read the array.

If a program command is issued during a block erase suspend, the erase operation cannot be resumed until the program operation has completed.

The Program/Erase Suspend command does not change the read mode of the banks. If the suspended bank was in Read EFA, Read Status Register, Read Electronic Signature or Read CFI Query mode, the bank remains in that mode and outputs the corresponding data.

Refer to *Chapter 11* for detailed information about simultaneous operations allowed during program/erase suspend.

During a Program/Erase Suspend, the device can be placed in standby mode by taking Chip Enable to V_{IH} . Program/Erase is aborted if Reset, \overline{RP} , goes to V_{IL} .

See *Appendix C*, *Figure 26: Program suspend and resume flowchart and pseudocode* for flowcharts for using the Program/Erase Suspend command.

4.11 Program/Erase Resume command

The Program/Erase Resume command restarts the program or erase operation suspended by the Program/Erase Suspend command. One bus write cycle is required to issue the command. The command can be issued to any address.

The Program/Erase Resume command does not change the read mode of the banks. If the suspended bank was in read status register, read electronic signature or read CFI query mode, the bank remains in that mode and outputs the corresponding data.

If a program command is issued during a block erase suspend, then the erase cannot be resumed until the program operation is complete.

See Appendix C, Figure 26: Program suspend and resume flowchart and pseudocode and Figure 28: Erase suspend and resume flowchart and pseudocode for flowcharts for using the Program/Erase Resume command.

4.12 Protection Register Program command

The Protection Register Program command programs the user OTP area of the Protection Register and the two Protection Register Locks.

The device features 16 OTP areas of 128 bits and one OTP area of 64 bits, as shown in *Figure 6: Protection Register memory map*.

The areas are programmed one word at a time. When shipped, all bits in the area are set to '1'. Only the user can program the bits to '0'.

Two bus write cycles are required to issue the Protection Register Program command.

- The first bus cycle sets up the Protection Register Program command.
- The second latches the address and data to be programmed to the Protection Register and starts the Program/Erase Controller.

Read operations to the bank being programmed output the status register content after the program operation has started. Attempting to program a previously-protected Protection Register results in a status register error.

The Protection Register Program cannot be suspended. Dual operations between the EFA and the Protection Register memory space are not allowed (see *Table 20: Dual operation limitations* for details).

The two Protection Register locks are used to protect the OTP areas from further modification. The protection of the OTP areas is not reversible. Refer to *Figure 6: Protection Register memory map* for details on the lock bits.

See Appendix C, Figure 31: Protection Register program flowchart and pseudocode for a flowchart for using the Protection Register Program command.

4.13 Set Configuration Register command

The Set Configuration Register command writes a new value to the configuration register.

Two bus write cycles are required to issue the Set Configuration Register command.

- The first cycle sets up the Set Configuration Register command and the address corresponding to the configuration register content.
- The second cycle writes the configuration register data and the confirm command.

The configuration register data must be written as an address during the bus write cycles, such as A0 = CR0, A1 = CR1, ..., A15 = CR15. Addresses A16-Amax are ignored.

Read operations output the array content after the Set Configuration Register command is issued

The Read Electronic Signature command is required to read the updated contents of the configuration register.

4.14 Block Lock command

The Block Lock command is used to lock a block and prevent program or erase operations from changing the data in it. All blocks are locked after power-up or reset.

Two bus write cycles are required to issue the Block Lock command.

- The first bus cycle sets up the Block Lock command.
- The second bus write cycle latches the block address and locks the block.

The lock status can be monitored for each block using the Read Electronic Signature command. *Table 21* shows the lock status after issuing a Block Lock command.

Once set, the block lock bits remain set even after a hardware reset or power-down/power-up. They are cleared by a Block Unlock command.

Refer to Section 12: Block locking for a detailed explanation. See Appendix C, Figure 29: Main array and EFA locking operations flowchart and pseudocode for a flowchart for using the Lock command.

4.15 Block Unlock command

The Block Unlock command unlocks a block, allowing the block to be programmed or erased.

Two bus write cycles are required to issue the Block Unlock command.

- The first bus cycle sets up the Block Unlock command.
- The second bus write cycle latches the block address and unlocks the block.

The lock status can be monitored for each block using the Read Electronic Signature command. *Table 21* shows the protection status after issuing a Block Unlock command.

Refer to Section 12: Block locking for a detailed explanation and Appendix C, Figure 29: Main array and EFA locking operations flowchart and pseudocode for a flowchart for using the Block Unlock command.

4.16 Block Lock-down command

The Block Lock-down command locks down a locked or unlocked block.

A locked-down block cannot be programmed or erased. The lock status of a locked-down block cannot be changed when \overline{WP} is low, V_{IL} . When \overline{WP} is high, V_{IH} , the lock-down function is disabled and the locked blocks can be individually unlocked by the Block Unlock command.

Two bus write cycles are required to issue the Block Lock-down command.

- The first bus cycle sets up the Block Lock-down command.
- The second bus write cycle latches the block address and locks-down the block.

The lock status can be monitored for each block using the Read Electronic Signature command

Locked-down blocks revert to the locked (and not locked-down) state when the device is reset on power-down. *Table 21* shows the Lock Status after issuing a Block Lock-down command.

Refer to Section 12: Block locking for a detailed explanation and Appendix C, Figure 29: Main array and EFA locking operations flowchart and pseudocode for a flowchart for using the Lock-down command.

4.17 Blank Check command

The Blank Check command checks whether a main array block has been completely erased. Only one block at a time can be checked. Two bus cycles are required to issue the Blank Check command:

- The first bus cycle writes the Blank Check command to any address in the block to be checked.
- The second bus cycle writes the Blank Check Confirm command (D0h) to any address in the block to be checked and starts the blank check operation.

If the second bus cycle is not Blank Check Confirm, status register bits SR4 and SR5 are set to '1' and the command aborts.

Once the command is issued the addressed bank automatically enters the status register mode and further reads within the bank output the status register contents.

The only operation permitted during blank check is read status register. Dual operations are not supported while a blank check operation is in progress. Blank check operations cannot be suspended and are not allowed while the device is in program/erase suspend.

The SR7 status register bit indicates the status of the blank check operation in progress: SR7 = '0' means that the blank check operation is still ongoing. SR7 = '1' means that the operation is complete.

The SR5 status register bit goes High (SR5 = '1') to indicate that a blank check operation has failed.

At the end of the operation the bank remains in the Read status register mode until another command is written to the command interface.

See Appendix C, Figure 30: Blank check flowchart and pseudocode for a suggested flowchart for using the Blank Check command.

Typical Blank Check times are provided in *Table 22: Program/erase times and endurance cycles*.

4.18 **Set Enhanced Configuration Register command**

The Set Enhanced Configuration Register command is used to write a new value to the enhanced configuration register. Two bus write cycles are required to issue the Set Enhanced Configuration Register command.

- The first cycle sets up the Set Enhanced Configuration Register command and the address corresponding to the enhanced configuration register contents.
- The second cycle writes the enhanced configuration register data and the Confirm command.

The enhanced configuration register data must be written as an address during the bus write cycle, such as A0 = ECR0, A1 = ECR1, ..., A15 = ECR15.

If the Set Enhanced Configuration Register setup write cycle is not followed by the Set Enhanced Configuration Register Confirm command (04h), status register bits SR4 and SR5 are set.

After successfully executing this command, the bank addressed returns to read array state.

4.19 Read EFA Block command

The Read EFA Block command places the addressed bank in the read EFA mode, where all addresses in the addressed bank are remapped to EFA block addresses.

When the device is in read EFA mode, the main array blocks in the addressed bank can no longer be accessed until a Read Array command is issued to the bank.

One bus write cycle is required to issue the Read EFA Block command. Once a bank is in read EFA mode, subsequent read operations from any address within the EFA block output the EFA data from the EFA block. See *Table 4: EFA memory map* for details.

EFA blocks can be read through asynchronous or single synchronous read operations only. The Asynchronous page read mode cannot be used to read the EFA blocks.

If a Read EFA command is issued in a bank that is programming or erasing, the read mode of the bank changes to Read EFA mode.

4.20 Program EFA Block command

The Program EFA Block command programs a single word to an EFA block.

Two bus write cycles are required to issue the Program EFA Block command.

- The first bus cycle sets up the Program EFA Block command.
- The second cycle latches the address and data to be programmed and starts the Program/Erase Controller.

Once the programming has started, read operations in the bank being programmed output the status register contents.

Issuing the Program EFA Block command to an address outside the EFA block address range generates a Program Error in the status register (SR4=1).

A Read EFA Block command is required to return the bank to Read EFA mode. Refer to *Section 11* for detailed information about simultaneous operations allowed in the banks not being programmed. Typical EFA Program times are given in *Table 22: Program/erase times and endurance cycles*.

The program operation aborts if Reset, $\overline{\text{RP}}$, is at V_{IL} . As data integrity cannot be guaranteed when a program EFA block operation is aborted, the word must be reprogrammed. See *Appendix C*, *Figure 24: Program and EFA block program flowchart and pseudocode* for the flowchart for using the Program EFA Block command.

4.21 Erase EFA Block command

The Erase EFA Block command erases an EFA block. It sets all the bits within the selected block to '1', and all previous data in the block is lost. If the EFA block is protected, then the erase operation aborts, the data in the EFA block is not changed, and the status register outputs the error.

Two bus write cycles are required to issue the command.

- The first bus cycle sets up the Erase EFA Block command.
- The second latches the EFA block address and starts the Program/Erase Controller.

The first cycle brings the EFA plane to the foreground and latches the address of the EFA block to be erased. Reading from the bank when the EFA plane is in the foreground returns the status register.

Once the Erase operation has started, read operations in the bank being erased output the status register contents.

If the Erase EFA Block Confirm command code is not issued in the second bus cycle, status register bits SR4 and SR5 are set, the command is aborted, and the addressed bank remains in the read status register mode.

Issuing the Erase EFA Block command outside the EFA block address range generates an error in the status register (SR5=1).

The erase EFA block operation aborts if Reset, RP, is at V_{IL} . As data integrity cannot be guaranteed when the erase EFA block operation is aborted, the block must be erased again.

Refer to *Section 11: Dual operations and multiple bank architecture* section for detailed information about simultaneous operations allowed with array and non-array blocks. Typical erase times are provided in *Table 22: Program/erase times and endurance cycles*.

See Appendix C, Figure 27: Block erase and EFA block erase flowchart and pseudocode for a suggested flowchart for using the Erase EFA Block command.

4.22 Suspend EFA Block command

The Suspend EFA Block command pauses a program or erase EFA block operation. The command can be addressed to any bank. The Resume EFA Block command is required to restart the suspended operation.

One bus write cycle is required to issue the Suspend EFA Block command. Once the Program/Erase Controller has paused, bits SR7, SR6 and/ or SR2 of the status register are set to '1'.

The following commands are accepted during Suspend EFA Block:

- Resume EFA Block
- Read Array
- Read EFA Block (data from erase-suspended blocks or program-suspended words is not valid)
- Read Status Register
- Read Electronic Signature
- Read CFI Query.
- Clear Status Register

Additionally, if the suspended operation was an erase EFA block operation then the following commands are also accepted:

- Set Configuration Register
- Program EFA Block (except in the erase-suspended block)
- Program and Buffer Program in the main array
- Block Lock
- Block Lock-down
- Block Unlock
- EFA Block Lock
- EFA Block Lock-down
- EFA Block Unlock

During Suspend EFA Block the EFA block being erased can be protected by issuing the EFA Block Lock or EFA Block Lock-down commands. When the Resume EFA Block command is issued, the operation is resumed and completes. The suspend EFA block operation can be repeated.

For example, it is possible to suspend an erase EFA block operation, to start a program EFA block operation, to suspend the program operation, and then read EFA locations.

If a Program EFA Block command is issued during a suspend EFA block operation, the erase EFA block operation cannot be resumed until the program operation has completed.

The state of the bank where the command was issued do not change.

Refer to *Section 11* for detailed information about simultaneous operations allowed during a suspend EFA block operation.

During a suspend EFA block operation, the device can be placed in standby mode by taking Chip Enable to V_{IH} . Program/erase is aborted if Reset, \overline{RP} , is V_{II} .

See Appendix C, Figure 26: Program suspend and resume flowchart and pseudocode and Figure 28: Erase suspend and resume flowchart and pseudocode for flowcharts for using the Suspend EFA Block command.

4.23 Resume EFA Block command

The Resume EFA Block command restarts the program or erase EFA block operation suspended by the Suspend EFA Block command. One bus write cycle is required to issue the command. The command can be issued to any address.

The Resume EFA Block command does not change the read mode of the banks.

If a Program EFA Block command is issued while an erase EFA block operation has been suspended, then the erase operation cannot be resumed until the program operation has completed.

See Appendix C, Figure 26: Program suspend and resume flowchart and pseudocode and Figure 28: Erase suspend and resume flowchart and pseudocode for flowcharts for using the Resume EFA Block command.

4.24 Lock EFA Block command

The Lock EFA Block command is used to lock an EFA block and prevent program or erase operations from changing the data in it. All EFA blocks are locked after power-up or reset.

Two bus write cycles are required to issue the Lock EFA Block command.

- The first bus cycle sets up the Lock EFA Block command.
- The second bus cycle latches the Block address and locks the block.

The lock status can be monitored for each EFA block using the *Read Electronic Signature* command.

Once set, the block lock bits remain set even after a hardware reset or a power-down/power-up sequence. They are cleared by an Unlock EFA Block command.

Program or erase operations to a locked EFA block generates an error in the status register (SR1=1).

Refer to *Section 12: Block locking* for a detailed explanation. See *Appendix C*, *Figure 29: Main array and EFA locking operations flowchart and pseudocode* for a flowchart for using the Lock EFA Block command.

4.25 Unlock EFA Block command

The Unlock EFA Block command unlocks an EFA block, allowing the EFA block to be programmed or erased.

Two bus write cycles are required to issue the Unlock EFA Block command.

- The first bus cycle sets up the Unlock EFA Block command.
- The second bus write cycle latches the block address and unlocks the block.

The lock status can be monitored for each EFA block using the *Read Electronic Signature* command.

Refer to Section 12: Block locking for a detailed explanation and to Appendix C, Figure 29: Main array and EFA locking operations flowchart and pseudocode for a flowchart for using the Unlock EFA Block command.

4.26 Lock-down EFA Block command

The Lock-down EFA Block command locks down a locked or unlocked EFA block.

A locked-down EFA block cannot be programmed or erased. The <u>lock</u> status of a locked-down EFA block cannot be changed when \overline{WP} is Low, V_{IL} . When \overline{WP} is High, V_{IH} , the lock-down function is disabled and the locked EFA blocks can be individually unlocked by issuing the Unlock EFA Block command.

Two bus write cycles are required to issue the Lock-down EFA Block command.

- The first bus cycle sets up the Lock-down EFA Block command.
- The second bus write cycle latches the block address and locks down the block.

The lock status can be monitored for each EFA block using the *Read Electronic Signature* command.

Locked-down EFA blocks revert to the locked (and not locked-down) state when the device is reset on power-down. *Table 21* shows the lock status after issuing a Lock-down EFA Block command

Refer to Section 12: Block locking for a detailed explanation and to Appendix C, Figure 29: Main array and EFA locking operations flowchart and pseudocode for a flowchart for using the Lock-down EFA Block command.

Table 7. Standard commands

	10	Bus operations ⁽¹⁾								
Commands	Cycles		1st cycle			2nd cycle				
	S	Op.	Add	Data	Op.	Add	Data			
Read Array	1+	Write	BKA	FFh	Read	WA	RD			
Read Status Register	1+	Write	BKA	70h	Read	BKA ⁽²⁾	SRD			
Read Electronic Signature	1+	Write	BKA	90h	Read	BKA ⁽²⁾	ESD			
Read CFI Query	1+	Write	BKA	98h	Read	BKA ⁽²⁾	QD			
Clear Status Register	1	Write	Х	50h						
Block Erase	2	Write	BKA or BA ⁽³⁾	20h	Write	BA	D0h			
Program	2	Write	BKA or WA ⁽³⁾	41h	Write	WA	PD			
		Write	ВА	E9h	Write	ВА	n			
Buffer Program	n+4 (4)	Write	PA ₁	PD ₁	Write	PA ₂	PD ₂			
		Write	PA _{n+1}	PD _{n+1}	Write	Х	D0h			
Program/Erase Suspend	1	Write	Х	B0h						
Program/Erase Resume	1	Write	Х	D0h						
Protection Register Program	2	Write	PRA	C0h	Write	PRA	PRD			
Set Configuration Register	2	Write	CRD	60h	Write	CRD	03h			
Block Lock	2	Write	BKA or BA ⁽³⁾	60h	Write	BA	01h			
Set Enhanced Configuration Register	2	Write	ECRD	60h	Write	ECRD	04h			
Block Unlock	2	Write	BKA or BA ⁽³⁾	60h	Write	BA	D0h			
Block Lock-down	2	Write	BKA or BA ⁽³⁾	60h	Write	BA	2Fh			
Blank Check	2	Write	ВА	BCh	Write	ВА	D0h			
Read EFA Block	1+	Write	BKA	94h	Read	WA	RD			
Program EFA Block	2	Write	BKA or WA ⁽³⁾	44h	Write	WA	PD			
Erase EFA Block	2	Write	BKA or BA ⁽³⁾	24h	Write	BA	D0h			
Suspend EFA Block	1	Write	Х	B0h						
Resume EFA Block	1	Write	Х	D0h						
Lock EFA Block	2	Write	BKA or BA ⁽³⁾	64h	Write	ВА	01h			
Unlock EFA Block	2	Write	BKA or BA ⁽³⁾	64h	Write	ВА	D0h			
Lock-down EFA Block	2	Write	ВА	64h	Write	ВА	2Fh			

X = Don't care, WA = Word Address in targeted bank, RD = Read Data, SRD = Status Register Data, ESD = Electronic Signature Data, QD = Query Data, BA = Block Address, BKA = Bank Address, PA = Program Address, PD = Program Data, PRA = Protection Register Address, PRD = Protection Register Data, CRD = configuration register Data, ECRD = enhanced configuration register Data.

^{2.} Must be same bank as in the first cycle. The signature addresses are listed in Table 9.

^{3.} Any address within the bank can be used.

^{4.} n+1 is the number of words to be programmed.

Table 8. Factory Program command⁽¹⁾

		"	Bus write operations															
Command	and Phase		Phase	Phase	Phase	Phase	Cycles	1st		21	2nd 3		3rd		Final -1		Final	
		3	Add	Data	Add	Data	Add	Data		Add	Data	Add	Data					
Buffer	Setup	2	BKA or WA ⁽²⁾	80h	WA ₁	D0h												
Enhanced Factory	Program/ Verify ⁽³⁾	≥512	WA ₁	PD ₁	WA ₁	PD ₂	WA ₁	PD ₃		WA ₁	PD ₅₁₁	WA ₁	PD ₅₁₂					
Program	Exit	1	NOT BA ₁ ⁽⁴⁾	FFFFh														

- $1. \quad WA = Word\ Address\ in\ targeted\ bank,\ BKA = Bank\ Address,\ PD = Program\ Data,\ BA = Block\ Address,\ X = Don't\ care.$
- 2. Any address within the bank can be used.
- 3. The program/verify phase can be executed any number of times as long as the data is programmed to the same block.
- 4. WA_1 is the start address, NOT BA_1 = Not Block Address of WA_1 .

Table 9. Electronic signature codes

	•	Code	Address (h)	Data (h)	
Manufacturer	code		Bank address + 00	0020	
Device code		512 Mbit	Bank address + 01	8819	
Device code		1 Gbit	Dank address + 01	880F	
		Locked		DQ1, DQ0 = 01	
	Main block	Unlocked		DQ1, DQ0 = 00	
	IVIAIII DIOCK	Locked and Locked-down		DQ1, DQ0 = 11	
Block		Unlocked and Locked-down	Block address + 02	DQ1, DQ0 = 10	
protection		Locked	Diock address + 02	DQ5, DQ4 = 01	
	EFA block	Unlocked		DQ5, DQ4 = 00	
	EFA DIOCK	Locked and Locked-down		DQ5, DQ4 = 11	
		Unlocked and Locked-down		DQ5, DQ4 = 10	
Configuration	register		Bank address + 05	CR ⁽¹⁾	
Enhanced cor	figuration regist	er	Bank address + 06	ECR ⁽¹⁾	
Protection Re	gister PR0	ST factory default	Bank address + 80	0002	
Lock		OTP area permanently locked	Darik address + 60	0000	
			Bank address + 81	Unique device number	
Protection Re	gistor DD0		Bank address + 84	Offique device flumber	
FIOLECTION NE	gister Fnu		Bank address + 85	OTP area	
			Bank address + 88	OTF alea	
Protection Re	gister PR1 throu	igh PR16 Lock	Bank address + 89	PRLD ⁽¹⁾	
Protection Do	gietore DD1 DD:	16	Bank address + 8A	OTP area	
Frotection Re	gisters PR1-PR	10	Bank address + 109	OIP area	

^{1.} CR = configuration register, ECR = enhanced configuration register, PRLD = Protection Register Lock Data.

Numonyx 41/123

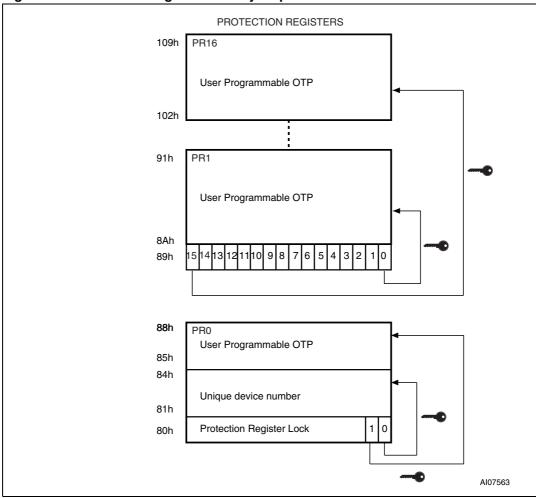


Figure 6. Protection Register memory map

Table 10. Protection Register locks

		on negiote	-
Lock			Description
Number	Address	Bits	Description
		Bit 0	Preprogrammed to protect unique device number, address 81h to 84h in PR0
Lock 1	80h	Bit 1	Protects 64 bits of OTP area, address 85h to 88h in PR0
		Bits 2 to 15	Reserved
		Bit 0	Protects 128 bits of OTP area PR1
		Bit 1	Protects 128 bits of OTP area PR2
		Bit 2	Protects 128 bits of OTP area PR3
Lock 2	89h		
		Bit 13	Protects 128 bits of OTP area PR14
		Bit 14	Protects 128 bits of OTP area PR15
		Bit 15	Protects 128 bits of OTP area PR16

5 Program operations

The M58PR512LE and M58PR001LE have innovative features specially developed to improve the storage flexibility and efficiency of NOR flash memory arrays.

Data and code can be stored more efficiently by using the right combination of program methods and program modes.

There are two types of program methods that use commands that consist of one or more sequential bus write operations interpreted by the command interface:

- Single word program method, which uses the Program command.
- Buffered program method, which uses either the Buffer Program command or the Buffer Enhanced Factory Program command.

There are two program modes:

- Control program mode
- Object program mode.

The control program mode supports the two program methods, whereas the object program mode only supports the buffered program method.

This new logical organization of program operations is made possible by the device architecture, and, in particular, by the new concept of program regions.

5.1 Program regions

Each flash memory block is divided into 256 program regions (see *Figure 7: Program regions configured in control or object program mode*). Erase operations have a block granularity, whereas program operations have a program region granularity.

The user can configure each program region to be programmed either in the control program mode or in the object program mode. A given block can contain program regions configured in the control program mode and others configured in the object program mode.

Special care should be taken when selecting the programming mode for the program regions because once the program regions are configured, their program mode cannot be changed until the entire block is erased.

Each program region is split into 32 segments of 32 bytes and each segment is subdivided into two halves, 'A' and 'B'. Address bit A3 determines whether a bit belongs to the 'A' half (A3 = 0) or to the 'B' half (A3 = 1).

5.2 Program modes

There are two program modes, which allow the flash memory to store different types of data: control program mode and object program mode.

5.2.1 Control program mode

The control program mode is best suited to the storage of small, dynamic information. Typically such data is contained within one program region and it is frequently updated and/or new data is added to it.

Program regions are configured in the control program mode by programming data only to the 'A' halves (bit A3= 0) of the segments they contain. The 'B' halves of the segments must remain erased, meaning that they should not contain any zeros (see *Figure 7: Program regions configured in control or object program mode*).

In a program region of 1 Kbyte configured in the control program mode, only 512 bytes of data can be stored.

When the program regions are configured in the control program mode, any program method can be used: the single word or the buffered program methods.

Once a program region has been configured in the control program mode, if a zero is written to a 'B' half of one of its segments, the program operation is terminated and an error is generated. The status register bits SR4 and SR9 are set to '1'. (Refer to *Status register* and to *Table 12: Relationships between program methods and program modes* for details.)

The program mode of a program region configured in the control program mode can only be changed by first erasing the block that contains the program region.

5.2.2 Object program mode

The object program mode is best suited to the storage of large amounts of static information. In a program region of 1 Kbyte configured in the object program mode, 1 Kbyte of data can be stored.

When a program region is configured in the object program mode, it cannot be reprogrammed or have new data added without first erasing the entire block that contains the program region.

Program regions are configured in the object program mode simply by programming at least one bit in the 'B' half (A3 = 1) of one of the segments they contain.

If the programmed data is smaller than 1 Kbyte, the unused space remains in the erased state (all the bits set to FFFFh), but can no longer be used to program data. See *Figure 7:* Program regions configured in control or object program mode.

When the program regions are configured in the object program mode, only the buffered program methods can be used. If an attempt is made to use the single word program method, the program operation is aborted and status register error bits SR4 and SR8 are set to '1'. (Refer to *Status register* and to *Table 12: Relationships between program methods and program modes*, for details.)

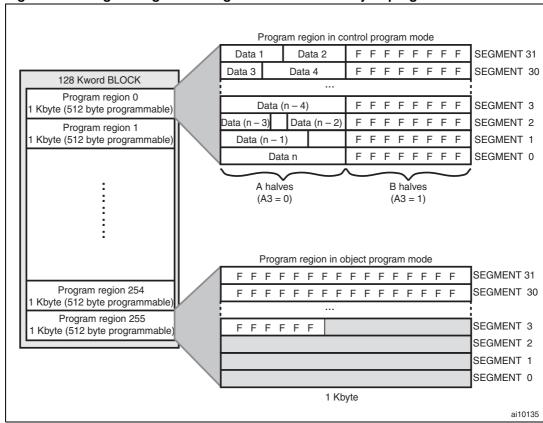


Figure 7. Program regions configured in control or object program mode

5.3 Program methods

The device supports two types of program methods:

- Single word program method, which is used to program a single word to a specific address of the memory array.
- Buffered program methods, which can be split into two different methods:
 - Buffer program method, which uses the device's write buffer to speed up programming. The data is written into the write buffer and then programmed to the specified block address.
 - Buffer enhanced factory program method, which is developed to speed up programming in manufacturing environments where the programming time is critical. The data is written in the write buffer and then programmed to the specified block.

The following sections describe the relationship between program commands and program methods in detail. See *Table 12: Relationships between program methods and program modes* and *Table 11: Program methods available with each program mode.*

5.3.1 Single word program method

The single word program method is based on the Program command. It is only supported by program regions configured in the control program mode.

If the single word program method is attempted in a program region configured in the object program mode, the program operation is aborted and status register bits SR4 and SR8 are set.

See Section 4: Command interface for a detailed description of the Program command.

In program regions configured in the control program mode, the Program command can be issued several times.

Using the single word program method to program one or more bits to '0' in the 'B' halves of the segments (A3 = 1) of an erased or already programmed program region generates an error:

- In the case of an erased program region, this is considered an illegal operation that sets status register bits SR4 and SR9.
- In the case of an already programmed program region, an error is always generated because:
 - To be able to write to a program region configured in the object program mode, the entire block that contains the program region must be erased first.
 - It is not allowed to write to the 'B' halves of the segments of a program region configured in the control program mode.

5.3.2 Buffer program method

The buffer program method is based on the Buffer Program command and uses a 1 Kbyte write buffer to speed up programming. The data is written to the write buffer and then programmed to the specified main array location.

The buffer program method is supported regardless of the program mode of the program regions. When using the buffer program method in a program region configured in the object program mode, the start address must be aligned to the 1 Kbyte write buffer.

When using the buffer program method in a program region configured in the control program mode, the address to be programmed must be located inside the 'A' halves of the program region's segments (addresses with A3 = 0) and the 'B' halves of the segments (addresses with A3 = 1) must be filled only with FFFFh data.

The Buffer Program command can be issued several times to program regions configured in the control program mode.

The Buffer Program command can only be issued once in program regions configured in the object program mode. Attempts to program the same program regions by re-issuing the Buffer Program command leads to data corruption.

See Section 4: Command interface for a detailed description of the Buffer Program command.

5.3.3 Buffer enhanced factory program method

The buffer enhanced factory program method is based on the Buffer Enhanced Factory Program command.

The buffer enhanced factory program method is supported by the program regions, regardless of the program mode in which they are configured.

In this program method, the program region (1 Kbyte) must be completely filled, regardless of the program mode used. If the size of the data to be written is less than 1 Kbyte, the remaining addresses in the program region must be filled with FFFFh.

When using the buffer enhanced factory program method in a program region configured in the control program mode, the addresses to be programmed must be located in the 'A' half of the program regions' segments (A3 = 0) and the 'B' half of the segments (A3 = 1) must be filled only with FFFFh.

See *Section 4: Command interface* for a detailed description of the Buffer Enhanced Factory Program command.

Table 11. Program methods available with each program mode

	Program methods ⁽¹⁾						
Program mode			Buffered program				
	Single word program	Buffer program	Buffer enhanced factory Program				
Control program mode	Х	X	Х				
Object program mode		X	Х				

^{1.} X means available.

Table 12. Relationships between program methods and program modes

		Program method						
Program region		Buffe	ered program					
status	value	Buffer program	Buffer enhanced factory program	Single word program				
	A3 = 0 ('A' half)	Program region configured in control program mode		Program region configured in control program mode				
Erased	A3 = 1 ('B' half)	Program region program mode	n configured in object	Not allowed. Program aborted, status register error bits SR4 and SR9 set				
Control program	A3 = 0 ('A' half)	Program opera	ation successful					
Control program mode	A3 = 1 ('B' half)	Not allowed. Program abort	ed, status register error	error bits SR4 and SR9 set				
Object program	A3 = 0 ('A' half)	Subsequent pr	rogram not allowed.					
mode	A3 = 1 ('B' half)	Program abort	ed, status register error	bits SR4 and SR8 set				

6 Status register

The status register provides information on the current or previous program or erase operations. Issue a Read Status Register command to read the contents of the status register (refer to *Section 4.2* for more details on the command itself).

To output the contents, the status register is latched and updated on the falling edge of the Chip Enable or Output Enable signals, and can be read until Chip Enable or Output Enable returns to $V_{\rm IH}$.

The status register can only be read using single asynchronous or single synchronous reads.

Bus read operations from any address within the bank always read the status register during program and erase operations if no Read Array command has been issued.

The various bits convey information about the status and any errors of the operation. Bits SR7, SR6, SR2 and SR0 give information on the status of the device and are set and reset by the device. Bits SR9, SR8, SR5, SR4, SR3 and SR1 give information on errors. They are set by the device but must be reset by issuing a Clear Status Register command or a hardware reset. If an error bit is set to '1' the status register should be reset before issuing another command.

The bits in the status register are summarized in *Table 13: Status register bits*. Refer to *Table 13* in conjunction with the following text descriptions.

6.1 Control program mode status bit (SR9)

The control program mode status bit, SR9, indicates whether an error occurred while writing to a program region that is configured in control program mode.

The SR9 bit should be read once the Program/Erase Controller status bit SR7 is set to '1' (Program/Erase Controller inactive).

SR9 is set to 1 when the user attempts to program object data in a control mode region.

When:

- SR9 = 0, the program operation completed successfully.
- SR9 = 1, the program operation failed.

Once set to '1', SR9 can only be cleared by issuing a Clear Status Register command or through a hardware reset.

SR9 should be cleared before a new program command is issued, otherwise the new command appears to fail.

6.2 Object program mode status bit (SR8)

The object program mode status bit, SR8, indicates whether an error occurred while writing to a program region that was configured in the object program mode.

The SR8 bit should be read once the Program/Erase Controller status bit SR7 is set to '1' (Program/Erase Controller inactive).

SR8 is set to 1 when the user attempts to rewrite an object mode region.

When:

- SR8 = 0, the program operation completed successfully.
- SR8 = 1, the program operation failed.

Once set, SR8 can only be cleared by issuing a Clear Status Register command or through a hardware reset.

SR8 should be cleared before a new program command is issued, otherwise the new command appears to fail.

6.3 Program/Erase Controller status bit (SR7)

The Program/Erase Controller status bit indicates whether the Program/Erase Controller is active or inactive in any bank.

When:

- SR7 = 0, the Program/Erase Controller is active.
- SR7 = 1, the Program/Erase Controller is inactive, and the device is ready to process a new command.

The Program/Erase Controller status bit is set to '0' immediately after a Program/Erase Suspend command is issued until the Program/Erase Controller pauses. After the Program/Erase Controller pauses, the bit is set to '1'.

6.4 Erase suspend status bit (SR6)

The erase suspend status bit indicates that an erase operation has been suspended in the addressed block.

When:

- SR6 = 0, no Program/Erase Suspend command has been issued.
- SR6 = 1, a Program/Erase Suspend command has been issued and the memory is waiting for a Program/Erase Resume command.

The erase suspend status bit should only be considered valid when the Program/Erase Controller status bit is set to '1' (Program/Erase Controller inactive). SR6 is set within the erase suspend latency time of the Program/Erase Suspend command being issued, therefore, the memory may still complete the operation rather than entering suspend mode.

When a Program/Erase Resume command is issued, the erase suspend status bit is reset to '0'.

6.5 Erase status bit (SR5)

The erase status bit identifies if there is an error during a block erase operation.

When:

- SR5 = 0, no error occurred.
- SR5 = 1, the Program/Erase Controller applied the maximum number of pulses to the block or bank and still failed to verify that it has erased correctly.

The erase status bit should be read once the Program/Erase Controller Status bit is set to '1' (Program/Erase Controller inactive). Once set, the erase status bit must be cleared by a Clear Status Register command or a hardware reset. This must be done before a new erase command is issued, otherwise the new command appears to fail.

6.6 Program status bit (SR4)

The program status bit identifies if there is an error during a program operation.

The program status bit should be read once the Program/Erase Controller status bit is set to '1' (Program/Erase Controller inactive).

When:

- SR4 = 0, no error occurred.
- SR4 = 1, the Program/Erase Controller applied the maximum number of pulses to the word and still failed to verify that it programmed correctly.

Attempting to program a '1' to an already programmed bit while $V_{PP} = V_{PPH}$ also sets the program status bit to '1'. If V_{PP} is different from V_{PPH} , SR4 remains set to '0' and the attempt is not shown.

Once set to '1', the program status bit must be cleared by a Clear Status Register command or a hardware reset. This must be done before a new program command is issued, otherwise the new command appears to fail.

6.7 V_{PP} status bit (SR3)

The V_{PP} status bit identifies an invalid voltage on the V_{PP} pin during program and erase operations. The V_{PP} pin is only sampled at the beginning of a program or erase operation. Program and erase operations are not guaranteed if V_{PP} becomes invalid during an operation.

When:

- SR3 = 0, the voltage on the V_{PP} pin is sampled at a valid voltage.
- SR3 = 1, the V_{PP} pin has a voltage that is below the V_{PP} lockout voltage, V_{PPLK}, the memory is protected, and program and erase operations cannot be performed.

Once set to '1', the V_{PP} status bit must be cleared by a Clear Status Register command or a hardware reset. This must be done before a new program or erase command is issued, otherwise the new command appears to fail.

6.8 Program Suspend Status bit (SR2)

The program suspend status bit indicates that a program operation has been suspended in the addressed block. The program suspend status bit is onlyconsidered valid when the Program/Erase Controller status bit is set to '1' (Program/Erase Controller inactive).

When:

- SR2 = 0, no Program/Erase Suspend command has been issued.
- SR2 = 1, a Program/Erase Suspend command has been issued and the memory is waiting for a Program/Erase Resume command.

SR2 is set within the program suspend latency time of the Program/Erase Suspend command being issued, therefore, the memory may still complete the operation rather than entering suspend mode.

When a Program/Erase Resume command is issued, the program suspend status bit is reset to '0'.

6.9 Block protection status bit (SR1)

The block protection status bit dentifies if a program or block erase operation has tried to modify the contents of a locked block.

When:

- SR1 = 0, no program or erase operation has been attempted on a locked block.
- SR1 = 1, a program or erase operation has been attempted on a locked block.

Once set to '1', the block protection status bit must be cleared by a Clear Status Register command or a hardware reset. This must be done before a new program or erase command is issued, otherwise the new command appears to fail.

6.10 Bank write/multiple word program status bit (SR0)

The bank write status bit indicates if the addressed bank is programming or erasing.

The bank write status bit is only considered valid when the Program/Erase Controller status bit SR7 is set to '0'.

When:

- SR0 = 0 and SR7 = 0, the addressed bank is executing a program or erase operation.
- SR0 = 1 and SR7 = 0, a program or erase operation is being executed in a bank other than the one being addressed.

During buffer enhanced factory program operations the multiple word program bit, SR0, shows if the device is ready to accept a new word to be programmed to the memory array.

When:

- SR0 = 0, the device is ready for the next word.
- SR0 = 1, the device is not ready for the next word.

For further details on how to use the status register, see the flowcharts and pseudocodes provided in *Appendix C*.

Table 13. Status register bits

Bit	Name	Туре	Logic level ⁽¹⁾		Definition	
SR15- SR10	Reserved ⁽²⁾					
SR9	Control program mode status	Error	1	Program e	error in program region configured in control node	
	mode status		0	Program s	successful	
SR8	Object program	Error	1	Program e	error in program region configured in object node	
	mode status		0	Program s	successful	
SR7	D/EC status	Ctatus	1	Ready		
SH/	P/EC status	Status	0	Busy		
SR6	Erase suspend	Status	1	Erase sus	pended	
SHO	status	Status	0	Erase in p	progress or completed	
SR5	Erase status	Error	1	Erase erro	or	
Sno	Erase status	Elloi	0	Erase suc	cess	
SR4	Program status	Error	1	Program error		
JN4	Program status	EIIOI	0	Program success		
SR3	V _{PP} status	Error	1	V _{PP} invalid, abort		
3113	V pp status	LIIOI	0	V _{PP} OK		
SR2	Program	Status	1	Program s	suspended	
3112	suspend status	Status	0	Program i	n progress or completed	
SR1	Block protection	Error	1	Program/e	erase on protected block, abort	
Shi	status	EIIOI	0	No operat	ion to protected blocks	
				SR7 = '1'	Not allowed	
			1	SR7 = '0'	Program or erase operation in a bank other than the addressed bank	
	Bank write status	Status	0	SR7 = '1'	No program or erase operation in the device	
SR0			0	SR7 = '0'	Program or erase operation in addressed bank	
	Multiple			SR7 = '1'	Not allowed	
	Multiple word program status (buffer enhanced	Status	1	SR7 = '0'	The device is not ready for the next word or is going to exit BEFP mode	
	factory program mode)		0	SR7 = '1'	The device is exiting from BEFP	
	inoue)		0	SR7 = '0'	The device is ready for the next word	

^{1.} Logic level '1' is High, '0' is Low.

^{2.} Reserved bits should always be reset to '0'.

7 Configuration register

The configuration register configures the type of bus access that the memory performs. Refer to *Section 10: Read modes* for details on read operations.

The configuration register is set through the command interface using the Set Configuration Register command. The configuration register is volatile: after a reset or a power-down/power-up sequence, the register is set for asynchronous read (CR15=1) and all bits return to their default value. The configuration register bits are described in *Table 15*. They specify the selection of the burst length, burst X latency and the read operation. Refer to *Figure 8* and *Figure 9* for examples of synchronous burst configurations.

7.1 Read select bit (CR15)

The read select bit, CR15, switches between asynchronous and synchronous read operations.

When:

- CR15 = 0:
 - Read operations in the main array are performed in synchronous burst mode,
 - Operations to read the status register, electronic signature, CFI and EFA are performed in single synchronous mode (See Section 10.3: Single synchronous read mode for details).
- CR15 = 1:
 - Read operations in the main array are performed in Asynchronous page mode,
 - Operations to read the status register, electronic signature, CFI and EFA are performed in asynchronous random access mode.

Synchronous burst read can be performed across banks.

On reset or power-up the read select bit is set to '1' for asynchronous access.

7.2 X latency bits (CR14-CR11)

The X latency bits are used during synchronous read operations to set the number of clock cycles between the address being latched and the first data becoming available.

For correct operation the X latency bits can only assume the values in *Table 15: Configuration register.*

Table 14 shows how to set the X latency parameter, taking into account the frequency used to read the flash memory in synchronous mode.

Refer to Figure 8: X latency and data output configuration example for an example waveform.

Table 14. X latency settings

f _{max}	t _{Kmin}	X latency
40 MHz	25 ns	4
54 MHz	19 ns	5
66 MHz	15 ns	6
108 MHz	9 ns	10

7.3 Wait polarity bit (CR10)

The wait polarity bit sets the polarity of the Wait signal used in synchronous burst read mode.

When:

- CR10 = 0, the Wait signal is active Low.
- CR10 = 1, the Wait signal is active High.

During synchronous burst read mode the Wait signal indicates whether the data output is valid or a Wait state must be inserted.

7.4 Wait configuration bit (CR8)

The wait configuration bit is used to control the timing of the Wait output pin, WAIT, in synchronous burst read mode.

When:

- CR8 = 0, the Wait output pin is asserted during the wait state.
- CR8 = 1, the Wait output pin is asserted one data cycle before the wait state.

When WAIT is asserted, data is not valid and when WAIT is de-asserted, data is valid.

7.5 Burst length bits (CR2-CR0)

The burst length bits set the number of words to be output during a synchronous burst read operation as result of a single address latch cycle.

They can be set for 8 words, 16 words, or continuous burst, where all the words are read sequentially. In continuous burst mode the burst sequence can cross bank boundaries.

In continuous burst mode, the device asserts the Wait signal to indicate that a delay is necessary before the data is output.

In continuous burst mode, if the starting address is not aligned to the 16-word boundary, Wait is asserted when the burst sequence crosses the first 16-word boundary. This indicates that the device needs an internal delay to read the successive words in the array.

In the worst case scenario, the number of wait states is one clock cycle less than the latency setting. Wait is asserted only once during a continuous burst access. See also *Table 16: Burst type definition*.

CR9, CR7, CR6, CR5, CR4 and CR3 are reserved for future use.

Table 15. Configuration register


Bit	Description	Value	Description
0045	CR15 Read Select		Synchronous read
CH15	Read Select	1	Asynchronous read (default at power-on)
		0011	3 Clock latency
		0100	4 Clock latency
		0101	5 Clock latency
		0110	6 Clock latency
		0111	7 Clock latency
		1000	8 Clock latency
CR14-CR11	Vlatanov	1001	9 Clock latency
CN14-CN11	X latency	1010	10 Clock latency
		1011	11 Clock latency
		1100	12 Clock latency
		1101	13 Clock latency
		1110	14 Clock latency
		1111	15 Clock latency (default)
		Other config	gurations reserved
CR10	Wait polarity	0	WAIT is active Low (default)
CITIO	vvait polarity	1	WAIT is active High
CR9	Reserved ⁽¹⁾		
CR8	Wait	0	WAIT is active during wait state
Cho	configuration	1	WAIT is active one data cycle before wait state (default) ¹
CR7-CR3	Reserved ⁽¹⁾		
		010	8 words (wrap only)
CR2-CR0	Burst length	011	16 words (wrap only)
		111	Continuous (default, no wrap only)

^{1.} Reserved bits should be cleared to '0'.

Table 16. Burst type definition


Start address	8 words	16 words	Continuous burst
0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7-8-9-10-11-12-13-14-15	0-1-2-3-4-5-6
1	1-2-3-4-5-6-7-0	1-2-3-4-5-6-7-8-9-10-11-12-13-14-15-0	1-2-3-4-5-6-7
2	2-3-4-5-6-7-0-1	2-3-4-5-6-7-8-9-10-11-12-13-14-15-0-1	2-3-4-5-6-7-8
3	3-4-5-6-7-0-1-2	3-4-5-6-7-8-9-10-11-12-13-14-15-0-1-2	3-4-5-6-7-8-9
7	7-0-1-2-3-4-5-6	7-8-9-10-11-12-13-14-15-0-1-2-3-4-5-6	7-8-9-10-11-12-13
12	12-13-14-15-8-9-10-11	12-13-14-15-0-1-2-3-4-5-6-7-8-9-10-11	12-13-14-15-16-17
13	13-14-15-8-9-10-11-12	13-14-15-0-1-2-3-4-5-6-7-8-9-10-11-12	13-14-15-16-17-18
14	14-15-8-9-10-11-12-13	14-15-0-1-2-3-4-5-6-7-8-9-10-11-12-13	14-15-16-17-18-19
15	15-8-9-10-11-12-13-14	15-0-1-2-3-4-5-6-7-8-9-10-11-12-13-14	15-16-17-18-19-20

Figure 8. X latency and data output configuration example

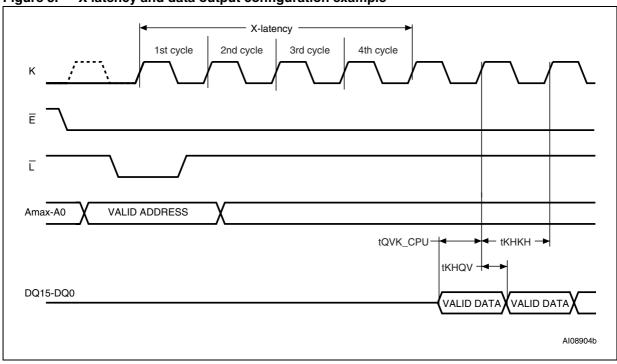

^{1.} The settings shown are X latency = 4. t_{QVK_CPU} is the data setup time required by the system CPU.

Figure 9. Wait configuration example

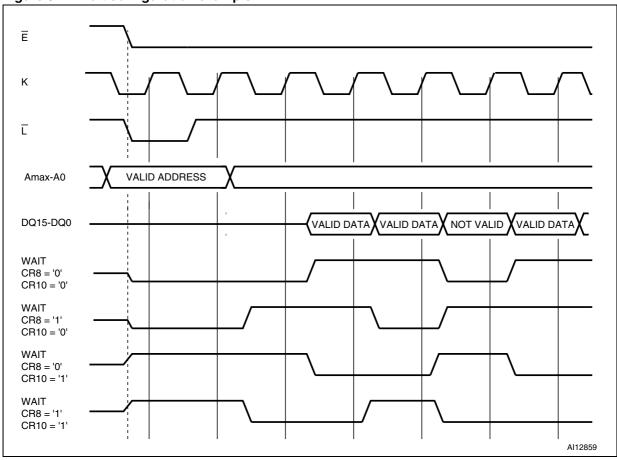

8 Enhanced configuration register

The ECR (enhanced configuration register) enables the deep power-down mode and configures the output driver strength. It is set through the command interface using the Set Enhanced Configuration Register command.

The contents of the ECR can be read by issuing the Read Electronic Signature command, and then by reading from the bank base address + 06h.

The ECR is volatile: after a reset or a power-down/power-up sequence the register is set to the default value. The configuration register bits are described in *Table 17*.

8.1 Deep power-down mode bit (ECR15)

The deep power-down mode bit, ECR15, enable the deep power-down mode.

The device can only enter the deep power-down mode from standby, by, in any order, asserting the DPD pin and setting ECR15 to '1'.

When the device is in the deep power-down mode, de-asserting the DPD pin and/or resetting ECR15 causes the device to revert to standby mode.

8.2 Deep power-down polarity bit (ECR14)

The deep power-down polarity bit sets the polarity of the DPD signal.

When:

- ECR14 = 0, the DPD signal is active Low (default).
- ECR14 = 1, the DPD signal is active High.

8.3 Output driver control bits (ECR2-ECR0)

The output driver control bits, ECR0, ECR1, and ECR2 select the output driver impedance best suited to the system requirements.

After reset or power-up the output driver control bits are set to the enhanced configuration register default value (ECR2-ECR0 = 100, that is 30 Ω (30 pF) (default)). Optimum performance is only achieved if the output driver impedance is properly configured.

Once a configuration has been selected, all data and wait output drivers are set to the same setting.

Table 17 lists the output driver impedances at $V_{DDQ}/2$ and the loads that correspond for each ECR2-ECR0 bit configuration.

Table 17. Enhanced configuration register

Bit	Description	Value	Description				
ECR15	Doop power down mode	0	DPD mode disabled (default)				
ECHIS	Deep power-down mode	1	DPD mode enabled				
EOD44	DPD polarity	0	DPD is active Low (default)				
ECR14	DPD polarity	1	DPD is active High				
ECR13-ECR3	Reserved (1)	Reserved ⁽¹⁾					
		001	90 Ω (10 pF)				
		010	60 Ω (15 pF)				
		011	45 Ω (20 pF)				
ECR2-ECR0	Output driver Impedance	100	30 Ω (30 pF) (default)				
		101	20 Ω (35 pF)				
		110	15 Ω (40 pF)				
		Other configurations reserved					

^{1.} Reserved bits should be cleared to '0'.

9 Extended flash array (EFA)

In addition to its main array, the M58PRxxxLE features an EFA that is divided into 4 blocks of 4 KWords each. See *Table 4: EFA memory map*.

The EFA blocks are accessed through a separate set of commands (see *Section 4: Command interface* for details).

The operations available on the EFA blocks are asynchronous random access read, single synchronous read, (single word) program, erase, block lock, block unlock, and block lock-down.

The EFA blocks support program/erase suspend and dual operations with the main array. Dual operations between the EFA and the OTP area are not supported. See *Table 20: Dual operation limitations* for details.

10 Read modes

Read operations can be performed in two different ways depending on the settings in the configuration register. If the clock signal is 'don't care' for the data output, the read operation is asynchronous. If the data output is synchronized with clock, the read operation is synchronous.

The read mode and format of the data output are determined by the configuration register. (See *Section 7: Configuration register* for details). All banks support both asynchronous and synchronous read operations.

10.1 Asynchronous read mode

In asynchronous read operations the clock signal is 'don't care'. The device outputs the data corresponding to the address latched, such as the memory array, status register, common flash interface or electronic signature, depending on the command issued. CR15 in the configuration register must be set to '1' for asynchronous operations.

Asynchronous read operations can be performed in two different ways, asynchronous random access read and asynchronous page read. Only asynchronous page read takes full advantage of the internal page storage, therefore, different timings are applied.

In asynchronous read mode a page of data is internally read and stored in a page buffer. The page has a size of 16 words and is addressed by address inputs A0, A1, A2 and A3. During the page access, Amax-A4 and \overline{L} must remain stable.

The first read operation within the page has a longer access time (t_{AVQV} , Random access time); subsequent reads within the same page have much shorter access times (t_{AVQV1} , page access time). If the page changes then the normal, longer timings apply again.

Read operations to read non-array data (status register, electronic signature, CFI) should be performed in asynchronous single word mode. If the asynchronous page mode is used to read non-array data, only the first output data is valid and all subsequent data is not accurately determined.

The asynchronous page read mode is not available in the EFA.

The device features an automatic standby mode. During asynchronous read operations, after a bus inactivity of 150 ns, the device automatically switches to automatic standby mode. In this state the power consumption is reduced to the standby value and the outputs are still driven.

In asynchronous read mode, the Wait signal is always de-asserted.

See Table 28: Asynchronous read AC characteristics, Figure 12: Asynchronous random access read AC waveforms and Figure 13: Asynchronous page read AC waveforms for details.

10.2 Synchronous burst read mode

In synchronous burst read mode the data is output in bursts synchronized with the clock. It is possible to perform burst reads across bank boundaries.

Synchronous burst read mode can only be used to read the memory array. For other read operations, such as read status register, read CFI, read electronic signature and read EFA, single synchronous read or asynchronous random access read must be used.

In synchronous burst read mode, the flow of the data output depends on parameters that are configured in the configuration register. A burst sequence starts at the first clock edge after the falling edge of Latch Enable or Chip Enable, whichever occurs last. Addresses are internally incremented and data is output on each data cycle after a delay which depends on the X latency bits CR14-CR11 of the configuration register.

The number of words to be output during a synchronous burst read operation can be configured as 8 words, 16 words, or continuous (burst length bits CR2-CR0).

The Wait signal may be asserted to indicate to the system that an output delay will occur. This delay depends on the starting address of the burst sequence and on the burst configuration.

Wait is asserted during the X latency, the wait state, and at the end of an 8- and 16-word burst. It is only de-asserted when output data is valid.

In continuous burst read mode, a wait state occurs when crossing the first 16-word boundary if the start address is not 16-word aligned.

The Wait signal can be configured to be active Low or active High by setting CR10 in the configuration register.

See Table 29: Synchronous read AC characteristics and Figure 14: Synchronous burst read AC waveforms for details.

10.3 Single synchronous read mode

Single synchronous read operations are similar to synchronous burst read operations except that the memory outputs the same data until the burst length requirements are satisfied (according to configuration register bits CR2-CR0).

Single synchronous read operations are used to read the EFA, electronic signature, status register, CFI, block protection status, configuration register status or Protection Register.

When the addressed bank is in read CFI, read status register or read electronic signature mode, the Wait signal is asserted during the X latency, the wait state and at the end of a 4-, 8- and 16-word burst. It is only de-asserted when the output data is valid.

See Table 29: Synchronous read AC characteristics and Figure 14: Synchronous burst read AC waveforms for details.

11 Dual operations and multiple bank architecture

The multiple bank architecture of the M58PRxxxLE gives greater flexibility for software developers to split the code and data spaces within the memory array. The dual operations feature simplifies the software management of the device by allowing code to be executed from one bank while another bank is being programmed or erased.

The dual operations feature means that while programming or erasing in one bank, read operations are possible in another bank with zero latency (only one bank at a time is allowed to be in program or erase mode).

If a read operation is required in a bank, which is programming or erasing, the program or erase operation can be suspended.

Also, if the suspended operation was erase then a program command can be issued to another block. This means the device can have one block in erase suspend mode, one programming and other banks in read mode.

Bus read operations are allowed in another bank between setup and confirm cycles of program or erase operations.

By using a combination of these features, read operations are possible at any moment in the M58PRxxxLE device.

Dual operations between the EFA and either of the CFI, the OTP, or the electronic signature memory space are not allowed. *Table 20* shows which dual operations are allowed or not between the CFI, the OTP, the electronic signature locations and the memory array.

Table 18 and Table 19 show the dual operations possible in other banks and in the same bank.

Table 18. Dual operations allowed in other banks

	Commands allowed in another bank										
Status of bank	Read Array	Read Status Register	Read CFI Query	Read Electronic Signature	Read EFA	Program, Buffer Program	Block Erase	Frase	Program/ Erase Resume		
Idle	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
Programming	Yes	Yes	Yes	Yes	Yes	_	-	Yes	_		
Erasing	Yes	Yes	Yes	Yes	Yes	-	-	Yes	_		
Program suspended	Yes	Yes	Yes	Yes	Yes	-	_	_	Yes		
Erase suspended	Yes	Yes	Yes	Yes	Yes	Yes	_	_	Yes		

Table 19. Dual operations allowed in same bank

	Commands allowed in same bank									
Status of bank	Read Array	Read Status Register	Read CFI Query	Read Electronic Signature	Read EFA	Program, Buffer Program	Block Erase	Frase	Program/ Erase Resume	
Idle	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Programming	_(1)	Yes	Yes	Yes	Yes	_	-	Yes	-	
Erasing	_(1)	Yes	Yes	Yes	Yes	_	_	Yes	_	
Program suspended	Yes ⁽²⁾	Yes	Yes	Yes	Yes	-	_	_	Yes	
Erase suspended	Yes ⁽²⁾	Yes	Yes	Yes	Yes	Yes ⁽²⁾	-	_	Yes	

The Read Array command is accepted but the data output is not guaranteed until the program or erase has completed.

Table 20. Dual operation limitations

OTP, EFA or CFI data	Main array bank	Comments
Read	Program/erase	While programming or erasing in a main array bank, the OTP, CFI data and EFA blocks may be read from any other bank.
Program	Read	While programming to the OTP area, read operations are only allowed in the other main array banks. Access to EFA data or CFI data is not allowed.
Program/erase	Read	While programming or erasing an EFA block, it is not allowed to read OTP or CFI data. Read operations to the banks whose addresses are not being used to address the EFA, are supported.

^{2.} Not allowed in the block that is being erased or in the program region that is being programmed.

12 Block locking

The M58PRxxxLE features an instant, individual block locking scheme that allows any block to be locked or unlocked with no latency. This locking scheme has three levels of protection.

- Lock/unlock this first level allows software only control of block locking.
- Lock-down this second level requires hardware interaction before locking can be changed.
- V_{PP} ≤V_{PPLK} the third level offers a complete hardware protection against program and erase on all blocks.

The protection status of each block can be set to locked, unlocked, and locked-down. *Table 21* defines all of the possible protection states ($\overline{\text{WP}}$, DQ1, DQ0), and *Appendix C*, *Figure 29* shows a flowchart for the locking operations.

12.1 Reading a block's lock status

The lock status of every block can be read in the read electronic signature mode of the device. To enter this mode issue the Read Electronic Signature command. Subsequent reads at the address specified in *Table 9* output the protection status of that block.

The lock status is represented by DQ0 and DQ1. DQ0 indicates the block lock/unlock status and is set by the Lock command and cleared by the Unlock command. DQ0 is automatically set when entering lock-down. DQ1 indicates the lock-down status and is set by the lock-down command. DQ1 cannot be cleared by software, only by a hardware reset or power-down.

The following sections explain the operation of the locking system.

12.2 Locked state

The default status of all blocks on power-up or after a hardware reset is locked (states (0,0,1) or (1,0,1)). Locked blocks are fully protected from program or erase operations. Any program or erase operations attempted on a locked block returns an error in the status register. The status of a locked block can be changed to unlocked or locked-down using the appropriate software commands. An unlocked block can be locked by issuing the Lock command.

12.3 Unlocked state

Unlocked blocks (states (0,0,0), (1,0,0) (1,1,0)) can be programmed or erased. All unlocked blocks return to the locked state after a hardware reset or when the device is powered-down. The status of an unlocked block can be changed to locked or locked-down using the appropriate software commands. A locked block can be unlocked by issuing the unlock command.

12.4 Lock-down state

Blocks that are locked-down (state (0,1,x)) are protected from program and erase operations (as for locked blocks) but their protection status cannot be changed using software commands alone. A locked or unlocked block can be locked down by issuing the Lock-down command. Locked-down blocks revert to the locked state when the device is reset or powered-down.

The lock-down function is dependent on the Write Protect, WP, input pin.

When $\overline{WP} = 0$ (V_{IL}), the blocks in the lock-down state (0,1,x) are protected from program, erase and protection status changes.

When $\overline{WP} = 1$ (V_{IH}) the lock-down function is disabled (1,1,x) and locked-down blocks can be individually unlocked to the (1,1,0) state by issuing the software command, where they can be erased and programmed.

When the lock-down function is disabled ($\overline{WP}=1$) blocks can be locked (1,1,1) and unlocked (1,1,0) as desired. When $\overline{WP}=0$ blocks that were previously locked-down return to the Lock-down state (0,1,x) regardless of any changes that were made while $\overline{WP}=1$.

Device reset or power-down resets all blocks, including those in lock-down, to the locked state.

12.5 Locking operations during erase suspend

Changes to block lock status can be performed during an erase suspend by using the standard locking command sequences to unlock, lock or lock down a block. This is useful in the case when another block needs to be updated while an erase operation is in progress.

To change block locking during an erase operation, first write the Erase Suspend command, then check the status register until it indicates that the erase operation has been suspended. Next, write the desired lock command sequence to a block and the lock status is changed. After completing any desired lock, read, or program operations, resume the erase operation with the Erase Resume command.

If a block is locked or locked-down during an Erase Suspend of the same block, the locking status bits are changed immediately, but when the erase is resumed, the erase operation completes. Locking operations cannot be performed during a program suspend.

Table 21. Lock status

-	otection status ⁽¹⁾ DQ1, DQ0)	Next protection status ⁽¹⁾ (WP, DQ1, DQ0)					
Current state	Program/erase allowed	After Block Lock command	After Block Unlock command	After Block Lock-down command	After WP transition		
1,0,0	yes	1,0,1	1,0,0	1,1,1	0,0,0		
1,0,1 ⁽²⁾	no	1,0,1	1,0,0	1,1,1	0,0,1		
1,1,0	yes	1,1,1	1,1,0	1,1,1	0,1,1		
1,1,1	no	1,1,1	1,1,0	1,1,1	0,1,1		
0,0,0	yes	0,0,1	0,0,0	0,1,1	1,0,0		
0,0,1 ⁽²⁾	no	0,0,1	0,0,0	0,1,1	1,0,1		
0,1,1	no	0,1,1	0,1,1	0,1,1	1,1,1 or 1,1,0 ⁽³⁾		

^{1.} The lock status is defined by the write protect pin and by DQ1 ('1' for a locked-down block) and DQ0 ('1' for a locked block) as read in the Read Electronic Signature command with A1 = V_{IH} and A0 = V_{IL} .

^{2.} All blocks are locked at power-up, so the default configuration is 001 or 101 according to $\overline{\text{WP}}$ status.

^{3.} A \overline{WP} transition to V_{IH} on a locked block will restore the previous DQ0 value, giving a 111 or 110.

13 Program and erase times and endurance cycles

The program and erase times and the number of program/ erase cycles per block are shown in *Table 22*. Exact erase times may change depending on the memory array condition. The best scenario is when all the bits in the block are at '0' (pre-programmed). The worst scenario is when all the bits in the block are at '1' (not preprogrammed). Usually, the system overhead is negligible with respect to the Erase time. In the M58PRxxxLE the maximum number of program/erase cycles depends on the V_{PP} voltage supply used.

Table 22. Program/erase times and endurance cycles⁽¹⁾ (2)

	Parameter		Condition	Min	Тур	Typical after 100 kW/E cycles	Max	Unit
	Erase	EFA block (4 KW	ord)		0.7		2.5	s
	Liase	Main array block	128 KWord)		0.9		4	s
		Single cell ⁽⁴⁾	Word Program ⁽⁵⁾		50		230	μs
		Single cell.	Buffer Program		250		500	μs
	Program ⁽³⁾	Single word ⁽⁴⁾	Word Program ⁽⁵⁾		50		230	μs
V _{DD}			Buffer Program		250		500	μs
		Buffer (512 word Program)		2.15		4.3	ms	
V _{PP} =		EFA block (4 KWord)			0.2		0.94	S
>		Main array block (128 KWord) (Buffer Program)			0.55		1.1	S
	Suppond Latonay	Program			20		30	μs
-	Suspend Latency	Erase			20		30	μs
	Program/Erase	Main array block		100 000				ovolos
	cycles (per block)	EFA block		100 000				cycles
	Blank Check	Main array block			3.2			ms

Table 22. Program/erase times and endurance cycles⁽¹⁾ (continued)

Parameter		Condition	Min	Тур	Typical after 100 kW/E cycles	Max	Unit	
	Erase	EFA block (4 KW	ord)		0.7		2.5	s
	Erase	Main array block	(128 KWord)		0.9		4	s
		Single cell ⁽⁴⁾	Word Program ⁽⁵⁾		50		230	μs
			Word Program ⁽⁵⁾		50		230	μs
	Program ⁽³⁾	Single word ⁽⁴⁾	Buffer Enhanced Factory Program ⁽⁴⁾		4.2			μs
Vррн		Buffer (512 words)	Buffer Program		2.15		4.3	ms
$V_{PP} = V$			Buffer Enhanced Factory Program		2.15			ms
_		Main block (128 KWords)	Buffer Program		0.55		1.1	S
			Buffer Enhanced Factory Program		0.55			S
		EFA block (4 KWords)			0.2		0.94	s
	Program/Erase cycles (per block)	Main array block (128 KWords)		100 000				cycles
		EFA block (4 KWords)		100 000				
	Blank Check	Main array block			3.2			ms

^{1.} $T_A = -30$ to 85 °C; $V_{DD} = 1.7$ V to 2 V; $V_{DDQ} = 1.7$ V to 2 V.

^{2.} Values are liable to change with the external system-level overhead (command sequence and status register polling execution).

^{3.} Excludes the time needed to execute the command sequence.

^{4.} This is an average value on the entire device.

^{5.} The first Word Program in a program region will take 115 μ s, the subsequent words will take 50 μ s to program.

14 Maximum ratings

Stressing the device above the ratings listed in *Table 23: Absolute maximum ratings* may cause permanent damage to the device. These are stress ratings only and operation of the device at these or any other conditions above those indicated in the operating sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability. Refer also to the STMicroelectronics SURE program and other relevant quality documents.

Table 23. Absolute maximum ratings

Cumbal	Parameter	Va	Unit	
Symbol	Farameter	Min	Max	Offic
T _A	Ambient operating temperature	-30	85	°C
T _{BIAS}	Temperature under bias	-30	85	°C
T _{STG}	Storage temperature	-65	125	°C
V _{IO}	Input or output voltage	-1	3	V
V _{DD}	Supply voltage	-1	3	V
V_{DDQ}	Input/output supply voltage	-1	3	V
V _{PP}	Program voltage	-1	10	V
Io	I _O Output short circuit current		100	mA
t _{VPPH}	Time for V _{PP} at V _{PPH}		100	hours


15 DC and AC parameters

This section summarizes the operating measurement conditions, and the DC and AC characteristics of the device. The parameters in the DC and AC characteristics tables in this section are derived from tests performed under the measurement conditions summarized in *Table 24: Operating and AC measurement conditions*. Designers should check that the operating conditions in their circuit match the operating conditions when relying on the quoted parameters.

Table 24. Operating and AC measurement conditions

Parameter	Min	Max	Units
V _{DD} supply voltage	1.7	2.0	V
V _{DDQ} supply voltage	1.7	2.0	V
V _{PP} supply voltage (factory environment)	8.5	9.5	V
V _{PP} supply voltage (application environment)	0.9	2.0	V
Ambient operating temperature	-30	85	°C
Load capacitance (C _L)	3	30	
Input rise and fall times		3	ns
Input pulse voltages	0 to '	0 to V _{DDQ}	
Input and output timing ref. voltages	V _{DE}	V	

Figure 10. AC measurement I/O waveform

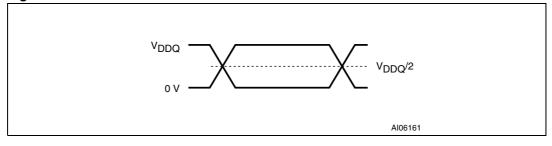

 V_{DDQ} V_{DQQ} $V_{$

Figure 11. AC measurement load circuit

Table 25. Capacitance⁽¹⁾

Symbol	Parameter Test condition Min		Max	Unit	
C _{IN}	Input capacitance	V _{IN} = 0 V	2	8	pF
C _{OUT}	Output capacitance	V _{OUT} = 0 V	4	8	pF

^{1.} Sampled only, not 100% tested.

Table 26. DC characteristics - currents

Symbol	Parameter	Test condition	on ⁽¹⁾	Тур	Max	Unit
I _{LI}	Input leakage current	0 V ≤V _{IN} ≤V _E	DDQ		±1	μΑ
I _{LO}	Output leakage current	0 V ≤V _{OUT} ≤V	0 V ≤V _{OUT} ≤V _{DDQ}		±1	μΑ
	Supply current Asynchronous read (f=5 MHz) $\overline{E} = V_{IL}, \overline{G} = V_{IH}$		25	30	mA	
	Supply current Page read (f=13 MHz)			5	10	mA
		8 word		22	27	mA
I _{DD1}	Supply current Synchronous read (f=66 MHz)	16 word		19	21	mA
	,	Continuou	s	25	29	mA
		8 word		26	31	mA
	Supply current Synchronous read (f = 108 MHz)	16 word		23	25	mA
		Continuou	S	30	37	mA
	Cumply ourrent (recet)	$\overline{RP} = V_{SS} \pm 0.2 \text{ V}$	512 Mbit	50	160	μА
I _{DD2}	Supply current (reset)	$RP = V_{SS} \pm 0.2 V$	1 Gbit	70	255	
	Cupply ourrent (standby)	$\overline{E} = V_{DDQ} \pm 0.2 \text{ V}$	512 Mbit	50	160	
I _{DD3}	Supply current (standby)	K = V _{SS} 1 Gbit 70		255	μA	
. (1)	Supply current (automatic	$\overline{E} = V_{IL}, \overline{G} = V_{IH},$	512 Mbit	50	160	11Λ
I _{DD4} ⁽¹⁾	standby)	$\overline{RP} = V_{IH}$	1 Gbit	70	255	μΑ
I _{DD5} ⁽²⁾	Supply current (deep power-down)			2	45	μΑ
	Supply current (program)	V _{PP} = V _{PPH} , V _{PF}	$p = V_{DD}$	35	50	mA
I _{DD6} (3)	Supply current (erase)	$V_{PP} = V_{PPH}, V_{PF}$	35	55	mA	
	Supply current (blank check)	$V_{PP} = V_{PPH}, V_{PF}$	$p = V_{DD}$	35	50	mA
	Cumply ourrent	Program/erase in o asynchronous r another ba	ead in	60	85	mA
I _{DD7} ⁽³⁾⁽⁴⁾	Supply current (dual operations)	Program/erase in one bank, synchronous read (continuous, f = 108 MHz) in another bank		65	92	mA
ı (3)	Supply current program/ erase	$\overline{E} = V_{DDQ} \pm 0.2 \text{ V}$	512 Mbit	50	160	
I _{DD8} ⁽³⁾	suspended (standby)	$K = V_{SS}$	1 Gbit	70	255	μA
	V _{PP} supply current (program)	$V_{PP} = V_{PP}$	Н	8	22	mA
(3)	vpp supply culterit (program)	$V_{PP} = V_{DD}$		0.05	0.1	mA
I _{PP1} ⁽³⁾	V _{PP} supply current (erase)	$V_{PP} = V_{PPH}$		8	22	mA
	vpp supply current (erase)	$V_{PP} = V_{DI}$)	0.05	0.1	mA
I _{PP2}	V _{PP} supply current (read)	V _{PP} ≤V _{DD})	2	15	μΑ

Table 26. DC characteristics - currents (continued)

Symbol	Parameter Test condition ⁽¹⁾		Тур	Max	Unit
I _{PP3} ⁽³⁾	V _{PP} supply current (standby, program/erase suspend)	V _{PP} ≤V _{DD}	0.2	5	μΑ
	V _{PP} supply current (blank check)	$V_{PP} = V_{PPH}$	0.05	0.1	mA
I _{PP4}	VPP Supply culterit (blank check)	$V_{PP} = V_{PP1}$	0.05	0.1	mA

- 1. All inputs stable.
- 2. The DPD current is measured 40 μs after entering the deep power-down mode.
- 3. Sampled only, not 100% tested.
- 4. V_{DD} dual operation current is the sum of read and program or erase currents.

Table 27. DC characteristics - voltages

Symbol	Parameter	Test condition	Min	Тур	Max	Unit
V _{IL}	Input low voltage		0		0.4	V
V _{IH}	Input high voltage		V _{DDQ} -0.4		V _{DDQ} + 0.4	V
V _{OL}	Output low voltage	I _{OL} = 100 μA			0.1	٧
V _{OH}	Output high voltage	$I_{OH} = -100 \ \mu A$	V _{DDQ} -0.1			V
V _{PP1}	V _{PP} program voltage-logic	Program, erase	1.1	1.8	3.3	٧
V _{PPH}	V _{PP} program voltage factory	Program, erase	8.5	9.0	9.5	٧
V _{PPLK}	Program or erase lockout				0.4	٧
V_{LKO}	V _{DD} lock voltage		1			٧
V _{RPH}	RP pin extended high voltage				3.3	٧
V _{LKOQ}	V _{DDQ} lock voltage		0.9			V

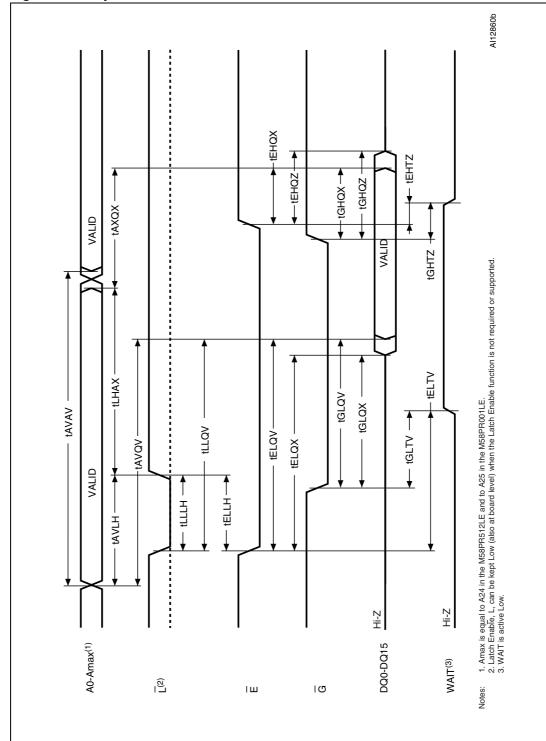


Figure 12. Asynchronous random access read AC waveforms

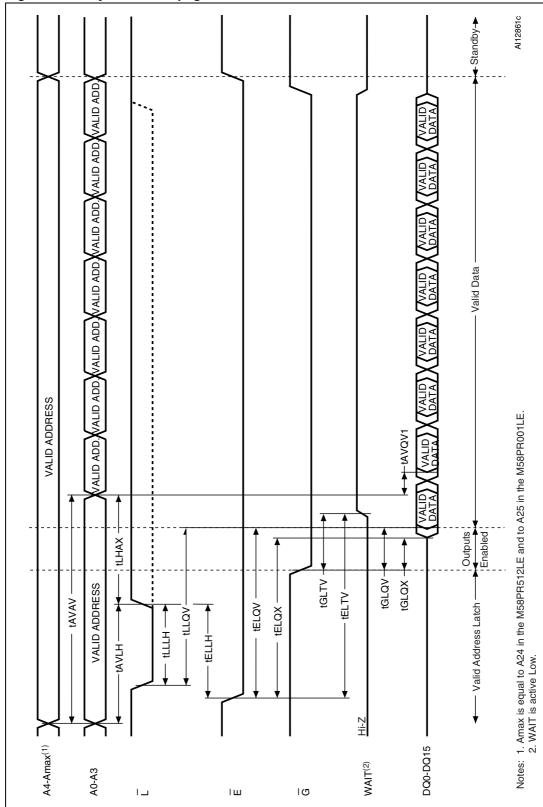


Figure 13. Asynchronous page read AC waveforms

Table 28. Asynchronous read AC characteristics

S	ymbol	Alt	Parameter		108 MHz	66 MHz	Unit
	t _{AVAV}	t _{RC}	Address Valid to Next Address Valid	Min	96	96	ns
	t _{AVQV}	t _{ACC}	Address Valid to Output Valid (random)	Max	96	96	ns
	t _{AVQV1}	t _{PAGE}	Address Valid to Output Valid (page)	Max	20	25	ns
	t _{AXQX} ⁽¹⁾	t _{OH}	Address Transition to Output transition	Min	0	0	ns
	t _{ELTV}		Chip Enable Low to Wait Valid	Max	14	14	ns
	t _{ELQV} ⁽²⁾	t _{CE}	Chip Enable Low to Output Valid	Max	96	96	ns
gs	t _{ELQX} ⁽¹⁾	t_{LZ}	Chip Enable Low to Output transition	Min	0	0	ns
Read timings	t _{EHTZ}		Chip Enable High to Wait Hi-Z	Max	9	14	ns
ad t	t _{EHQX} ⁽¹⁾	t _{OH}	Chip Enable High to Output transition	Min	0	0	ns
æ	t _{EHQZ} ⁽¹⁾	t _{HZ}	Chip Enable High to Output Hi-Z	Max	9	14	ns
	t _{GLQV} ⁽²⁾	t _{OE}	Output Enable Low to Output Valid	Max	20	20	ns
	t _{GLQX} ⁽¹⁾	t _{OLZ}	Output Enable Low to Output transition	Min	0	0	ns
	t _{GLTV}		Output Enable Low to Wait Valid	Max	7	11	ns
	t _{GHQX} ⁽¹⁾	t _{OH}	Output Enable High to Output transition	Min	0	0	ns
	t _{GHQZ} ⁽¹⁾	t _{DF}	Output Enable High to Output Hi-Z	Max	9	14	ns
	t _{GHTZ}		Output Enable High to Wait Hi-Z	Max	9	17	ns
	t _{AVLH}	t _{AVADVH}	Address Valid to Latch Enable High	Min	5	5	ns
sgu	t _{ELLH}	t _{ELADVH}	Chip Enable Low to Latch Enable High	Min	9	10	ns
timir	t _{LHAX}	t _{ADVHAX}	Latch Enable High to Address transition	Min	5	5	ns
Latch timings	t _{LLLH}	t _{ADVLADVH}	Latch Enable Pulse width	Min	7	7	ns
<u>"</u>	t _{LLQV}	t _{ADVLQV}	Latch Enable Low to Output Valid (random)	Max	96	96	ns

^{1.} Sampled only, not 100% tested.

^{2.} \overline{G} may be delayed by up to t_{ELQV} - t_{GLQV} after the falling edge of \overline{E} without increasing t_{ELQV} .

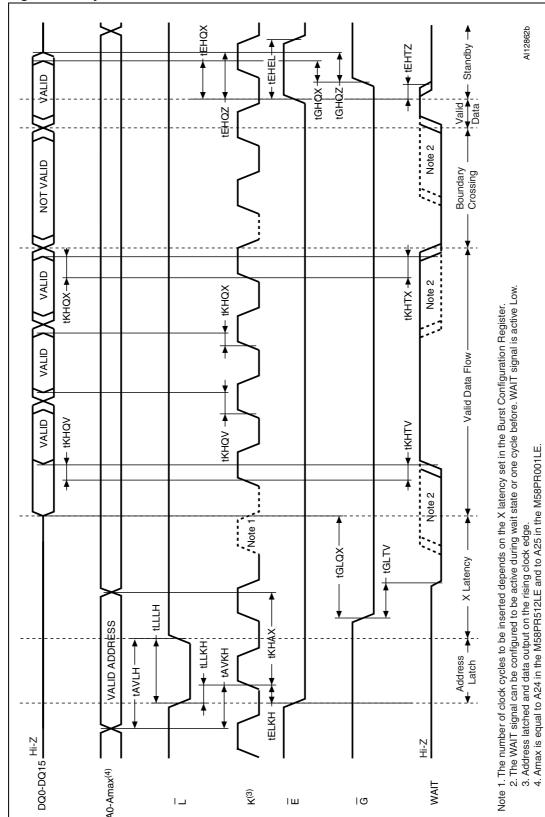


Figure 14. Synchronous burst read AC waveforms

78/123

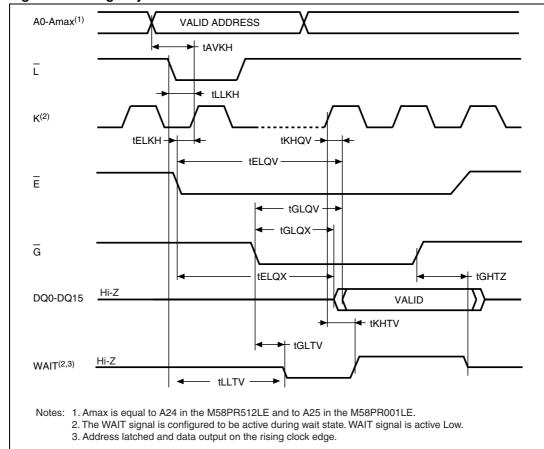


Figure 15. Single synchronous read AC waveforms



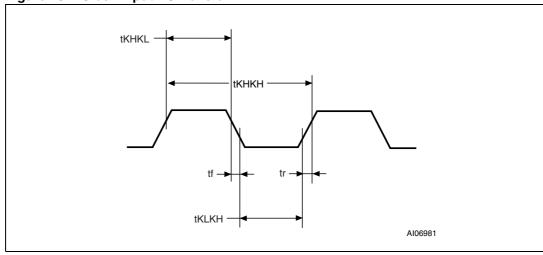


Table 29. Synchronous read AC characteristics

Sy	Symbol Alt		Parameter		108 MHz 66 MHz		Unit
	t _{AVKH}	t _{AVCLKH}	Address Valid to Clock High	Min	5	5	ns
	t _{ELKH}	t _{ELCLKH}	Chip Enable Low to Clock High	Min	5	5	ns
ngs	t _{EHEL}		Chip Enable Pulse width (subsequent synchronous reads)	Min	9	11	ns
Read timings	t _{EHTZ}		Chip Enable High to Wait Hi-Z	Max	9	11	ns
lead	t _{KHAX}	t _{CLKHAX}	Clock High to Address transition	Min	5	5	ns
	t _{KHQV}	t _{CLKHQV}	Clock High to Output Valid Clock High to WAIT Valid	Max	7	11	ns
Synchronous	t _{KHQX}	t _{CLKHQX}	Clock High to Output transition Clock High to WAIT transition	Min	2	3	ns
	t _{LLKH}	t _{ADVLCLK} H	Latch Enable Low to Clock High	Min	5	5	ns
	t_{LLTV}		Latch Enable Low to WAIT Valid	Max	14	14	ns
SI		+ -	Clock period (f=66 MHz)	Min		15	ns
atior	tkhkh	t _{CLK}	Clock period (f=108 MHz)	Min	9		ns
Clock specifications	t _{KHKL}		Clock High to Clock Low Clock Low to Clock High	Min	2.5	3.5	ns
ock	t _f		Clock fall or rice time	Min	0.3	-	ns
ਹ	Clock fall or rise time		Max	2	3	ns	

^{1.} Sampled only, not 100% tested.

^{2.} For other timings please refer to *Table 28: Asynchronous read AC characteristics*.

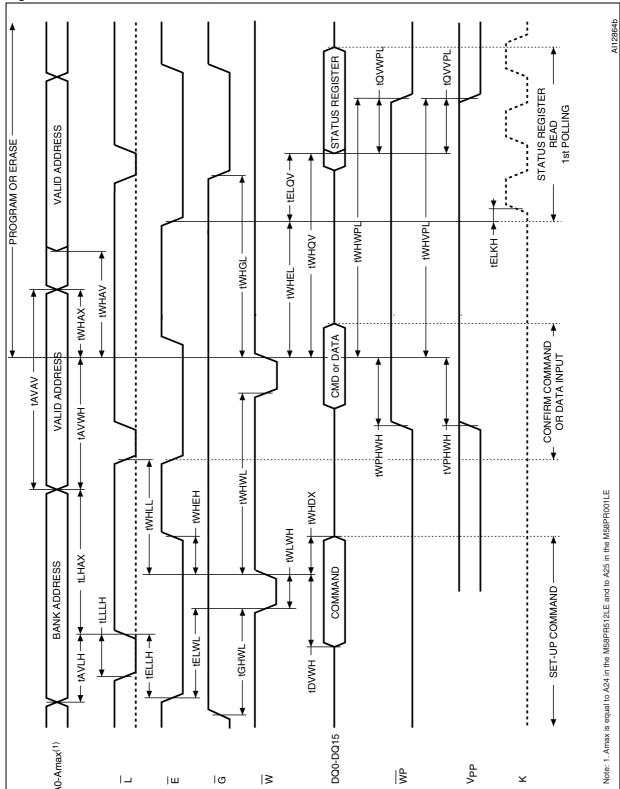


Figure 17. Write AC waveforms, write enable controlled

Table 30. Write AC characteristics, write enable controlled⁽¹⁾

S	Symbol	Alt	Parameter		108 MHz	66 MHz	Unit
	t _{AVAV}	t _{WC}	Address Valid to Next Address Valid	Min	96	96	ns
	t _{AVLH}		Address Valid to Latch Enable High	Min	5	5	ns
	t _{AVWH} ⁽²⁾ Address Valid to Write Enable High				40	40	ns
	t _{DVWH}	t _{DS}	Data Valid to Write Enable High	Min	40	40	ns
	t _{ELLH}		Chip Enable Low to Latch Enable High	Min	9	10	ns
	t _{ELWL}	t _{CS}	Chip Enable Low to Write Enable Low	Min	0	0	ns
(0	t _{ELQV}		Chip Enable Low to Output Valid	Min	96	96	ns
Write Enable Controlled timings	t _{ELKH}		Chip Enable Low to Clock High	Min	5	5	ns
d tin	t _{GHWL}		Output Enable High to Write Enable Low	Min	14	17	ns
rolle	t _{LHAX}		Latch Enable High to Address transition	Min	5	5	ns
Cont	t _{LLLH}		Latch Enable Pulse width	Min	7	7	ns
ple	(0)			Min	0	0	ns
Ens	t _{WHAX} ⁽²⁾	t _{AH}	Write Enable High to Address transition	Min	0	0	ns
Vrite	t _{WHDX}	t _{DH}	Write Enable High to Input transition	Min	0	0	ns
>	t _{WHEH}	t _{CH}	Write Enable High to Chip Enable High	Min	0	0	ns
	t _{WHEL} (3)		Write Enable High to Chip Enable Low	Min	20	20	ns
	t _{WHGL}		Write Enable High to Output Enable Low	Min	0	0	ns
	t _{WHLL} (3)		Write Enable High to Latch Enable Low	Min	20	20	ns
	t _{WHWL}	t _{WPH}	Write Enable High to Write Enable Low	Min	20	20	ns
	t _{WHQV}		Write Enable High to Output Valid	Min	116	116	ns
	t _{WLWH}	t _{WP}	Write Enable Low to Write Enable High	Min	40	40	ns
	t _{QVVPL}		Output (status register) Valid to V _{PP} Low	Min	0	0	ns
Protection timings	t _{QVWPL}		Output (status register) Valid to Write Protect Low	Min	0	0	ns
on ti	t _{VPHWH}	t _{VPS}	V _{PP} High to Write Enable High	Min	200	200	ns
tecti	t _{WHVPL}		Write Enable High to V _{PP} Low	Min	200	200	ns
Pro	t _{WHWPL}		Write Enable High to Write Protect Low	Min	200	200	ns
	t _{WPHWH}		Write Protect High to Write Enable High	Min	200	200	ns

^{1.} Sampled only, not 100% tested.

^{2.} Meaningful only if \overline{L} is always kept Low.

^{3.} t_{WHEL} and t_{WHLL} have this value when reading in the targeted bank or when reading after a Set Configuration Register command. System designers should take this into account and may insert a software No-Op instruction to delay the first read in the same bank after issuing any command and to delay the first read to any address after issuing a Set Configuration Register command. If the first read after the command is a Read Array operation in a different bank and no changes to the configuration register have been issued, t_{WHEL} is 0 ns.

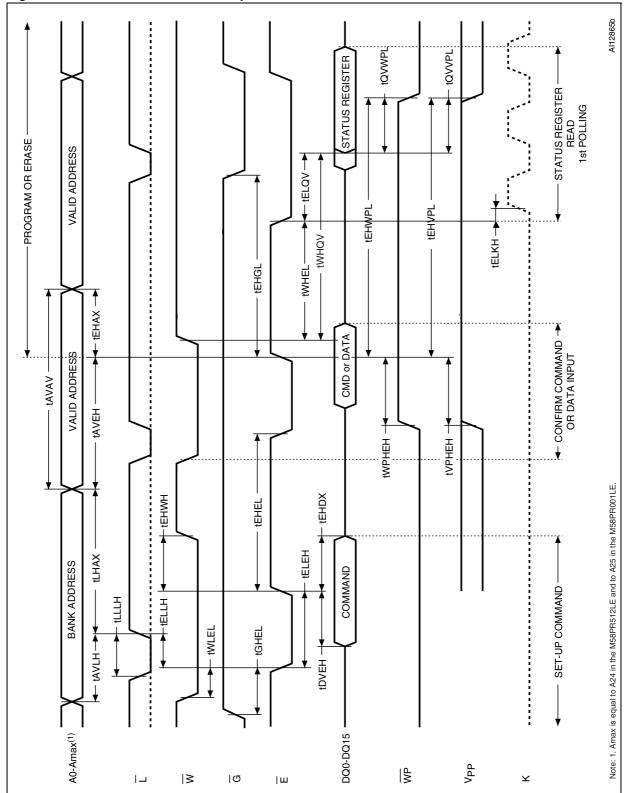


Figure 18. Write AC waveforms, Chip Enable controlled

Table 31. Write AC characteristics, Chip Enable controlled⁽¹⁾

S	ymbol	Alt	Parameter		108 MHz	66 MHz	Unit
	t _{AVAV}		Address Valid to Next Address Valid	Min	96	96	ns
	t _{AVEH} t _{WC} Address Valid to Chip Enable High				40	45	ns
	t _{AVLH}		Address Valid to Latch Enable High	Min	5	5	ns
	t _{DVEH}	t _{DS}	Data Valid to Chip Enable High	Min	40	40	ns
	t _{EHAX}	t _{AH}	Chip Enable High to Address transition	Min	0	0	ns
	t _{EHDX}	t _{DH}	Chip Enable High to Input transition	Min	0	0	ns
Chip Enable Controlled timings	t _{EHEL}	t _{CPH}	Chip Enable High to Chip Enable Low	Min	20	20	ns
d tin	t _{EHGL}		Chip Enable High to Output Enable Low	Min	0	0	ns
rolle	t _{EHWH}	t _{CH}	Chip Enable High to Write Enable High	Min	0	0	ns
Sont	t _{ELKH}		Chip Enable Low to Clock High	Min	5	5	ns
ple (t _{ELEH} t _{CP} Chip Enable Low to Chip Enable High t _{ELLH} Chip Enable Low to Latch Enable High		Min	40	45	ns	
Ena			Chip Enable Low to Latch Enable High	Min	9	10	ns
Chip	t _{ELQV}		Chip Enable Low to Output Valid	Min	96	96	ns
	t _{GHEL}		Output Enable High to Chip Enable Low	Min	14	17	ns
	t _{LHAX}		Latch Enable High to Address transition	Min	5	5	ns
	t _{LLLH}		Latch Enable Pulse width	Min	7	7	ns
	t _{WHEL} ⁽²⁾		Write Enable High to Chip Enable Low	Min	20	20	ns
	t _{WHQV}		Write Enable High to Output Valid	Min	116	116	ns
	t _{WLEL}	t _{CS}	Write Enable Low to Chip Enable Low	Min	0	0	ns
	t _{EHVPL}		Chip Enable High to V _{PP} Low	Min	200	200	ns
sbu	t _{EHWPL}		Chip Enable High to Write Protect Low	Min	200	200	ns
timir	t _{QVVPL}		Output (status register) Valid to V _{PP} Low	Min	0	0	ns
Protection timings	t _{QVWPL}		Output (status register) Valid to Write Protect Low	Min	0	0	ns
Pro	t _{VPHEH}	t _{VPS}	V _{PP} High to Chip Enable High	Min	200	200	ns
	t _{WPHEH}		Write Protect High to Chip Enable High	Min	200	200	ns

^{1.} Sampled only, not 100% tested.

^{2.} t_{WHEL} has this value when reading in the targeted bank or when reading after a Set Configuration Register command. System designers should take this into account and may insert a software No-Op instruction to delay the first read in the same bank after issuing any command and to delay the first read to any address after issuing a Set Configuration Register command. If the first read after the command is a Read Array operation in a different bank and no changes to the configuration register have been issued, t_{WHEL} is 0 ns.

tPHWL tPLWL \overline{W} , \overline{E} , \overline{G} , \overline{L} **tPHEL** tPLEL tPHGL tPLGL tPHLL tPLLL $\overline{\mathsf{RP}}$ - tVDHPH tPLPH VDD, VDDQ Power-Up Reset AI06976

Figure 19. Reset and power-up AC waveforms

Table 32. Reset and power-up AC characteristics

Symbol	Parameter	Test condition		108 MHz / 66 MHz	Unit
t _{PLWL}	Reset Low to Write Enable Low,	During program	Min	25	μs
t _{PLEL}	Reset Low to Chip Enable Low,	During erase	Min	30	μs
t _{PLGL} t _{PLLL}	Reset Low to Output Enable Low, Reset Low to Latch Enable Low	Other conditions	Min	80	ns
t _{PHWL} t _{PHEL} t _{PHGL} t _{PHLL}	Reset High to Write Enable Low Reset High to Chip Enable Low Reset High to Output Enable Low Reset High to Latch Enable Low		Min	30	ns
t _{PLPH} ^{(1),(2)}	RP Pulse width		Min	50	ns
t _{VDHPH} (3)	Supply voltages High to Reset High		Min	300	μs

^{1.} The device reset is possible but not guaranteed if t_{PLPH} < 50 ns.

№ numonyx 85/123

^{2.} Sampled only, not 100% tested.

^{3.} It is important to assert \overline{RP} to allow proper CPU initialization during power-up or reset.

Figure 20. Deep power-down AC waveforms

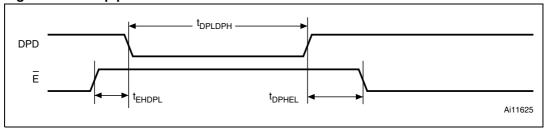


Figure 21. Reset during deep power-down AC waveforms

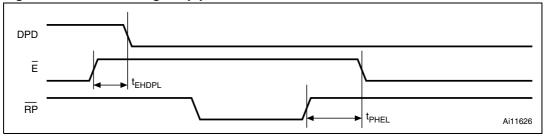


Table 33. Deep power-down AC characteristics

Symbol	Parameter	rameter Test condition		108 MHz/66 MHz	Unit
t _{DPLDPH}	Deep power-down asserted to Deep power-down de-asserted		Min	50	ns
t _{EHDPL}	Chip Enable Low to deep power-down asserted		Min	0	μs
t _{DPHEL}	Deep power-down de-asserted to Chip Enable Low		Min	75	μs
t _{PHEL}	Reset High to Chip Enable Low	During deep power-down	Min	75	μs

16 Package mechanical

To meet environmental requirements, Numonyx offers these devices in ECOPACK® packages. These packages have a lead-free, second-level interconnect. In compliance with JEDEC Standard JESD97, the category of second-level interconnect is marked on the package and on the inner box label.

The maximum ratings related to soldering conditions are also marked on the inner box label. ECOPACK specifications are available at: www.numonyx.com.


Figure 22. TFBGA105 9 \times 11 mm - 9 \times 12 active ball array, 0.8 mm pitch, package outline

1. Drawing is not to scale.

Table 34. TFBGA105 9 \times 11 mm - 9 \times 12 active ball array, 0.8 mm pitch, mechanical data

Councile of		Millimeters			Inches	
Symbol	Тур	Min	Max	Тур	Min	Max
Α			1.20			0.047
A1		0.20			0.008	
A2	0.80			0.031		
b	0.35	0.30	0.40	0.014	0.012	0.016
D	9.00	8.90	9.10	0.354	0.350	0.358
D1	6.40			0.252		
ddd			0.10			0.004
Е	11.00	10.90	11.10	0.433	0.429	0.437
E1	8.80			0.346		
е	0.80	-	-	0.031	_	-
FD	1.30			0.051		
FE	1.10			0.043		
SE	0.40			0.016		

Figure 23. TFBGA107 8 \times 11 mm - 9 \times 12 active ball array, 0.8 mm pitch, package outline

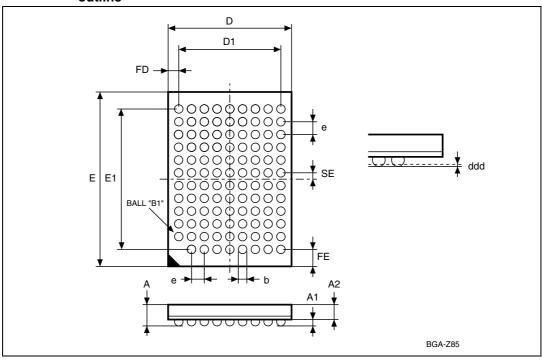


1. Drawing is not to scale.

Table 35. Stacked TFBGA107 8 \times 11 mm - 9 \times 12 active ball array, 0.8 mm pitch, package mechanical data

0		millimeters			inches	
Symbol	Тур	Min	Max	Тур	Min	Max
Α			1.20			0.047
A1		0.20			0.008	
A2	0.85			0.033		
b	0.35	0.30	0.40	0.014	0.012	0.016
D	8.00	7.90	8.10	0.315	0.311	0.319
D1	6.40			0.252		
ddd			0.10			0.004
Е	11.00	10.90	11.10	0.433	0.429	0.437
E1	8.80			0.346		
е	0.80			0.031		
FD	0.80			0.031		
FE	1.10			0.043		
SE	0.40			0.016		

17 Part numbering

Table 36. Ordering information scheme

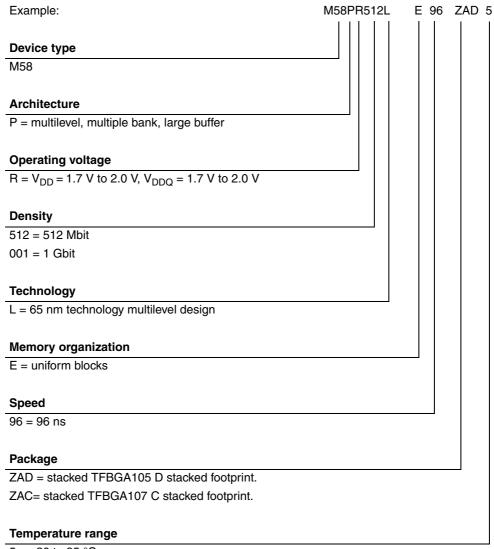

 $5 = -30 \text{ to } 85 \,^{\circ}\text{C}$

Devices are shipped from the factory with the memory content bits erased to '1'.

For a list of available options (speed, package, etc.) or for further information on any aspect of this device, please contact the Numonyx sales office nearest to you.

Appendix A Block address tables

The following set of equations can be used to calculate a complete set of block addresses using the information contained in tables *37*, *38*, *39* and *40*.

To calculate the block base address from the block number:

First it is necessary to calculate the bank number and the block number offset. This can be achieved using the following formulas:

For the M58PR512LE:

Bank_Number = Block_Number / 32

Block_Number_Offset = Block_Number - (Bank_Number x 32)

For the M58PR001LE:

Bank_Number = Block_Number / 64

Block_Number_Offset = Block_Number - (Bank_Number x 64)

The Block Base Address is calculated using the formula below:

Block_Base_Address = Bank_Base_Address + Block_Base_Address_Offset

To calculate the Bank number and the Block Number from the Block Base Address:

The Block Number, Bank Number and Block Number Offset can be calculated using the formulas below:

For the M58PR512LE:

Block_Number = address / 2³²

Bank_Number = Block_Number / 32

Block_Number_Offset = Block_Number -(Bank_Number x 32)

For the M58PR001LE:

Block_Number = address / 2⁶⁴

Bank_Number = Block_Number / 64

Block_Number_Offset = Block_Number - (Bank_Number x 64)

Table 37. M58PR512LE - bank base addresses

Bank number	Block numbers	Bank base address
0	0 - 31	0000000
1	32 - 63	0400000
2	64 - 95	0800000
3	96 - 127	0C00000
4	128 - 159	1000000
5	160 - 191	1400000
6	192 - 223	1800000
7	224 - 255	1C00000

Table 38. M58PR001LE - bank base addresses

Bank number	Block numbers	Bank base address
0	0 - 63	0
1	64 - 127	800000
2	128 - 191	1000000
3	192 - 255	1800000
4	256 - 319	2000000
5	320 - 383	2800000
6	384 - 447	3000000
7	448 - 511	3800000

Table 39. M58PR512LE - block addresses

Block number offset	Block base address offset
0	0000000
1	0020000
2	0040000
3	0060000
4	0080000
5	00A0000
6	00C0000
7	00E0000
8	0100000
9	0120000
10	0140000
11	0160000
12	0180000
13	01A0000
14	01C0000
15	01E0000
16	0200000
17	0220000
18	0240000
19	0260000
20	0280000
21	02A0000
22	02C0000
23	02E0000
24	0300000
25	0320000
26	0340000
27	0360000
28	0380000
29	03A0000
30	03C0000
31	03E0000

Table 40. M58PR001LE - block addresses

Block number	Block base address offset
0	0000000
1	0020000
2	0040000
3	0060000
4	0080000
5	00A0000
6	00C0000
7	00E0000
8	0100000
9	0120000
10	0140000
11	0160000
12	0180000
13	01A0000
14	01C0000
15	01E0000
16	0200000
17	0220000
18	0240000
19	0260000
20	0280000
21	02A0000
22	02C0000
23	02E0000
24	0300000
25	0320000
26	0340000
27	0360000
28	0380000
29	03A0000
30	03C0000
31	03E0000
32	0400000
33	0420000
34	0440000

Table 40. M58PR001LE - block addresses (continued)

Block number	Block base address offset
35	0460000
36	0480000
37	04A0000
38	04C0000
39	04E0000
40	0500000
41	0520000
42	0540000
43	0560000
44	0580000
45	05A0000
46	05C0000
47	05E0000
48	0600000
49	0620000
50	0640000
51	0660000
52	0680000
53	06A0000
54	06C0000
55	06E0000
56	0700000
57	0720000
58	0740000
59	0760000
60	0780000
61	07A0000
62	07C0000
63	07E0000

Appendix B Common flash interface

The common flash interface is a JEDEC approved, standardized data structure that can be read from the flash memory device. It allows a system software to query the device to determine various electrical and timing parameters, density information, and functions supported by the memory. The system can interface easily with the device, enabling the software to upgrade itself when necessary.

When the Read CFI Query command is issued the device enters CFI query mode and the data structure is read from the memory. Tables 41, 42, 43, 44, 45, 46, 47, 48, 49, 50 and 51 show the addresses used to retrieve the data. The query data is always presented on the lowest order data outputs (DQ0-DQ7), and the other outputs (DQ8-DQ15) are set to 0.

The CFI data structure also contains a security area where a 64-bit unique security number is written (see *Figure 6: Protection Register memory map*). This area can only be accessed in read mode by the final user. It is impossible to change the security number after it has been written by ST. Issue a Read Array command to return to read mode.

Table 41. Query structure overview⁽¹⁾

Offset	Sub-section name	Description
000h	Reserved	Reserved for algorithm-specific information
010h	CFI query identification string	Command set ID and algorithm data offset
01Bh	System interface information	Device timing and voltage information
027h	Device geometry definition	Flash device layout
Р	Primary algorithm-specific extended query table	Additional information specific to the primary algorithm (optional)
Α	Alternate algorithm-specific extended query table	Additional information specific to the alternate algorithm (optional)
080h	Security code area	Lock Protection Register Unique device number and user programmable OTP

The flash memory display the CFI data structure when CFI Query command is issued. In this table are listed the main sub-sections detailed in tables 42, 43, 44 and 45. Query data is always presented on the lowest order data outputs.

Table 42. CFI query identification string

Offset	Sub-section name	Description		Value
000h	0020h	Manufacturer code		ST
001h	8819h 880Fh	Device code	M58PR512LE M58PR001LE	512 Mbits 1 Gbit
002h- 00Fh	Reserved	Reserved		
010h	0051h			"Q"
011h	0052h	Query unique ASCII string "QRY"		"R"
012h	0059h			"Y"
013h	0000h	Primary algorithm command set and control interface		
014h	0002h	ID code 16 bit ID code defining a specific algorithm		
015h	offset = P = 000Ah	Address for primary algorithm extended query table		P = 10Ah
016h	0001h	(see Table 45)		F = TUAIT
017h	0000h	Alternate vendor command set and control interface		
018h	0000h	ID code second vendor - specified algorithm supported		NA
019h	value = A = 0000h	Address for alternate algorithm extended query table		NA
01Ah	0000h	Address for alternate algorithm extent	ueu quei y lable	INA

Table 43. CFI query system interface information

Offset	Data	Description	
01Bh	0017h	V _{DD} logic supply minimum program/erase or write voltage bit 7 to 4 BCD value in volts bit 3 to 0 BCD value in 100 millivolts	
01Ch	0020h	V _{DD} logic supply maximum program/erase or write voltage bit 7 to 4 BCD value in volts bit 3 to 0 BCD value in 100 millivolts	
01Dh	0085h	V _{PP} [programming] supply minimum program/erase voltage bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 millivolts	
01Eh	0095h	V _{PP} [programming] supply maximum program/erase voltage bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 millivolts	
01Fh	0006h	Typical timeout per single byte/word program = 2 ⁿ µs	
020h	000Bh	Typical timeout for buffer program = $2^n \mu s$	2048 µs
021h	000Ah	Typical timeout per individual block erase = 2 ⁿ ms	1 s
022h	0000h	Typical timeout for full chip erase = 2 ⁿ ms	NA
023h	0002h	Maximum timeout for word program = 2 ⁿ times typical	
024h	0002h	Maximum timeout for buffer program = 2 ⁿ times typical	
025h	0002h	Maximum timeout per individual block erase = 2 ⁿ times typical	
026h	0000h	Maximum timeout for chip erase = 2 ⁿ times typical	

Table 44. Device geometry definition

Offset	Data	Description	Value
027h	001Ah	M58PR512LE device size = 2 ⁿ in number of bytes	64 Mbytes
02711	001Bh	M58PR001LE device size = 2 ⁿ in number of bytes	128 Mbytes
028h 029h	0001h 0000h	Flash device interface code description	x16 Async.
02Ah 02Bh	000Ah 0000h	Maximum number of bytes in multi-byte program or page = 2 ⁿ	1024 bytes
02Ch	0001h	Number of identical sized erase block regions within the device bit 7 to $0 = x =$ number of Erase block regions	1
02Dh	00FFh 0000h	M58PR512LE erase block region 1 information Number of identical-size erase blocks = 00FFh+1	255
02Eh	01FFh 0000h	M58PR001LE erase block region 1 information Number of identical-size erase blocks = 01FFh+1	511
02Fh 030h	0000h 0004h	Erase block region 1 information Block size in region 1 = 0400h * 256 byte	256 Kbyte
031h 038h	Reserved	Reserved for future erase block region information	NA

Table 45. Primary algorithm-specific extended query table

Offset	Data	Description	Value
(P)h = 10Ah	0050h		
	0052h	Primary algorithm extended query table unique ASCII string "PRI"	
	0049h		
(P+3)h =10Dh	0031h	Major version number, ASCII	"1"
(P+4)h = 10Eh	0034h	Minor version number, ASCII	"4"
(P+5)h = 10Fh	00E6h	Extended query table contents for primary algorithm. Address (P+5)h	
(P+6)h = 110h	0007h	contains less significant byte (1 = Yes, 0 = No)	
(P+7)h = 111h	0000h	bit 0 Chip Erase supported	No
		bit 1 Erase Suspend supported bit 2 Program Suspend supported bit 3 Legacy Lock/Unlock supported bit 4 Queued Erase supported	Yes Yes No No
		bit 5 Instant individual block locking supported bit 6 Protection bits supported bit 7 Page mode read supported	Yes Yes Yes
(P+8)h = 112h	0000h	bit 8 Synchronous read supported bit 9 Simultaneous operation supported bit 10 Extended flash Array Blocks supported	Yes Yes Yes
		bit 11 to 29 reserved; undefined bits are '0'. bit 30 CFI links to follow bit 31 Optional features. If bit 31 is '1' then another 31 bit field of optional features follows at the end of the bit-30 field.	No No
(P+9)h = 113h	0001h	Supported functions after suspend Read Array, Read Status Register and CFI query bit 0 Program supported after erase suspend (1 = Yes, 0 = No) bit 7 to 1 Reserved; undefined bits are '0'	
(P+A)h = 114h	0033h	Block protect status	
(P+B)h = 115h	0000h	Defines which bits in the block status register section of the query are implemented. bit 0 Block protect status register lock/unlock bit active (1 = Yes, 0 = No) bit 1 Block Lock status register Lock-Down bit active (1 = Yes, 0 = No) bit 4 EFA Block protect status register Lock/Unlock bit active (1=yes, 2=No) bit 5 EFA Block Lock status register Lock-Down bit active (1=yes, 2=No) bit 15 to 6 and 3 to 2 Reserved for future use; undefined bits are '0'	Yes Yes Yes
(P+C)h = 116h	0018h	V _{DD} logic supply optimum program/erase voltage (highest performance) bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 mV	
(P+D)h = 117h	0090h	V _{PP} supply optimum program/erase voltage bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 mV	9 V

Table 46. Protection Register information

Offset	Data	Description	Value
(P+E)h = 118h	0002h	Number of protection register fields in JEDEC ID space. 0000h indicates that 256 fields are available.	2
(P+F)h = 119h	0080h	Protection field 1: protection description	80h
(P+10)h = 11Ah	0000h	Bits 0-7 Lower byte of protection register address	00h
(P+ 11)h = 11Bh	0003h	Bits 8-15 Upper byte of protection register address Bits 16-23 2 ⁿ bytes in factory pre-programmed region	8 bytes
(P+12)h = 11Ch	0003h	Bits 24-31 2 ⁿ bytes in user programmable region	8 bytes
(P+13)h = 11Dh	0089h	Protection Register 2: protection description Bits 0-31 protection register address Bits 32-39 n number of factory programmed regions (lower byte) Bits 40-47 n number of factory programmed regions (upper byte)	89h
(P+14)h = 11Eh	0000h		00h
(P+15)h = 11Fh	0000h		00h
(P+16)h = 120h	0000h		00h
(P+17)h = 121h	0000h		0
(P+18)h = 122h	0000h	Bits 48-55 2 ⁿ bytes in factory programmable region	0
(P+19)h = 123h	0000h	Bits 56-63 n number of user programmable regions (lower byte) Bits 64-71 n number of user programmable regions (upper byte) Bits 72-79 2 ⁿ bytes in user programmable region	0
(P+1A)h = 124h	0010h		16
(P+1B)h = 125h	0000h		0
(P+1C)h = 126h	0004h		16

Table 47. Burst Read information

Offset	Data	Description	
(P+1D)h = 127h	0005h	Page-mode read capability bits 0-7 'n' such that 2 ⁿ HEX value represents the number of read- page bytes. See offset 0028h for device word width to determine page-mode data output width.	
(P+1E)h = 128h	0003h	Number of synchronous mode read configuration fields that follow.	
(P+1F)h = 129h	0002h	Synchronous mode read capability configuration 1 bit 3-7 Reserved bit 0-2 'n' such that 2 ⁿ⁺¹ HEX value represents the maximum number of continuous synchronous reads when the device is configured for its maximum word width. A value of 07h indicates that the device is capable of continuous linear bursts that will output data until the internal burst counter reaches the end of the device's burstable address space. This field's 3-bit value can be written directly to the read configuration register bit 0-2 if the device is configured for its maximum word width. See offset 0028h for word width to determine the burst data output width.	8
(P+20)h = 12Ah	0003h	Synchronous mode read capability configuration 2	
(P-21)h = 12Bh	0007h	Synchronous mode read capability configuration 3	

Table 48. Bank and erase block region information

Offset ⁽¹⁾	Data	Description
(P+22)h = 12Ch	01h	Number of bank regions within the device ⁽²⁾

- 1. The variable P is a pointer which is defined at CFI offset 015h.
- 2. Bank regions. There is one bank region, see tables 37, 38, 39 and 40 in Appendix A.

Table 49. Bank and erase block region 1 information⁽¹⁾

Offset	Data	Description	
(P+23)h = 12Dh	16h	Data size of this bank region information section (addressable locations including this one)	
(P+24)h = 12Eh	00h		
(P+25)h = 12Fh	08h	Number of identical banks within bank region 1	
(P+26)h = 130h	00h		
(P+27)h = 131h	11h	Number of program or erase operations allowed in bank region 1: Bits 0-3: number of simultaneous program operations Bits 4-7: number of simultaneous erase operations	
(P+28)h = 132h	00h	Number of program or erase operations allowed in other banks while a bank in this region is being erased Bits 0-3: number of simultaneous program operations Bits 4-7: number of simultaneous erase operations	
(P+29)h = 133h	00h	Number of program or erase operations allowed in other banks while a bank in this region is being erased Bits 0-3: number of simultaneous program operations Bits 4-7: number of simultaneous erase operations	
(P+2A)h = 134h	01h	Types of erase block regions in bank region 1 n = number of erase block regions with contiguous same-size erase blocks. Symmetrically blocked banks have one blocking region ⁽²⁾	
(P+2B)h = 135h	1Fh ⁽³⁾ 3Fh ⁽⁴⁾	Bank region 1 Erase block type 1 information	
(P+2C)h = 136h	00h	Bits 0-15: n+1 = number of identical-sized erase blocks in each bank	
(P+2D)h = 137h	00h	Bits 16-31: n×256 = number of bytes in erase block region	
(P+2E)h = 138h	04h		
(P+2F)h = 139h	64h	Bank region 1 (Erase block type 1)	
(P+30)h = 13Ah	00h	Minimum block erase cycles × 1000	
(P+31)h = 13Bh	12h	Bank region 1 (Erase block type 1): bits per cell, internal ECC Bits 0-3: bits per cell in erase region Bit 4: reserved for "internal ECC used" Bits 5-7: reserved	

Table 49. Bank and erase block region 1 information⁽¹⁾ (continued)

Offset	Data	Description			
(P+32)h = 13Ch	03h	Bank region 1 (Erase block type 1): Page mode and Synchronous mode capabilities Bit 0: page-mode reads permitted Bit 1: synchronous reads permitted Bit 2: synchronous writes permitted Bits 3-7: reserved			
(P+33)h = 13Dh	0Ah	Bank region 1 (Erase block type 1) programming region information			
(P+34)h = 13Eh	00h	Bit 0-7: aligned size of programming region in bytes Bit 8-14: reserved Bit 15: Legacy flash operation (ignore bit 0-7)			
(P+35)h = 13Fh	10h				
(P+36)h = 140h	00h	Bit 16-23: Control mode valid size in bytes Bit 24-31: reserved Bit 32-39: Control mode invalid size in bytes Bit 40-46: reserved Bit 47: Legacy flash operation (ignore bit 16-23 and 32-39)			
(P+37)h = 141h	10h				
(P+38)h = 142h	00h				

- 1. The variable P is a pointer which is defined at CFI offset 015h.
- 2. Bank regions. There is one bank region, see tables 37, 38, 39 and 40 in Appendix A.
- 3. Applies to M58PR512LE.
- 4. Applies to M58PR001LE.

Table 50. Extended flash array bank and erase block region information

Offset (1)	Data	Description
(P+39)h = 143h	01h	Number of bank regions within the device ⁽²⁾

- 1. The variable P is a pointer which is defined at CFI offset 015h.
- 2. Bank regions. There is one EFA bank region.

Table 51. Extended flash array bank and erase block region 1 information

Offset ⁽¹⁾	Data	Description	
(P+3A)h = 144h	16h	Data size of this bank region information section (addressable locations including this one)	
(P+3B)h = 145h	00h		
(P+3C)h = 146h	01h	Number of identical banks within bank region 1	
(P+3D)h = 147h	00h		
(P+3E)h = 148h	11h	Number of program or erase operations allowed in bank region 1: Bits 0-3: number of simultaneous program operations Bits 4-7: number of simultaneous erase operations	
(P+3F)h = 149h	00h	Number of program or erase operations allowed in other banks while a bank in this region is being erased Bits 0-3: number of simultaneous program operations Bits 4-7: number of simultaneous erase operations	
(P+40)h = 14Ah	00h	Number of program or erase operations allowed in other banks while a bank in this region is being erased Bits 0-3: number of simultaneous program operations Bits 4-7: number of simultaneous erase operations	
(P+41)h = 14Bh	01h	Types of erase block regions in bank region 1 n = number of erase block regions with contiguous same-size erase blocks. Symmetrically blocked banks have one blocking region ⁽²⁾ .	
(P+42)h = 14Ch	03h		
(P+43)h = 14Dh	00h	Bank region 1 Erase block type 1 information Bits 0-15: n+1 = number of identical-sized erase blocks in each bank	
(P+44)h = 14Eh	20h	Bits 16-31: n×256 = number of bytes in erase block region	
(P+45)h = 14Fh	00h		
(P+46)h = 150h	64h	Bank region 1 (Erase block type 1)	
(P+47)h = 151h	00h	Minimum block erase cycles × 1000	
(P+48)h = 152h	01h	Bank region 1 (Erase block type 1): bits per cell, internal ECC Bits 0-3: bits per cell in erase region Bit 4: reserved for internal ECC used BIts 5-7: reserved	
(P+49)h = 153h	03h	Bank region 1 (Erase block type 1): page mode and synchronous mode capabilities Bit 0: page-mode reads permitted Bit 1: synchronous reads permitted Bit 2: synchronous writes permitted Bits 3-7: reserved	


Extended flash array bank and erase block region 1 information Table 51.

Offset ⁽¹⁾	Data	Description	
(P+4A)h = 154h	00h	Bank region 1 (Erase block type 1) programming region information	
(P+4B)h = 155h	80h	Bit 0-7: aligned size of programming region in bytes Bit 8-14: reserved Bit 15: legacy flash operation (ignore bit 0-7)	
(P+4C)h = 156h	00h		
(P+4D)h = 157h	00h	Bit 16-23: control mode valid size in bytes	
(P+4E)h = 158h	00h	Bit 24-31: reserved	
(P+4F)h = 159h	80h	Bit 32-39: control mode invalid size in bytes Bit 40-46: reserved Bit 47: legacy flash operation (ignore bit 16-23 and 32-39)	

- 1. The variable P is a pointer which is defined at CFI offset 015h.
- 2. Bank regions. There is one EFA bank region.


Appendix C Flowcharts and pseudocodes

Figure 24. Program and EFA block program flowchart and pseudocode

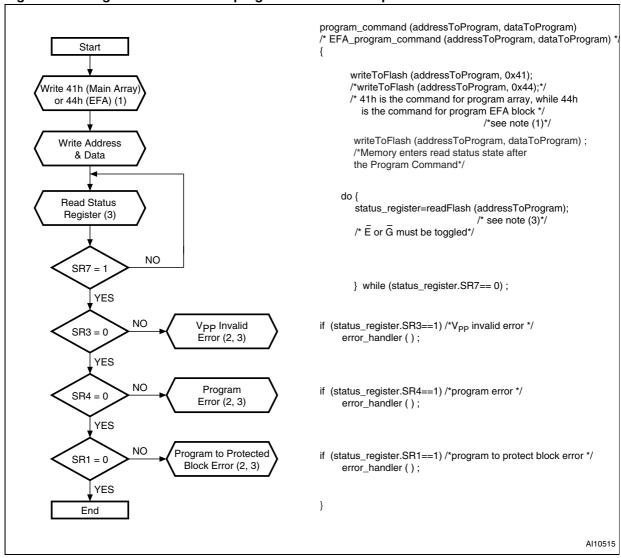

- Any address within the 'A' segment halves (A3=0) in a 1 Kbyte program region configured in control program mode.
 If a Program command is issued to a program region configured in the Object Program mode, SR4 and SR8 are set.
- Status check of SR1 (protected block), SR3 (V_{PP} invalid) and SR4 (program error) can be made after each program operation or after a sequence.
- 3. If an error is found, the status register must be cleared before further Program/Erase controller operations.


Figure 25. Buffer program flowchart and pseudocode

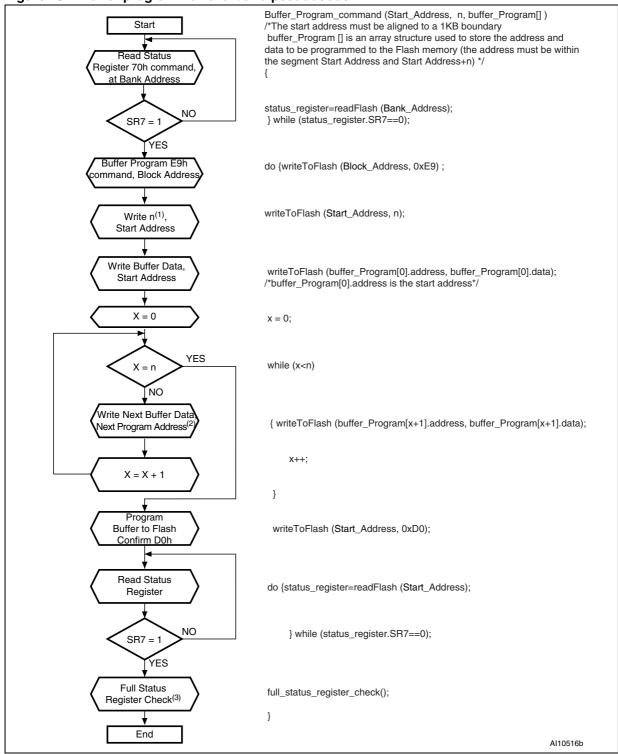

- 1. n + 1 is the number of data being programmed. The maximum buffer count is 1FF (512 words).
- Next Program data is an element belonging to buffer_Program[].data; Next Program address is an element belonging to buffer_Program[].address. In a program region configured in Control Program mode buffer_Program[].data = FFFFh if A3 =
- 3. Routine for error check by reading SR3, SR4 and SR1.


√ numonyx 107/123

Figure 26. Program suspend and resume flowchart and pseudocode

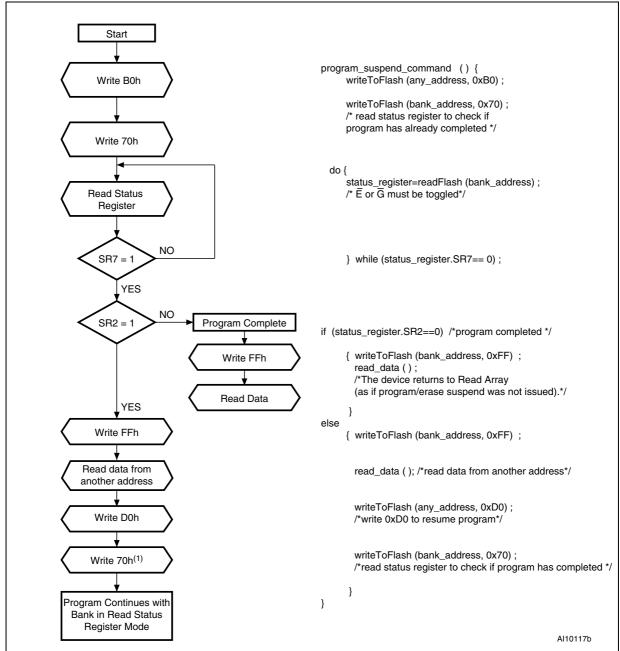


1. The Read Status Register command (Write 70h) can be issued just before or just after the Program Resume command.

Figure 27. Block erase and EFA block erase flowchart and pseudocode

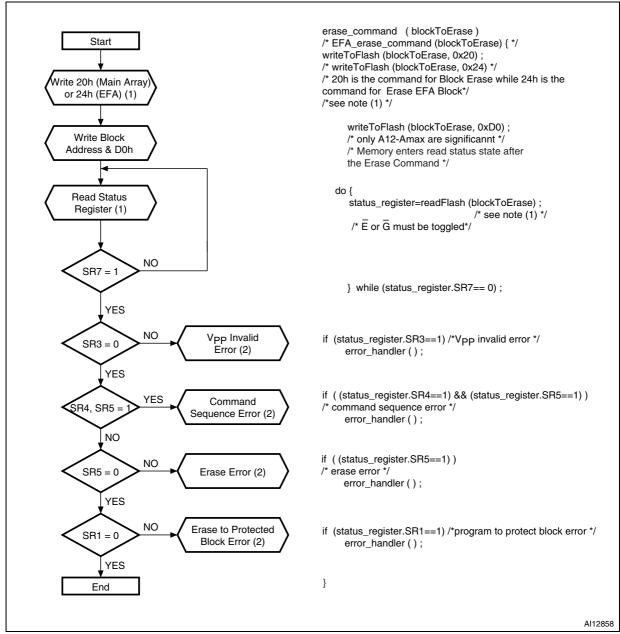


- 1. Any address within the bank can equally be used.
- 2. If an error is found, the status register must be cleared before further program/erase operations.

Figure 28. Erase suspend and resume flowchart and pseudocode

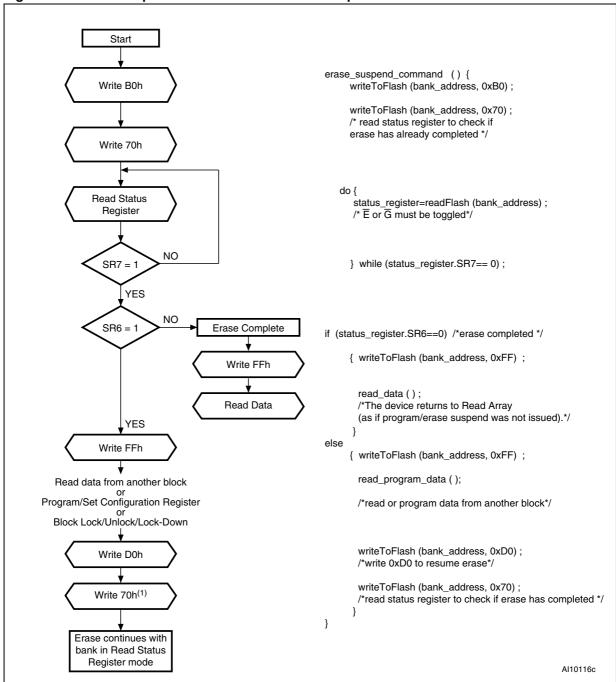

1. The Read Status Register command (Write 70h) can be issued just before or just after the Erase Resume command.


Main array and EFA locking operations flowchart and pseudocode

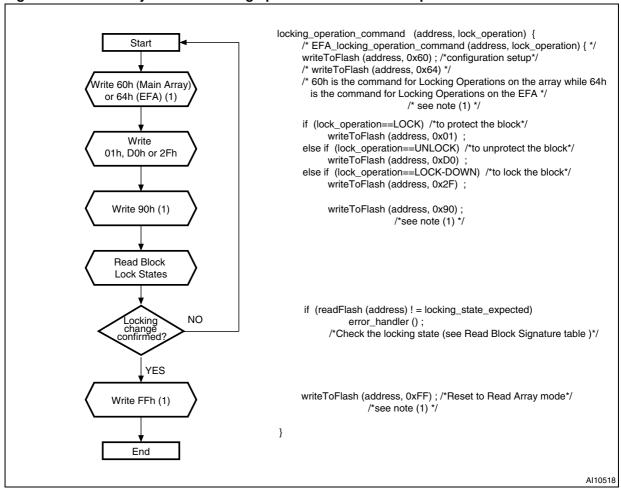

1. Any address within the bank can equally be used.

111/123

Figure 30. Blank check flowchart and pseudocode

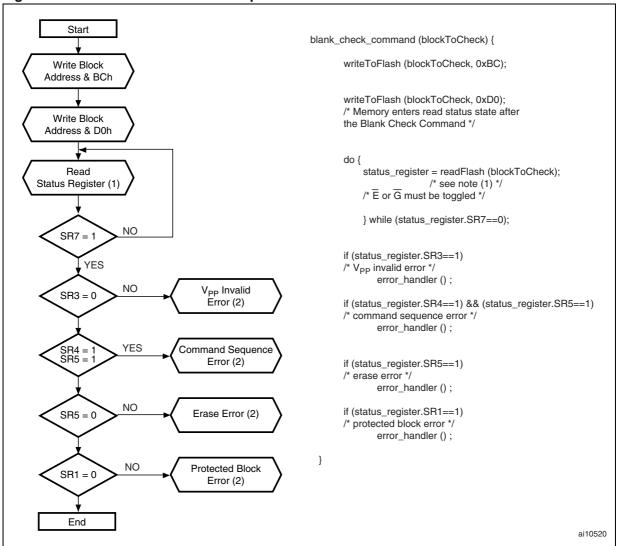

- 1. Any address within the bank can equally be used.
- 2. If an error is found, the status register must be cleared before further program/erase operations.

AI06177c

Start protection_register_program_command (addressToProgram, dataToProgram) {: Write C0h (1) writeToFlash (addressToProgram, 0xC0); /*see note (1) */ writeToFlash (addressToProgram, dataToProgram) ; Write Address & Data /*Memory enters read status state after the Program Command*/ Read Status status_register=readFlash (addressToProgram); Register (1) /* see note (1) */ /* E or G must be toggled*/ NO SR7 = 1} while (status_register.SR7== 0); YES NO V_{PP} Invalid if (status_register.SR3==1) /*VPP invalid error */ SR3 = 0 Error (2, 3) error_handler(); YES NO if (status_register.SR4==1) /*program error */ Program SR4 = 0Error (2, 3) error_handler(); YES NO Program to Protected if (status_register.SR1==1) /*program to protect block error */ SR1 = 0Block Error (2, 3) error_handler(); YES } End

Figure 31. Protection Register program flowchart and pseudocode

- Status check of SR1 (protected block), SR3 (VPP invalid) and SR4 (program error) can be made after each program operation or after a sequence.
- 2. If an error is found, the status register must be cleared before further Program/Erase controller operations.

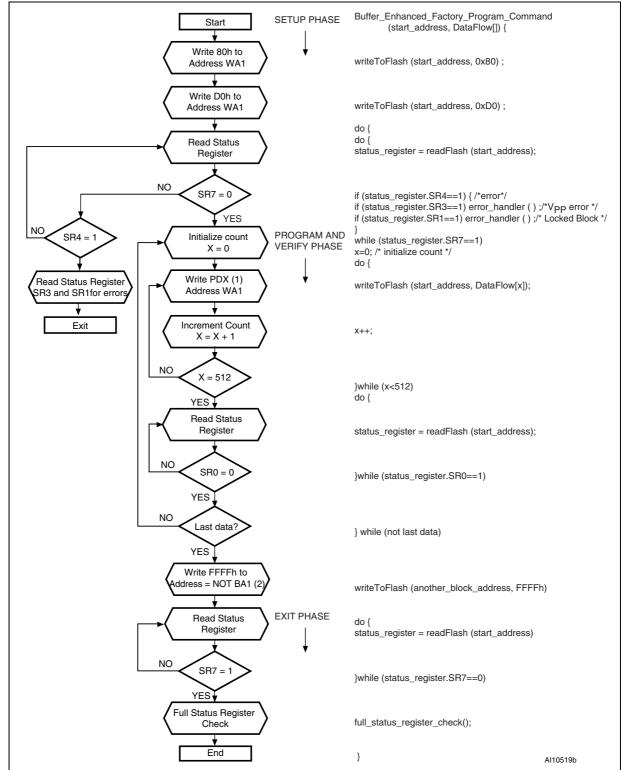


Figure 32. Buffer enhanced factory program flowchart and pseudocode

2. BA1 = block containing start address WA1.

^{1.} When programming a program region configured in Control Program mode, 'B' half segment addresses (A3 = 1) should not contain '0' values.

Appendix D Command interface state tables

Table 52. Command interface states - modify table, next state 1

Table 5						in y table,							
		Read Array	Read	Program	FFΔ	BP	Block Erase	EFA Block	BEFP	Confirm,	Program/ Erase	Read	
Curre	Current chip state		EFA	Setup	Setup	ы	Setup	Erase Setup	DEIT	Resume	Suspend	Status	
			94h	41h	44h	E9h ^(8,9,10)	20h	24h	80h	D0h	B0h	70h	
ready ready pgrm setup BP setup BP setup erase setup EFA block erase setup BEFP setup						ready							
Lock/CR/E	ECR Setup	ready (sequence error)						ady					
Lock EFA	Block Setup						-,			(unlock)	(sequen	ce error)	
	setup			ı		,	OTP bu	sy		1			
ОТР	busy	OTP	busy	IS in O	TP busy	OTP busy		S in OTP bus	sy		OTP busy		
	IS in OTP busy						OTP bu						
	setup			ı		ı	WP bus	sy		1	I		
	busy	prograr	m busy	IS in program busy pgrm busy IS in program busy				usy	program busy	WP suspend	WP busy		
WP or EFA Block WP	IS in program busy	WP busy											
	suspend	PS		IS in PS		pgrm suspend	IS in PS			program busy	WP su	spend	
	IS in PS	WP suspend											
	setup ^{(1), (2)}	BP load 1 (give word count load (N-1))											
	BP load 1 ⁽²⁾				if N=0 g	o to BP confir	m else go	to BP load 2	data loa	d) ⁽⁴⁾			
	BP load 2 ⁽²⁾					BP confirm w	hen count	=0 else BP	load 2	1	1		
	BP confirm	ready (sequence error)							BP busy (3) ready (sequence error)				
BP	BP busy	BP b	ousy	IS in E	3P busy	BP busy	IS in BP busy			BP busy	BP suspend	BP busy	
	IS in BP busy						BP bus	sy					
	BP suspend	BP sus	spend	IS in BP	suspend	BP suspend	IS	in BP suspe	end	BP busy	BP su	spend	
	IS in BP suspend	BP suspend											
	setup				ready (s	sequence erro	r)			erase busy	, ,	equence or)	
Erase or	busy	erase	busy	IS in erase busy		erase busy	erase busy Is		s in erase busy		ES	erase busy	
EFA Block	IS in erase busy			•			erase bu	ısy					
Erase	suspend	E	S	WP setup in ES	EFA block WP in ES	BP setup in ES	IS in ES	IS in ES erase busy		ES			
	IS in ES			!	!	 	ES			!	!		
<u> </u>													

Table 52. Command interface states - modify table, next state 1 (continued)

	command input to chip and resulting chip next state (7)														
Curre	nt chip state	Read Array	Read EFA	Program Setup	EFA Program Setup	ВР	Block Erase Setup	EFA Block Erase Setup	BEFP	Confirm, Resume	Program/ Erase Suspend	Read Status			
		FFh	94h	41h	44h	E9h ^(8,9,10)	20h	24h	80h	D0h	B0h	70h			
	setup					,	WB busy ii	n ES							
WP in ES	busy	WP bus	y in ES	IS in program busy in ES IS in program busy in E				y in ES	WP busy in ES	WP suspend is ES	WP busy in ES				
or EFA Block WP in ES	IS in program busy in ES						WP busy ii	n ES							
	suspend	WP sus		IS in P	S in ES	WP suspend in ES	IS in PS in ES			WP busy in ES	WP suspend is ES				
	IS in PS in ES		WP suspend in ES												
	setup ^{(1) (2)}		BP load 1 in ES (give word count load (N-1))												
	BP load 1 ⁽²⁾		if N=0 go to BP confirm in ES else go to BP load 2 in ES (data load) (4)												
	BP load 2 ⁽²⁾	BP confirm in ES when count = 0 else BP load 2 in ES													
	BP confirm	ES (sequence error)								BP busy in ES ⁽³⁾	ES (seque	ence error)			
BP in ES	BP busy	BP bus	y in ES	IS in BP I	busy in ES	BP busy in ES	IS in BP busy in ES			BP busy in ES	BP suspend in ES	BP busy in ES			
	IS in BP busy in ES	BP busy in ES													
	BP suspend	BP suspend in ES in BP suspend in ES in BP suspend in ES IS in BP suspend in ES					in ES	BP busy in ES BP suspend in ES							
	IS in BP suspend in ES														
Lock/CR/E block setu	CR/Lock EFA p in ES				ES (se	equence error))			ES (unlock block)	ES (seque	ence error)			
	setup				ready (s	sequence erro	or)			blank check busy	ready (s err	equence or)			
Blank Check	blank check busy	BC b	ousy	IS in E	BC busy	BC busy	IS	S in BC bus	у	BC busy					
	IS in blank check busy						BC bus	у							
BEFP mode	setup				ready (s	sequence erro	or)			BEFP loading data	ready (s err	equence or)			
	BEFP Busy ^{(5) (6)}	BEFP pr	ogram a	nd verify b	usy (in bloc	k address give	en matche	s on BEFP	setup com	mand). Comr	mands treat	ed as data			

Table 53. Command interface states - modify table, next state 2

		command input to chip and resulting chip next state											
Curren	t chip state	Clear SR	Read ID	Lock, CR, ECR Setup	Lock EFA Setup	Blank Check Setup	OTP Setup	Block Lock Confirm	Lock- down Confirm	Write CR/ECR Confirm	Illegal Cmd or BEFP Data	WSM Operation Complete	
		50h	90h 98h	60h	64h	BCh	C0h	01h	2Fh	03h 04h	others		
ready		rea	ready lock/CR/E CR setup lock setup lock setup oTP setup ready ready ready										
Lock/CR/	ECR Setup	ready ready (set (lock) ready CR) ready								N1/A			
Lock EFA	Block Setup	ready (sequence error)						ready (EFA lock)	ready (lock down)	ready (sequence error)	ready (sequence error)	N/A	
ļ	setup					OTP	busy						
ОТР	busy	OTP	busy		IS in OT	P busy			OTP	busy			
	IS in OTP busy					ОТР	busy					IS ready	
ļ	setup					WP busy					WP busy	N/A	
ļ	busy	WP b	ousy	IS i	n program b	usy	IS		WP	busy		ready	
WP or EFA	IS in program busy				WP busy								
Block WP	suspend	WP suspend (error bits cleared)	WP suspend		IS in PS				N/A				
	IS in PS		WP suspend										
ļ	setup				BP load	l 1 (give wo	rd count lo	oad (N-1))					
ļ	BP load 1	if N=0 go to BP confirm else go to BP load 2 (data load)											
	BP load 2	BP confirm when count =0 else BP load 2 count = 0 else BP load 2 else BP load 2									when count = 0 else BP	N/A	
ļ	BP confirm					ready (sequ	uence erro	or)					
BP	BP busy	BP b	usy	ļ	S in BP bus	у	IS		BP	busy		ready	
	IS in BP busy					BP	busy					IS ready	
	BP suspend	BP suspend (error bits cleared)	BP suspend	IS	in BP suspe	end	BP suspend					N/A	
	IS in BP suspend					BP su	spend						
	setup					ready (sequ	uence erro	or)				N/A	
	busy	erase	busy	IS	IS in erase busy IS erase busy								
	IS in erase busy					erase	busy					IS non- ready	
Block Erase		ES (error	ES	Lock/CR/E CR setup in IS ES									
Erase	suspend	cleared)	LO		setup in ES							N/A	

Table 53. Command interface states - modify table, next state 2 (continued)

	os. Com			o otatot		iy table,							
		command input to chip and resulting chip next state											
Curren	Current chip state		Read ID	Lock, CR, ECR Setup	Lock EFA Setup	Blank Check Setup	OTP Setup	Block Lock Confirm	Lock- down Confirm	Write CR/ECR Confirm	Illegal Cmd or BEFP Data	WSM Operation Complete	
		50h	90h 98h	60h	64h	BCh	C0h	01h	2Fh	03h 04h	others		
	setup		WP busy in ES									N/A	
	busy	WP busy in ES											
WP in ES or EFA Block WP in ES	IS in program busy in ES				W	/P busy in E	S				WP busy in ES	IS in ES	
	suspend	WP suspend is ES (error bits cleared)	WP suspend in ES	IS in \	VP suspend	l in ES		W		N/A			
	IS in PS in ES		WP suspend in ES suspend in ES										
	setup				BP load 1	in ES (give	word cour	nt load (N-1))				
	BP load 1		if N=0 go to BP confirm in ES else go to BP load 2 in ES (data load)										
	BP load 2	when									count = 0 else BP	N/A	
	BP confirm	ready (sequence error) in ES											
BP in ES	BP busy	BP busy in ES IS in BP busy in ES IS						BP bus	sy in ES		ES		
	IS in BP busy in ES	BP busy in ES									IS in ES		
	BP suspend	BP suspendin ES (error bits cleared)	BP suspend is ES	IS in I	IS in BP suspend in ES BP suspend in ES							N/A	
	IS in BP suspend in ES	BP suspend in ES suspend ES								suspend in			
Lock/CR/ ES	ECR setup in							<i>(</i>	<i>"</i> .	ES	F0 # 1		
Lock EFA	block setup	ES (sequence error) ES (lock block) ES (lock down) ES (lock down) ES (sequence error)								error)	N/A		
	setup				ready	(sequence	error)				ready (error)		
	blank check busy	BC b	usy	IS in BC busy IS						ready			
	IS in blank check busy					BC busy					BC busy	IS ready	
BEFP	setup					ready (sequ	uence erro	or)				N/A	
	BEFP Busy	BEFP	program a	nd verify bu	ısy (in block Comma	address giv nds treated		es on BEFF	setup com	mand).	BEFP busy	ready	

Table 54. Command interface states - modify table, next output 1

Table 54. Collins					ily table,		a cp a c				
				comma	and input to c	hip and re	esulting o	hip next	state		
Current chip state	Read Array	Read EFA Block	WP	EFA WP	ВР	Erase Setup	EFA Block Erase Setup	BEFP Setup	Confirm, Resume	Program/ Erase Suspend	Read Status
	FFh	94h	41h	44h	E9h	20h	24h	80h	D0h	B0h	70h
BEFP Setup, BEFP program and verify busy, Erase Setup, Erase EFA setup OTP Setup, BP Confirm, WP setup, WP setup in ES, BP confirm in ES, blank check setup		status read									
EFA block WP setup, EFA block program setup in ES		EFA block status read									
Lock/CR/ECR setup, Lock/CR/ECR setup in ES						status rea	ad				
EFA block lock setup, EFA block lock setup in ES					EFA	block stat	us read				
OTP busy											
ready, ES, BP suspend, WP busy, erase busy, BP busy, BP busy in ES, WP suspend, WP busy in ES, PS in ES, BP suspend in ES, Blank Check busy	read array	read EFA blocks	status read	EFA block status read	output state does not change	status read	EFA block status read	status read		te does not inge	status read
BP setup, BP load 1, BP load 2, IS					output s	tate does	not chang	je			

Table 55. Command interface states - modify table, next output 2

			com	ımand inpu	t to chip an	d resulting	chip next	state		
Current Chip State	Clear SR	Read ID	Lock, CR, ECR Setup	Lock EFA Setup	Blank Check	OTP Setup	Lock Confirm	Lock- down Confirm	Write CR/ ECR Confirm	Illegal cmd or BEFP Data
	50h	90h 98h	60h	64h	BCh	C0h	01h	2Fh	03h 04h	others
BEFP Setup, BEFP program and verify busy, Erase Setup, Erase EFA setup OTP Setup, BP Confirm, WP setup, WP setup in ES, BP confirm in ES, blank check setup					status	s read				
EFA block WP setup, EFA block program setup in ES		EFA block status read								
Lock/CR/ECR setup, Lock/CR/ECR setup in ES				status	s read				array read	status read
EFA block lock setup, EFA block lock setup in ES				EFA block	status read				array read	EFA block status read
OTP busy										
ready, ES, BP suspend, WP busy, erase busy, BP busy, blank check busy, BP busy in ES, WP suspend, WP busy in ES, PS in ES, BP suspend in ES	output state does not change	ID read	status read	EFA block status read	status	s read	output st	ate does no	ot change	output state does not change
BP setup, BP load 1, BP load 2, IS		output state does not change								

Note:

- 1 WP = Word Program, BP = Buffer program, cmd = command, SR = status register, pgrm = program, IS = Illegal state, PS = Program suspend, ES = Erase suspend, CI = Command Interface, CR = configuration register, BEFP = Buffer Enhanced Factory Program, P/E. C. = Program/Erase Controller, WA0 = Address in a block different from first BEFP address, ECR = enhanced configuration register.
- 2 The output state shows the type of data that appears at the outputs if the bank address is the same as the command address. A bank can be placed in Read Array, Read status register, Read Electronic Signature or Read CFI mode, depending on the command issued. Each bank remains in its last output state until a new command is issued to that bank. The next state does not depend on the bank output state.
- 3 At Power-up, all banks are in Read Array mode. Issuing a Read Array command to a busy bank results in undetermined data output.
- 4 The Clear Status Register command clears the status register error bits except when the P/EC is busy or suspended.
- 5 BEFP is allowed only when status register bit SR0 is reset to '0'. BEFP is busy if the block address is the first BEFP address. Any other commands are treated as data.

- 6 BEFP aborts when the block address is different from the first block address and data are FFFFh.
- 7 BEFP Exit when block address is different from first block address and data are FFFFh.
- 8 During BP setup, while entering the number of words to be programmed and filling the buffer, the read status of the partition does not change.
- 9 The BP confirm command changes the read status of the partition to Status Read.
- 10 Illegal commands are commands not defined in the command set.

18 Revision history

Table 56. Document revision history

Date	Revision	Changes
28-Apr-2006	0.1	Initial release.
15-May-2006	0.2	1Gb density (M58PR001LE part number) added. V _{PP} range for application environment changed in <i>Table 24: Operating and AC measurement conditions.</i> I _{PP1} unit changed in <i>Table 26: DC characteristics - currents.</i>
14-Nov-2006	1	Document status promoted from Target Specification to Preliminary Data. Address lines modified in <i>Figure 13: Asynchronous page read AC waveforms</i> . V _{PP} max value modified in <i>Table 23: Absolute maximum ratings</i> . Small text changes.
06-Sep-2007	2	Modified Section 4.18: Set Enhanced Configuration Register command and Section 4.22: Suspend EFA Block command. Updated Table 22: Program/erase times and endurance cycles, Table 23: Absolute maximum ratings, Table 26: DC characteristics - currents, Table 28: Asynchronous read AC characteristics, and Table 30: Write AC characteristics, write enable controlled. Added t _{LLTV} timing in Table 29: Synchronous read AC characteristics and Figure 15: Single synchronous read AC waveforms. Modified Figure 28: Erase suspend and resume flowchart and pseudocode. Document status promoted from Preliminary Data to Datasheet.
19-Nov-2007	3	Added the TFBGA105 (ZAD) and TFBGA107 (ZAC) packages to the document, most specifically in Figure 2: TFBGA105 connections (top view through package), Figure 3: TFBGA107 connections (top view through package), Figure 22: TFBGA105 9 × 11 mm - 9 × 12 active ball array, 0.8 mm pitch, package outline, Figure 23: TFBGA107 8 × 11 mm - 9 × 12 active ball array, 0.8 mm pitch, package outline, Table 34: TFBGA105 9 × 11 mm - 9 × 12 active ball array, 0.8 mm pitch, mechanical data, and Table 35: Stacked TFBGA107 8 × 11 mm - 9 × 12 active ball array, 0.8 mm pitch, package mechanical data. Changed the maximum IDD7 value for "program/erase in one bank, asynchronous read in another bank" from 80 to 85.
21-Mar-2008	4	Removed the 256 Mbit density and all its associated data from the document. Applied the Numonyx branding. Changed all the I _{DD1} , I _{DD2} , I _{DD3} , I _{DD4} , I _{DD6} , and I _{DD8} maximum values in <i>Table 26</i> .

Please Read Carefully:

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH NUMONYX™ PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN NUMONYX'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, NUMONYX ASSUMES NO LIABILITY WHATSOEVER, AND NUMONYX DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF NUMONYX PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

Numonyx products are not intended for use in medical, life saving, life sustaining, critical control or safety systems, or in nuclear facility applications.

Numonyx may make changes to specifications and product descriptions at any time, without notice.

Numonyx, B.V. may have patents or pending patent applications, trademarks, copyrights, or other intellectual property rights that relate to the presented subject matter. The furnishing of documents and other materials and information does not provide any license, express or implied, by estoppel or otherwise, to any such patents, trademarks, copyrights, or other intellectual property rights.

Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Numonyx reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

Contact your local Numonyx sales office or your distributor to obtain the latest specifications and before placing your product order.

Copies of documents which have an order number and are referenced in this document, or other Numonyx literature may be obtained by visiting Numonyx's website at http://www.numonyx.com.

Numonyx StrataFlash is a trademark or registered trademark of Numonyx or its subsidiaries in the United States and other countries.

*Other names and brands may be claimed as the property of others.

Copyright © 11/5/7, Numonyx, B.V., All Rights Reserved.