

 
Order Code

355-8022

RAPESCO®

MASTER NAILER 180 EL

A superb electric nailing gun which fires nails from around 10-30 mm quickly and neatly. From professional to DIY applications, the Rapesco Master Nailer will fulfil your every need.

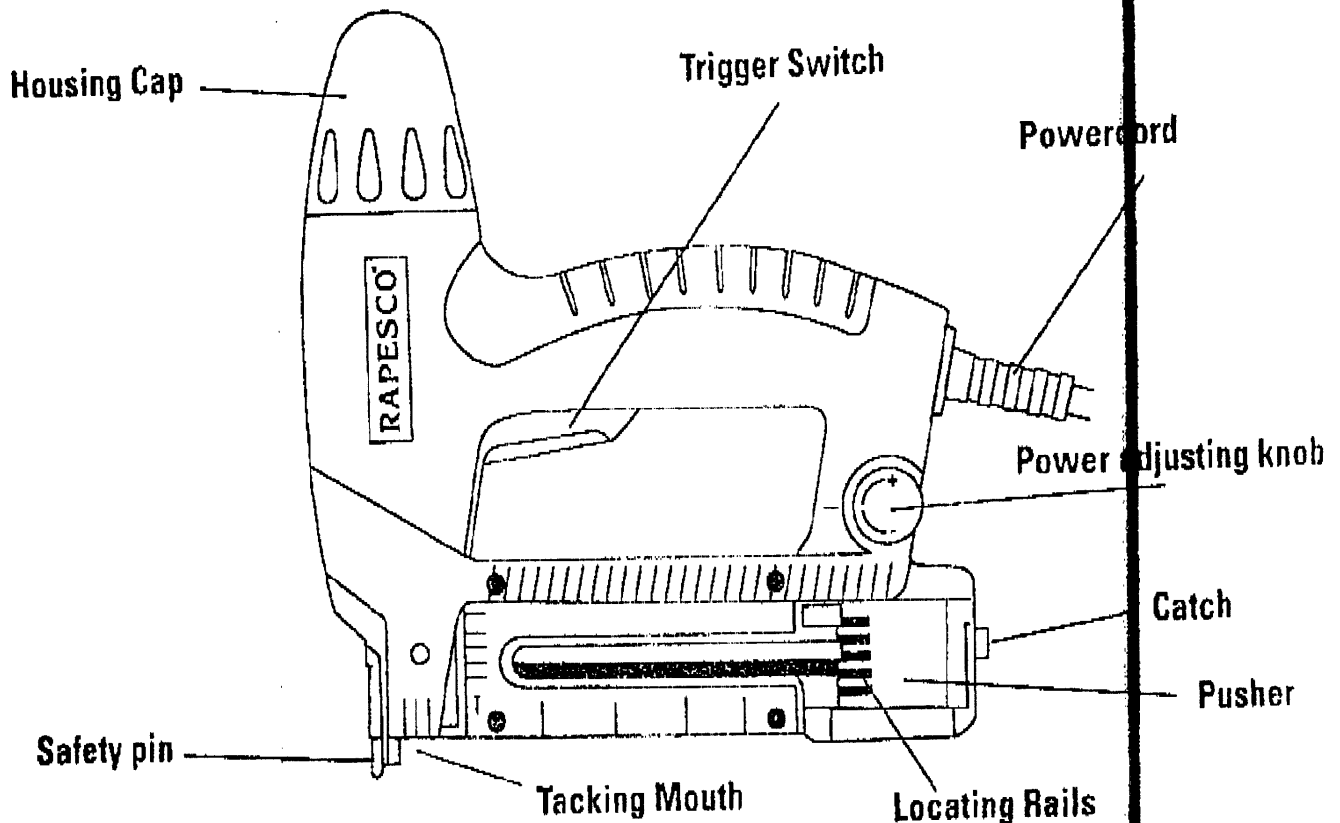


PRODUCT SPECIFICATIONS:

Input Voltage	: 230 Volts 50 Hz 5.4mp
Max. Firing speed	: 30-Nail-per minute
Max. Length of nail	: Up to 30mm long (drives five lengths)
Max. Magazine Capacity	: Holds up to 100 nails
Nail Type	: Standard Rapesco Nails Type 180

DIRECTIONS FOR USE


Step one: Loading your Master Nailer

 1. Unplug from power source.
2. Only use nails recommended.
3. Slide the pusher backwards from position B to position A by levering the catch (1) backwards.
4. Load selected nails (nail points facing downwards) into the track of magazine (2).
5. Head of nail can go above and below locating rails.
6. Release pusher by levering the catch out - it will slide back and push against the loaded nails.
7. Adjust power by rotating power adjusting knob as required.

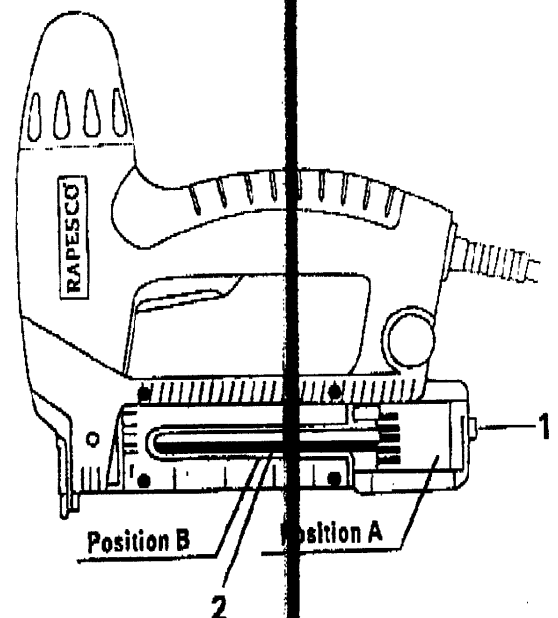

Step two: How to use nailer

 
1. Plug tool into 230 volt, 50 Hz power outlet.
2. Hold tool firmly with tacking mouth flat to workpiece forming a 90° angle- the safety pin in the mouth of tool must be pressed firmly against the workpiece or it will not operate.
3. Squeeze trigger to fire the tool.
4. On hard surfaces press down on housing cap with free hand.
5. On soft surfaces use light pressure to prevent deep nail penetration.

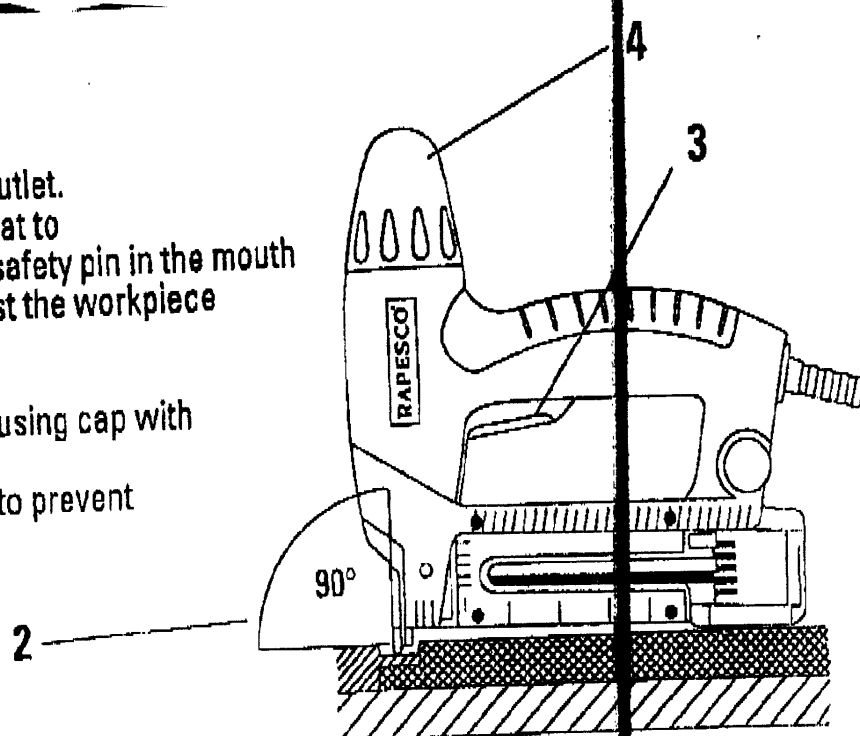

CLEARING A JAMMED NAIL

In the unlikely event of the tool jamming:-

 1. Disconnect from power and remove all nails from magazine.
2. Remove two screws and washers (1) and remove cover set (2) – all located on mouth of tool.
3. Remove safety pin and spring (3, 4) - note pin is located inside spring and both are slotted into cover set.
4. Remove slot cover (5).
5. Remove the jammed nail.
6. Replace all parts in reverse order and screw tight.
7. Make sure that safety pin still sticks out from mouth of tool.

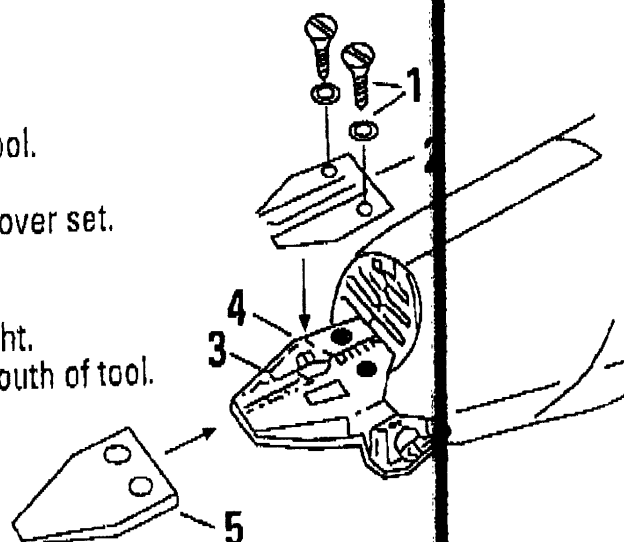

PERSONAL SAFETY:

- Always wear safety goggles
- Do not wear loose clothing or jewellery
- Check damaged parts and have defective switches repaired by the RAPESCO service centre
- Never operate near flammable liquids or explosive atmospheres
- Do not use on hard surfaces (e.g. rock, concrete)
- Only use type 180 nails

- Do not operate machinery when tired
- Keep children away
- Never expose tool to rain
- Disconnect tool when not in use
- Only fire when mouth is against work
- Store tool in dry, secure place
- Never carry tool by cord or yank to disconnect from socket
- Do not alter or misuse tool
- Keep firing speed at 30 nails per minute

WARRANTY

Warranty cover is for a period of 12 months. Rapesco will repair products that are under warranty free of charge providing they are returned to the Service Department. All claims need to be verified by the Rapesco Service Division. Ring the service helpline 01732 464800 for full details of the services and warranty options available. Products should be returned to Rapesco for any repairs or part replacements.

Rapesco Group plc, Rapesco House, One Connections Business Park
Sevenoaks, Kent TN14 5DF