

NEC

User's Manual

IE-78K4-NS

In-Circuit Emulator

Target Devices
78K/IV Series

Document No. U13356EJ3V0UM00 (3rd edition)
Date Published May 2003 N CP(K)

© NEC Electronics Corporation 1998, 1999
Printed in Japan

[MEMO]

V40 Family is a trademark of NEC Electronics Corporation.

Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

PC/AT is a trademark of International Business Machines Corporation.

• **The information in this document is current as of February, 2003. The information is subject to change without notice. For actual design-in, refer to the latest publications of NEC Electronics data sheets or data books, etc., for the most up-to-date specifications of NEC Electronics products. Not all products and/or types are available in every country. Please check with an NEC Electronics sales representative for availability and additional information.**

• No part of this document may be copied or reproduced in any form or by any means without the prior written consent of NEC Electronics. NEC Electronics assumes no responsibility for any errors that may appear in this document.

• NEC Electronics does not assume any liability for infringement of patents, copyrights or other intellectual property rights of third parties by or arising from the use of NEC Electronics products listed in this document or any other liability arising from the use of such products. No license, express, implied or otherwise, is granted under any patents, copyrights or other intellectual property rights of NEC Electronics or others.

• Descriptions of circuits, software and other related information in this document are provided for illustrative purposes in semiconductor product operation and application examples. The incorporation of these circuits, software and information in the design of a customer's equipment shall be done under the full responsibility of the customer. NEC Electronics assumes no responsibility for any losses incurred by customers or third parties arising from the use of these circuits, software and information.

• While NEC Electronics endeavors to enhance the quality, reliability and safety of NEC Electronics products, customers agree and acknowledge that the possibility of defects thereof cannot be eliminated entirely. To minimize risks of damage to property or injury (including death) to persons arising from defects in NEC Electronics products, customers must incorporate sufficient safety measures in their design, such as redundancy, fire-containment and anti-failure features.

• NEC Electronics products are classified into the following three quality grades: "Standard", "Special" and "Specific".

The "Specific" quality grade applies only to NEC Electronics products developed based on a customer-designated "quality assurance program" for a specific application. The recommended applications of an NEC Electronics product depend on its quality grade, as indicated below. Customers must check the quality grade of each NEC Electronics product before using it in a particular application.

"Standard": Computers, office equipment, communications equipment, test and measurement equipment, audio and visual equipment, home electronic appliances, machine tools, personal electronic equipment and industrial robots.

"Special": Transportation equipment (automobiles, trains, ships, etc.), traffic control systems, anti-disaster systems, anti-crime systems, safety equipment and medical equipment (not specifically designed for life support).

"Specific": Aircraft, aerospace equipment, submersible repeaters, nuclear reactor control systems, life support systems and medical equipment for life support, etc.

The quality grade of NEC Electronics products is "Standard" unless otherwise expressly specified in NEC Electronics data sheets or data books, etc. If customers wish to use NEC Electronics products in applications not intended by NEC Electronics, they must contact an NEC Electronics sales representative in advance to determine NEC Electronics' willingness to support a given application.

(Note)

(1) "NEC Electronics" as used in this statement means NEC Electronics Corporation and also includes its majority-owned subsidiaries.

(2) "NEC Electronics products" means any product developed or manufactured by or for NEC Electronics (as defined above).

Regional Information

Some information contained in this document may vary from country to country. Before using any NEC Electronics product in your application, please contact the NEC Electronics office in your country to obtain a list of authorized representatives and distributors. They will verify:

- Device availability
- Ordering information
- Product release schedule
- Availability of related technical literature
- Development environment specifications (for example, specifications for third-party tools and components, host computers, power plugs, AC supply voltages, and so forth)
- Network requirements

In addition, trademarks, registered trademarks, export restrictions, and other legal issues may also vary from country to country.

[GLOBAL SUPPORT]

<http://www.necel.com/en/support/support.html>

NEC Electronics America, Inc. (U.S.)
Santa Clara, California
Tel: 408-588-6000
800-366-9782

NEC Electronics (Europe) GmbH
Duesseldorf, Germany
Tel: 0211-65 03 01

NEC Electronics Hong Kong Ltd.
Hong Kong
Tel: 2886-9318

- **Sucursal en España**
Madrid, Spain
Tel: 091-504 27 87

NEC Electronics Hong Kong Ltd.
Seoul Branch
Seoul, Korea
Tel: 02-558-3737

- **Succursale Française**
Vélizy-Villacoublay, France
Tel: 01-30-67 58 00

NEC Electronics Shanghai, Ltd.
Shanghai, P.R. China
Tel: 021-6841-1138

- **Filiale Italiana**
Milano, Italy
Tel: 02-66 75 41

NEC Electronics Taiwan Ltd.
Taipei, Taiwan
Tel: 02-2719-2377

- **Branch The Netherlands**
Eindhoven, The Netherlands
Tel: 040-244 58 45

NEC Electronics Singapore Pte. Ltd.
Novena Square, Singapore
Tel: 6253-8311

- **Tyskland Filial**
Taeby, Sweden
Tel: 08-63 80 820

- **United Kingdom Branch**
Milton Keynes, UK
Tel: 01908-691-133

Major Revisions in This Edition

Page	Description
Throughout	Change of interface board for desktop PC from IE-700000-PCI-IF to IE-70000-PCI-A
p.12	Modification of Figure 1-1 IE-78K4-NS System Configuration
p.28	A.1 Introduction <ul style="list-style-type: none">• Deletion of Applicable models
p.30	B.1 Introduction <ul style="list-style-type: none">• Deletion of Applicable models

The mark ★ shows major revised points.


INTRODUCTION

Product Overview The IE-78K4-NS is used in combination with an I/O emulation board (IE-784XXX-NS-EM1) to debug products of the 78K/IV Series of 16-bit single-chip microcontrollers.


Target Readers This manual is intended for engineers who will perform debugging of systems that employ 78K/IV Series 16-bit single-chip microcontrollers using the IE-78K4-NS in combination with an I/O emulation board (IE-784XXX-NS-EM1).

Purpose The purpose of this manual is to help the reader understand the debugging functions that are available by using the IE-78K4-NS and the I/O emulation board (IE-784XXX-NS-EM1) together.

Organization When using the IE-78K4-NS, refer to the manual (this manual) that comes with the IE-78K4-NS as well as the manual that comes with the I/O emulation board (IE-784XXX-NS-EM1).

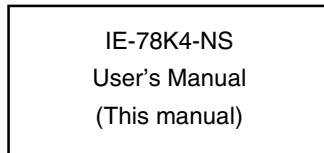

- Basic specifications
- System configuration
- External interface function

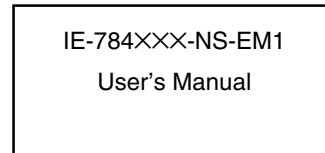

- Function outline
- Target interface differences

How to Read This Manual To understand the overall functions of the IE-78K4-NS
→ Read this manual in the order of the **CONTENTS**.

To understand the basic specifications
→ Refer to **CHAPTER 1 GENERAL** and **CHAPTER 2 PART NAMES**.

To know the appropriate settings when debugging 78K/IV Series products while connected to the IE-784XXX-NS-EM1
→ Refer to **CHAPTER 3 INSTALLATION**.

Terminology

The meanings of the terms used in this manual are described in the table below.

Term	Meaning
Emulation device	Refers to the generic name for the device in the emulator that performs emulation of the target device. This includes the emulation CPU.
Emulation CPU	Refers to the CPU block that executes the user's program in the emulator.
Target device	Refers to the device to be emulated.
Target program	Refers to the program to be debugged.
Target system	Refers to the system to be debugged. This includes the target program and the hardware created by the user. In the narrow sense, it means hardware only.

Conventions

Data significance: Higher digits on the left and lower digits on the right

Note: Footnote for item marked with **Note** in the text

Caution: Information requiring particular attention

Remark: Supplementary information

Related Documents

Please use the following documents in conjunction with this manual.

The related documents listed below may include preliminary versions. However, preliminary versions are not marked as such.

○ Documents Related to Development Tools (User's Manuals)

Document Name	Document Number	
IE-78K4-NS In-Circuit Emulator	This manual	
RA78K4 Assembler Package	Operation	U15254E
	Language	U15255E
	Structured Assembler Preprocessor	U11743E
CC78K4 C Compiler Package	Operation	U15557E
	Language	U15556E
SM78K Series System Simulator Ver.2.30 or later	Operation (Windows™ Based)	U15373E
	External part user open interface specifications	U15802E
ID78K Series Integrated Debugger Ver.2.30 or later	Operation (Windows Based)	U15185E
RX78K4 Real-Time OS	Basics	U10603E
	Installation	U10604E
	Debugger	-
Project Manager Ver. 3.12 or later (Windows Based)	U14610E	
PG-FP4 Flash Memory Programmer	U15260E	

Caution The documents listed above are subject to change without notice. Be sure to use the latest documents for designing.

CONTENTS

CHAPTER 1 GENERAL	11
1.1 System Configuration	11
1.2 Hardware Configuration.....	13
1.3 Basic Specifications	14
1.4 Package Contents	16
CHAPTER 2 PART NAMES	18
2.1 Parts of Main Unit.....	18
2.2 Board Name	20
CHAPTER 3 INSTALLATION	22
3.1 Connection.....	22
3.2 External Trigger Functions	26
3.3 Jumper Setting (on Emulation Board (G-78K4 EM Board))	26
CHAPTER 4 RESTRICTIONS WHEN DETECTING TRACE EVENT	27
APPENDIX A INTERFACE BOARD (IE-70000-PCI-IF-A) FOR DESKTOP PC	28
A.1 Introduction	28
A.2 Installation	29
APPENDIX B PC CARD INTERFACE (IE-70000-CD-IF-A)	30
B.1 Introduction	30
B.2 Installation	31
APPENDIX C INTERFACE BOARD (IE-70000-98-IF-C) FOR PC-9800 SERIES	32
C.1 Introduction	32
C.2 Installation	33
APPENDIX D INTERFACE BOARD (IE-70000-PC-IF-C) FOR IBM PC/AT AND COMPATIBLES	35
D.1 Introduction	35
D.2 Installation	36
APPENDIX E REVISION HISTORY	38

LIST OF FIGURES

Figure No.	Title	Page
1-1	IE-78K4-NS System Configuration	12
1-2	Basic Hardware Configuration of IE-78K4-NS	13
1-3	Package Contents	16
1-4	Contents of Accessory Bag	17
2-1	Main Board (G-78K4 MAIN Board)	20
2-2	Emulation Board (G-78K4 EM Board).....	21
3-1	Connecting I/O Emulation Board	23
3-2	Connecting Emulation Probe	24
3-3	Connecting AC Adapter	25
3-4	Connecting Dedicated Bus Interface Cable	25
A-1	Mounting PCI Board and Connector Board	29
C-1	Settings of INT JP and WAIT JP	34
D-1	Settings of INT JP and WAIT JP	37

LIST OF TABLES

Table No.	Title	Page
1-1	List of Functions (MAX. Specifications).....	14
3-1	Electrical Specifications	26
C-1	SW1 and SW2 Settings When Using IE-78K4-NS.....	33
D-1	SW1 and SW2 Settings When Using IE-78K4-NS.....	36

CHAPTER 1 GENERAL

The IE-78K4-NS is a development tool for effective debugging of hardware and software using a 78K/IV Series 16-bit single-chip microcontroller.


This chapter describes the system configuration and basic specifications of the IE-78K4-NS.

1.1 System Configuration

Figure 1-1 shows the system configuration of the IE-78K4-NS.

★

Figure 1-1. IE-78K4-NS System Configuration

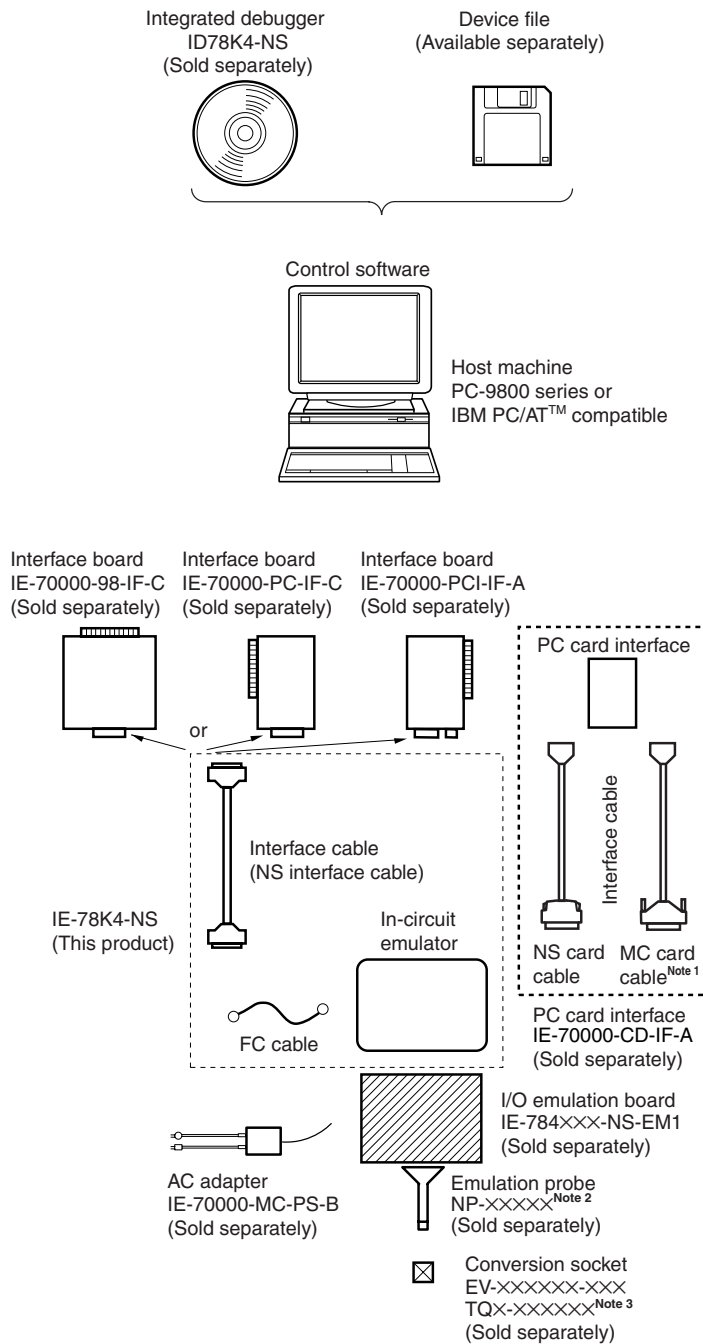


- Notes**
1. This cable is used for the V850 Family™. It cannot be used for the IE-78K4-NS.
 2. The NP-xxxxxx is a product of Naito Densai Machida Mfg. Co., Ltd. For further information, contact Naito Densai Machida Mfg. Co., Ltd. (TEL: +81-45-475-4191)
 3. The TQX-xxxxxx is a product of TOKYO ELETECH CORPORATION.
Inquiries: Daimaru Kogyo, Ltd.
Tokyo Electronics Department (TEL: +81-3-3820-7112)
Osaka Electronics Department (TEL: +81-6-6244-6672)
 4. The device file can be downloaded from the NEC Electronics Website.
(URL: <http://www.necel.com/micro>).

1.2 Hardware Configuration

The IE-78K4-NS consists of the following hardware units (such as cabinet and boards).

- Cabinet
- 78K4 main board
- 78K4 emulation board
- NS interface cable

Figure 1-2. Basic Hardware Configuration of IE-78K4-NS

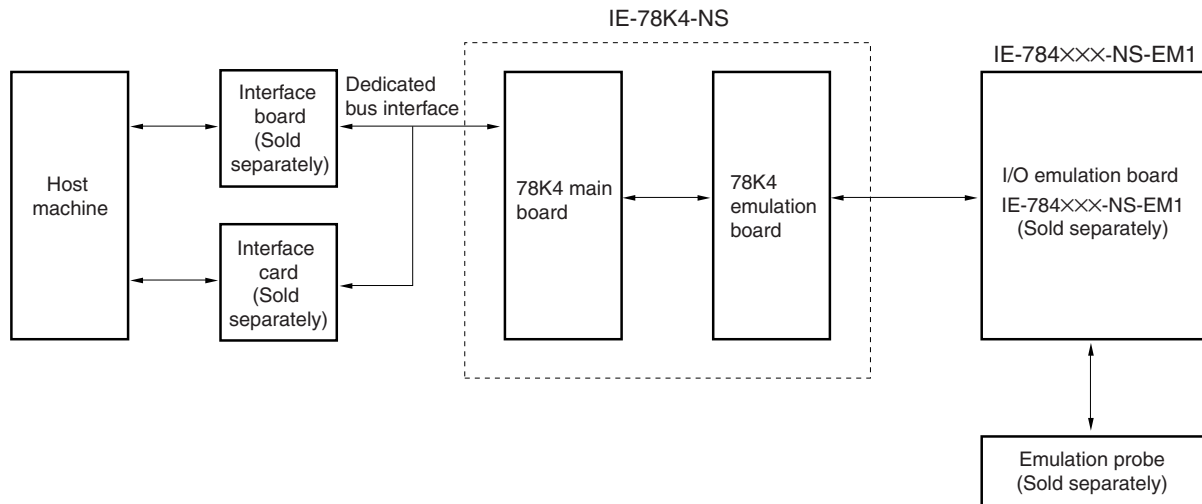

1.3 Basic Specifications

Table 1-1. List of Functions (MAX. Specifications) (1/2)

Parameter		Description
Supervisor		V40™ (operating frequency: 9.8304 MHz)
Target device		μPD784××× Series
System clock		Same as target device
Clock supply	External	Pulse input
	Internal	Mounted on IE-784×××-NS-EM1
Substitute memory capacity		1 MB
Mapping unit	Internal ROM	8 KB
	External RAM	512 bytes
	Peripheral RAM	256 bytes
	External substitute memory	<ul style="list-style-type: none"> • 64 KB space or less: 4 KB • 1 MB space or less: 64 KB • 1 MB space or more: 1 MB
Emulation function		<ul style="list-style-type: none"> • Real-time execution • Break execution • Step execution
Real-time internal RAM monitor		All internal RAM area
Event detection		<ul style="list-style-type: none"> • Program execution detection • Bus event detection • External trigger detection Trigger output (1 unit) and open-drain output
Event integration		<ul style="list-style-type: none"> • Path condition • Sequential condition • Trace qualify condition • Section trace start/end condition (time measurement counter start/end) • Trigger output condition (trace delay)
Break factor		<ul style="list-style-type: none"> • Event break • Manual break • Command break • Fail-safe break
Real-time trace	Trace factor	<ul style="list-style-type: none"> • All trace • Section trace • Qualify trace
	Trace capacity	96 bits × 32 KB
	Trace content	Address, data, and status


Table 1-1. List of Functions (MAX. Specifications) (2/2)

Parameter	Description
Execution time measurement	Up to 14 min. 33 sec., resolution: 203.45 ns Number of measured section executions: 65536 MAX.
Target interface	Emulation probe (sold separately) provided for each target device shape
Pin mask	RESET, HLDRQ, NMI, WAIT, and Hardware STOP are maskable
Host interface	Dedicated bus interface
Low-voltage support	Based on the I/O emulation board (sold separately)
Host machine	PC-9800 series and PC/AT compatibles
Power supply	DC 5 V
Dimensions	W240 × D197 × H73 (mm)

1.4 Package Contents

The packing box of the IE-78K4-NS contains the main unit, cables, an accessory bag, and a guarantee card. A detailed list of contents, this user's manual, and screws are in the accessory bag. If anything is missing or broken, contact an NEC Electronics sales representative or an NEC Electronics distributor.

Figure 1-3. Package Contents

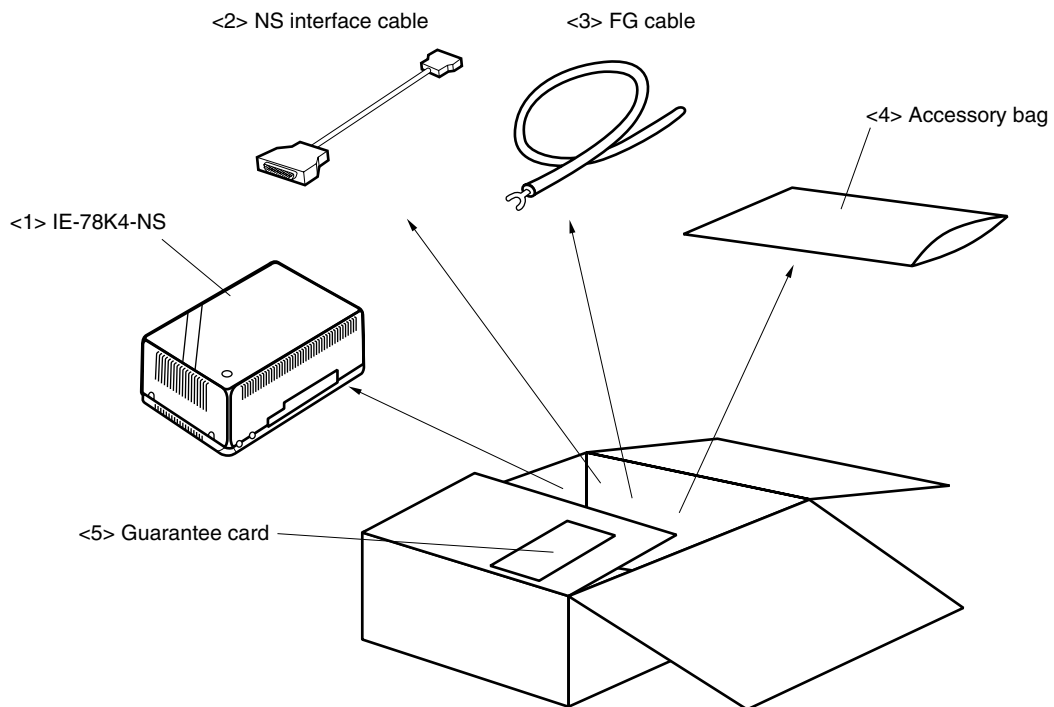


<1> IE-78K4-NS main unit:	1
<2> NS interface cable:	1
<3> FG cable:	1
<4> Accessory bag:	1
<5> Guarantee card:	1

Make sure that the following items are contained in the accessory bag (see Figure 1-4 Contents of the Accessory Bag).

- <a> Detailed list of contents: 1
- User's manual (this manual): 1
- <c> Screws: 4

Figure 1-4. Contents of Accessory Bag

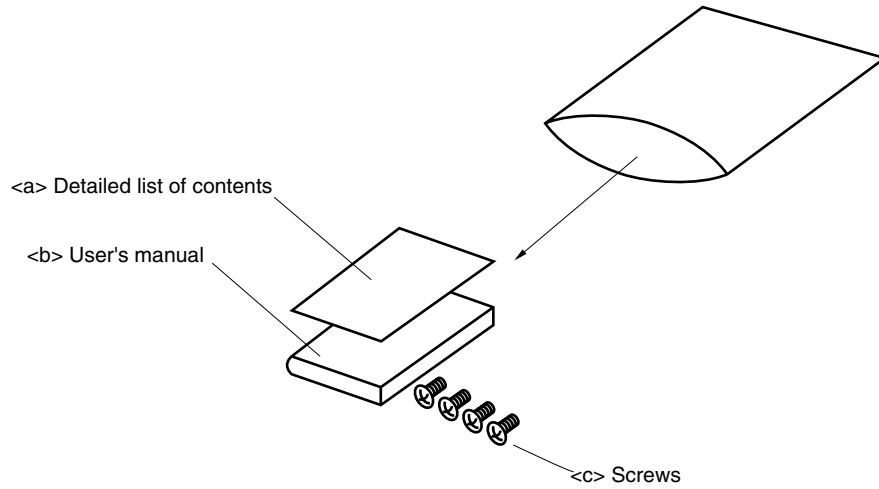

CHAPTER 2 PART NAMES


This chapter introduces the parts of the IE-78K4-NS main unit.

The packing box contains the IE-78K4-NS main unit. If anything is missing or damaged, please contact an NEC Electronics sales representative.


Please make sure to fill out and return the guarantee card that comes with the main unit.

2.1 Parts of Main Unit


(1) Probe end

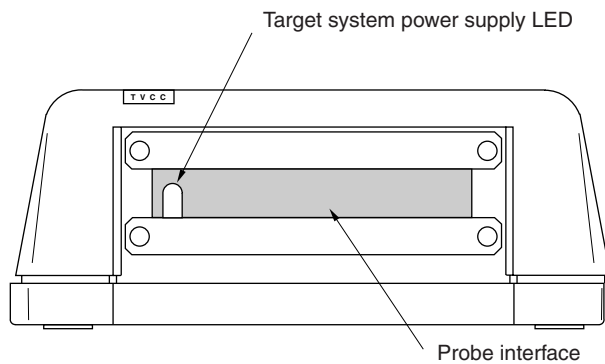

(2) Top view

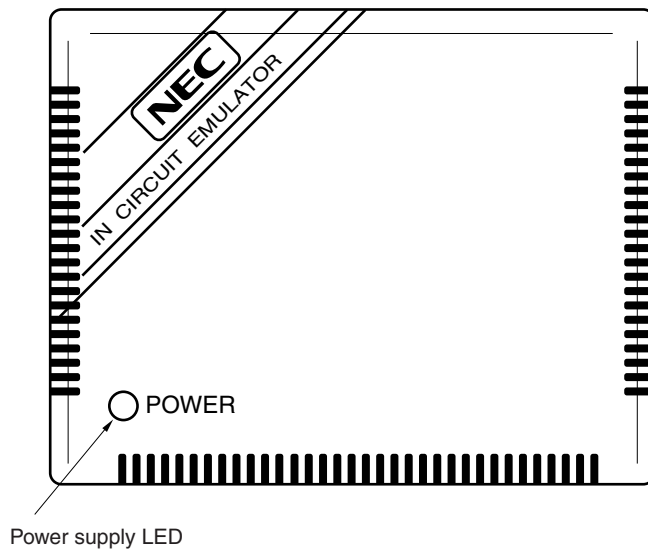

(3) Interface end

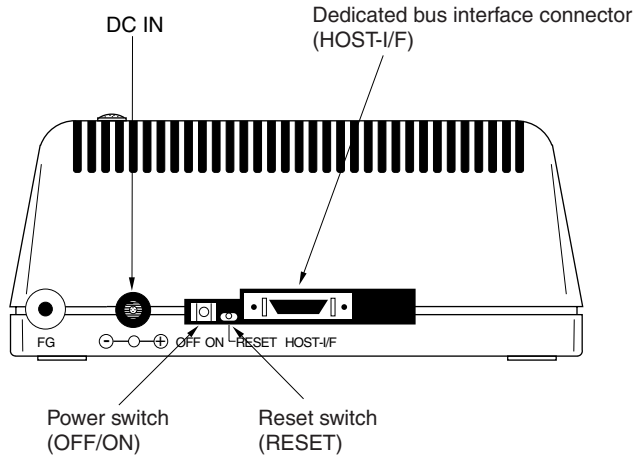


2.2 Board Name

IE-78K4-NS contains two boards.

- Main board (G-78K4 MAIN Board): 1
- Emulation board (G-78K4 EM Board): 1


Check that you have the correct two boards. To access the inside of the unit, remove the four screws from the sides of the main unit and open the lid.

Figure 2-1. Main Board (G-78K4 MAIN Board)

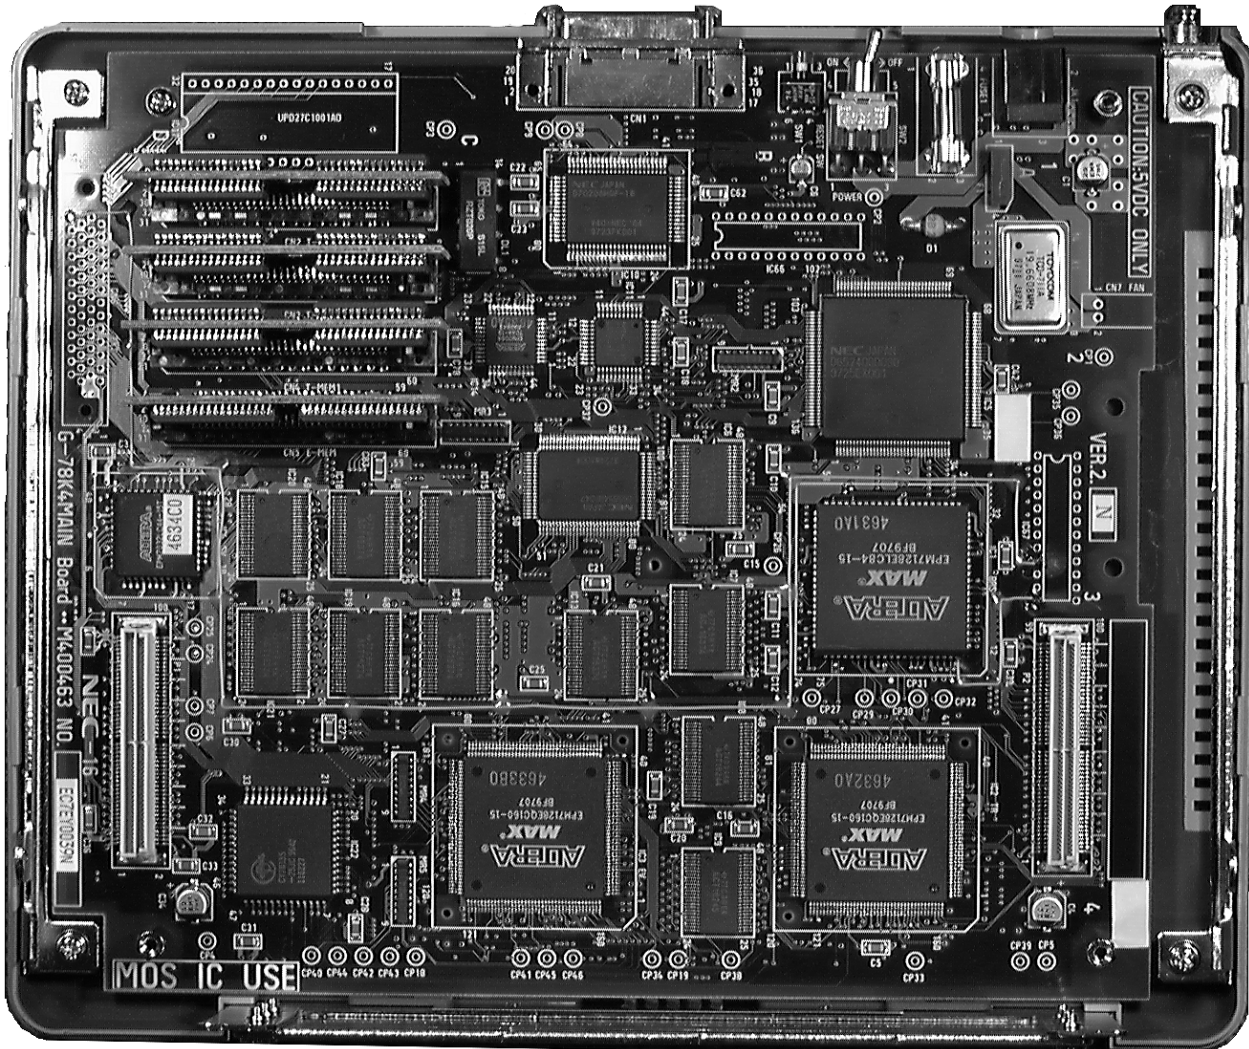

Remark The main board is shown mounted in the main unit.

Figure 2-2. Emulation Board (G-78K4 EM Board)

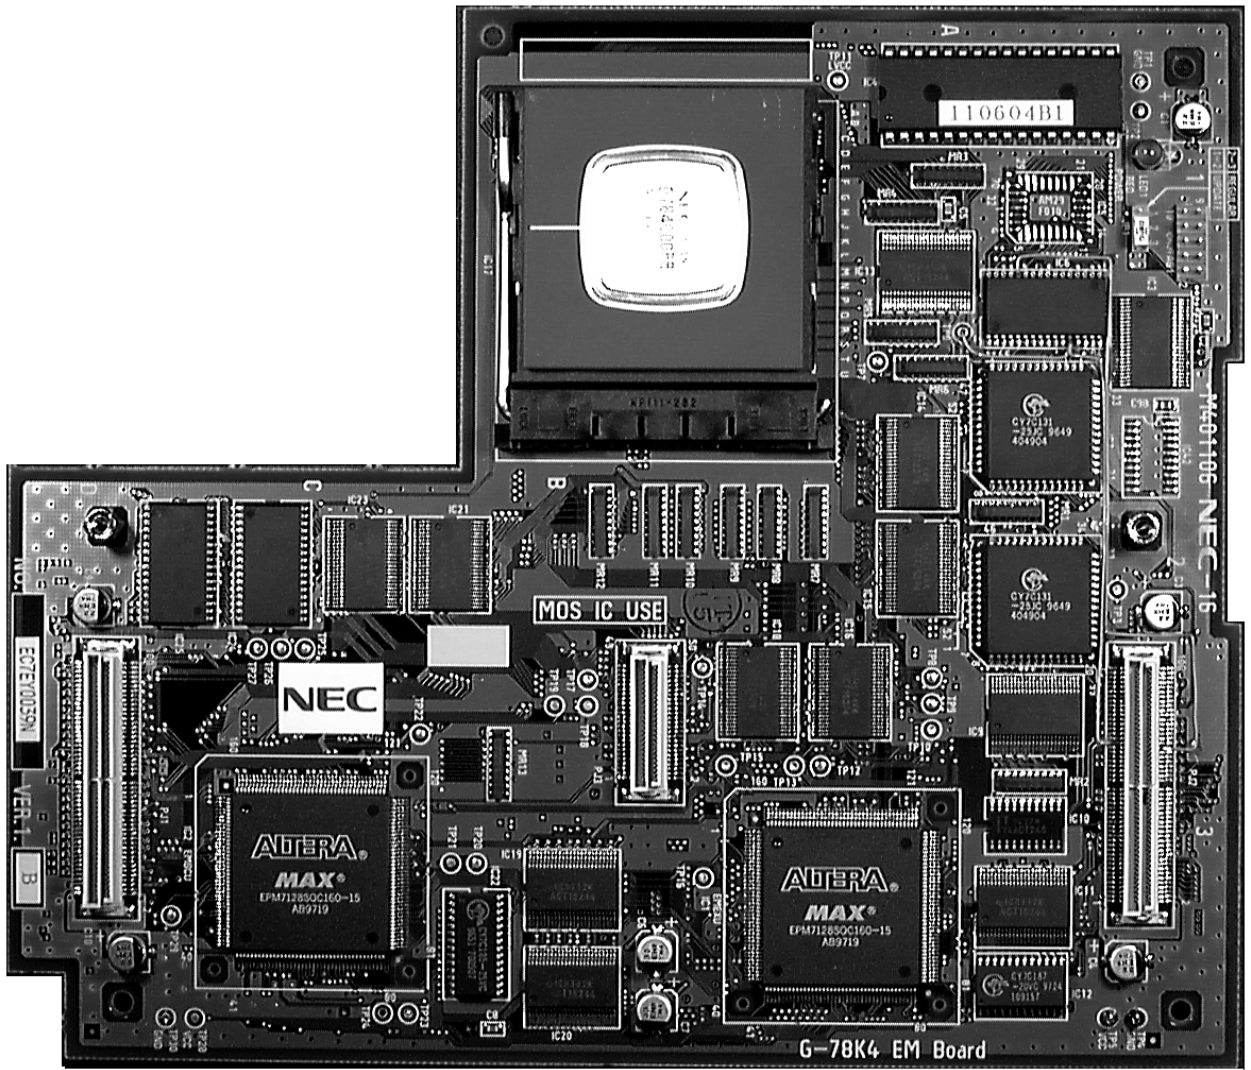

CHAPTER 3 INSTALLATION

This chapter explains how to connect the cables to the IE-78K4-NS and the mode settings.

3.1 Connection

Connect the following seven products, which are sold separately.

Refer to **Figure 1-1 IE-78K4-NS System Configuration** in **CHAPTER 1 GENERAL** for the system configuration of the IE-78K4-NS.

- IE-70000-98-IF-C: Interface board (Use cable that comes with IE-78K4-NS)
- IE-70000-PC-IF-C: Interface board (Use cable that comes with IE-78K4-NS)
- IE-70000-PCI-IF-A: Interface board (Use cable that comes with IE-78K4-NS)
- IE-70000-CD-IF-A: PC card interface (Use NS card cable)
- IE-70000-MC-PS-B: AC adapter
- IE-784XXX-NS-EM: I/O emulation board
- NP-XXXXXX: Emulation probe


Caution Connecting and removing cables or components from the target system and changing the settings of switches, etc. must be carried out after turning off the power of the IE-78K4-NS main unit and the target system.

(1) Connecting I/O emulation board (IE-784XXX-NS-EM1)


IE-784XXX-NS-EM1 is sold separately.

Figure 3-1. Connecting I/O Emulation Board


<1> Remove the screws from the sides of the main unit, and then remove the top cover.

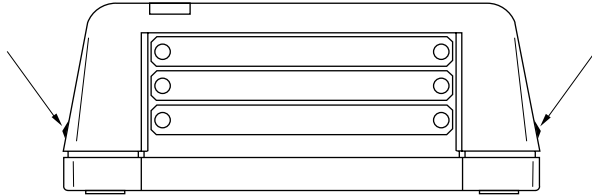


<2> Remove the second plate from the bottom by removing the screws.

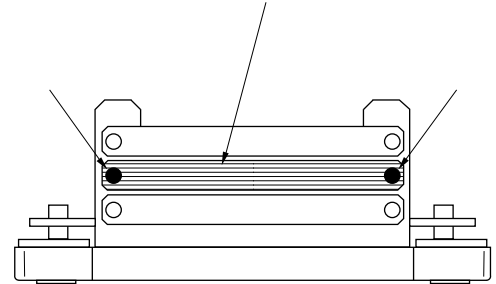


<3> Remove the four screws from the top of the emulation board, connect the IE-784XXX-NS-EM1 and then tighten the screws.

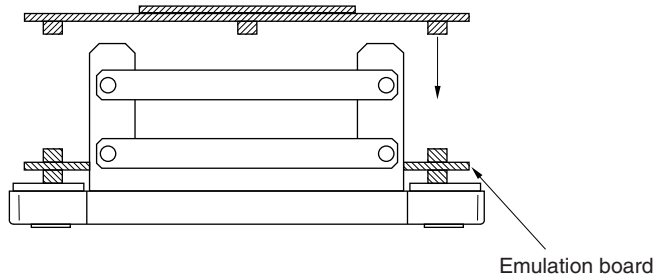

<4> Connect the relevant probe.

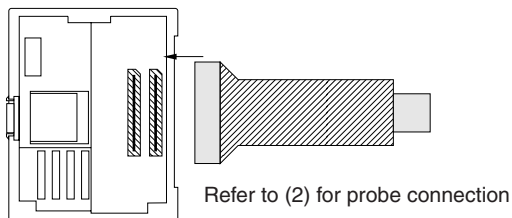


<5> Connect the top cover and tighten the four screws on the sides.

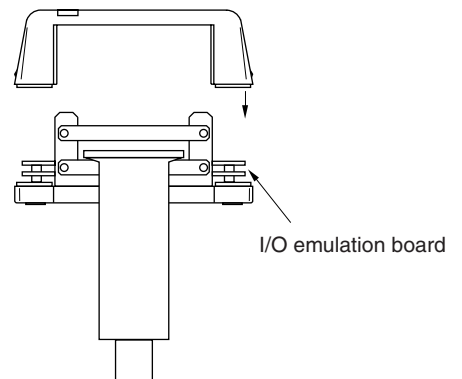

(2) Connecting emulation probe (NP-XXXXX)

NP-XXXXX is sold separately.

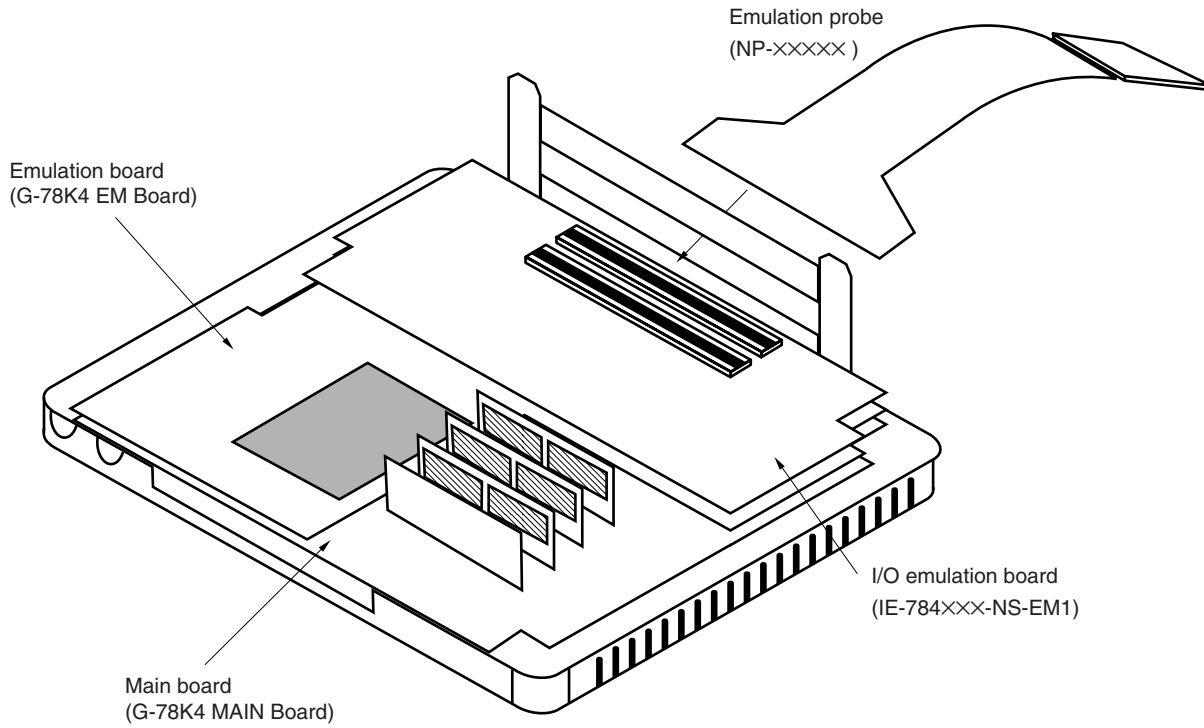Figure 3-2. Connecting Emulation Probe


Caution The emulation probe (NP-XXXXX) mounting location varies depending on the model of the I/O emulation board (IE-784XXX-NS-EM1) in use. For details, refer to the IE-784XXX-NS-EM1 User's Manual.

(3) Connecting AC adapter (IE-70000-MC-PS-B)

IE-70000-MC-PS-B is sold separately.


<1> Insert the AC adapter plug into the DC IN socket on the interface end of the IE-78K4-NS.

Figure 3-3. Connecting AC Adapter

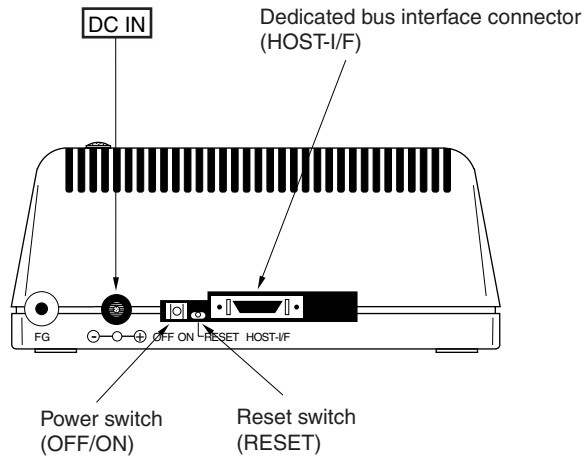**(4) Connecting interface cable**

<1> Insert the cable into the dedicated bus interface connector on the interface end of the IE-78K4-NS.

Figure 3-4. Connecting Dedicated Bus Interface Cable

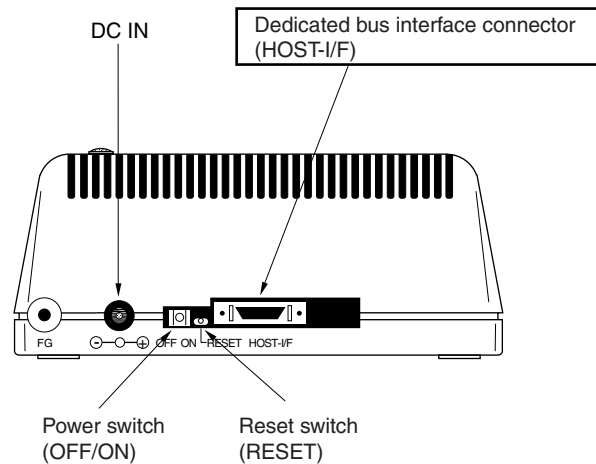

- Caution** The type of interface cable varies depending on the interface board and PC card interface.
- When using an interface board (IE-70000-98-IF-C, IE-70000-PC-IF-C, or IE-70000-PCI-IF-A)
→ Connect the NS interface cable that comes with the IE-78K4-NS.
 - When using a PC card interface (IE-70000-CD-IF-A)
→ Connect the NS card cable that comes with the IE-70000-CD-IF-A.

The IE-70000-98-IF-C, IE-70000-PC-IF-C, IE-70000-PCI-IF-A, and IE-70000-CD-IF-A are sold separately.

3.2 External Trigger Functions

(1) EXTOUT

At the occurrence of a break event, the EXTOUT pin on the I/O emulation board (IE-784XXX-NS-EM1) outputs a high level for a single CPU operating clock.

Caution Because the output is open drain, connect a pull-up resistor in the target system.

(2) EXTIN


The EXTIN pin on the I/O emulation board (IE-784XXX-NS-EM1) can be used to input an event signal. Enter high-level pulse signals for three or more CPU operating clocks.

Caution For the electrical specifications, refer to Table 3-1.

Table 3-1. Electrical Specifications

Parameter	MIN. [V]	MAX. [V]
High-level input voltage	Target voltage × 0.7	Target voltage
Low-level input voltage	0	Target voltage × 0.3

3.3 Jumper Setting (on Emulation Board (G-78K4 EM Board))

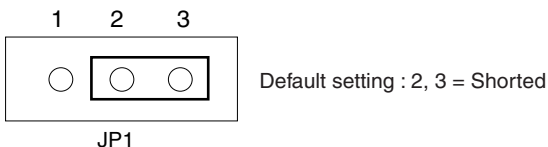

Caution Use the default setting (2, 3 = shorted) for JP1.

CHAPTER 4 RESTRICTIONS WHEN DETECTING TRACE EVENT

When the emulation CPU is operating at 16 MHz or higher (when the X1 pin is supplied with a signal of 32 MHz or higher and the standby control register (STBC) is set to 00H), detection of the following three trace events may not be performed normally.

- Vector read
- Macro service read
- Macro service write

APPENDIX A INTERFACE BOARD (IE-70000-PCI-IF-A) FOR DESKTOP PC

The settings when connecting the IE-78K4-NS are described below.
For details, refer to the **IE-70000-PCI-IF-A User's Manual (to be prepared)**.

A.1 Introduction

★ The IE-70000-PCI-IF-A is an interface board for the IE series, to be used mounted in the PCI bus slot.
First of all, check that you have following items.

- Interface board (IE-70000-PCI-IF-A) for desktop PC: 1
- 8-bit connector board (connected to IE-70000-PCI-IF): 1
- 32-bit connector board: 1
- User's manual: 1
- DLL-DISK: 1
- DRV-DISK: 1

★ <Basic specifications>

Hardware resources

- I/O address: 0000H to FFFFH
- Interrupt: Unused
- Memory: 80H bytes used

Current consumption

300 mA (MAX. @ +5 V)

- Cautions**
1. Do not place heavy objects on or apply pressure to the board.
 2. Do not drop the board or subject it to excessive vibration or shock.
 3. When removing a cable, be sure not to pull it by the cord.
 4. Do not use or keep the board in a hot, humid or dusty environment or in a location where it is directly exposed to sunlight.
 5. Avoid subjecting the board to extreme changes in temperature or humidity.
 6. Be careful not to spill drinks or other liquids onto the board or its accessories.
 7. Be careful not to connect a cable for a different product to the connector.

A.2 Installation

(1) Board settings

The IE-70000-PCI-IF-A does not have jumper and DIP switches


(2) Mounting 8-bit connector board

The 8-bit connector board has been mounted before shipment.

Remark When mounting the 32-bit board, mount it on top of the 8-bit connector board using a coupling connector (see Figure A-1). After mounting these boards, fix them tightly with screws.

Caution The 32-bit connector board is supplied for future function expansion. Be sure to store it carefully.

Figure A-1. Mounting PCI Board and Connector Board

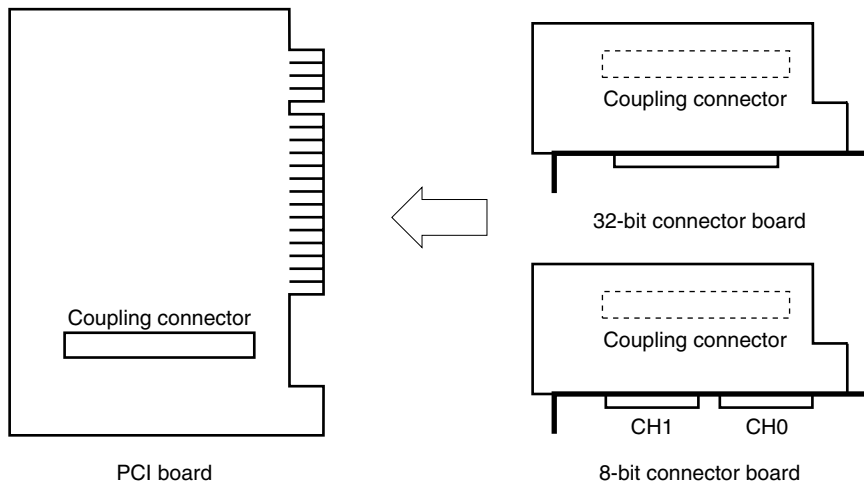

(3) Mounting in PC

After checking that the PC's power is off, insert the interface board into the PCI bus slot following the instructions in the PC's user's manual.

(4) Installation of PCI driver

Install the PCI driver referring to the DRV-DISK Readme_e.txt that comes with the IE-70000-PCI-IF.

(5) Connecting to IE-78K4-NS

Using the cable that comes with the IE-70000-PCI-IF, connect the IE-78K4-NS to CH0.

Caution Connection with the IE-78K4-NS is possible on the CH0 side only.

APPENDIX B PC CARD INTERFACE (IE-70000-CD-IF-A)

The settings when connecting the IE-78K4-NS are described below.

For details, refer to the **IE-70000-CD-IF-A User's Manual (to be prepared)**.

B.1 Introduction

★ The PC card interface (IE-70000-CD-IF-A) is an interface card to be used mounted in a PC card slot compliant with PCMCIA2.1/JEIDA standard Ver.4.2.

First of all, check that you have following items.

- PC card interface (IE-70000-CD-IF-A): 1
- MC-A CABLE: 1
- NS-A CABLE: 1
- User's manual: 1
- DLL-DISK: 1
- DRV-DISK: 1

★ <Basic specifications>

Hardware resources

- I/O address: 20H bytes with base address of 220H, 260H, 2E0H, 320H, or 3E0H
- Interrupt: Unused
- Memory: Unused

Current consumption

300 mA (MAX. @ +5 V)

- Cautions**
1. Do not place heavy objects on or apply pressure to the card.
 2. Do not drop the card or subject it to excessive vibration or shock.
 3. When removing a cable, be sure not to pull it by the cord.
 4. Do not use or keep the board in a hot, humid or dusty environment or in a location where it is directly exposed to sunlight.
 5. Avoid subjecting the board to extreme changes in temperature or humidity.
 6. Be careful not to spill drinks or other liquids onto the board or its accessories.
 7. Be careful not to connect a cable for a different product to the connector.

B.2 Installation

(1) Mounting in PC

Insert the PCMCIA card into the card slot when the PC's power is on.

For Windows NT 4.0, insert the card into the slot when the PC's power is off. When inserting the card, make sure that the card is facing the right way.

(2) Installation of PCMCIA driver

Install the PCMCIA driver referring to the DRV-DISK Readme_e.txt that comes with the IE-70000-CD-IF-A.

Caution This interface card cannot be connected to the IE-78XXXX-R. If the IE-78XXXX-R displayed on the DRV-DISK installation menu is selected, the installation menu will close normally but the installation is not valid.

(3) Connecting to IE-78K4-NS

Connect the IE-70000-CD-IF-A to the IE-78K4-NS using the NS-A CABLE.

Caution Be sure to use the NS-A CABLE when connecting to the IE-78K4-NS. If the MC-A CABLE is used, the IE-70000-CD-IF-A may be damaged.

APPENDIX C INTERFACE BOARD (IE-70000-98-IF-C) FOR PC-9800 SERIES

The settings when connecting the IE-78K4-NS are described below.

For details, refer to the **IE-70000-98-IF-C User's Manual (to be prepared)**.

C.1 Introduction

The IE-70000-98-IF-C is an interface board that is mounted in the C bus slot of the PC-9800 series.

Caution The PC98-NX Series is regarded as IBM PC/AT compatible. Refer to APPENDIX A INTERFACE BOARD (IE-70000-PCI-IF) FOR DESKTOP PC.

First of all, check that you have the correct interface board.

- Interface board (IE-70000-98-IF-C) for PC-9800 series: 1

<Basic specifications>

Applicable models

This product is designed to work with PC-9800 series devices equipped with a C bus.

Hardware resources

- I/O addresses: 16 bytes at the 256-byte boundary (00D×H, 01D×H,...FFD×H)
- Interrupts and other: Unused

Current consumption

500 mA (MAX. @ +5 V)

- Cautions**
1. Do not place heavy objects on or apply pressure to the board.
 2. Do not drop the board or subject it to excessive vibration or shock.
 3. When removing a cable, be sure not to pull it by the cord.
 4. Do not use or keep the board in a hot, humid or dusty environment or in a location where it is directly exposed to sunlight.
 5. Avoid subjecting the board to extreme changes in temperature or humidity.
 6. Be careful not to spill drinks or other liquids onto the board or its accessories.
 7. Be careful not to connect a cable for a different product to the connector.

C.2 Installation

(1) I/O address settings

SW1 and SW2 are the switches for selecting the C bus I/O addresses. SW1 numbers 1 to 8 correspond to C bus addresses A4 to A11, and SW2 numbers 1 to 4 correspond to C bus addresses A12 to A15.

In the IE-78K4-NS, the addresses should be set in the 16 bytes between 00D×H and FFD×H. The switch takes the value “0” when ON and “1” when OFF.

The addresses to be set must be values that are not used in the PC system or for other boards. In addition, since these values are used during software installation, make a note of them for future reference.

Table C-1. SW1 and SW2 Settings When Using IE-78K4-NS

SW1 Number	1	2	3	4	5	6	7	8	
Address	A4	A5	A6	A7	A8	A9	A10	A11	I/O Address
ON		0				0	0	0	01D×H
OFF	1		1	1	1				


SW2 Number	1	2	3	4	5	6	7	8	
Address	A12	A13	A14	A15	OFF	OFF	ON	OFF	I/O Address
ON	0	0	0	0			0		01D×H
OFF					1	1		1	

- Cautions**
1. Use the default setting for SW1 numbers 1 to 4.
 2. Set SW2 number 7 to ON and SW2 numbers 5, 6, and 8 to OFF.

(2) Jumper settings

INT JP and WAIT JP are jumpers that select C bus interrupt and WAIT.
 For the IE-78K4-NS, set INT JP to NO USE, and WAIT JP to 1-2 shorted.

Figure C-1. Settings of INT JP and WAIT JP

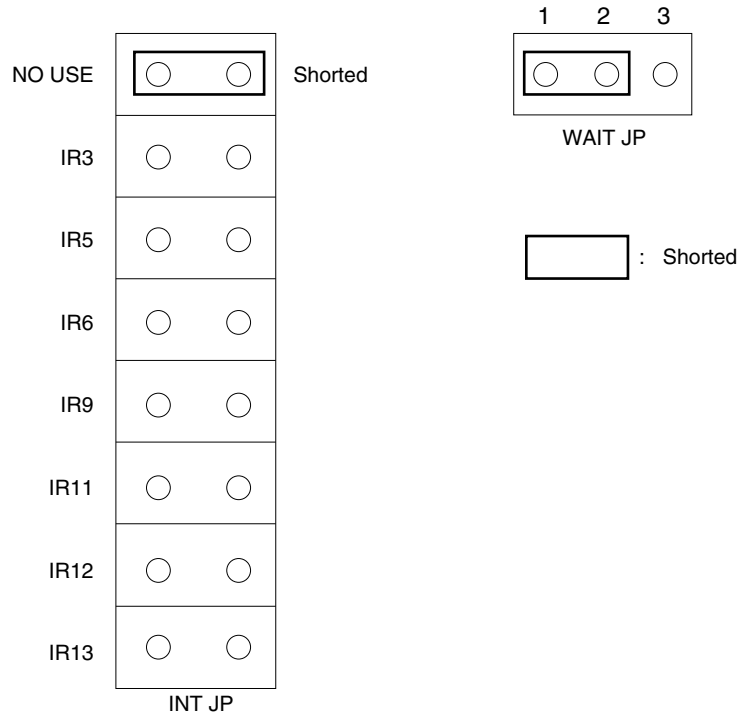

(3) Mounting in PC

Make sure that the PC is turned off, then insert the interface board into the C bus slot following the instructions in the PC's user's manual.

(4) Connecting with IE-78K4-NS

Using the supplied cable, connect the IE-78K4-NS to the CH0 side.

Caution Connection with the IE-78K4-NS is possible on the CH0 side only.
 For connection with other models, refer to their respective user's manuals.

APPENDIX D INTERFACE BOARD (IE-70000-PC-IF-C) FOR IBM PC/AT AND COMPATIBLES

The settings when connecting IE-78K4-NS are described below.

For details, refer to the **IE-70000-PC-IF-C User's Manual (to be prepared)**.

D.1 Introduction

The IE-70000-PC-IF-C is an interface board that is mounted in the ISA bus slot of an IBM PC/AT or compatible. First of all, check that you have the correct interface board.

- Interface board (IE-70000-PC-IF-C) for IBM PC/AT: 1

<Basic specifications>

Applicable models

The IE-70000-PC-IF-C is designed for IBM PC/AT and compatibles equipped with an ISA bus.

Hardware resources

- I/O address: 16 bytes at any 16-byte boundary (020×H to 03F×H)
- Interrupts and other: Unused

Current consumption

500 mA (MAX. @ +5 V)

- Cautions**
1. Do not place heavy objects on or apply pressure to the board.
 2. Do not drop the board or subject it to excessive vibration or shock.
 3. When removing a cable, be sure not to pull it by the cord.
 4. Do not use or keep the board in a hot, humid or dusty environment or in a location where it is directly exposed to sunlight.
 5. Avoid subjecting the board to extreme changes in temperature or humidity.
 6. Be careful not to spill drinks or other liquids onto the board or its accessories.
 7. Be careful not to connect a cable for a different product to the connector.

D.2 Installation

(1) I/O address settings

SW1 and SW2 are the switches for selecting the ISA bus I/O addresses. SW1 numbers 1 to 8 correspond to ISA bus addresses A4 to A11, and SW2 numbers 1 to 4 correspond to ISA bus addresses A12 to A15.

In the IE-78K4-NS, the addresses should be set between 020XH and 03FXH. The switch takes the value "0" when ON and "1" when OFF.

The addresses to be set must be values that are not used in the PC system or for other boards. In addition, since these values are used during software installation, make a note of them for future reference.

Table D-1. SW1 and SW2 Settings When Using IE-78K4-NS

SW1 Number	1	2	3	4	5	6	7	8	
Address	A4	A5	A6	A7	A8	A9	A10	A11	I/O Address
ON	0	0	0	0	0		0	0	020XH
OFF						1			


SW2 Number	1	2	3	4	5	6	7	8	
Address	A12	A13	A14	A15	OFF	OFF	ON	OFF	I/O Address
ON	0	0	0	0			0		020XH
OFF					1	1		1	

Caution Set SW2 numbers 1 to 4 and 7 to ON and SW2 numbers 5, 6, and 8 to OFF.

(2) Jumper settings

INT JP and WAIT JP are jumpers that select C bus interrupt and WAIT.
 For the IE-78K4-NS, set INT JP to NO USE, and WAIT JP to 1-2 shorted.

Figure D-1. Settings of INT JP and WAIT JP

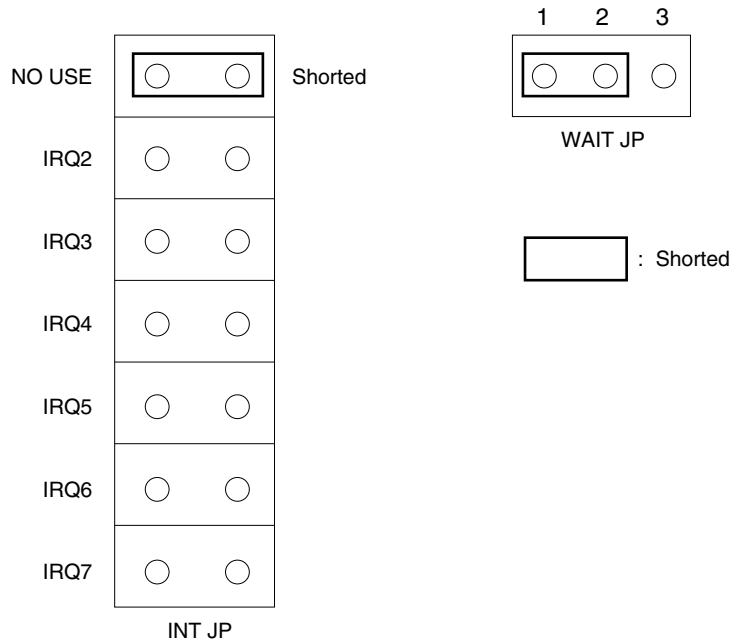

(3) Mounting in PC

Make sure that the PC is turned off, then insert the interface board into the ISA bus slot following the instructions in the PC's user's manual.

(4) Connecting with IE-78K4-NS

Using the supplied cable, connect the IE-78K4-NS to the CH0 side.

Caution Connection with the IE-78K4-NS is possible on the CH0 side only.
 For connection with other models, refer to their respective user's manuals.

★

APPENDIX E REVISION HISTORY

The revisions up to this edition are shown in the table below.

Edition	Revisions from Previous Edition	Revised Chapters
2nd	Addition of 1.4 Package Contents	CHAPTER 1 GENERAL
	Addition of APPENDIX A INTERFACE BOARD (IE-70000-PCI-IF) FOR DESKTOP PC	APPENDIX A
	Addition of APPENDIX B PC CARD INTERFACE (IE-70000-CD-IF-A)	APPENDIX B
	Addition of explanation in APPENDIX C INTERFACE BOARD (IE-70000-98-IF-C) FOR PC-9800 SERIES	APPENDIX C
	Addition of explanation in APPENDIX D INTERFACE BOARD (IE-70000-PC-IF-C) FOR IBM PC/AT AND COMPATIBLES	APPENDIX D
	Addition of APPENDIX E REVISION HISTORY	APPENDIX E
3rd	Change of interface board for desktop PC from IE-70000-PCI-IF to IE-70000-PCI-IF-A	Throughout
	Modification of Figure 1-1 IE-78K4-NS System Configuration	CHAPTER 1 GENERAL
	A.1 Introduction • Deletion of Applicable models	APPENDIX A
	B.1 Introduction • Deletion of Applicable models	APPENDIX B

[MEMO]