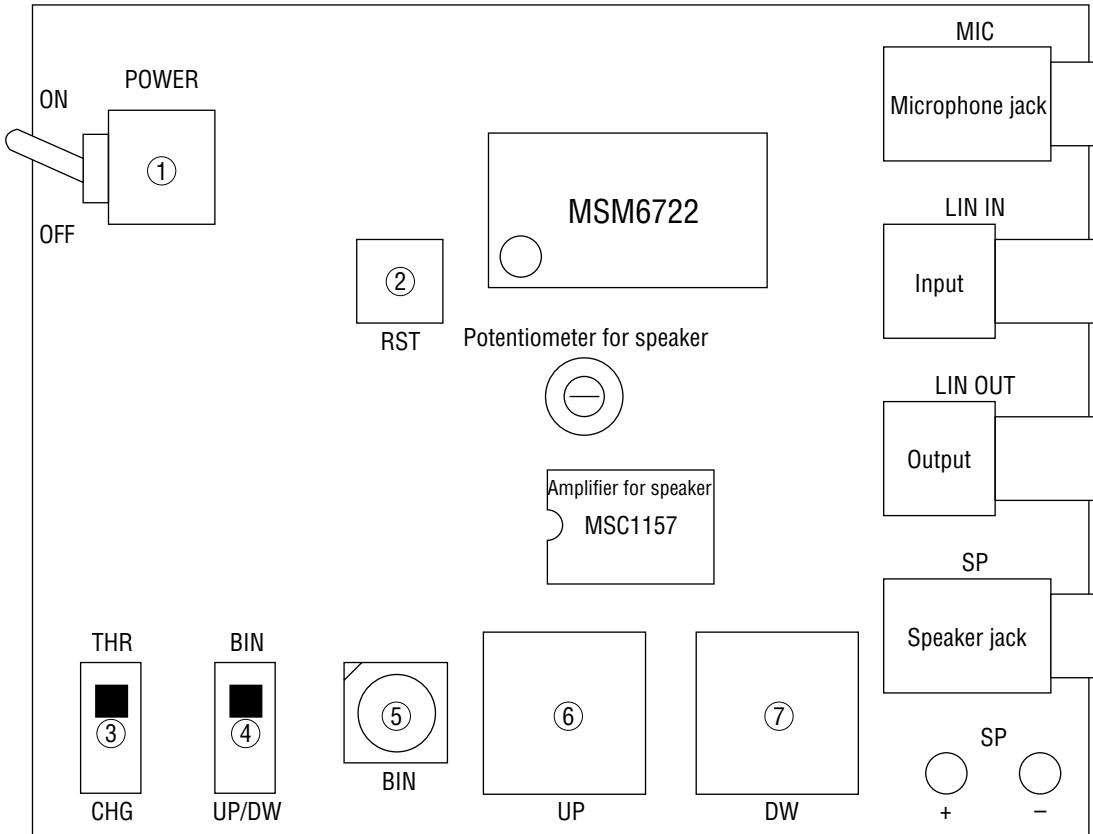



MSM6722 DEMO BOARD**MSM6722 Demonstration Board****BOARD DESIGN****INITIALIZATION**

- Insert the microphone into the microphone jack.
- Insert the speaker into the speaker jack.

SWITCHES


- ① Main power switch.
- ② Reset switch. Pressing the switch initializes the LSI.
- ③ THR/CHG switch. Placing the switch in the THR position outputs voice incurring no interval translation. Placing the switch in the CHG position outputs voice incurring interval translation.
- ④ Mode selection switch. Placing the switch in the BIN position sets up the binary mode. Placing the switch in the UP/DW position sets up the up/down mode.
- ⑤ HEX switch. Used in the binary mode to change intervals.
- ⑥⑦ Incremental/decremental switches. In the incremental/decremental mode, the switches allow the interval to be changed. Pressing the switches concurrently enables the interval step to be reset.

CIRCUIT DIAGRAM

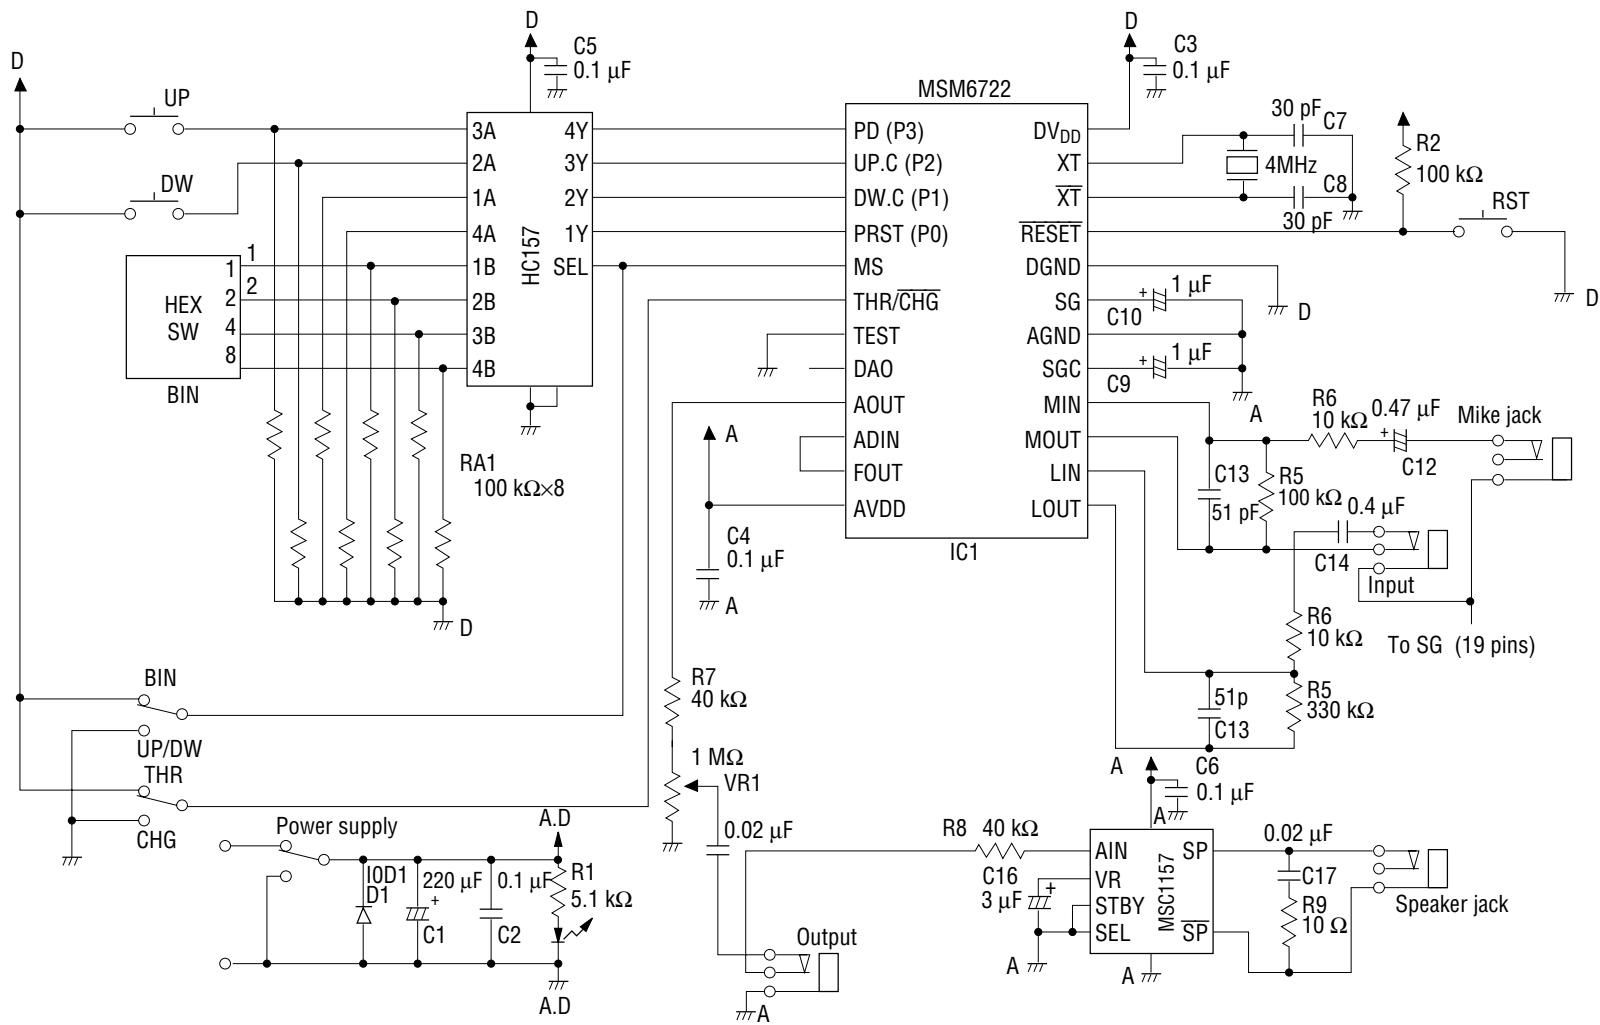


PATTERN LAYOUT

Silk Screen

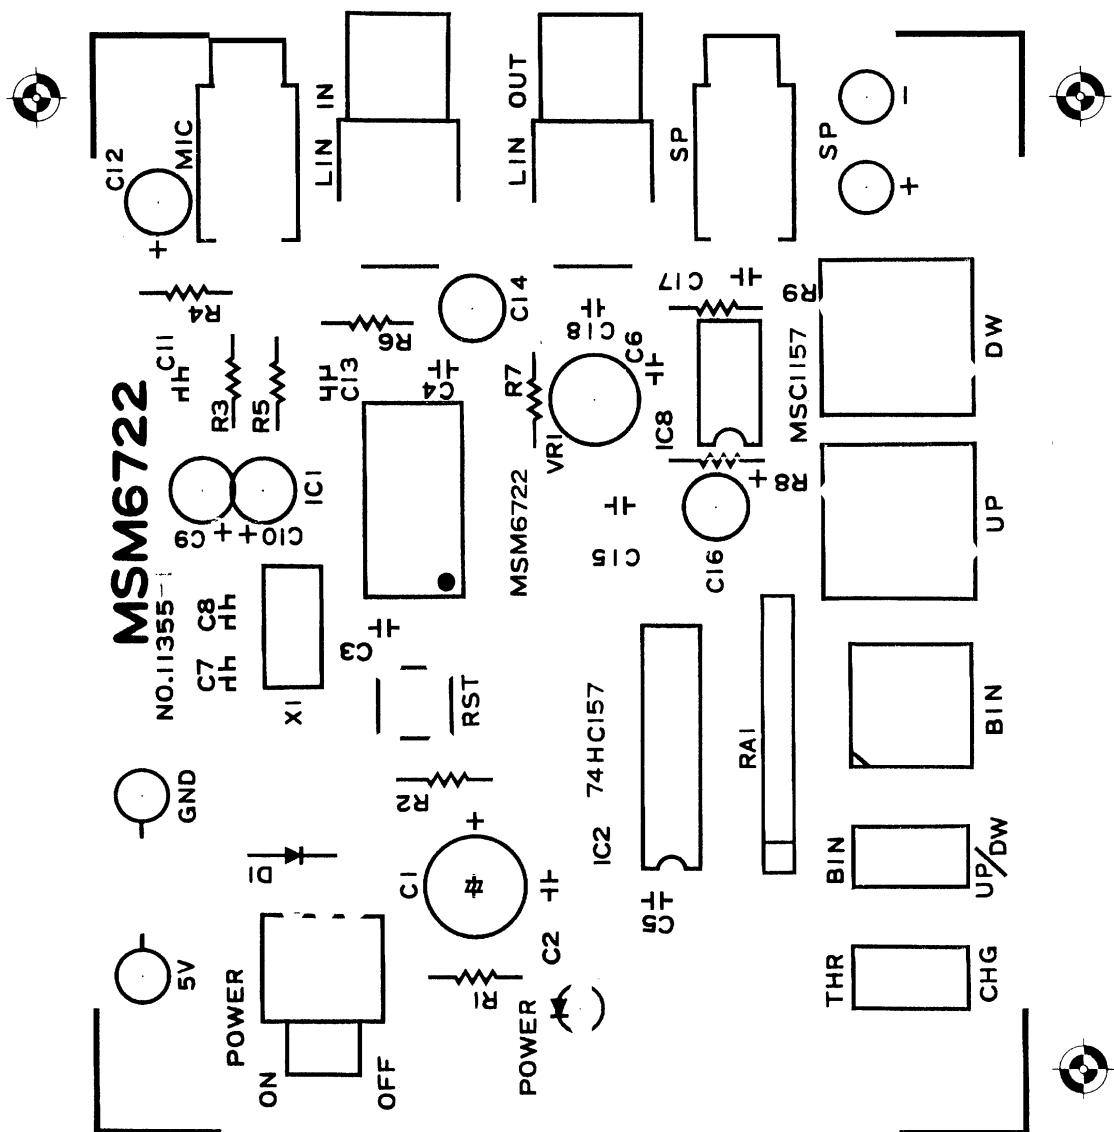

Mounting Side

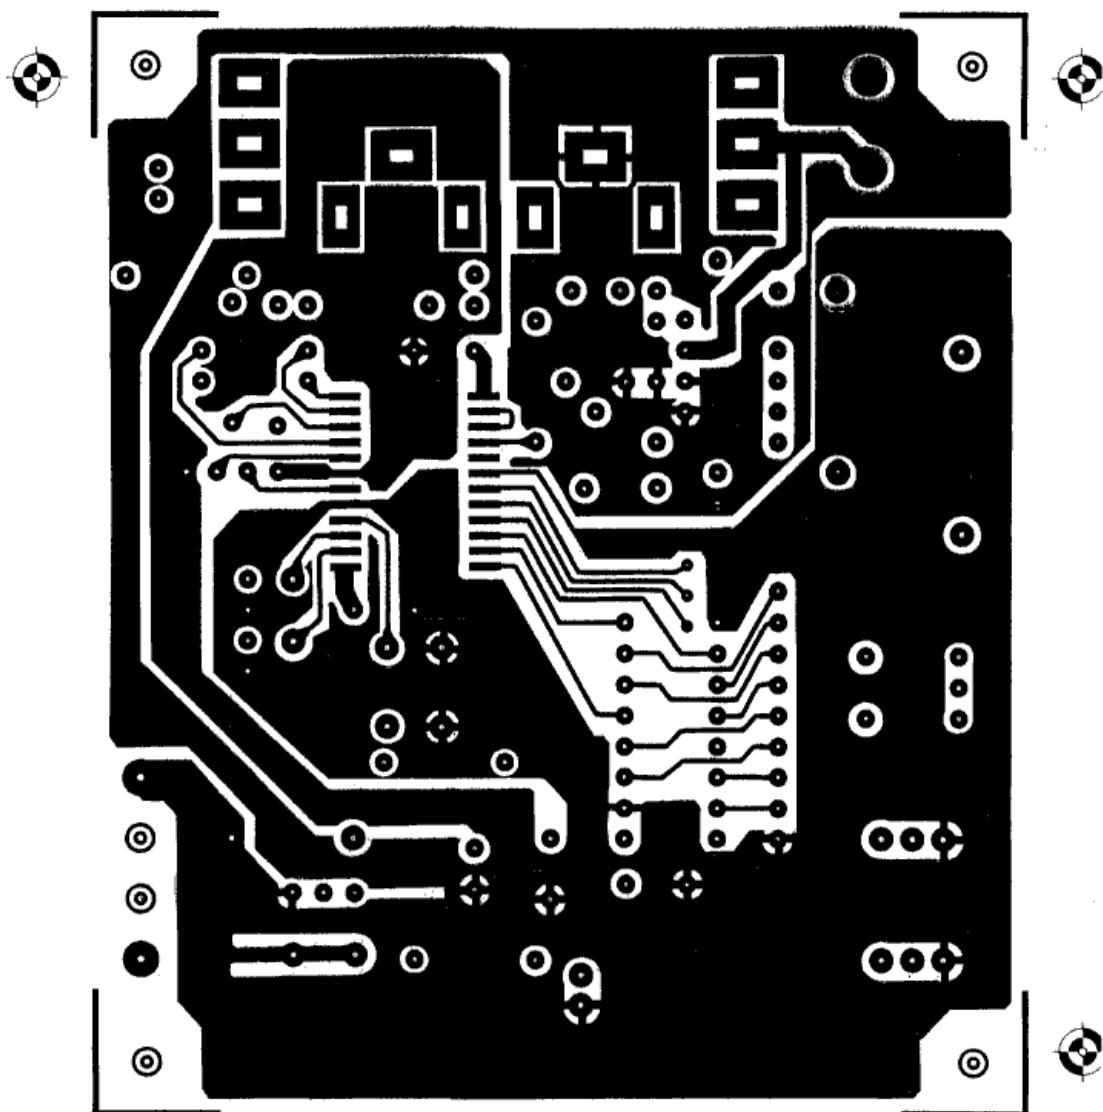

Solder Side

