

Connection table of HYUNDAI HT14X11

HYUNDAI HT14X11		PCM-3540T Transmitter CN1 Connector	
PIN No.	FUNCTION	PIN No.	FUNCTION
1	VDD(+3.3V)	VDD	+3.3V
2	VDD(+3.3V)	VDD	+3.3V
3	VSS1	24	GND
4	VSS2	23	GND
5	RIN0-	25	L1-
6	RIN0+	26	L1+
7	VSS3	16	GND
8	RIN1-	13	L2-
9	RIN1+	12	L2+
10	VSS4-	17	GND
11	RIN2-	11	L3-
12	RIN2+	10	L3+
13	VSS5	18	GND
14	CLK-	9	L4-
15	CLK+	8	L4+
16	VSS6	19	GND
17	NC1		No Connection
18	NC2		No Connection
19	VSS7	22	GND
20	VSS8	23	GND

VCC= 3.3V

The software in U2 PLD has to be modified.