



STANDARD TWINAX/TRIAX PATCHING & CABLE ASSEMBLIES

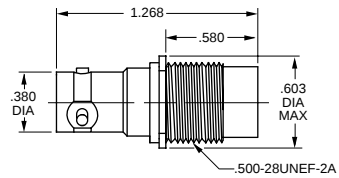


PATCH JACK

J70

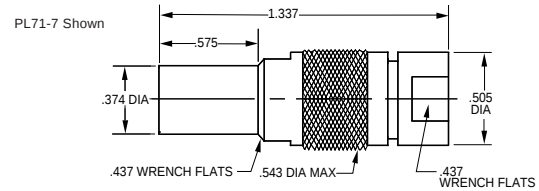


PATCH PLUG

PL71-7

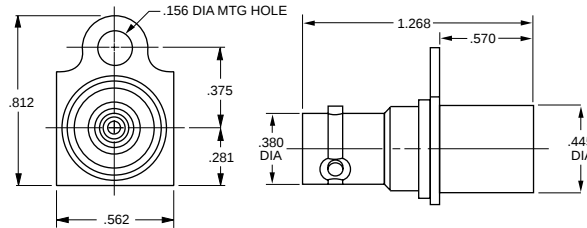

**PATCH JACK
TRB 3-LUG**


J72

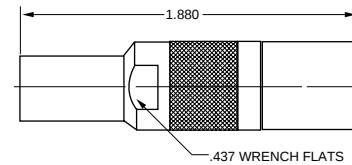

**TERMINATION
RFI CAP**

**TPT-1-R
RFI 70-1**


For patch jack, no chain
For other chain options see page 45.

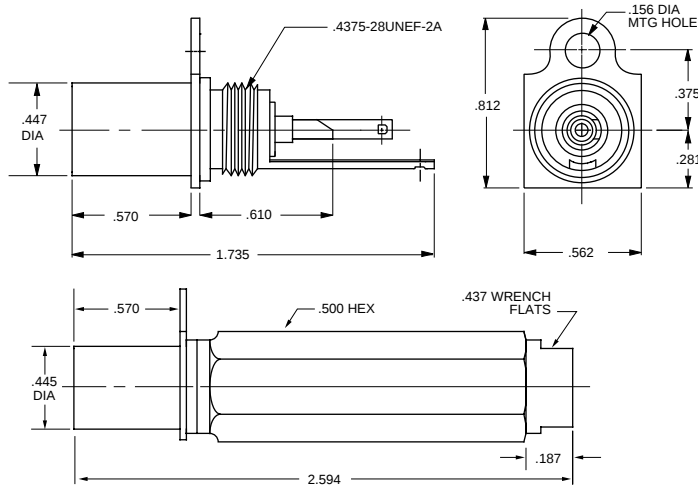

**PATCH JACK
SHIELDED**

Without hood
With hood

 
**J72D
J72S-1**



**PATCH CORD
PATCH PLUG TO PATCH PLUG**

Twinax
Triax

 
**PTW-L-Z
PTR-L-Z**



**CABLE ASSEMBLY
TRB 3-LUG PLUG TO PATCH PLUG**

Twinax
Triax

 **PTWX-L-Z
PTRX-L-Z**




**CABLE ASSEMBLY
TRB 3-LUG PLUGS**

Twinax
Triax

**PTWY-L-Z
PTRY-L-Z**

Bend relief available, call factory.

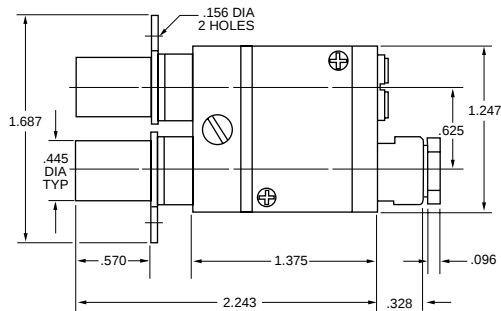


PATCH JACK

**SINGLE ENTRY WITH 20 DB ISOLATED MONITORING JACK
ENTRY**

**TRB 3-LUG
TRT THREADED
CABLE (SHOWN)**

**PART #
J72SM - 1
J72SM - 2
J72SM - 1**

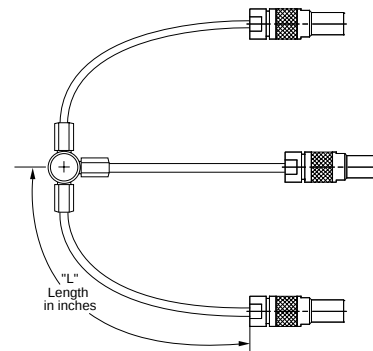

PARALLEL PATCH CORD

Twinax
Triax

**PTWS-L-Z
PTRS-L-R**

1 - Refers to Cable Group Table, see pages 91-133. Panels are on page 51-54