 


Bare Fiber Adapters

Description

- Simply strip and cleave your fiber and insert into the Bare Fiber Adapter
- Broken fibers are removed with piano wire allowing hundreds of insertions
- Accommodates 125 µm clad fiber with Insertion loss < 1 dB

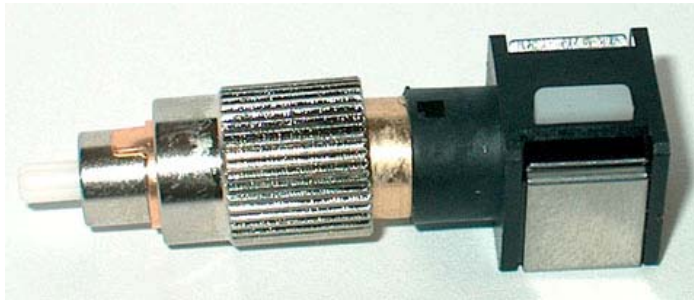

Application:

- Quick terminating fibers
- Cable checking
- Fiber optic component production

Ordering code:

BFA - AA - X - X


XX – Connector Type	
SL	ST
SC	SC
PC	FC
E2	LSH (E2000)
LC	LC
MU	MU
SK2	SMA905
SK1	SMA906

Diameter of the Ferrule	
1	125 µm
2	126 µm
3	127 µm
4*	140 µm


Z	zirconia ferrule material
M*	metal ferrule material

Note: *) SK2 konektor type only

 
Dimensions:

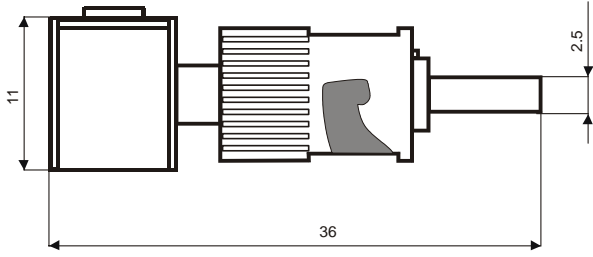


BFA -SL-Z-2

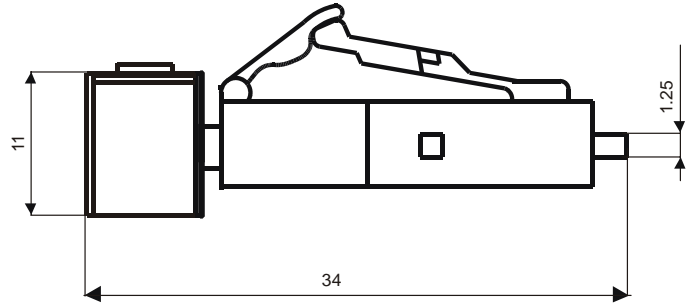 


BFA -LC-Z-2

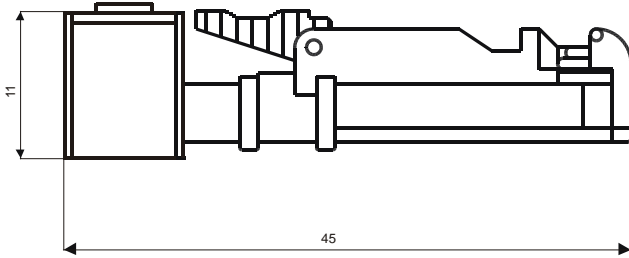 


BFA -E2-Z-2

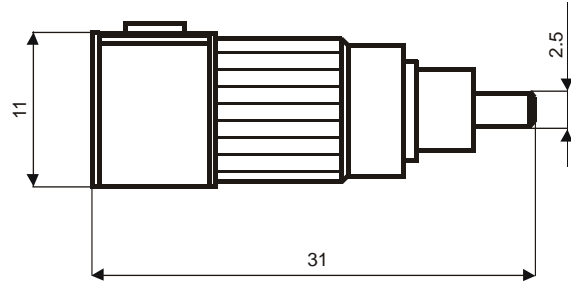 

BFA -PC-Z-2

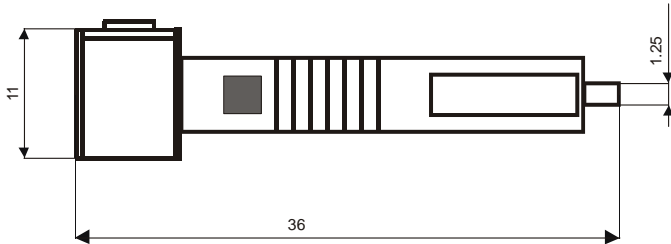 

BFA -MU-Z-2

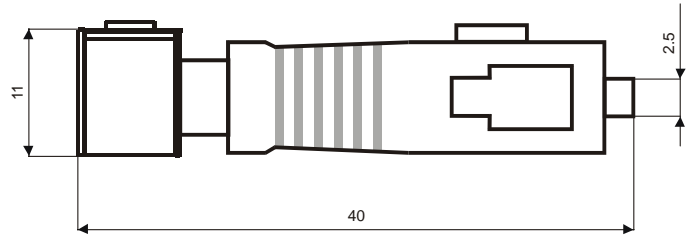 

BFA -SC-Z-2

Samples of Bare Adaptors:



BFA -PC-Z-2



BFA -SC-Z-2



BFA -SL-Z-2



BFA -LC-Z-2



BFA -MU-Z-2



BFA -DIN-Z-2