

R3C MALE HOUSING


R197.135._81

 
Series : SMB CARLOCK

To obtain the complete P/N please fill in the blank "_" with the coding letter

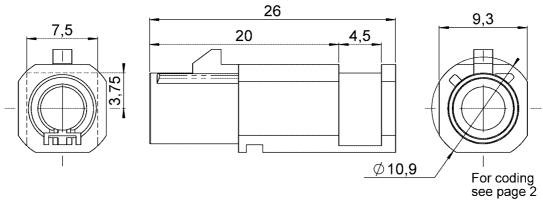

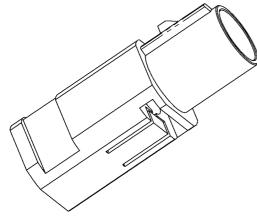

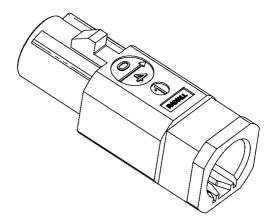



Housing to be used with: -R299.197.030 -R299.197.060

All dimensions are in mm.

COMPONENTS	MATERIALS	PLATING	(µm)
		UL CLASSIFICATION	COLOR
HOUSING	PA6.6 GF15 (POLYAMIDE)	UL 94 V-2	See Page2

PACKAGING

Standard	Unit	Other
500	'W' option	Contact us

MECHANICAL CHARACTERISTICS

ENVIRONMENTAL

Mating life 100 Cycles mini Operating temperature -40/+110 ° C

Weight **1,6500** g

Issue: 0745 A

In the effort to improve our products, we reserve the right to make changes judged to be necessary.



-To obtain the complete P/N please fill in the blank "_" with the coding letter

CODING Z COLOR WATER BLUE

RAL 5021

Issue: 0745 A

In the effort to improve our products, we reserve the right to make changes judged to be necessary.

CODING K

COLOR CURRY RAL 1027



UL CLASSIFICATION
UL 94V-2

R3C MALE HOUSING

 
R197.135._81

Series: SMB **CARLOCK**

RECOMMENDED MOUNTING PROCEDURE




• Pre-insertion of the coax into the housing




Orientation of the slot

• Orientation of the tab of the coax with the slot of the housing.

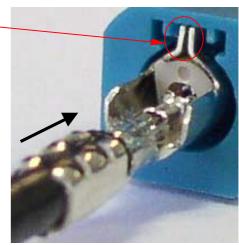




• Push the connector into the housing until it clip on.

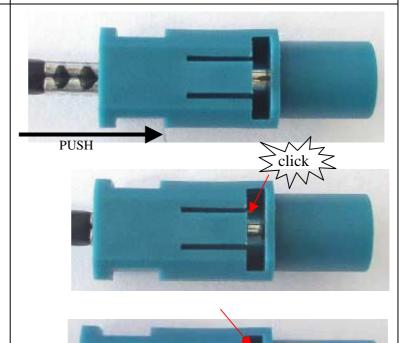

 • Optional: verify if the coax is well mounted by rotating the



Issue: 0745 A

In the effort to improve our products, we reserve the right to make changes judged to be



R3C MALE HOUSING


R197.135._81


Series : SMB CARLOCK

RECOMMENDED DISASSEMBLING PROCEDURE



- To unlock the coax from the housing, rotate the coax until the tab is not in front of the elastic finger of the housing.
- insert a screw driver between the elastic finger and the slot of the housing as shown on the picture.
- Tip down the screw driver as shown on the picture to lift up the elastic finger until you have enough room.

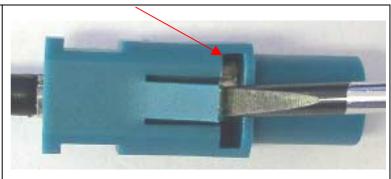


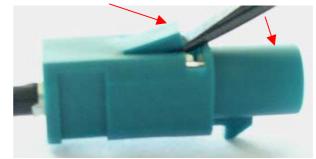



- Hold on the elastic finger up and rotate the coax until the tab is in front of the elastic finger of the housing. (you can use the crimping of the jacket as a reference).
- pull on the cable assembly to remove the coax from the housing.



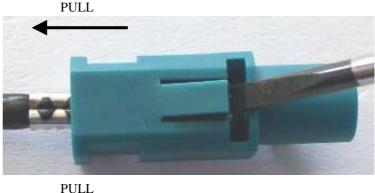



Issue: 0745 A

In the effort to improve our products, we reserve the right to make changes judged to be necessary.

