



# *K8Upgrade-VM800*

## User Manual

Version 1.0  
Published April 2005  
Copyright©2005 ASRock INC. All rights reserved.





---

### **Copyright Notice:**

No part of this manual may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Inc.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

### **Disclaimer:**

Specifications and information contained in this manual are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock. ASRock assumes no responsibility for any errors or omissions that may appear in this manual.

With respect to the contents of this manual, ASRock does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock has been advised of the possibility of such damages arising from any defect or error in the manual or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**ASRock Website: <http://www.asrock.com>**



## Contents

<b>1. Introduction .....</b>	<b>5</b>
1.1 Package Contents .....	5
1.2 Specifications .....	6
1.3 Motherboard Layout .....	8
1.4 ASRock I/O Plus™ .....	9
<b>2. Installation .....</b>	<b>10</b>
Pre-installation Precautions .....	10
2.1 CPU Installation .....	11
2.2 Installation of CPU Fan and Heatsink .....	11
2.3 Installation of Memory Modules (DIMM) .....	12
2.4 Expansion Slots (Future CPU Port, PCI, AGP, and AMR Slots) .....	13
2.5 Jumpers Setup .....	15
2.6 Onboard Headers and Connectors .....	16
2.7 Serial ATA (SATA) Hard Disks Installation .....	19
2.8 Hot Plug Function for SATA HDDs .....	19
2.9 Installing Windows 2000 / Windows XP / Windows XP 64-bit With RAID Functions .....	20
2.9.1 Installing Windows 2000 / Windows XP With RAID Functions .....	20
2.9.2 Installing Windows XP 64-bit With RAID Functions .....	20
2.10 Installing Windows 98 / ME / 2000 / XP / XP 64-bit Without RAID Functions .....	21
<b>3. BIOS SETUP UTILITY .....</b>	<b>22</b>
3.1 Introduction .....	22
3.1.1 BIOS Menu Bar .....	22
3.1.2 Navigation Keys .....	23
3.2 Main Screen .....	23
3.3 Advanced Screen .....	24
3.3.1 CPU Configuration .....	25
3.3.2 Chipset Configuration .....	27
3.3.3 ACPI Configuration .....	29
3.3.4 IDE Configuration .....	30
3.3.5 PCIPnP Configuration .....	32
3.3.6 Floppy Configuration .....	32
3.3.7 Super IO Configuration .....	33
3.3.8 USB Configuration .....	34
3.4 Hardware Health Event Monitoring Screen .....	35
3.5 Boot Screen .....	35
3.5.1 Boot Settings Configuration .....	36



---

3.6	Security Screen .....	36
3.7	Exit Screen .....	37
<b>4.</b>	<b>Software Support .....</b>	<b>38</b>
4.1	Install Operating System .....	38
4.2	Support CD Information .....	38
4.2.1	Running Support CD .....	38
4.2.2	Drivers Menu .....	38
4.2.3	Utilities Menu .....	38
4.2.4	Contact Information .....	38
	<b>APPENDIX: AMD's Cool 'n' Quiet™ Technology.....</b>	<b>39</b>



---

## 1. Introduction

Thank you for purchasing ASRock **K8Upgrade-VM800** motherboard, a reliable motherboard produced under ASRock's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock's commitment to quality and endurance.

In this manual, chapter 1 and 2 contain introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 and 4 contain the configuration guide to BIOS setup and information of the Support CD.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock website without further notice. You may find the latest memory and CPU support lists on ASRock website as well. ASRock website <http://www.asrock.com>

### 1.1 Package Contents

- 1 x ASRock **K8Upgrade-VM800** Motherboard  
(Micro ATX Form Factor: 9.0-in x 9.6-in, 22.9 cm x 24.4 cm)
- 1 x ASRock **K8Upgrade-VM800** Quick Installation Guide
- 1 x ASRock **K8Upgrade-VM800** Support CD
- 1 x Ultra ATA 66/100/133 IDE Ribbon Cable (80-conductor)
- 1 x 3.5-in Floppy Drive Ribbon Cable
- 1 x Serial ATA (SATA) Data Cable (Optional)
- 1 x Serial ATA (SATA) HDD Power Cable (Optional)
- 1 x ASRock I/O Plus™ Shield
- 1 x COM Port Bracket
- 1 x ASRock MR Card (Optional)

---

## 1.2 Specifications

<b>Platform:</b>	Micro ATX Form Factor: 9.0-in x 9.6-in, 22.9 cm x 24.4 cm
<b>CPU:</b>	754-Pin Socket Supporting advanced 64-bit AMD Athlon™ 64 and 32-bit Sempron Processor Supports AMD's Cool 'n' Quiet™ Technology (see <b>CAUTION 1</b> )
<b>Chipsets:</b>	North Bridge: VIA K8M800 Chipset FSB @ 800 MHz / 1.6 GT/s South Bridge: VIA VT8237R Chipset Supports USB 2.0, ATA 133, SATA 1.5Gb/s
<b>Memory:</b>	2 x DDR DIMM Slots: DDR1 and DDR2 Support PC3200 (DDR400) / PC2700 (DDR333) / PC2100 (DDR266), Max. 2GB
<b>IDE:</b>	IDE1: ATA 133 / Ultra DMA Mode 6 IDE2: ATA 133 / Ultra DMA Mode 6 Supports up to 4 IDE Devices
<b>Serial ATA:</b>	2 x SATA Connectors Supports up to 2 SATA Devices at 1.5Gb/s Data Transfer Rate
<b>Floppy Port:</b>	Supports up to 2 Floppy Disk Drives
<b>Audio:</b>	5.1 channels AC'97 Audio
<b>OnBoard VGA:</b>	Integrated UniChrome PRO 3D/2D Graphics Controller , supports DirectX 8.1
<b>LAN:</b>	Speed: 802.3u (10/100 Ethernet), Supports Wake-On-LAN
<b>Hardware Monitor:</b>	CPU Temperature Sensing Motherboard Temperature Sensing CPU Overheat Shutdown to Protect CPU Life (ASRock U-COP)(see <b>CAUTION 2</b> ) CPU Fan Tachometer Chassis Fan Tachometer Voltage Monitoring: +12V, +5V, +3.3V, Vcore
<b>Future CPU Port:</b>	Supports CPU upgrade from AMD 754-Pin CPU to AMD 939-Pin CPU (see <b>page 13</b> for details)
<b>PCI Slots:</b>	2 x PCI Slots, PCI Specification 2.2
<b>AGP slot:</b>	1 x AGP Slot Supports 1.5V, 8X / 4X AGP Card (see <b>CAUTION 3</b> )
<b>AMR slot:</b>	1 slot, supports ASRock MR card (Optional)
<b>USB 2.0:</b>	8 USB 2.0 Ports: 6 Ready-to-Use USB 2.0 Ports on the I/O Panel Plus 2 On-Board Headers Supporting 2 Extra USB 2.0 Ports (see <b>CAUTION 4</b> )

---

**ASRock I/O Plus™:** 1 PS/2 Mouse Port, 1 PS/2 Keyboard Port  
1 VGA Port  
1 Parallel Port (ECP/EPP Support)  
6 Ready-to-Use USB 2.0 Ports  
1 RJ-45 Port  
Audio Jack: Line In / Line Out / Microphone

**COM Port:** 1 COM Port Header to support a COM port module


**BIOS:** AMI Legal BIOS  
Supports "Plug and Play"  
ACPI 2.0 Compliance Wake Up Events  
SMBIOS 2.3.1 Support  
CPU Frequency Stepless Control  
(only for advanced users' reference, see **CAUTION 5**)

**OS:** Microsoft® Windows® 98 SE / ME / 2000 / XP compliant

### **CAUTION!**

1. For power-saving sake, it is strongly recommended to enable AMD's Cool 'n' Quiet™ technology under Windows system. See APPENDIX on page 39 to enable AMD's Cool 'n' Quiet™ technology.
2. While CPU overheat is detected, the system will automatically shutdown. Before you resume the system, please check if the CPU fan on the motherboard functions properly and unplug the power cord, then plug it back again. To improve heat dissipation, remember to spray thermal grease between the CPU and the heatsink when you install the PC system.
3. Do NOT use a 3.3V AGP card on the AGP slot of this motherboard!  
It may cause permanent damage!
4. Power Management for USB 2.0 works fine under Microsoft® Windows® XP SP1 / 2000 SP4. It may not work properly under Microsoft® Windows® 98/ ME.
5. Although this motherboard offers stepless control, it is not recommended to perform over-clocking. Frequencies other than the recommended CPU bus frequencies may cause the instability of the system or damage the CPU.


### 1.3 Motherboard Layout

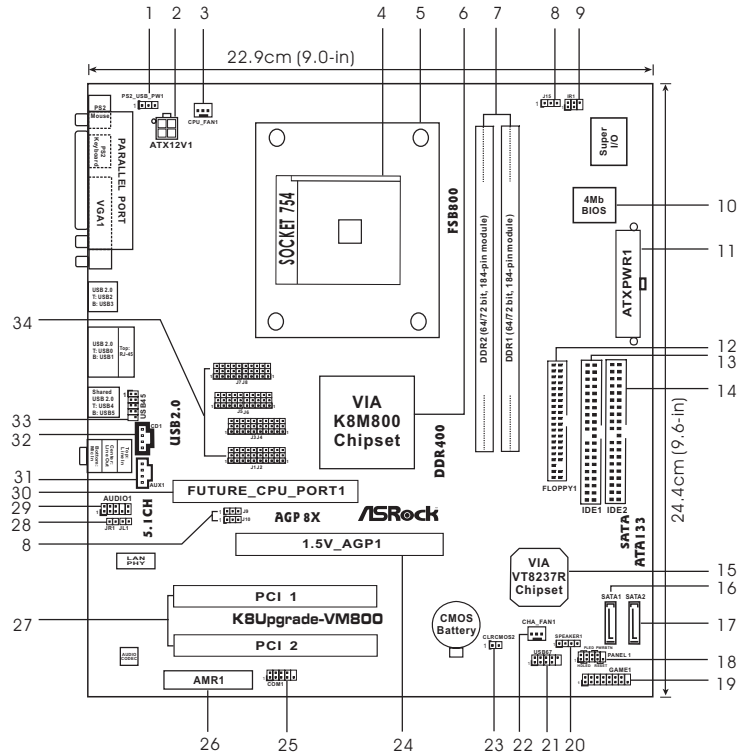

- |    |  |    |  |
|----|--|----|--|
| 1  | PS2_USB_PWR1 Jumper                    | 18 | System Panel Header (PANEL1)           |
| 2  | ATX 12V Power Connector (ATX12V1)      | 19 | Game Port Header (GAME1)               |
| 3  | CPU Fan Connector (CPU_FAN1)           | 20 | Chassis Speaker Header (SPEAKER 1)     |
| 4  | 754-Pin CPU Socket                     | 21 | USB 2.0 Header (USB67, Blue)           |
| 5  | CPU Heatsink Retention Module          | 22 | Chassis Fan Connector (CHA_FAN1)       |
| 6  | North Bridge Controller                | 23 | Clear CMOS Jumper (CLRCMOS2)           |
| 7  | 184-pin DDR DIMM Slots (DDR1-2)        | 24 | AGP Slot (1.5V_AGP1)                   |
| 8  | J9/J10/J15 Jumpers                     | 25 | COM Port Header (COM1)                 |
| 9  | Infrared Module Header (IR1)           | 26 | AMR Slot (AMR1)                        |
| 10 | Flash Memory                           | 27 | PCI Slots (PCI1-2)                     |
| 11 | ATX Power Connector (ATXPWR1)          | 28 | JR1/JL1 Jumpers                        |
| 12 | Floppy Connector (FLOPPY1)             | 29 | Front Panel Audio Header (AUDIO1)      |
| 13 | Primary IDE Connector (IDE1, Blue)     | 30 | Future CPU Port (FUTURE_CPU_PORT1)     |
| 14 | Secondary IDE Connector (IDE2, Black)  | 31 | Internal Audio Connector: AUX1 (White) |
| 15 | South Bridge Controller                | 32 | Internal Audio Connector: CD1 (Black)  |
| 16 | Primary Serial ATA Connector (SATA1)   | 33 | Shared USB 2.0 Header (USB45, Blue)    |
| 17 | Secondary Serial ATA Connector (SATA2) | 34 | J1 - J8 Jumpers                        |



### 1.4 ASRock I/O Plus™

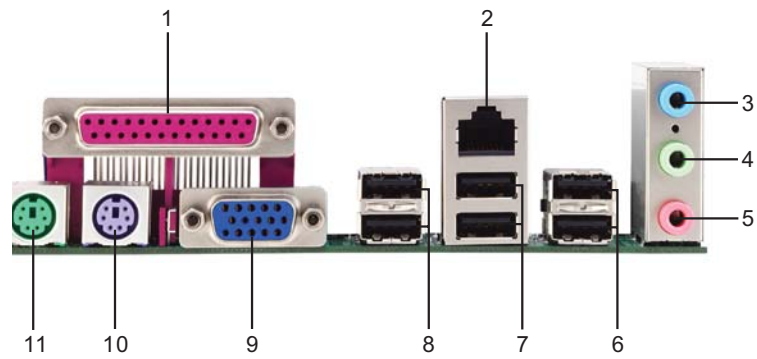

- |   |                              |    |                             |
|---|------------------------------|----|-----------------------------|
| 1 | Parallel Port                | 7  | USB 2.0 Ports (USB01)       |
| 2 | RJ-45 Port                   | 8  | USB 2.0 Ports (USB23)       |
| 3 | Line In (Light Blue)         | 9  | VGA Port                    |
| 4 | Line Out (Lime)              | 10 | PS/2 Keyboard Port (Purple) |
| 5 | Microphone (Pink)            | 11 | PS/2 Mouse Port (Green)     |
| 6 | Shared USB 2.0 Ports (USB45) |    |                             |

---

## 2. Installation

**K8Upgarde-VM800** is a Micro ATX form factor (9.0-in x 9.6-in, 22.9 cm x 24.4 cm) motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.

### Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.



Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

1. Unplug the power cord from the wall socket before touching any component.
2. To avoid damaging the motherboard components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded anti-static pad or in the bag that comes with the component.
5. When placing screws into the screw holes to secure the motherboard to the chassis, please do not over-tighten the screws! Doing so may damage the motherboard.

## 2.1 CPU Installation

- Step 1. Unlock the socket by lifting the lever up to a 90° angle.
- Step 2. Position the CPU directly above the socket such that the CPU corner with the golden triangle matches the socket corner with a small triangle.
- Step 3. Carefully insert the CPU into the socket until it fits in place.




The CPU fits only in one correct orientation. DO NOT force the CPU into the socket to avoid bending of the pins.

- Step 4. When the CPU is in place, press it firmly on the socket while you push down the socket lever to secure the CPU. The lever clicks on the side tab to indicate that it is locked.



**STEP 1:**  
Lift Up The Socket Lever

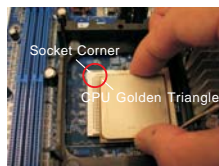

**STEP 2 / STEP 3:**  
Match The CPU Golden Triangle  
To The Socket Corner



**STEP 4:**  
Push Down And Lock  
The Socket Lever

## 2.2 Installation of CPU Fan and Heatsink

After you install the CPU into this motherboard, it is necessary to install a larger heatsink and cooling fan to dissipate heat. You also need to spray thermal grease between the CPU and the heatsink to improve heat dissipation. Make sure that the CPU and the heatsink are securely fastened and in good contact with each other. Then connect the CPU fan to the CPU FAN connector (CPU\_FAN1, see Page 8, No. 3). For proper installation, please kindly refer to the instruction manuals of the CPU fan and the heatsink.



### 2.3 Installation of Memory Modules (DIMM)

This motherboard is equipped with two 184-pin DDR (Double Data Rate) DIMM slots.



Please make sure to disconnect power supply before adding or removing DIMMs or the system components.

- Step 1. Unlock a DIMM slot by pressing the retaining clips outward.
- Step 2. Align a DIMM on the slot such that the notch on the DIMM matches the break on the slot.

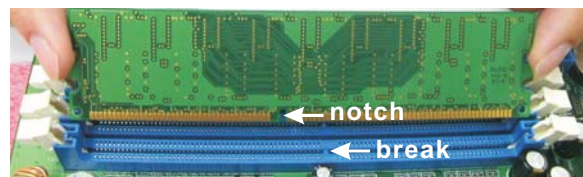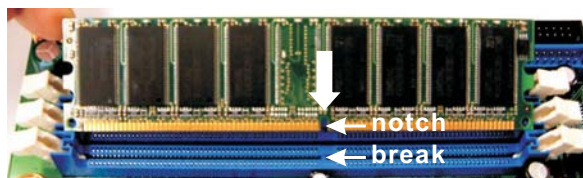

The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if you force the DIMM into the slot at incorrect orientation.

- Step 3. Firmly insert the DIMM into the slot until the retaining clips at both ends fully snap back in place and the DIMM is properly seated.

## 2.4 Expansion Slots

### (Future CPU Port, PCI Slots, AGP Slot, and AMR Slots)

There are 1 Future CPU Port, 2 PCI slots, 1 AGP slot and 1 AMR slot on **K8Upgrade-VM800** motherboard.

#### Future CPU Port (Yellow-Colored Port):

Future CPU Port allows you to upgrade your AMD 754-Pin CPU to AMD 939-Pin CPU by installing an add-on ASRock **939CPU Board** into this future CPU Port on **K8Upgrade-VM800** motherboard. Before you upgrade the 754-Pin CPU to the 939-Pin CPU, it is necessary to adjust the jumper settings for those required jumpers on **K8Upgrade-VM800** motherboard. Please refer to the table below for the correct jumper settings.



This yellow-colored Future CPU Port is not an AGP slot! Please do NOT insert any AGP card into it!

CPU Type	Jumper Settings
939-Pin CPU (Using add-on ASRock <b>939CPU                      Board</b> )	
754-Pin CPU (Default)	



---

**NOTE**

When adjusting the jumper settings, you may use the tool, Jumper Cap Remover, to help you removing the jumper caps more easily. This Jumper Cap Remover is bundled in your motherboard package, and please follow the "Jumper Cap Remover Instruction" to use it properly.

**PCI Slots:** PCI slots are used to install expansion cards that have the 32-bit PCI interface.

**AGP slot:** The AGP slot is used to install a graphics card. The ASRock AGP slot has a special design of clasp that can securely fasten the inserted graphics card.



Please do NOT use a 3.3V AGP card on the AGP slot of this motherboard! It may cause permanent damage! For the voltage information of your AGP card, please check with the AGP card vendors.

**AMR slot:** AMR slot is used to insert an ASRock MR card (optional) with v.92 Modem functionality.

**Installing an expansion card**

- Step 1. Before installing the expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before you start the installation.
- Step 2. Remove the system unit cover (if your motherboard is already installed in a chassis).
- Step 3. Remove the bracket facing the slot that you intend to use. Keep the screws for later use.
- Step 4. Align the card connector with the slot and press firmly until the card is completely seated on the slot.
- Step 5. Fasten the card to the chassis with screws.
- Step 6. Replace the system cover.



## 2.5 Jumpers Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is "Short". If no jumper cap is placed on pins, the jumper is "Open". The illustration shows a 3-pin jumper whose pin1 and pin2 are "Short" when jumper cap is placed on these 2 pins.



Jumper	Setting	
PS2_USB_PWR1 (see p.8, No. 1)		Short pin2, pin3 to enable +5VSB (standby) for PS/2 or USB wake up events.

Note: To select +5VSB, it requires 2 Amp and higher standby current provided by power supply.

JR1 / JL1 Jumper (see p.8, No. 28)	
---------------------------------------	--

Note: If the jumpers JL1 and JR1 are short, both the front panel and the rear panel audio connectors can work.

Clear CMOS Jumper (CLR CMOS2) (see p.8, No. 23)	
---	--

Note: CLR CMOS2 allows you to clear the data in CMOS. The data in CMOS includes system setup information such as system password, date, time, and system setup parameters. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord from the power supply. After waiting for 15 seconds, use a jumper cap to short the Clear CMOS jumper for 5 seconds. After shorting the Clear CMOS jumper, please remove the jumper cap. However, please do not clear the CMOS right after you update the BIOS. If you need to clear the CMOS when you just finish updating the BIOS, you must boot up the system first, and then shut it down before you do the clear-CMOS action.

## 2.6 Onboard Headers and Connectors



Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage of the motherboard!

### Floppy Connector

(33-pin FLOPPY1)

(see p.8 No. 12)



Note: Make sure the red-striped side of the cable is plugged into Pin1 side of the connector.

### Primary IDE Connector (Blue)

(39-pin IDE1, see p.8 No. 13)



### Secondary IDE Connector (Black)

(39-pin IDE2, see p.8 No. 14)



connect the blue end to the motherboard connect the black end to the IDE devices


80-conductor ATA 66/100/133 cable

Note: If you use only one IDE device on this motherboard, please set the IDE device as "Master". Please refer to the instruction of your IDE device vendor for the details. Besides, to optimize compatibility and performance, please connect your hard disk drive to the primary IDE connector (IDE1, blue) and CD-ROM to the secondary IDE connector (IDE2, black).

### Serial ATA Connectors

(SATA1: see p.8 No. 16)

(SATA2: see p.8 No. 17)



These two Serial ATA (SATA) connectors support SATA data cables for internal storage devices. The current SATA interface allows up to 1.5 Gb/s data transfer rate.

### Serial ATA (SATA) Data Cable



Either end of the SATA data cable can be connected to the SATA hard disk or the SATA connector on the motherboard.




**Serial ATA (SATA)  
Power Cable**  
(Optional)




Please connect the black end of SATA power cable to the power connector on each drive. Then connect the white end of SATA power cable to the power connector of the power supply.

**USB 2.0 Header**  
(9-pin USB67)  
(see p.8 No. 21)

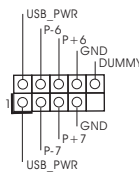


ASRock I/O Plus™ accommodates 6 default USB 2.0 ports. If those USB 2.0 ports on the I/O panel are not sufficient, this USB 2.0 header is available to support 2 additional USB 2.0 ports.

**Shared USB 2.0 Header**  
(9-pin USB45)  
(see p.8 No. 33)




This USB45 header is shared with the USB 2.0 ports 4,5 on ASRock I/O Plus™. When using the front panel USB ports by attaching the front panel USB cable to this header (USB45), the USB ports 4,5 on ASRock I/O Plus™ will not be able to function.

**Infrared Module Header**  
(5-pin IR1)  
(see p.8 No. 9)




This header supports an optional wireless transmitting and receiving infrared module.

**Internal Audio Connectors**  
(4-pin CD1, 4-pin AUX1)  
(CD1: see p.8 No. 32)  
(AUX1: see p.8 No. 31)

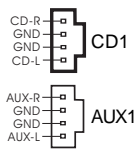

These connectors allow you to receive stereo audio input from sound sources such as a CD-ROM, DVD-ROM, TV tuner card, or MPEG card.


**Front Panel Audio Header**  
(9-pin AUDIO1)  
(see p.8 No. 29)

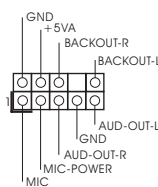

This is an interface for front panel audio cable that allows convenient connection and control of audio devices.

**System Panel Header**


(9-pin PANEL1)  
(see p.8 No. 18)

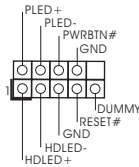

This header accommodates several system front panel functions.

**Chassis Speaker Header**


(4-pin SPEAKER 1)  
(see p.8 No. 20)



Please connect the chassis speaker to this header.

**Chassis Fan Connector**


(3-pin CHA\_FAN1)  
(see p.8 No. 22)



Please connect a chassis fan cable to this connector and match the black wire to the ground pin.

**CPU Fan Connector**

(3-pin CPU\_FAN1)  
(see p.8 No. 3)



Please connect the CPU fan cable to this connector and match the black wire to the ground pin.

**ATX Power Connector**


(20-pin ATXPWR1)  
(see p.8 No. 11)



Please connect an ATX power supply to this connector.

**COM Port Header**

(9-pin COM1)  
(see p.8 No. 25)

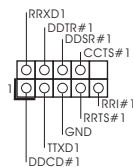

This COM port header is used to support a COM port module.

**ATX 12V Power Connector**


(4-pin ATX12V1)  
(see p.8 No. 2)



Please note that it is necessary to connect a power supply with ATX 12V plug to this connector. Failing to do so will cause power up failure.

**Game Port Header**

(15-pin GAME1)  
(see p.8 No. 19)

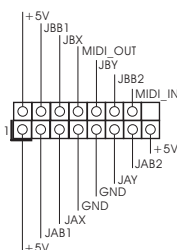

Connect a Game cable to this header if the Game port bracket is installed.

**2.7 Serial ATA (SATA) Hard Disks Installation**

This motherboard supports Serial ATA (SATA) hard disks and RAID functions. This section will guide you to install the SATA hard disks.

- STEP 1: Install the SATA hard disks into the drive bays of your chassis.  
 STEP 2: Connect the SATA power cable to the SATA hard disk.  
 STEP 3: Connect one end of the SATA data cable to the motherboard's SATA connector.  
 STEP 4: Connect the other end of the SATA data cable to the SATA hard disk.

**2.8 Hot Plug Function for SATA HDDs**

*K8Upgrade-VM800* motherboard supports Hot Plug function for SATA devices.

**What is Hot Plug Function?**

If the SATA HDDs are NOT set for RAID configuration, it is called "Hot Plug" for the action to insert and remove the SATA HDDs while the system is still power-on and in working condition. However, please note that it cannot perform Hot Plug if the OS has been installed into the SATA HDD.

**WARNING!**

Although this motherboard supports Hot Plug function for SATA devices, there are still some limitation. Please ensure to read the instruction in the Support CD before you use Hot Plug function. Failure to do so may lose the data in the SATA HDDs or damage the SATA HDDs. For the detailed instruction, please refer to the document in the Support CD at the following path:

..\ RAID BIOS Setting Utility

## 2.9 Installing Windows 2000 / Windows XP / Windows XP 64-bit With RAID Functions

If you want to install Windows 2000 / Windows XP / Windows XP-64bit OS on your system with RAID functions, please refer to the below methods for proper installation according to the different Windows OS versions.

### 2.9.1 Installing Windows 2000 / Windows XP with RAID Functions

If you want to install Windows 2000 / Windows XP OS on your SATA HDDs with RAID functions, please follow the below steps.

#### STEP 1: Make a SATA Driver Diskette.

- A. Insert the ASRock Support CD into your optical drive to boot your system.
- B. During POST at the beginning of system boot-up, press <F11> key, and then a window for boot devices selection appears. Please select CD-ROM as the boot device.
- C. When you see the message on the screen, "Do you want to generate Serial ATA driver diskette [Y/N]?", press <Y>.
- D. Then you will see these messages,

**Please insert a diskette into the floppy drive.**

**WARNING! Formatting the floppy diskette will lose ALL data in it!**

**Start to format and copy files [Y/N]?**

Please insert a floppy diskette into the floppy drive, and press <Y>.

- E. The system will start to format the floppy diskette and copy SATA drivers into the floppy diskette.

#### STEP 2: Use "SATA RAID BIOS" to set RAID configuration.

Before you start to configure the RAID function, you need to check the installation guide in the Support CD for proper configuration. Please refer to the document in the Support CD, "Guide to SATA Hard Disks Installation and RAID Configuration", which is located in the folder at the following path: ..\SATA RAID BIOS

#### STEP 3: Install Windows 2000 / Windows XP OS on your system.

After making a SATA driver diskette and using "SATA RAID BIOS" to set RAID configuration, you can start to install Windows 2000 / Windows XP on your system.

### 2.9.2 Installing Windows XP 64-bit With RAID Functions

If you want to install Windows XP 64-bit OS on your SATA HDDs with RAID functions, please follow the below steps.

**STEP 1: Make a SATA Driver Diskette.**

A. Insert the floppy diskette into your floppy drive.

B. Copy the SATA 64-bit drivers to your floppy diskette.

The SATA 64-bit drivers are located at the following path in the Support CD:

**.. \ 64bit SATA Driver**

**STEP 2: Install Windows XP 64-bit OS on your system.**

After making a SATA driver diskette, you can start to install Windows XP 64-bit on your system.

After the installation of Windows 2000 / Windows XP / Windows XP 64-bit OS, if you want to manage RAID functions, you are allowed to use both "SATA RAID BIOS" and "VIA RAID Tool" for RAID configuration. Please refer to the document in the Support CD, "Guide to SATA Hard Disks Installation and RAID Configuration", which is located in the folder at the following path: **.. \ SATA RAID BIOS** and the document in the support CD, "Guide to VIA RAID Tool", which is located in the folder at the following path: **.. \ VIA RAID Tool**



1. Windows 98 / Windows ME does not support RAID functions.
2. If you want to use "VIA RAID Tool" in Windows environment, please install SATA drivers from the Support CD again so that "VIA RAID Tool" will be installed to your system as well.

## 2.10 Installing Windows 98 / ME / 2000 / XP / XP 64-bit Without RAID Functions

If you want to install Windows 98 / ME / 2000 / XP / XP 64-bit on your SATA HDDs without RAID functions or you want to install Windows 98 / ME / 2000 / XP / XP 64-bit on your IDE HDDs instead of SATA HDDs, please follow the below steps.



If you want to install Windows 98 / Windows ME on your SATA HDDs without RAID functions, you don't have to set up BIOS. Please install Windows 98 / Windows ME OS on your system directly.

**STEP 1: Set Up BIOS.**

A. Enter BIOS SETUP UTILITY ; →Advanced screen ; →IDE Configuration.

B. Set the "SATA Operation Mode" option from [RAID] to [non-RAID].

**STEP 2: Install Windows 98 / ME / 2000 / XP / XP 64-bit OS on your system.**

After setting up BIOS, you can start to install Windows 98 / ME / 2000 / XP / XP 64-bit on your system.



If you don't want to set up RAID functions, there is no need to make a SATA driver diskette.

## 3. BIOS SETUP UTILITY

### 3.1 Introduction

This section explains how to use the BIOS SETUP UTILITY to configure your system. The Flash Memory on the motherboard stores the BIOS SETUP UTILITY. You may run the BIOS SETUP UTILITY when you start up the computer. Please press <F2> during the Power-On-Self-Test (POST) to enter the BIOS SETUP UTILITY, otherwise, POST will continue with its test routines.

If you wish to enter the BIOS SETUP UTILITY after POST, restart the system by pressing <Ctl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You may also restart by turning the system off and then back on.



Because the BIOS software is constantly being updated, the following BIOS setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen.

#### 3.1.1 BIOS Menu Bar

The top of the screen has a menu bar with the following selections:

- Main** To set up the system time/date information
- Advanced** To set up the advanced BIOS features
- H/W Monitor** To display current hardware status
- Boot** To set up the default system device to locate and load the Operating System
- Security** To set up the security features
- Exit** To exit the current screen or the BIOS SETUP UTILITY

Use <←> key or <→> key to choose among the selections on the menu bar, and then press <Enter> to get into the sub screen.


### 3.1.2 Navigation Keys

Please check the following table for the function description of each navigation key.

Navigation Key(s)	Function Description
← / →	Moves cursor left or right to select Screens
↑ / ↓	Moves cursor up or down to select items
+ / -	To change option for the selected items
<Enter>	To bring up the selected screen
<F1>	To display the General Help Screen
<F9>	To load optimal default values for all the settings
<F10>	To save changes and exit the BIOS SETUP UTILITY
<ESC>	To jump to the Exit Screen or exit the current screen

### 3.2 Main Screen

When you enter the BIOS SETUP UTILITY, the Main screen will appear and display the system overview

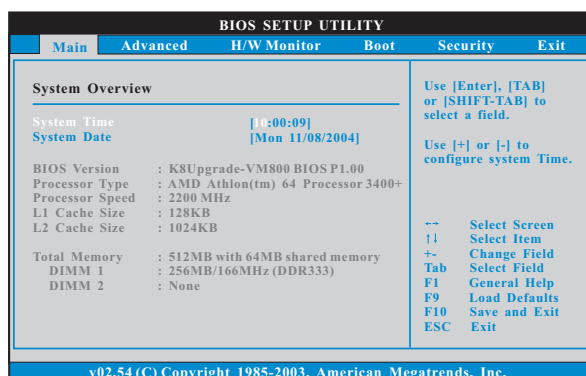


#### System Time [Hour:Minute:Second]

Use this item to specify the system time.

#### System Date [Day Month/Date/Year]


Use this item to specify the system date.

If **ASRock 939CPU Board** is installed into the FUTURE\_CPU\_PORT on this motherboard, you will see the below Main screen when entering the BIOS SETUP UTILITY.

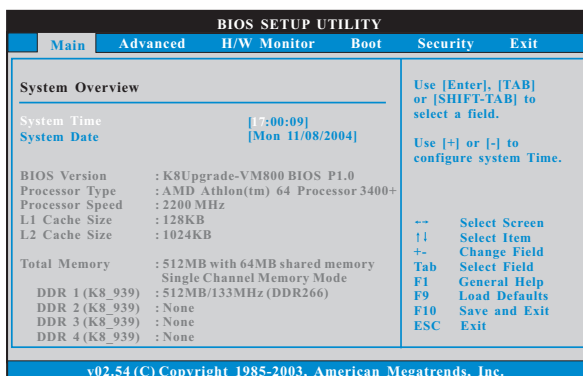

### 3.3 Advanced Screen


In this section, you may set the configurations for the following items: CPU Configuration, Chipset Configuration, ACPI Configuration, IDE Configuration, PCIPnP Configuration, Floppy Configuration, SuperIO Configuration, and USB Configuration.

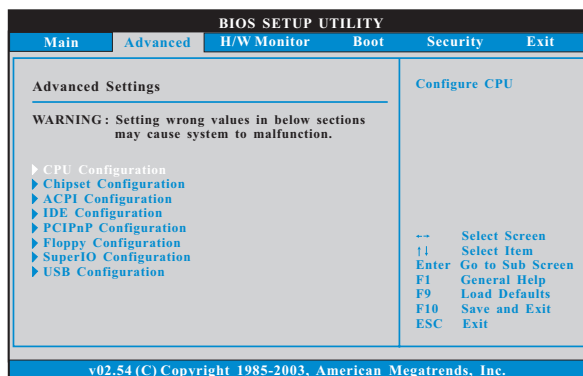

Setting wrong values in this section may cause the system to malfunction.



### 3.3.1 CPU Configuration

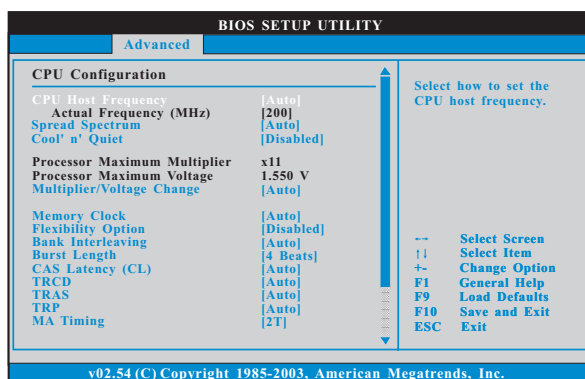

#### CPU Host Frequency

While entering setup, BIOS auto detects the present CPU host frequency of this motherboard. The actual CPU host frequency will show in the following item.

#### Spread Spectrum

This item should always be [Disabled] for better system stability.

#### Cool 'n' Quiet

Use this item to enable or disable AMD's Cool 'n' Quiet™ technology.

#### Processor Maximum Multiplier


It will display Processor Maximum Multiplier for reference.

#### Processor Maximum Voltage

It will display Processor Maximum Voltage for reference.

#### Multiplier/Voltage Change

This item is set to [Auto] by default. If it is set to [Manual], you may adjust the value of Processor Multiplier and Processor Voltage. However, it is recommended to keep the default value for system stability.

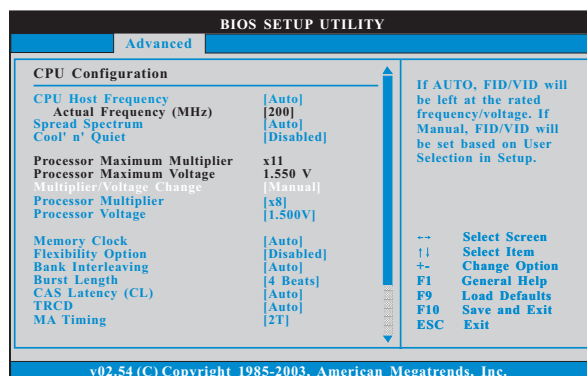

### Processor Multiplier

This item will show when "Multiplier/Voltage Change" is set to [Manual]; otherwise, it will be hidden. You may set the value from [x4] up to [x25] but no higher than the value of "Processor Maximum Multiplier". For example, if the value of "Processor Maximum Multiplier" is [x11], the actual value of multiplier will be [x11] even if you set this item to a value higher than [x11]. However, for system stability, it is not recommended to adjust the value of this item.

### Processor Voltage

This item will show when "Multiplier/Voltage Change" is set to [Manual]; otherwise, it will be hidden. You may set the value from [1.550V] down to [0.800V]. However, for safety and system stability, it is not recommended to adjust the value of this item.

### Memory Clock

This item can be set by the code using [Auto]. You can set one of the standard values as listed: [133 MHz (DDR266)], [166 MHz (DDR333)], [200 MHz (DDR400)].

### Flexibility Option

The default value of this option is [Disabled]. It will allow better tolerance for memory compatibility when it is set to [Enabled].

### Bank Interleaving

Interleaving allows memory accesses to be spread out over banks on the same node, or across nodes, decreasing access contention.

### Burst Length

Burst length can be set to 8, 4, or 2 beats.

### CAS Latency (CL)

Use this item to adjust the means of memory accessing. Configuration options: [Auto], [2.0], [3.0], and [2.5].

### MA Timing

Use this to adjust values for MA timing. Configuration options: [2T], [1T]. The default value is [2T].

### 3.3.2 Chipset Configuration

BIOS SETUP UTILITY		
Advanced		
Chipset Settings		To set DRAM Voltage.
DRAM Voltage	[Auto]	
AGP Voltage	[Auto]	
Onboard AGP Share Memory	[Auto]	
Primary Graphics Adapter	[PCI]	
AGP Aperture Size	[64 MB]	
AGP Mode	[Auto]	
AGP Fast Write	[Disabled]	
IDE Drive Strength	[Normal]	-- Select Screen
PCI Delay Transaction	[Disabled]	F1 Select Item
OnBoard LAN	[Enabled]	+ - Change Option
OnBoard AC'97 Audio	[Auto]	F1 General Help
OnBoard MC'97 Modem	[Auto]	F9 Load Defaults
		F10 Save and Exit
HT Width	[Auto]	ESC Exit
HT Speed	[Auto]	
v02.54 (C) Copyright 1985-2003, American Megatrends, Inc.		

#### DRAM Voltage

Use this to select DRAM voltage. Configuration options are [Auto], [High], and [Low]. The default value is [Auto].

#### AGP Voltage

Use this to select among [Normal] and [High] for AGP Voltage. The default value is [Auto].

#### Onboard AGP Share Memory

You may select [Auto], [8MB], [16MB], [32MB], or [64MB] as the Onboard AGP share Memory. The default value of this feature is set to [Auto]. When the total memory is equal or above 256MB, the share memory size will be [64MB]; otherwise, please set the share memory size to [32MB].

#### Primary Graphics Adapter

This item will switch the PCI Bus scanning order while searching for video card. It allows you to select the type of Primary VGA in case of multiple video controllers.

#### AGP Aperture Size

It refers to a section of the PCI memory address range used for graphics memory. It is recommended to leave this field at the default value unless the installed AGP card's specifications requires other sizes.



---

**AGP Mode**

The default value of this feature is set to [Auto]. If you install an 8X-AGP card on this motherboard, you may select [Auto], [8X] or [4X] as the AGP mode. If the installed AGP card is a 4X-AGP card, then you may set the AGP mode as [Auto], [4X], [2X], or [1X].

**AGP Fast Write**

This allows you to enable or disable the feature of AGP fast write protocol support.

**IDE Driving Strength**

Select [Lowest], [Low], [Normal], or [Highest] for IDE driving strength.

**PCI Delay Transaction**

Enable PCI Delay Transaction feature will free the PCI Bus when the CPU is accessing 8-bit ISA cards. Disable this feature when using ISA cards that are not PCI 2.1 compliant.

**OnBoard LAN**

This allows you to enable or disable the onboard LAN feature.

**OnBoard AC'97 Audio**

Select [Auto], [Enabled] or [Disabled] for the onboard AC'97 Audio feature.

**OnBoard MC'97 Modem**

Select [Auto], [Enabled] or [Disabled] for the onboard MC'97 Modem feature.

**HT Width**


You may set the HyperTransport width as [8 bit], [16 bit] or [Auto]. The default value is [Auto].

**HT Speed**

You may set the HyperTransport speed as [Auto], [200 MHz], [400 MHz], [600 MHz], or [800 MHz]. The default value is [Auto].



### 3.3.3 ACPI Configuration

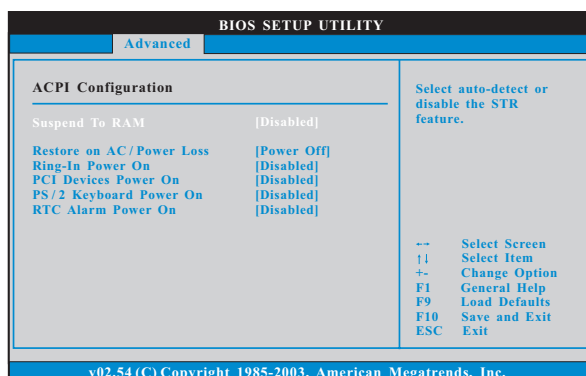

#### Suspend to RAM

Use this item to select whether to auto-detect or disable the Suspend-to-RAM feature. Select [Auto] will enable this feature if the OS supports it. If you set this item to [Disabled], the function "Repost Video on STR Resume" will be hidden.

#### Repost Video on STR Resume

This feature allows you to repost video on STR resume. It is recommended to enable this feature under Microsoft® Windows® 98 / ME.

#### Restore on AC/Power Loss

This allows you to set the power state after an unexpected AC/power loss. If [Power Off] is selected, the AC/power remains off when the power recovers. If [Power On] is selected, the AC/power resumes and the system starts to boot up when the power recovers.

#### Ring-In Power On

Use this item to enable or disable Ring-In signals to turn on the system from the power-soft-off mode.

#### PCI Devices Power On

Use this item to enable or disable PCI devices to turn on the system from the power-soft-off mode.


#### PS/2 Keyboard Power On

Use this item to enable or disable PS/2 keyboard to turn on the system from the power-soft-off mode.

#### RTC Alarm Power On

Use this item to enable or disable RTC (Real Time Clock) to power on the system.

### 3.3.4 IDE Configuration

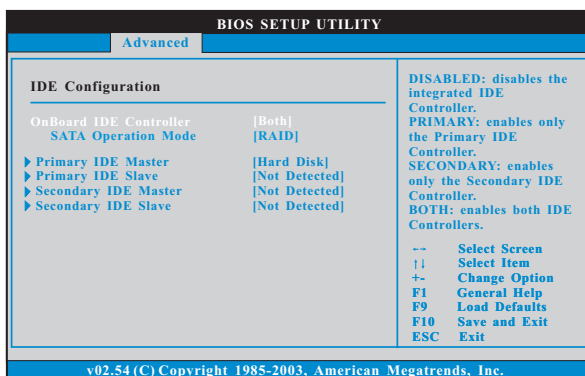

#### OnBoard IDE Controller


You may enable either the primary IDE channel or the secondary IDE channel. Or you may enable both the primary and the secondary IDE channels by selecting [Both]. Set to [Disabled] will disable the both. Configuration options: [Disabled], [Primary], [Secondary], [Both].

#### SATA Operation Mode

Use this item to adjust SATA Operation Mode. The default value of this option is [RAID]. If you don't want to operate RAID function on SATA HDDs, please select [non-RAID].

#### IDE Device Configuration

You may set the IDE configuration for the device that you specify. We will use the "Primary IDE Master" as the example in the following instruction, which can be applied to the configurations of "Primary IDE Slave", "Secondary IDE Master", and "Secondary IDE Slave" as well.

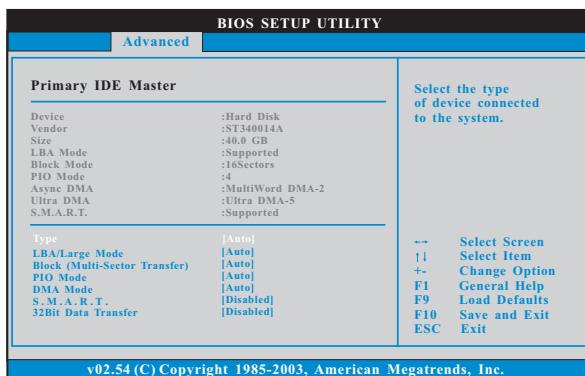

## TYPE

Use this item to configure the type of the IDE device that you specify.  
Configuration options: [Not Installed], [Auto], [CD/DVD], and [ARMD].

**[Not Installed]:** Select [Not Installed] to disable the use of IDE device.

**[Auto]:** Select [Auto] to automatically detect the hard disk drive.



After selecting the hard disk information into BIOS, use a disk utility, such as FDISK, to partition and format the new IDE hard disk drives. This is necessary so that you can write or read data from the hard disk. Make sure to set the partition of the Primary IDE hard disk drives to active.

**[CD/DVD]:** This is used for IDE CD/DVD drives.

**[ARMD]:** This is used for IDE ARMD (ATAPI Removable Media Device), such as MO.

## LBA/Large Mode

Use this item to select the LBA/Large mode for a hard disk > 512 MB under DOS and Windows; for Netware and UNIX user, select [Disabled] to disable the LBA/Large mode.

## Block (Multi-Sector Transfer)

The default value of this item is [Auto]. If this feature is enabled, it will enhance hard disk performance by reading or writing more data during each transfer.

## PIO Mode

Use this item to set the PIO mode to enhance hard disk performance by optimizing the hard disk timing.

## DMA Mode

DMA capability allows the improved transfer-speed and data-integrity for compatible IDE devices.


## S.M.A.R.T.

Use this item to enable or disable the S.M.A.R.T. (Self-Monitoring, Analysis, and Reporting Technology) feature. Configuration options: [Disabled], [Auto], [Enabled].

## 32-Bit Data Transfer

Use this item to enable 32-bit access to maximize the IDE hard disk data transfer rate.

### 3.3.5 PCIPnP Configuration

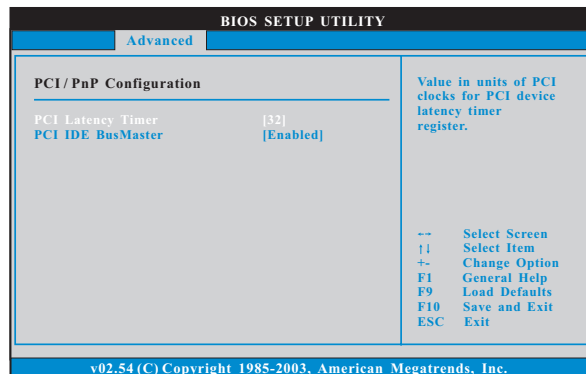

#### PCI Latency Timer


The default value is 32. It is recommended to keep the default value unless the installed PCI expansion cards' specifications require other settings.

#### PCI IDE BusMaster

Use this item to enable or disable the PCI IDE BusMaster feature.


### 3.3.6 Floppy Configuration

In this section, you may configure the type of your floppy drive.

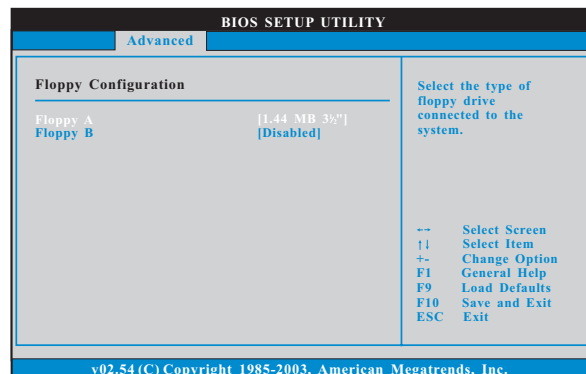



### 3.3.7 Super IO Configuration

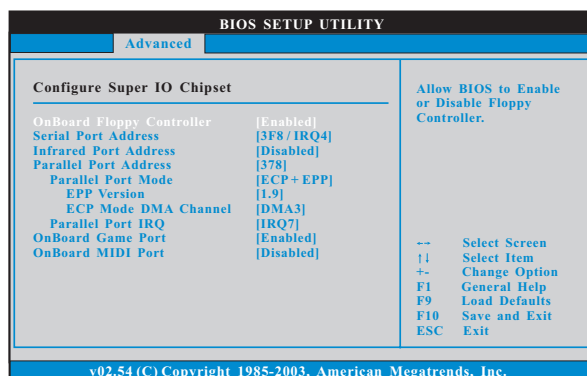

#### OnBoard Floppy Controller

Use this item to enable or disable floppy drive controller.

#### Serial Port Address

Use this item to set the address for the onboard serial port or disable it.

Configuration options: [Disabled], [3F8 / IRQ4], [2F8 / IRQ3], [3E8 / IRQ4], [2E8 / IRQ3].

#### Infrared Port Address

Use this item to set the address for the onboard infrared port or disable it.

Configuration options: [Disabled], [2F8 / IRQ3], and [2E8 / IRQ3].

#### Parallel Port Address

Use this item to set the address for the onboard parallel port or disable it.

Configuration options: [Disabled], [378], and [278].

#### Parallel Port Mode

Use this item to set the operation mode of the parallel port. The default value is [ECP+EPP]. If this option is set to [ECP+EPP], it will show the EPP version in the following item, "EPP Version". Configuration options: [Normal], [Bi-Directional], and [ECP+EPP].

#### EPP Version

Use this item to set the EPP version. Configuration options: [1.9] and [1.7].

#### ECP Mode DMA Channel

Use this item to set the ECP mode DMA channel. Configuration options: [DMA0], [DMA1], and [DMA3].

#### Parallel Port IRQ


Use this item to set the IRQ for the parallel port. Configuration options: [IRQ5] and [IRQ7].

**OnBoard Game Port**

Use this item to enable the Game Port or disable it.

**OnBoard MIDI Port**

Use this item to select the address for the MIDI Port or disable it. Configuration options: [Disabled], [300], and [330].

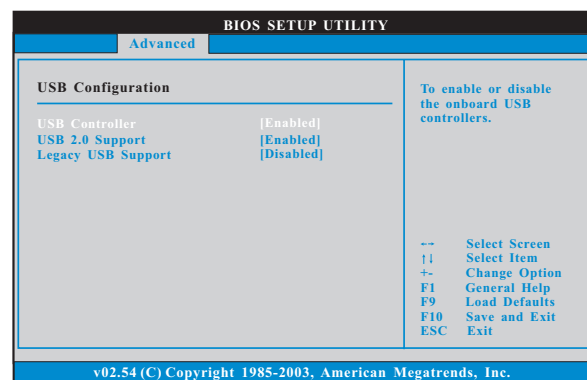**3.3.8 USB Configuration****USB Controller**

Use this item to enable or disable the use of USB controller.

**USB 2.0 Support**


Use this item to enable or disable the USB 2.0 support.

**Legacy USB Support**

Use this item to enable or disable the support to emulate legacy I/O devices such as mouse, keyboard,... etc. Or you may select [Auto] so that the system will start to auto-detect; if there is no USB device connected, "Auto" option will disable the legacy USB support.


### 3.4 Hardware Health Event Monitoring Screen

In this section, it allows you to monitor the status of the hardware on your system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, chassis fan speed, and the critical voltage.

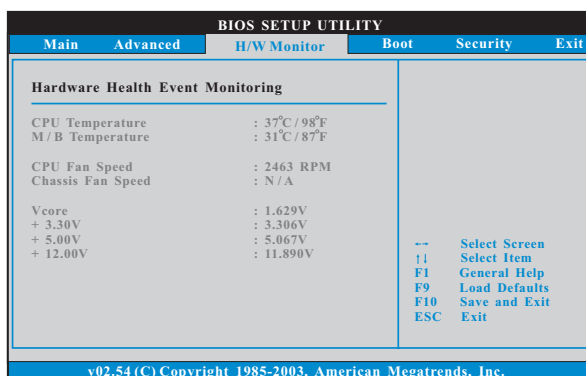


### 3.5 Boot Screen

In this section, it will display the available devices on your system for you to configure the boot settings and the boot priority.

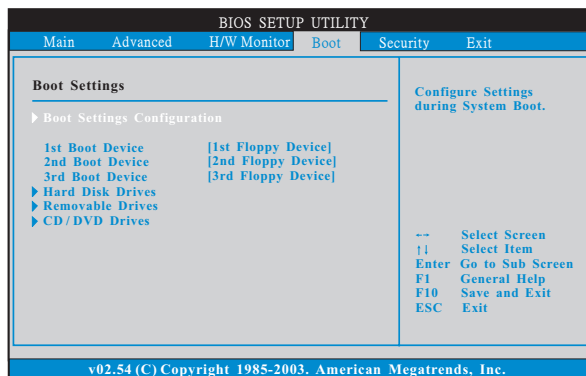

### 3.5.1 Boot Settings Configuration

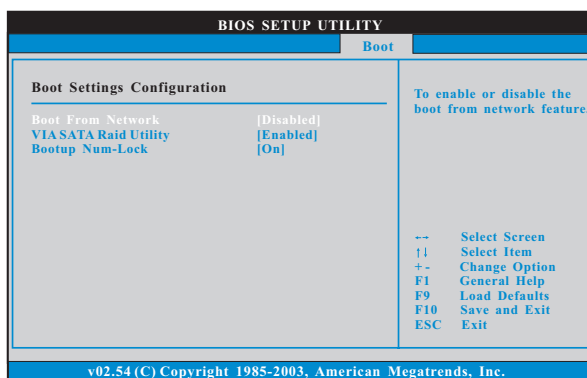

#### Boot From Network

Use this item to enable or disable the Boot From Network feature.

#### VIA SATA Raid Utility


Use this to enable or disable VIA VT8237 SATA Raid BIOS Utility during POST.

#### Boot Up Num-Lock


If this item is set to [On], it will automatically activate the Numeric Lock function after boot-up.

### 3.6 Security Screen

In this section, you may set or change the supervisor/user password for the system. For the user password, you may also clear it.

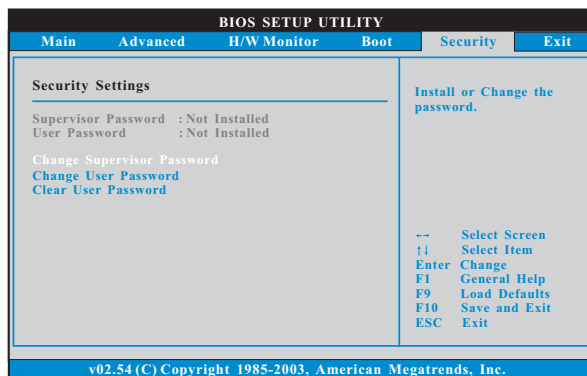

### 3.7 Exit Screen

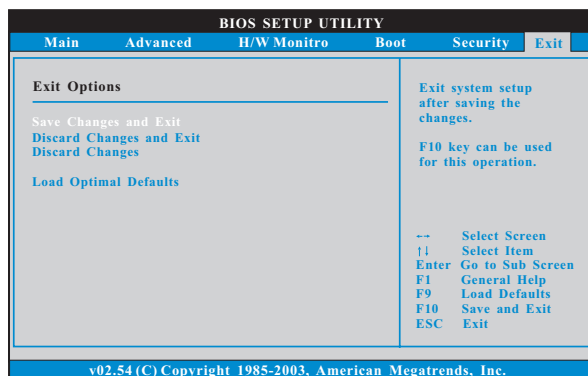

#### Save Changes and Exit

When you select this option, it will pop-out the following message, "Save configuration changes and exit setup?" Select [OK] to save the changes and exit the BIOS SETUP UTILITY.

#### Discard Changes and Exit

When you select this option, it will pop-out the following message, "Discard changes and exit setup?" Select [OK] to exit the BIOS SETUP UTILITY without saving any changes.

#### Discard Changes

When you select this option, it will pop-out the following message, "Discard changes?" Select [OK] to discard all changes.

#### Load Optimal Defaults

When you select this option, it will pop-out the following message, "Load optimal defaults?" Select [OK] to load the default values for all the setup configurations.

---

## **4. Software Support**

### **4.1 Install Operating System**

This motherboard supports various Microsoft® Windows® operating systems: 98 SE / ME / 2000 / XP. Because motherboard settings and hardware options vary, use the setup procedures in this chapter for general reference only. Refer to your OS documentation for more information.

### **4.2 Support CD Information**

The Support CD that came with the motherboard contains necessary drivers and useful utilities that enhance the motherboard features.

#### **4.2.1 Running The Support CD**

To begin using the support CD, insert the CD into your CD-ROM drive. The CD automatically displays the Main Menu if "AUTORUN" is enabled in your computer. If the Main Menu did not appear automatically, locate and double click on the file "ASSETUP.EXE" from the BIN folder in the Support CD to display the menus.

#### **4.2.2 Drivers Menu**

The Drivers Menu shows the available devices drivers including ASRock Express GbL PCI Express LAN card driver if the system detects the installed devices. Please install the necessary drivers to activate the devices.

#### **4.2.3 Utilities Menu**

The Utilities Menu shows the applications software that the motherboard supports. Click on a specific item then follow the installation wizard to install it.

#### **4.2.4 Contact Information**

If you need to contact ASRock or want to know more about ASRock, welcome to visit ASRock's website at <http://www.asrock.com>; or you may contact your dealer for further information.

---

## **APPENDIX:**

### **AMD's Cool 'n' Quiet™ Technology**

For power-saving sake, it is strongly recommended to enable AMD's Cool 'n' Quiet™ technology under Windows system. When using this feature, please make sure to install "AMD Processor Driver" from the "Support CD" first.

If you are using Windows 2000/XP operating system, please follow the instruction below to enable AMD's Cool 'n' Quiet™ technology:

1. From the Windows 2000/XP operating system, click the Start button. Select Settings, then Control Panel.
2. Switch to Classic View. (for Windows XP only)
3. Double-click the Display icon in the Control Panel then select the Screen Saver tab.
4. Click the "Power..." button. The following dialog box appears.
5. From the Power schemes combo list box, select **Minimal Power Management**.
6. Click OK to implement settings.

If you are using Windows 98SE/ME operating system, please follow the instruction below to enable AMD's Cool 'n' Quiet™ technology:

1. From the Windows 98SE/ME operating system, click the Start button. Select Settings, then Control Panel.
2. Double-click the Display icon in the Control Panel then select the Screen Saver tab.
3. From the Energy saving features of monitor group, click the "Settings..." button.
4. From the Power Options Properties dialog box, select AMD's Cool 'n' Quiet™ Technology tab.
5. Click the Performance combo list box, to select desired mode. **Automatic mode** is the recommended setting.
6. Click OK to implement settings.