



302 7399



WELLS-CTI

A subsidiary of PCD Inc.


Burn-In | Test Sockets

499-018-0X — TO-3 Sockets (Kelvin)

For High Current Test Applications

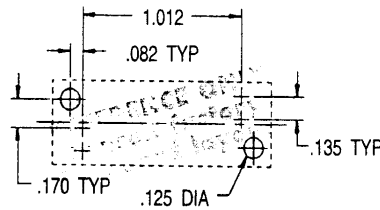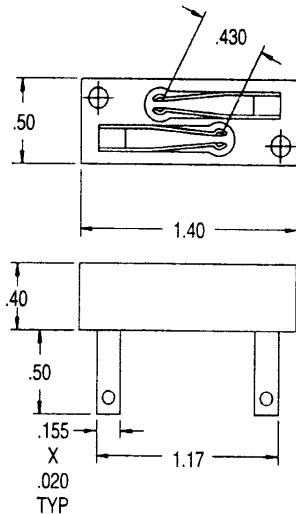

Footprint

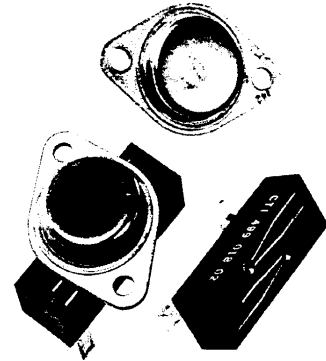

PART NO. DESCRIPTION



499-018-0X

Contact plating


2 = 30μ" Au over 50μ" Ni

499-019-2X — TO-18 & TO-72 Sockets

For Axial Lead Devices on .100" Pin Circles

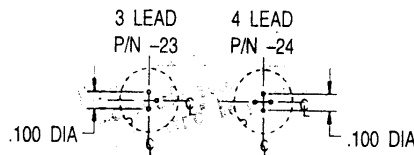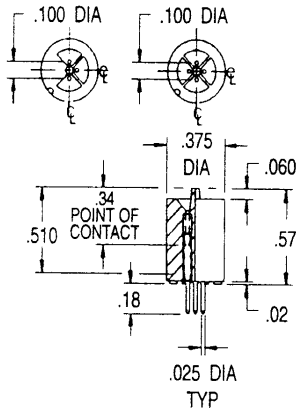

Footprints

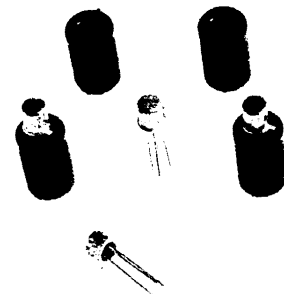

PART NO. DESCRIPTION

499-019-2X


Lead Count

3 = 3 Lead

4 = 4 Lead

499-020-2X — TO-5, TO-75 & TO-78 Sockets

For Axial Devices on .200" Pin Circles

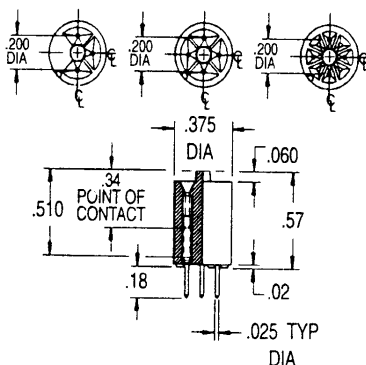

PART NO. DESCRIPTION

499-020-2X


Lead Count

3 = 3 Lead

4 = 4 Lead

6 = 6 Lead

8 = 8 Lead

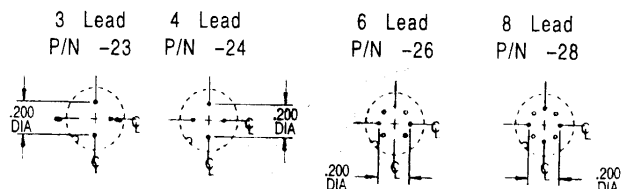

Footprints

