



KAT6 Data Outlet


Installation Instructions DN-9007-S-C




1) Carve cable sheath to 45 mm.




2) Peel off plastic sheath at 45 mm.

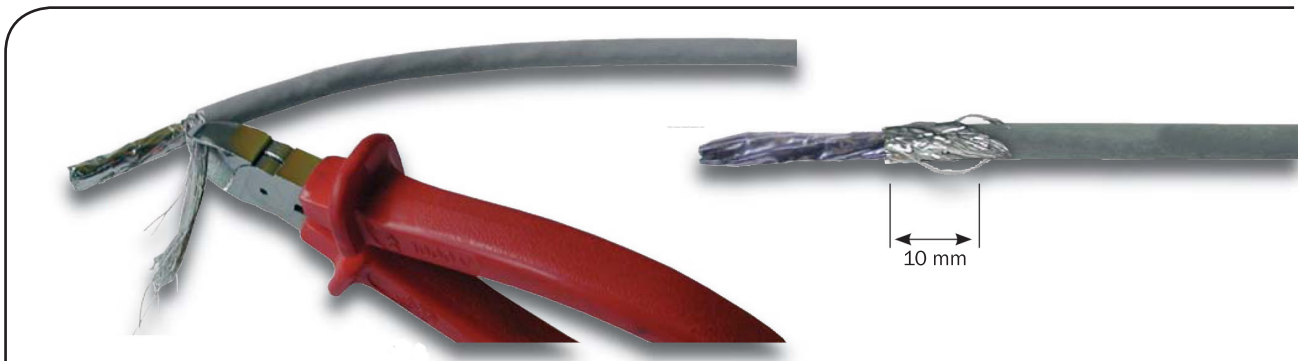


3) Cut braided shield at 10 mm and push back over cable sheath.

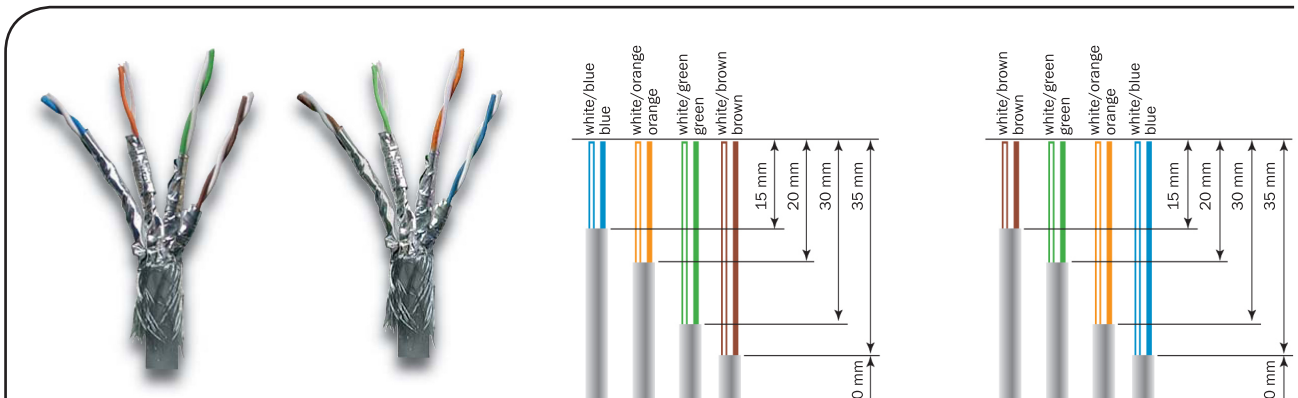

4) Cut shield film to length.

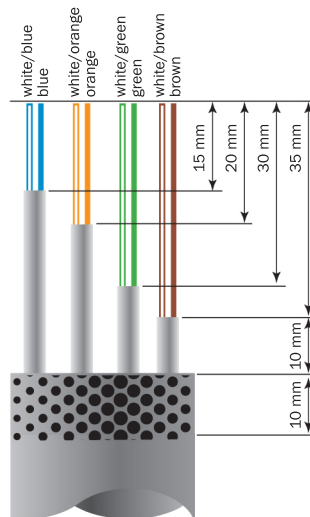


Cable entry left side.

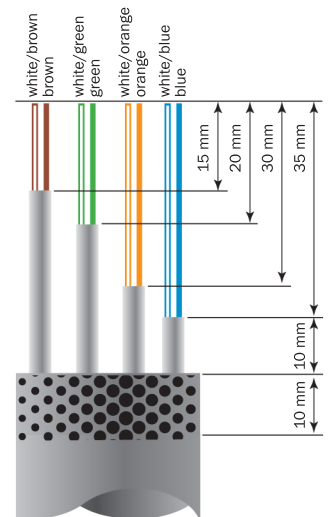


Cable entry right side.


5) Connect cable.

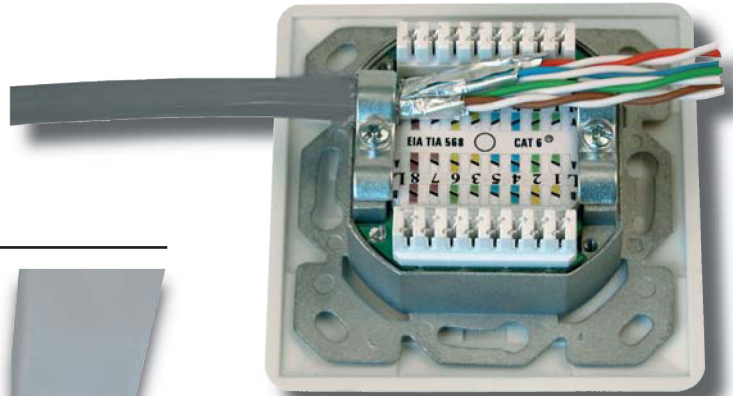

6) Use punch down tool.

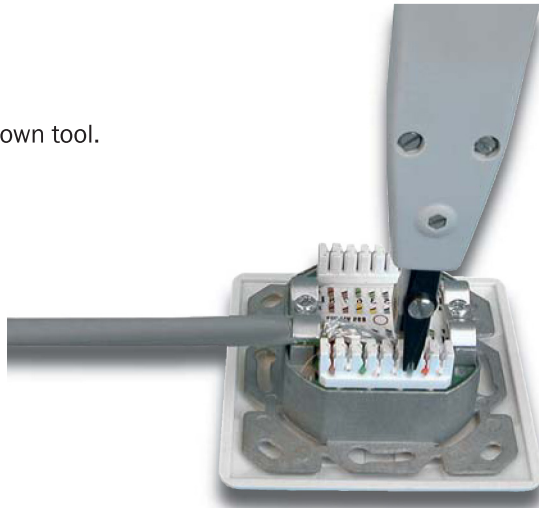

7) Connect wires.

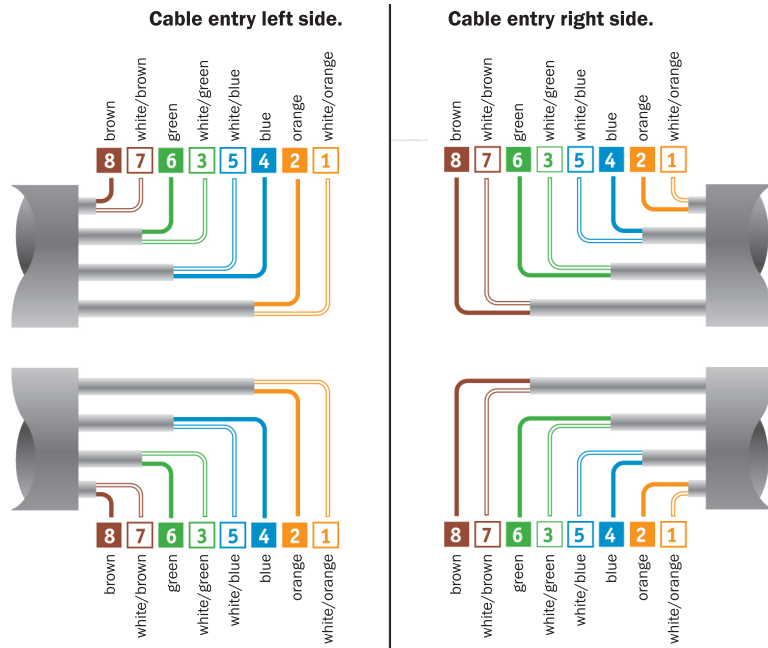

Configuration according to EIA/TIA 568 B

