TENTATIVE

TOSHIBA MOS DIGITAL INTEGRATED CIRCUIT SILICON MONOLITHIC

1,048,576-WORDS × 4BANKS × 16-BITS SYNCHRONOUS DYNAMIC RAM 2,097,152-WORDS × 4BANKS × 8-BITS SYNCHRONOUS DYNAMIC RAM 4,194,304-WORDS × 4BANKS × 4-BITS SYNCHRONOUS DYNAMIC RAM

DESCRIPTION

TC59S6416BFT/BFTL is a CMOS synchronous dynamic random access memory organized as 1,048,576-words×4 banks×16 bits and TC59S6408BFT/BFTL is organized as 2,097,152 words×4 banks×8 bits and the TC59S6404BFT/BFTL is organized as 4,194,304 words×4 banks×4 bits. Fully synchronous operations are referenced to the positive edges of clock input and can transfer data up to 125M words per second. These devices are controlled by commands setting. Each bank are kept active so that DRAM core sense amplifiers can be used as a cache. The refresh functions, either Auto Refresh or Self Refresh are easy to use. By having a programmable Mode Register, the system can choose the most suitable modes which will maximize its performance. These devices are ideal for main memory in applications such as work-stations.

FEATURES

	ITEM -		/6408/6404
			- 10
t_{CK}	Clock Cycle Time (Min.)	8ns	10ns
t_{RAS}	Active to Precharge Command Period(Min.)	48ns	60ns
t_{AC}	Access Time from CLK (Max.)	6ns	7ns
t_{RC}	Ref/Active to Ref/Active Command Period (Min.)	68ns	84ns
I _{CC1}	Operation Current (Max.) (Single bank)	90mA	70mA
I _{CC4}	Burst Operation Current (Max.)	140mA	110mA
I _{CC6}	Self - Refresh Current (Max.)	1mA	1mA

- Single power supply of $3.3V \pm 0.3V$
- Up to 125MHz clock frequency
- Synchronous operations : All signals referenced to the positive edges of clock
- Architecture : Pipeline
- Organization

 $\begin{array}{lll} TC59S6416BFT/BFTL & : & 1,048,576 \text{ words} \times 4 \text{ banks} \times 16 \text{bits} \\ TC59S6408BFT/BFTL & : & 2,097,152 \text{ words} \times 4 \text{ banks} \times 8 \text{bits} \\ TC59S6404BFT/BFTL & : & 4,194,304 \text{ words} \times 4 \text{ banks} \times 4 \text{bits} \\ \end{array}$

- Programmable Mode register
- Auto Refresh and Self Refresh
- Burst Length : 1, 2, 4, 8, Full page
- CAS Latency : 2, 3
 Single Write Mode
- Burst Stop Function
- Byte Data Controlled by L-DQM, U-DQM (TC59S6416)
- 4K Refresh cycles / 64ms
- Interface : LVTTL
- Package

TC59S6416BFT/BFTL : TSOP II 54 - P - 400 - 0.80B TC59S6408BFT/BFTL : TSOP II 54 - P - 400 - 0.80B TC59S6404BFT/BFTL : TSOP II 54 - P - 400 - 0.80B

961001EBA1

- TOSHIBA is continually working to improve the quality and the reliability of its products. Nevertheless, semiconductor devices in general can malfunction or fail due to their inherent electrical sensitivity and vulnerability to physical stress. It is the responsibility of the buyer, when utilizing TOSHIBA products, to observe standards of safety, and to avoid situations in which a malfunction or failure of a TOSHIBA product could cause loss of human life, bodily injury or damage to property. In developing your designs, please ensure that TOSHIBA products are used within specified operating ranges as set forth in the most recent products specifications. Also, please keep in mind the precautions and conditions set forth in the TOSHIBA Semiconductor Reliability Handbook.

 The products described in this document are subject to foreign exchange and foreign trade control laws.

 The information contained berein is presented only as a guide for the applications of our products. No responsibility.
- The products described in this document are subject to foreign exchange and foreign trade control laws.


 The information contained herein is presented only as a guide for the applications of our products. No responsibility is assumed by TOSHIBA CORPORATION for any infringements of intellectual property or other rights of the third parties which may result from its use. No license is granted by implication or otherwise under any intellectual property or other rights of TOSHIBA CORPORATION or others.

 The information contained herein is published to show or either.
- The information contained herein is subject to change without notice.


PIN NAMES

A0~A11	Address			
BSO, BS1	Bank Select			
DQ0~DQ3				
(TC59S6404)				
DQ0~DQ7	Data Input/Output			
(TC59S6408)	Data Input/Output			
DQ0~DQ15				
(TC59S6416)				
<u>cs</u>	Chip Select			
RAS	Row Address Strobe			
CAS	Column Address Strobe			
WE	Write Enable			
DQM				
(TC59S6408/				
6404)	Output disable/Write Mask			
UDQM/LDQM				
(TC59S6416)				
CLK	Clock inputs			
CKE	Clock enable			
V_{CC}	Power (+3.3V)			
V_{SS}	Ground			
V _{CC} Q	Power (+3.3V)			
	(for I/O buffer)			
$V_{SS}Q$	Ground			
	(for I/O buffer)			
NC	No Connection			

PIN ASSIGNMENT (TOP VIEW)

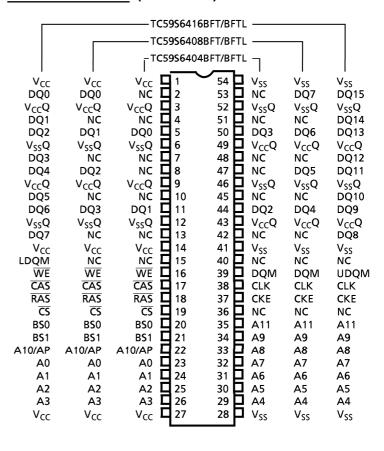

BLOCK DIAGRAM

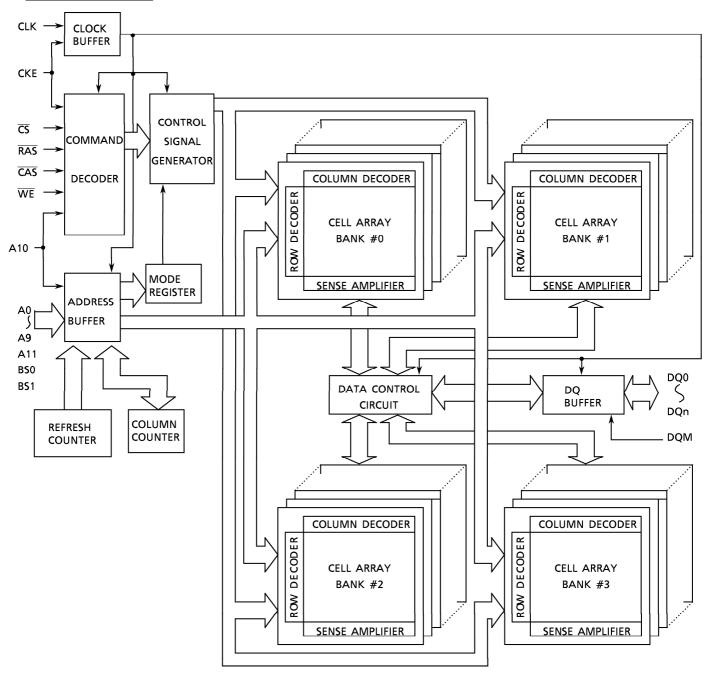

NOTE: The TC59S6404BFT/BFTL configuration is 4096x1024x4 of cell array with the DQ pins numbered DQ0-3. The TC59S6408BFT/BFTL configuration is 4096x512x8 of cell array with the DQ pins numbered DQ0-7. The TC59S6416BFT/BFTL configuration is 4096x256x16 of cell array with the DQ pins numbered DQ0-15.

ABSOLUTE MAXIMUM RATINGS

SYMBOL	ITEM	RATING	UNITS	NOTES
V _{IN} , V _{OUT}	Input , Output Voltage	- 0.3~V _{CC} + 0.3	V	1
V _{CC} , V _{CC} Q	Power Supply Voltage	- 0.3~4.6	V	1
T _{OPR}	Operating Temperature	0~70	°C	1
T _{STG}	Storage Temperature	- 55~150	°C	1
T _{SOLDER}	Soldering Temperature(10s)	260	°C	1
P _D	Power Dissipation	1	W	1
Іоит	Short Circuit Output Current	50	mA	1

RECOMMENDED DC OPERATING CONDITIONS (Ta = 0 to 70°C)

SYMBOL	PARAMETER	MIN	TYP	MAX	UNITS	NOTES
V _{CC}	Power Supply Voltage	3.0	3.3	3.6	V	2
V _{CC} Q	Power Supply Voltage (for I/O Buffer)	3.0	3.3	3.6	V	2
V _{IH}	Input High Voltage	2.0	-	V _{CC} + 0.3	V	2
V _{IL}	Input Low Voltage	- 0.3	-	0.8	V	2

Note: $V_{IH}(max) = V_{CC} / V_{CC}Q + 1.2V$ for pulse width $\leq 5ns$ $V_{IL}(min) = V_{SS} / V_{SS}Q - 1.2V$ for pulse width $\leq 5ns$

<u>CAPACITANCE</u> $(V_{CC} = 3.3V, f = 1MH_Z, Ta = 25^{\circ}C)$

SYMBOL	PARAMETER	MIN	MAX	UNIT
	Input Capacitance (A0 to A11, BS0,BS1, $\overline{\text{CS}}$, $\overline{\text{RAS}}$, $\overline{\text{CAS}}$, $\overline{\text{WE}}$, DQM, CKE)	-	4	
C ₁	Input Capacitance (CLK)	-	4	
c _o	Input/Output capacitance	-	6.5	

NOTE: These parameters are periodically sampled and not 100% tested.

RECOMMENDED DC OPERATING CONDITIONS

 $(V_{CC} = 3.3V \pm 0.3V, Ta = 0 \sim 70^{\circ}C)$

ITEM		CVAADOL	_	80)		LINUTC	NOTES
		SYMBOL	MIN.	MAX.	MIN.	MAX.	UNITS	NOTES
$\begin{array}{l} \text{OPERATING CURRENT} \\ t_{CK} = \text{min , } t_{RC} = \text{min} \\ \text{Active Precharge command cycling} \\ \text{without Burst operation} \end{array}$	1 bank operation	I _{CC1}		90		70		3
STANDBY CURRENT $t_{CK} = min , \overline{CS} = V_{IH}$	CKE = V _{IH}	I _{CC2}		50		40		3
$V_{IH/L} = V_{IH (min)} / V_{IL (max)}$ Bank : inactive state	CKE = V _{IL} (Power Down mode)	I _{CC2P}		1		1		3
STANDBY CURRENT CLK = V _{IL} , CS = V _{IH}	CKE = V _{IH}	I _{CC2S}		8		8		
$V_{IH/L} = V_{IH}(min) / V_{IL}(max)$ Bank: inactive state	CKE = VIL (Power Down mode)	I _{CC2PS}		1		1	mA	
NO OPERATING CURRENT t _{CK} = min	CKE = V _{IH}	I _{CC3}		65		50		
CS = V _{IH} (min) Bank: active state (4 banks)	CKE = V _{IL} (Power Down mode)	I _{CC3P}		8		8		
BURST OPERATING CURRENT t _{CK} = min Read / Write command cycling		I _{CC4}		140		110		3, 4
AUTO REFRESH CURRENT $t_{CK} = min$, $t_{RC} = min$ Auto Refresh command cycling		I _{CC5}		140		110		3
SELF REFRESH CURRENT Self Refresh mode	Standard Products (BFT)			1		1		
CKE = 0.2V	Low Power Version (BFTL)	l _{CC6}		450		450	μΑ	

ITEM	SYMBOL	MIN.	MAX.	UNITS	NOTES
INPUT LEAKAGE CURRENT ($0V \le V_{IN} \le V_{CC}$, all other pins not under test = $0V$)	I _{I(L)}	– 5	5	μΑ	
OUTPUT LEAKAGE CURRENT (Output disable, $0V \le V_{OUT} \le V_{CCQ}$)	I _{O(L)}	- 5	5	μΑ	
LVTTL OUTPUT "H" LEVEL VOLTAGE (I _{OUT} = -2mA)	V _{OH}	2.4	-	V	
LVTTL OUTPUT "L" LEVEL VOLTAGE (IOUT = 2mA)	V _{OL}	-	0.4	V	

AC CHARACTERISTICS AND OPERATING CONDITIONS

 $(V_{CC} = 3.3V \pm 0.3V, Ta = 0 to 70^{\circ}C)$ (Notes : 5, 6, 7)

CVMIDOL	DADAMETED	PARAMETER		80	- 10		LINUTE	NOTES
SYMBOL	PARAIVIETER		MIN.	MAX.	MIN.	MAX.	UNITS	NOTES
t _{RC}	Ref/Active to Ref/Active Command Perio	d	68		84			9
t _{RAS}	Active to Precharge Command Period		48	100000	60	100000	ns	9
t _{RCD}	Active to Read/Write Command Delay Ti	me	20		24			9
t _{CCD}	Read/Write(a) to Read/Write(b) Comma	nd Period	1		1		Cycle	9
t _{RP}	Precharge to Active Command Period		20		24			9
t _{RRD}	Active(a) to Active(b) Command Period		20		20			9
t _{WR}	Write Recovery Time	CL* = 2	10		12			
		CL* = 3	8		10			
t _{CK}	CLK Cycle Time	CL* = 2	10	1000	12	1000		
		CL* = 3	8	1000	10	1000		
t _{CH}	CLK High Level Width		3		3			10
t _{CL}	CLK Low Level Width	T	3		3			10
t_{AC}	Access Time from CLK	CL* = 2		6		8		
		CL* = 3		6	_	7	ns	
t _{OH}	Output Data Hold Time		3		3			
t _{HZ}	Output Data High Impedance Time		3	8	3	10		8
t _{LZ}	Output Data Low Impedance Time		0		0			
t _{SB}	Power Down Mode Entry Time		0	8	0	10		
t _T	Transition Time of CLK (Rise and Fall)		0.5	10	0.5	10		
t _{DS}	Data-in Set-up Time		2		2.5			
t _{DH}	Data-in Hold Time		1		1			
t _{AS}	Address Set - up Time		2		2.5			
t _{AH}	Address Hold Time		1		1			
t _{CKS}	CKE set - up Time		2		2.5			
t _{CKH}	CKE Hold Time		1		1			
t _{CMS}	Command Set - up Time		2		2.5			
t _{CMH}	Command Hold Time		1		1			
t _{REF}	Refresh Time			64		64	ms	
t _{RSC}	Mode Register Set Cycle Time		16		20		ns	9

^{*} CL is $\overline{\text{CAS}}$ Latency.

NOTES:

- 1. Conditions outside the limits listed under "ABSOLUTE MAXIMUM RATINGS" may cause permanent damage to the device.
- 2. All voltages are referenced to Vss.
- 3. These parameters depend on the cycle rate and these values are measured at a cycle rate with the minimum values of $t_{\rm CK}$ and $t_{\rm RC}$. Input signals are changed one time during $t_{\rm CK}$.
- 4. These parameters depend on the output loading. Specified values are obtained with the output open.
- 5. Power-up sequence is described in Note 11.
- 6. AC TEST CONDITIONS

Output Reference Level	1.4V / 1.4V
Output Load	See diagram B below
Input Signal Levels	2.4V / 0.4V
Transition Time (Rise and Fall) of Input Signals	2ns
Input Reference Level	1.4V



- 7. Transition times are measured between $V_{\rm IH}$ and $V_{\rm IL}$. Transition (rise and fall) of input signals have a fixed slope.
- $8.\ t_{\rm HZ}$ defines the time at which the outputs achieve the open circuit condition and is not referenced to output voltage levels.

9. These parameters account for the number of clock cycles and depend on the operating frequency of the clock, as follows:

the number of clock cycles = specified value of timing/clock period (count fractions as a whole number)

10. t_{CH} is the pulse width of CLK measured from the positive edge to the negative edge referenced to V_{IH} (min.). t_{CL} is the pulse width of CLK measured from the negative edge to the positive edge referenced to V_{IL} (max.).

11. Power-up Sequence

Power-up must be performed in the following sequence.

- 1) Power must be applied to V_{CC} and $V_{CC}Q$ (simultaneously) while all input signals are held in the "NOP" state. The CLK signals must be started at the same time.
- 2) After power-up a pause of at least 200 μ seconds is required. It is required that DQM and CKE signals then be held "high" (V_{CC} levels) to ensure that the DQ output is impedance.
- 3) All banks must be precharged.
- 4) The Mode Register Set command must be asserted to initialize the Mode Register.
- 5) A minimum of eight Auto Refresh dummy cycles is required to stabilize the internal circuitly of the device.


The Mode Register Set command can be invoked either before or after the Auto Refresh dummy cycles.

12. A.C Latency Characteristics


CKE to clock disable (CKE Latency)		1	
DQM to output in High-Z (Read DQM Latency)	2		
DQM to input data delay (Write DQM Latency)		0	
Write command to input data (Write Data Latency)		0	
CS to Commadn input (CS Latency)		0	
Precharge to DQ Hi-Z Lead time	CL = 2	2	
	CL = 3	3	Cycle
Precharge to Last Valid data out	CL = 2	1	
	CL = 3	2	
Burst Stop Command to DQ Hi-Z Lead time	CL = 2	2	
	CL = 3	3	
Burst Stop Command to Last Valid data out	CL = 2	1	
	CL = 3	2	
Read with Autoprecharge Command to Active/Ref Command	CL = 2	BL + t _{RP}	
	CL = 3	BL + t _{RP}	Cycle
Write with Autoprecharge Command to Active/Ref Command	CL = 2	BL + t _{RP}	+ ns
	CL = 3	BL + t _{RP}	

TIMING DIAGRAMS


Command Input Timing

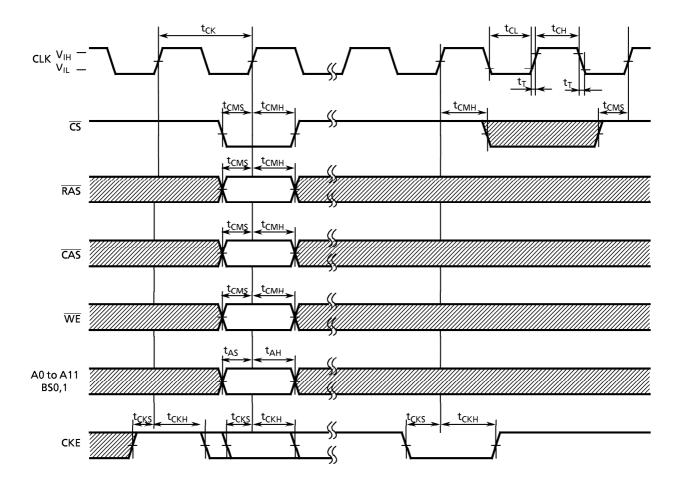


Read Timing

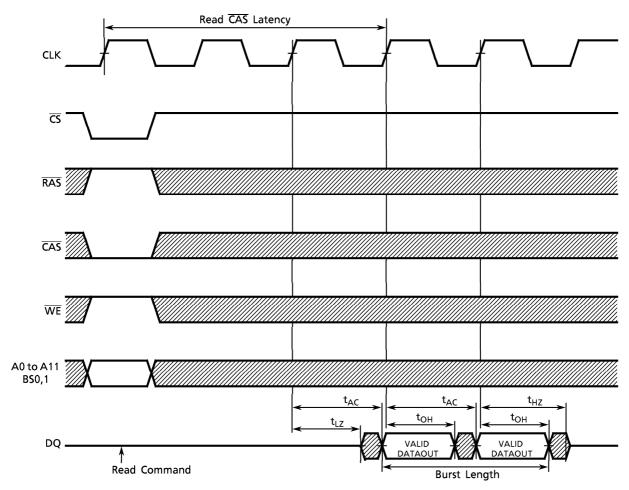


Control Timing of Input Data (TC59S6408/6404BFT)

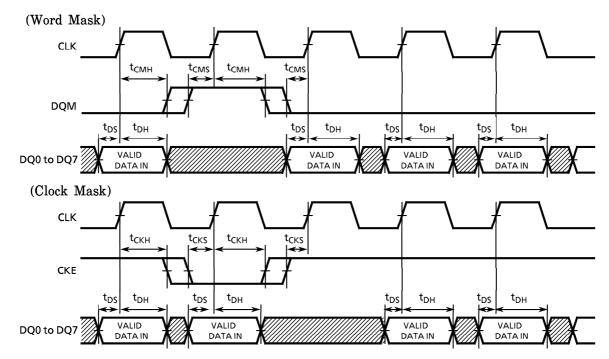


Control Timing of Output Data (TC59S6408/6404BFT)

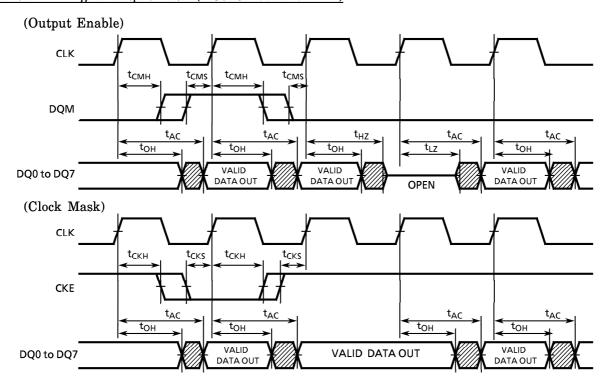



Control Timing of Input Data (TC59S6416BFT)

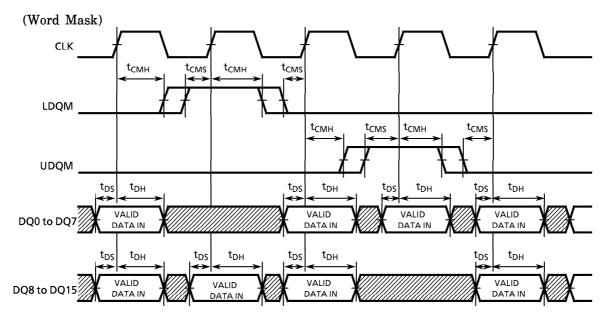

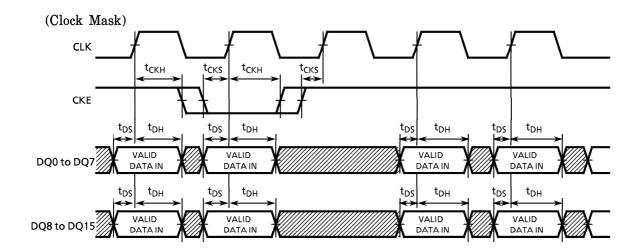


Control Timing of Output Data (TC59S6416BFT)

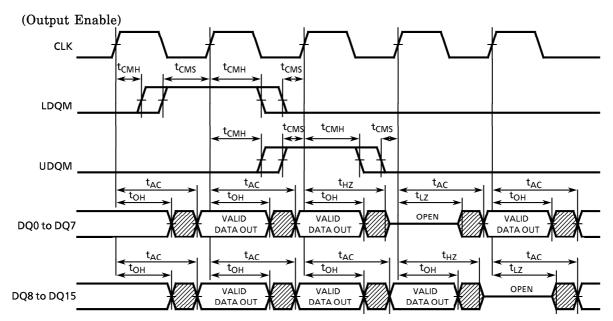

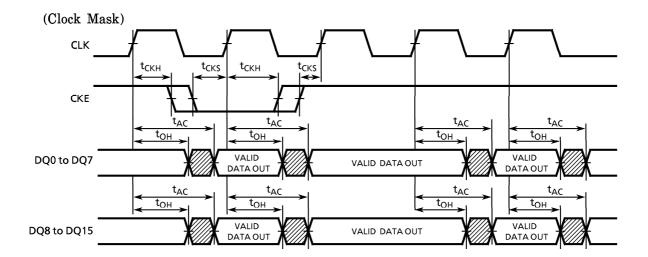


Mode Resister Set Cycle

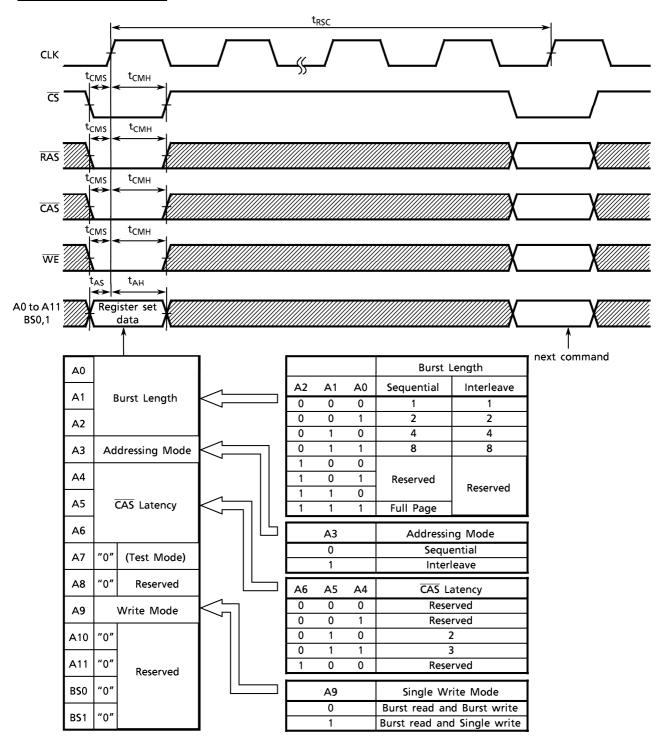

OPERATING TIMING EXAMPLE

Figure 1. Interleaved Bank Read (Burst Length=4, CAS Latency=3)

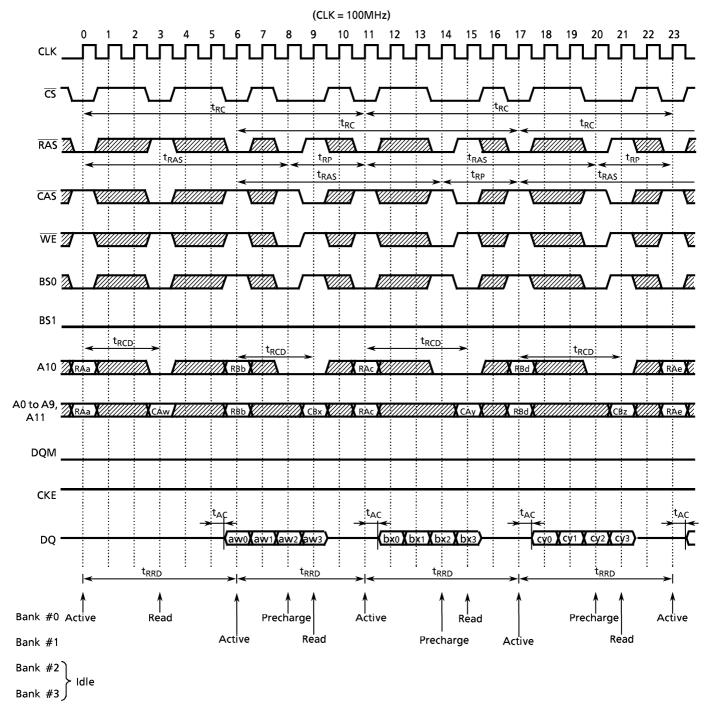

(CLK = 100MHz)10 11 12 13 14 15 16 18 t_{RC} t_{RC} RAS 🛚 $\mathsf{t}_{\mathsf{RAS}}$ t_{RP} tRAS t_{RCD} t_{RCD} t_{RCD} A0 to A9, RA'a X /// RBd DQM CKE DQ t_{RRD} ; t_{RRD} t_{RRD} t_{RRD} Bank #0 Active Read Active Read Bank #1 Read Read Active Active Bank #2

Figure 2. Interleaved Bank Read (Burst Length=4, CAS Latency=3, Auto Precharge)

^{*} AP is internal precharge start timing.

(CLK = 100MHz)10 11 12 13 14 15 16 17 18 19 20 21 22 23 t_{RC} t_{RP} t_{RAS} t_{RP} CAS 🔣 BS1 t_{RCD} t_{RCD} t_{RCD} A10 KRAa A0 to A9, RAa A11 DQM CKE DQ t_{RRD} t_{RRD} Bank #0 Read Precharge Precharge Bank #1 Precharge Precharge Read Active Bank #2 Idle Bank #3

Figure 3. Interleaved Bank Read (Burst Length=8, CAS Latency=3)

(CLK = 100MHz)10 11 12 13 14 15 16 17 18 19 20 21 22 23 t_{RC} t_{RAS} t_{RAS} t_{RP} t_{RCD} t_{RCD} t_{RCD} A0 to A9, RÁa RBb 🕢 A11 DQM CKE DQ ' by4 by5 by6 CZ0 t_{RRD} $t_{\mathsf{RRD}}^{\mathsf{'}}$ Read Bank #0 Active | Read Active Bank #1 Bank #2 Bank #3

Figure 4. Interleaved Bank Read (Burst Length=8, CAS Latency=3, Auto Precharge)

^{*} AP is the internal precharge start timing.

Figure 5. Interleaved Bank Write (Burst Length=8)



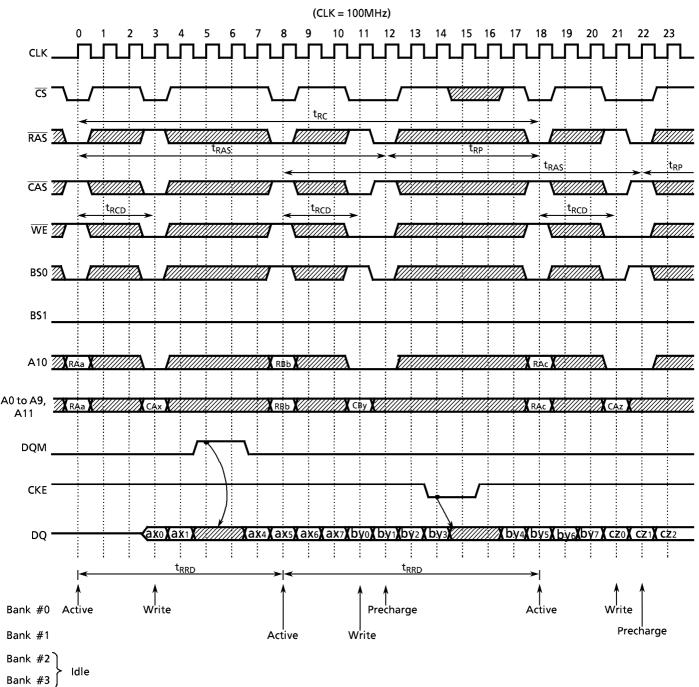


Figure 6. Interleaved Bank Write (Burst Length=8, Auto Precharge)

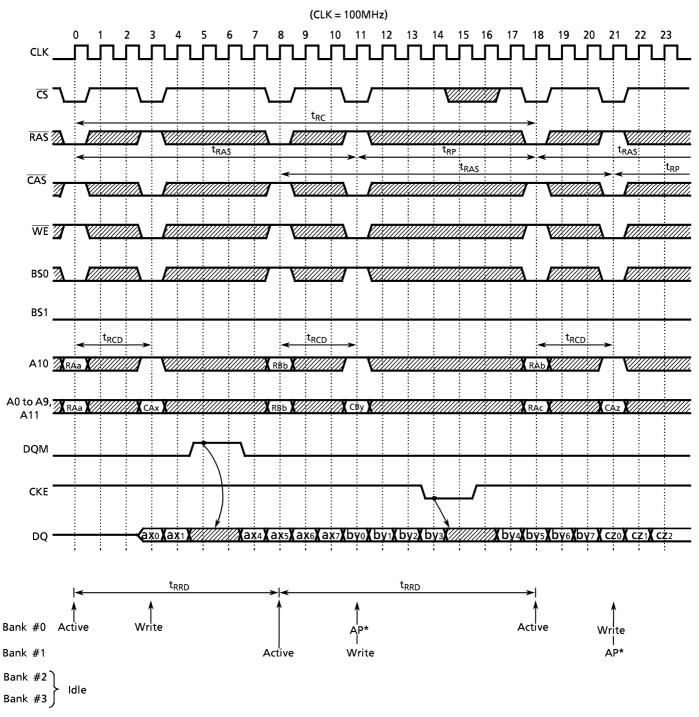


^{*} AP is the internal precharge start timing.

Figure 7. Page Mode Read (Burst Length = 4, CAS Latency = 3)

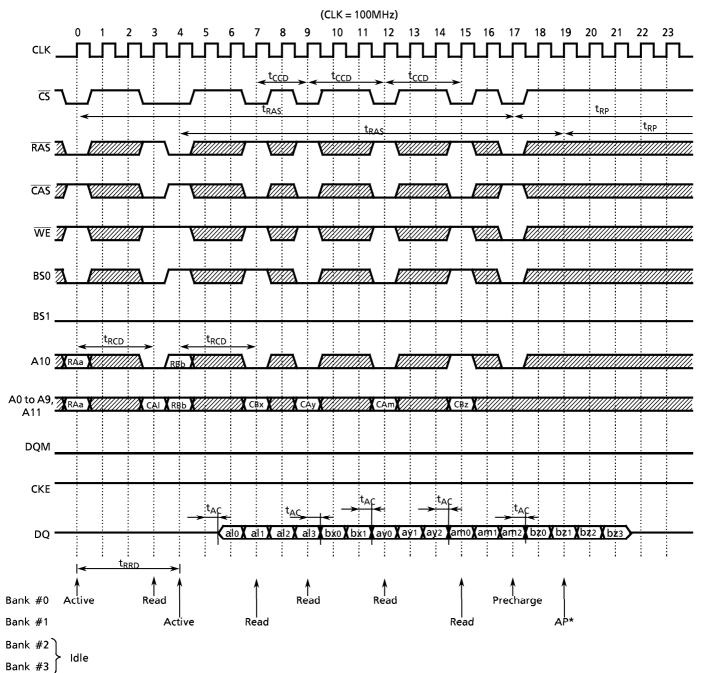

* AP is the internal precharge start timing.

Figure 8. Page Mode Read/Write (Burst Length=8, CAS Latency=3)

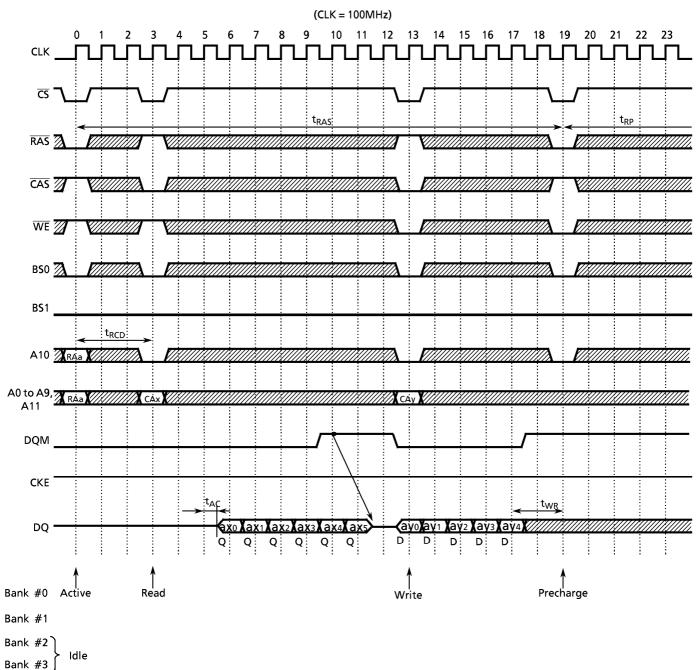

NOTE): See Figure 17,20


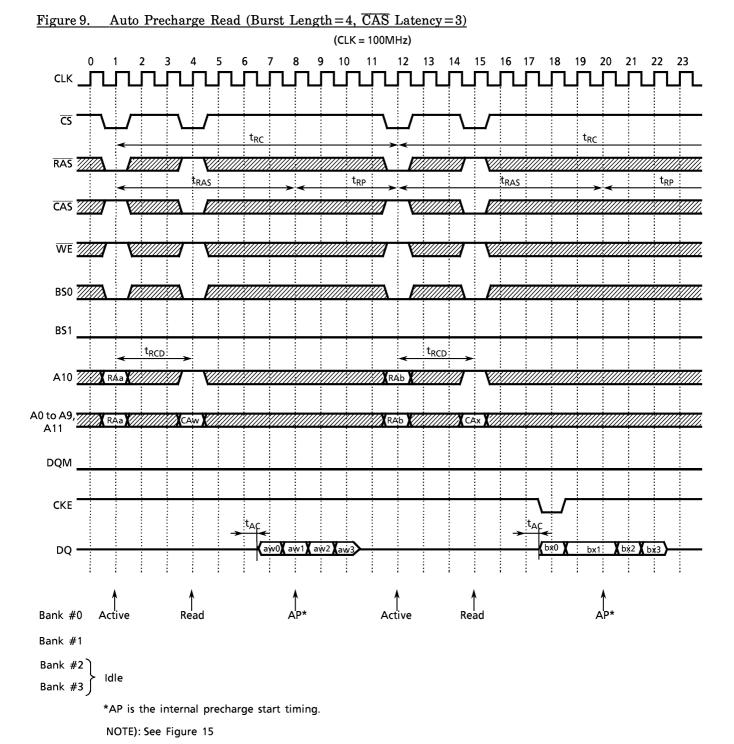


Figure 10. Auto Precharge Write (Burst Length=4)

(CLK = 100MHz)

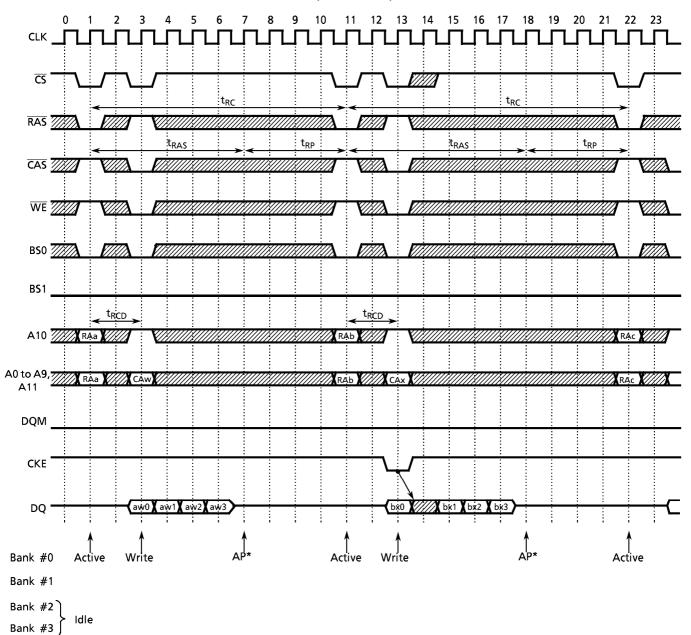

* AP is the internal precharge start timing.

NOTE): See Figure 16

Figure 11. Auto Refresh cycle

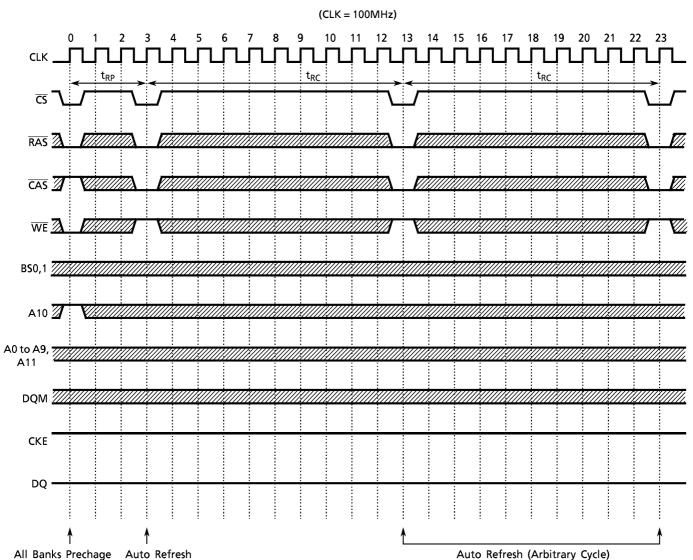


Figure 12. Self Refresh Cycle


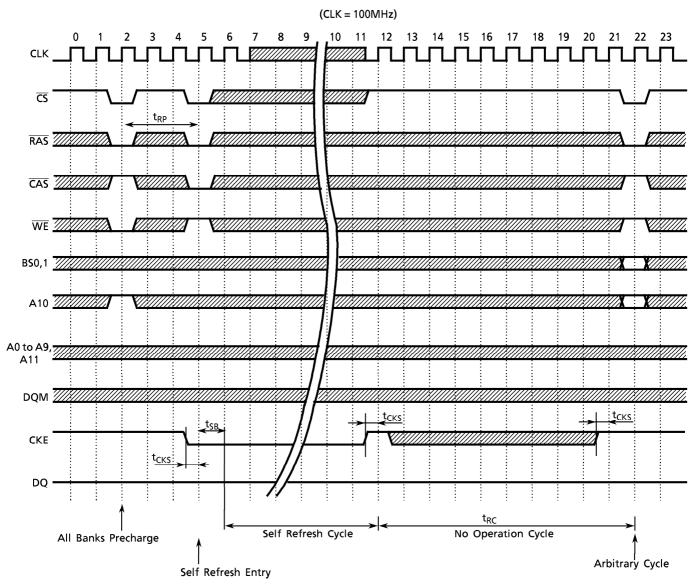


Figure 13. Power Down Mode

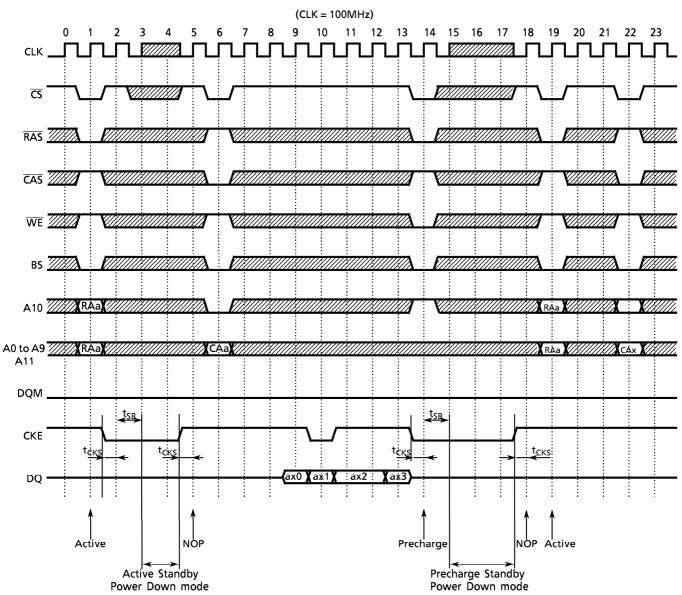


NOTE): The Power Down mode is invoked by asserting CKE "low".

All Input/Output buffers (except the CKE buffer) are turned off in Power Down mode.

When CKE goes high, the No-operation command input must be at next CLK rising edge.

Figure 14. Burst Read and Single Write (Burst Length=4, CAS Latency=3)

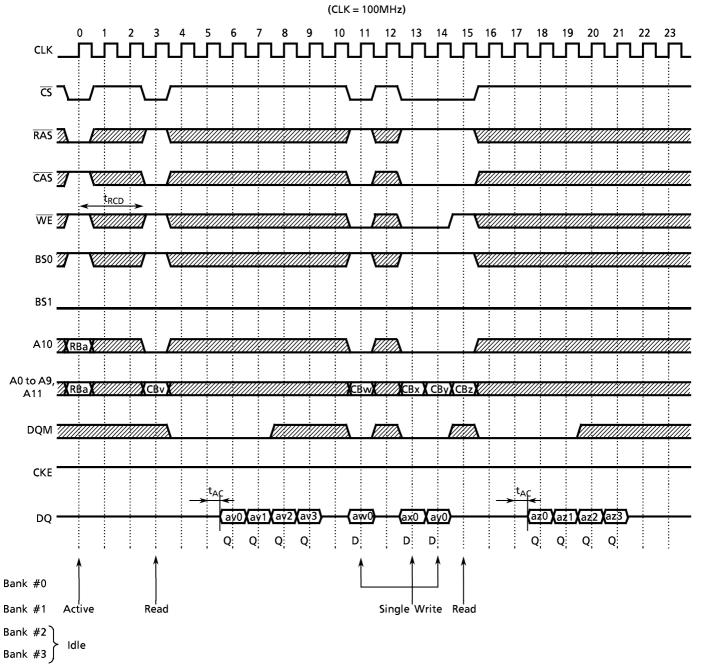

PIN FUNCTIONS

CLOCK INPUT: CLK

The CLK input is used as the reference for S-DRAM operations. All operations are synchronized to the positive edges of CLK.

CLOCK ENABLE: CKE

The CKE input is used to suspend the internal CLK. When the CKE signal is asserted "low", the internal CLK is suspended and output data is held intact while CKE is asserted "low". When all banks are in the idle state, the CKE input controls the entry to the Power Down and Self Refresh modes.

BANK SELECT: BS0, BS1

The TC59S6416BFT/BFTL, TC59S6408BFT/BFTL and the TC59S6404BFT/BFTL are organized as four-bank memory cell arrays. The BS0, BS1 inputs are latched at the time of assertion of the operation commands and selects the bank to be used for the operation.

BS0	BS1	
0	0	Bank#0
1	0	Bank#1
0	1	Bank#2
1	1	Bank#3

ADDRESS INPUTS: A0~A11

The A0 to A11 inputs are address to access the memory cell array, as following table.

	Row Address	Column Address
TC59S6416BFT/BFTL	A0 to A11	A0 to A7
TC59S6408BFT/BFTL	A0 to A11	A0 to A8
TC59S6404BFT/BFTL	A0 to A11	A0 to A9

The row address bits are latched at the Bank Activate command and column address bits are latched on the Read or Write command. Also, the A0 to A11 inputs are used to set the data in the Mode register in a Mode Register Set cycle.

CHIP SELECT: CS

The \overline{CS} input controls the latching of the commands on the positive edges of CLK when \overline{CS} is asserted "low". No commands are latched as long as \overline{CS} is held "high".

ROW ADDRESS STROBE: RAS

The \overline{RAS} input defines the operation commands in conjunction with the \overline{CAS} and \overline{WE} inputs, and is latched at the positive edges of CLK. When \overline{RAS} and \overline{CS} are asserted "low" and \overline{CAS} is asserted "high", either the Bank Activate command or the Precharge command is selected by the \overline{WE} signal. When \overline{WE} is asserted "high", the Bank Activate command is selected and the bank designated by BS0, BS1 are turned on so that it is in the active state. When \overline{WE} is asserted "low", the Precharge command is selected and the bank designated by BS0, BS1 are switched to the idle state after Precharge operation.

COLUMN ADDRESS STROBE: CAS

The \overline{CAS} input defines the operation commands in conjunction with the \overline{RAS} and \overline{WE} inputs, and is latched at the positive edges of CLK. When \overline{RAS} is held "high" and \overline{CS} is asserted "low", column access is started by asserting \overline{CAS} "low". Then, the Read or Write command is selected by asserting \overline{WE} "low" or "high".

WRITE ENABLE: WE

The WE input defines the operation commands in conjunction with the RAS and CAS inputs, and is latched at the positive edges of CLK. The WE input is used to select the Bank Activate or Precharge command and Read or Write command.

DATA INPUT/OUTPUT MASK: DQM or L-DQM and U-DQM

The DQM input enables output in a Read cycle and functions as the input data mask in a Write cycle. When DQM is asserted "high" at the positive edges of CLK, output data is disabled after two clock cycles during a Read cycle, and input data is masked at the same clock cycle during a Write cycle.

In the case of the TC59S6416BFT/BFTL, the LDQM and UDQM inputs function as byte data control. The LDQM input can control DQ0-7 in a Read or Write cycle and the UDQM can control DQ8-15 in a Read or Write cycle.

DATA INPUT/OUTPUT: DQ0-15

The DQ0-15 input and output data are synchronized with the positive edges of CLK. In the case of TC59S6408BFT/BFTL and TC59S6404BFT/BFTL, these pins are DQ0-7 and DQ0-3 respectively.

Operation Mode

Fully synchronous operations are performed to latch the commands at the positive edges of CLK. Table 1 shows the truth table for the operation commands.

Table 1 Truth Table (Note (1) and (2))											
Command	Device State	CKE _{n-1}	CKEn	DQM ⁽⁵⁾	BS0,1	A10	A11,A9-0	<u>cs</u>	RAS	CAS	WE
Bank Activate	Idle (3)	Н	×	×	V	V	V	L	L	Н	Н
Bank Precharge	Any	Н	×	×	٧	L	×	L	L	Н	L
Precharge All	Any	Н	×	×	×	Н	×	L	L	Н	L
Write	Active (3)	Н	×	×	V	L	V	L	Н	L	L
Write with Aut Precharge	Active (3)	Н	×	×	٧	Н	V	L	Н	L	L
Read	Active (3)	Н	×	×	>	L	V	L	Н	L	Н
Read with Auto Prechrage	Active (3)	Н	×	×	>	Н	V	L	Н	L	Н
Mode Register Set	Idle	Н	×	×	>	V	V	L	L	L	L
No - Operation	Any	Н	×	×	×	×	×	L	Н	Н	Н
Burst stop	Active (4)	Н	×	×	×	×	×	L	Н	Н	L
Device Deselect	Any	Н	×	×	×	×	×	Н	×	×	×
Auto Refresh	Idle	Н	Н	×	×	×	×	L	L	L	Н
Self Refresh Entry	Idle	Н	L	×	×	×	×	L	L	L	Н
Self Refresh Exit	Idle	L	н	×	×	×	×	Н	×	×	×
	(Self Refresh)	<u> </u>	<u> </u>	<u> </u>	<u> </u>	<u> </u>		L	Н	Н	×
Clock Suspend Mode Entry	Active	Н	L	×	×	×	×	×	×	×	×
Power Down Mode Enrty	Idle/Active ⁽⁶⁾	н	L	_×	×	×	_×	Н	×	×	×
	Michaelia	<u> </u>				<u> </u>		L	Н	Н	×
Clock Suspend Mode Exit	Active	L	Н	×	×	×	×	×	×	×	×
Power Down Mode Exit	Any	[н	_×	_×	×	_×	Н	×	×	×
POWER DOWN WIOGE EXIT	(Power Down)	ַ ''						L	Н	Н	×
Data write/Output Enable	Active	н	×	L	×	×	×	×	×	×	×

×

×

×

×

×

×

Table 1 Truth Table (Note (1) and (2))

Note (1) $V = Valid \times Don't Care L = Low level H = High level$

Н

(3) These are state designated by the BSO, BS1 signals.

Active

- (4) Device state is Full Page Burst operation.
- (5) LDQM, UDQM (TC59S6416BFT/BFTL)

Data write/Output Disable

(6) Power Down Mode can not entry in the burst cycle.
When this command assert in the burst cycle, device state is clock suspend mode.

×

⁽²⁾ CKE_n signal is input level when commands are issued.

CKE_{n-1} signal is input level one clock cycle before the commands are issued.

1. Command Function

1-1 Bank Activate command

 $(\overline{RAS} = \text{``L''}, \overline{CAS} = \text{``H''}, \overline{WE} = \text{``H''}, BS = Bank, A0 to A11 = Row Address)$

The Bank Activate command activates the bank designated by the BS (Bank Select) signal. Row addresses are latched on A0 to A11 when this command is issued and the cell data is read out of the sense amplifiers. The maximum time that each bank can be held in the active state is specified as $t_{RAS\,(max)}$.

1-2 Bank Precharge command

 $(\overline{RAS} = \text{``L''}, \overline{CAS} = \text{``H''}, \overline{WE} = \text{``L''}, BS = Bank, A10 = \text{``L''}, A0 to A9, A11 = Don't care)$

The Bank Precharge command precharges the bank designated by BS. The precharged bank is switched from the active state to the idle state.

1-3 Precharge All command

 $(\overline{RAS} = \text{``L''}, \overline{CAS} = \text{``H''}, \overline{WE} = \text{``L''}, BS = Don't care, A10 = \text{``H''}, A0 to A9, A11 = Don't care)$

The Precharge All command precharges all banks simultaneously. All banks are then switched to the idle state.

1-4 Write command

(RAS = "H", CAS = "L", WE = "L", BS = Bank, A10 = "L", A0 to A9 = Column Address)

The Write command performs a Write operation to the bank designated by BS. The write data is latched at the positive edges of CLK. The length of the write data (Burst Length) and column access sequence (Addressing Mode) must be in the Mode Resister at power-up prior to the Write operation.

The A9 input is "Don't care" on the TC59S6408BFT/BFTL and the A8 and A9 inputs are "Don't care" on the TC59S6416BFT/BFTL.

1-5 Write with Auto Precharge command

 $(\overline{RAS} = \text{"H"}, \overline{CAS} = \text{"L"}, \overline{WE} = \text{"L"}, BS = Bank, A10 = \text{"H"}, A0 \text{ to } A9 = Column Address)$

The Write with Auto Precharge command performs the Precharge operation automatically after the Write operation. This command must not be interrupted by any other commands.

The A9 input is "Don't care" at the TC59S6408BFT/BFTL and the A8 and A9 inputs are "Don't care" on the TC59S6416BFT/BFTL.

1-6 Read command

(RAS = "H", CAS = "L", WE = "H", BS = Bank, A10 = "L", A0 to A9 = Column Address)

The Read command performs a Read operation to the bank designated by BS. The read data is issued sequentially synchronized to the positive edges of CLK. The length of read data (Burst Length), Addressing Mode and \overline{CAS} Latency (access time from \overline{CAS} command in a clock cycle) must be programmed in the Mode Register at power-up prior to the Write operation.

The A9 input is "Don't care" on the TC59S6408BFT/BFTL and the A8 and A9 inputs are "Don't care" on the TC59S6416BFT/BFTL.

1-7 Read with Auto Precharge command

The Read with Auto Precharge command automatically performs the Precharge operation after the Read operation. This command must not be interrupted by any other command.

The A9 input is "Don't care" on the TC59S6408BFT/BFTL and the A8 and A9 inputs are "Don't care" on the TC59S6416BFT/BFTL.

1-8 Mode Register Set command

$$(\overline{RAS} = \text{"L"}, \overline{CAS} = \text{"L"}, \overline{WE} = \text{"L"}, BS, A0 \text{ to A11} = \text{Register Data})$$

The Mode Register Set command programs the values of $\overline{\text{CAS}}$ latency, Addressing Mode and Burst Length in the Mode Register. The default values in the Mode Register after power-up are undefined, therefore this command must be issued during the power-up sequence. Also, this command can be issued while all banks are in the idle state.

1-9 No-Operation command

$$(\overline{RAS} = \text{"H"}, \overline{CAS} = \text{"H"}, \overline{WE} = \text{"H"})$$

The No-Operation command simply performs no operation (same command as Device Deselect).

1-10 Burst stop command

$$(\overline{RAS} = \text{"H"}, \overline{CAS} = \text{"H"}, \overline{WE} = \text{"L"})$$

The Burst stop command is used to stop the burst operation. This command is valid during a Full Page Burst operation. During other types of Burst operation, the command is illegal.

1-11 Device Deselect command

$$(\overline{CS} = \text{"H"})$$

The Device Deselect command disables the command decoder so that the RAS, CAS, WE and Address inputs are ignored. This command is similar to the No-Operation command.

1-12 Auto Refresh command

$$(\overline{RAS} = \text{"L"}, \overline{CAS} = \text{"L"}, \overline{WE} = \text{"H"}, CKE = \text{"H"}, BS, A0 \text{ to A11} = Don't \text{ care})$$

The Auto Refresh command is used to refresh the row address provided by the internal refresh counter. The Refresh operation must be performed 4096 times within 64ms. The next command can be issued after t_{RC} from the end of the Auto Refresh command. When the Auto Refresh command is issued, All banks must be in the idle state. The Auto Refresh operation is equivalent to the \overline{CAS} -before- \overline{RAS} operation in a conventional DRAM.

1-13 Self Refresh Entry command

$$(\overline{RAS} = \text{"L"}, \overline{CAS} = \text{"L"}, \overline{WE} = \text{"H"}, CKE = \text{"L"}, BS, A0 \text{ to } A11 = Don't \text{ care})$$

The Self Refresh Entry command is used to enter Self Refresh mode. While the device is in Self Refresh mode, all input and output buffers (except the CKE buffer) are disabled and the Refresh operation is automatically performed. Self Refresh mode is exited by taking CKE "high" (the Self Refresh Exit command)

1-14 Self Refresh Exit command

$$(CKE = "H", \overline{CS} = "H" \text{ or } CKE = "H", \overline{RAS} = "H", \overline{CAS} = "H")$$

This command is used to exit from Self Refresh mode. Any subsequent commands can be issued after $t_{\rm RC}$ from the end of this command.

1-15 Clock Suspend Mode Entry/Power Down Mode Entry command (CKE = "L")

The internal CLK is suspended for one cycle when this command is issued (when CKE is asserted "low"). The device state is held intact while the CLK is suspended. On the other hand, when the device is not operating the Burst cycle, this command performs entry into Power Down mode. All input and output buffers (except the CKE buffer) are turned off in Power Down mode.

1-16 Clock Suspend Mode Exit/Power Down Mode Exit command (CKE = "H")

When the internal CLK has been suspended, operation of the internal CLK is resumed by providing this command (asserting CKE "high"). When the device is in Power Down mode, the device exits this mode and all disabled buffers are turned on to the active state. Any subsequent commands can be issued after one clock cycle from the end of this command.

1-17 Data Write/Output Enable, Data Mask/Output Disable command

$$(DQM = L/H)$$
 or $LDQM$, $UDQM = L/H$

During a Write cycle, the DQM or LDQM, UDQM signal functions as Data Mask and can control every word of the input data. During a Read cycle, the DQM or LDQM, UDQM signal functions as the control of output buffers.

The LDQM signal controls DQ0 to 7 and the UDQM signal controls DQ8 to 15.

2. Read Operation

Issuing the Bank Activate command to the idle bank puts it into the active state. When the Read command is issued after t_{RCD} from the Bank Activate command, the data is read out sequentially, synchronized to the positive edges of CLK (a Burst Read operation). The initial read data becomes available after \overline{CAS} latency from the issuing of the Read command. The \overline{CAS} latency must be set in the Mode Register at power-up. In addition, the burst length of read data and Addressing Mode must be set. Each bank is held in the active state unless the Precharge command is issued, so that the sence amplifiers can be used as secondary cache.

When the Read with Auto Precharge command is issued, the Prechage operation is performed automatically after the Read cycle, then the bank is switched to the idle state. This command cannot be interrupted by any other commands. Also, when the Burst Length is 1 and $t_{RCD}(min)$, the timing from the \overline{RAS} command to the start of the Auto Precharge operation is shorter than $t_{RAS}(min)$. In this case, $t_{RAS}(min)$ must be satisfied by extending t_{RCD} (Figure 9, 15).

When the Precharge operation is performed on a bank during a Burst Read operation, the Burst operation is terminated (Figure 20).

When the Burst Length is full-page, column data is repeatedly read out until the Burst Stop command or Precharge command is issued.

3. Write Operation

Issuing the Write command after t_{RCD} from the Bank Activate command, the input data is latched sequentially, synchronizing with the positive edges of CLK after the Write command (Burst Write operation). The burst length of the Write data (Burst Length) and Addressing Mode must be set in the Mode Register at power-up.

When the Write with Auto Precharge command is issued, the Precharge operation is performed automatically after the Write cycle, then the bank is switched to the idle state. This command cannot be interrupted by any other command for the entire burst data duration. Also, when the Burst Length is 1 and $t_{RCD}(min)$, the timing from the \overline{RAS} command to the start of the Auto Precharge operation is shorter than $t_{RAS}(min)$. In this case, $t_{RAS}(min)$ must be satisfied by extending t_{RCD} (Figure 10, 16).

When the Precharge operation is performed in a bank during a Burst Write operation, the Burst operation is terminated (Figure 20).

When the Burst Length is full-page, the input data is repeatedly latched until the Burst Stop command or the Precharge command is issued.

When the Burst Read and Single Write mode is selected, the write burst length is 1 regardless of the read burst length.

4. Precharge

There are two commands which perform the Precharge operation: Bank Precharge and Precharge All. When the Bank Precharge command is issued to the active bank, the bank is precharged and then switched to the idle state. The Bank Precharge command can precharge one bank independently of the other bank and hold the unprecharged bank in the active state. The maximum time each bank can be held in the active state is specifed as t_{RAS} (max). Therefore, each bank must be precharged within t_{RAS} (max) from the Bank Activate command.

The Precharge All command can be used to precharge all banks simultaneously. Even if banks are not in the active state, the Precharge All command can still be issued. In this case, the Precharge operation is performed only for the active bank and the precharged bank is then switched to the idle state.

5. Page Mode

The Read or Write command can be issued on any clock cycle.

Whenever a Read operation is to be interrupted by a Write command, the output data must be masked by DQM to avoid I/O conflict. Also, when a Write operation is to be interrupted by a Read command, only the input data before the Read command is enable and the input data after the Read command is disabled.

6. Burst Termination

When the Precharge command is issued for a bank in a Burst cycle, the Burst operation is terminated. When the Burst Read cycle is interrupted by the Precharge command, read operation is disabled after clock cycle of ($\overline{\text{CAS}}$ latency-1) from the Precharge command (Figure 20). When the Burst Write cycle is interrupted by the Precharge command, the input circuit is reset at the same clock cycle at which the Precharge command is issued. In this case, the DQM signal must be asserted "High" to prevent writing the invalid data to the cell array (Figure 20).

When the Burst Stop command is issued for the bank in a Full-page Burst cycle, the Burst operation is terminated. When the Burst Stop command is issued during Full-page Burst Read cycle, read operation is disabled after clock cycle of (CAS latency-1) from the Burst Stop command. When the Burst Stop command is issued during a Full-page Burst Write cycle, write operation is disabled at the same clock cycle at which the Burst Stop command is issued. (Figure 19)

7. Mode Register Operation

The Mode register designates the operation mode for the Read or Write cycle. This register is divided into three fields; A <u>Burst Length field</u> to set the length of burst data, an <u>Addressing Mode selected bits</u> to designate the column access sequence in a Burst cycle, and a <u>CAS Latency field</u> to set the access time in clock cycle.

The Mode Register is programmed by the Mode Register Set command when all banks are in the idle state. The data to be set in the Mode Register is transferred using the A0 to A11 address inputs. The initial value of the Mode Register after power - up is undefined; therefore the Mode Register Set command must be issued before proper operation.

• Burst Length field (A2 to A0)

This field specifies the data length for column access using the A2 to A0 pins and sets the Burst Length to be 1, 2, 4, 8 words, or full-page.

A2	A1	A0	Burst Length
0	0	0	1 word
0	0	1	2 words
0	1	0	4 words
0	1	1	8 words
1	1	1	Full-Page

• Addressing Mode Select (A3)

The Addressing Mode can be one of two modes; Interleave mode or Sequential mode. When the A3 bit is "0", Sequential mode is selected. When the A3 bit is "1", Interleave mode is selected. Both Addressing modes support burst length of 1, 2, 4 and 8 words. Additionally, Sequential mode supports the full-page burst.

А3	Addressing mode
0	Sequential
1	Interleave

• Addressing sequence of Sequential mode

A column access is performed by incrementing the column address input to the device. The address is varied by the Burst Length as shown in Table 2.

DATA **Burst Length** Access Address Data 0 2 words (Address bits is A0) not carried from A0 to A1 Data 1 n + 14 words (Address bits is A1, A0) Data 2 n + 2 not carried from A1 to A2 Data 3 n + 3Data 4 n + 48 words (Address bits is A2, A1, A0) Data 5 n + 5Data 6 not carried from A2 to A3 n + 6 Data 7 n + 7

Table 2 Addressing sequence for Sequential mode

Addressing sequence of Interleave mode

A column access is started from the input column address and is performed by inverting the address bits in the sequence shown in Table 3.


DATA	ACCESS ADDRESS	Burst Length
Data 0	A8 A7 A6 A5 A4 A3 A2 A1 A0)) 2 words
Data 1	A8 A7 A6 A5 A4 A3 A2 A1 A0	} 2 words
Data 2	A8 A7 A6 A5 A4 A3 A2 A1 A0	4 words
Data 3	A8 A7 A6 A5 A4 A3 A2 $\overline{\text{A1}}$ $\overline{\text{A0}}$	
Data 4	A8 A7 A6 A5 A4 A3 A2 A1 A0	
Data 5	A8 A7 A6 A5 A4 A3 $\overline{\text{A2}}$ A1 $\overline{\text{A0}}$	8 words
Data 6	A8 A7 A6 A5 A4 A3 A2 A1 A0	
Data 7	A8 A7 A6 A5 A4 A3 $\overline{\text{A2}}$ $\overline{\text{A1}}$ $\overline{\text{A0}}$	J

Table 3 Addressing sequence for Interleave mode

DATA Interleave m				ode			Sequential mode						
DATA	Α8	Α7	Α6	Α5	Α4	А3	A2	Α1	Α0	ADD		ADD	
Data 0	0	0	0	0	0	1	1	0	1	13	13	13	calculated using A2, A1 and A0 bits.
Data 1	0	0	0	0	0	1	1	0	0	12	13 + 1	14	
Data 2	0	0	0	0	0	1	1	1	1	15	13 + 2	15	
Data 3	0	0	0	0	0	1	1	1	0	14	13 + 3	8	
Data 4	0	0	0	0	0	1	0	0	1	9	13 + 4	9	not carry from
Data 5	0	0	0	0	0	1	0	0	0	8	13 + 5	10	A2 to A3 bit.
Data 6	0	0	0	0	0	1	0	1	1	11	13 + 6	11	
Data 7	0	0	0	0	0	1	0	1	0	10	13 + 7	12	

Addressing sequence example (Burst Length = 8 and input address is 13.)

Read Cycle \overline{CAS} Latency = 3

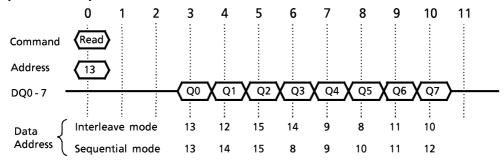

• CAS Latency field (A6 to A4)

This field specifies the number of clock cycles from the assertion of the Read command to the first data read. The minimum values of $\overline{\text{CAS}}$ Latency depends on the frequency of CLK. The minimum value which satisfies the following formula must be set in this field.

 t_{CAC} (min) $\leq \overline{CAS}$ Latency $\times t_{CK}$

A6	A5	A4	CAS Latency
0	1	0	2 clock
0	1	1	3 clock

• Test mode entry bit (A7)

This bit is used to enter Test mode and must be set to "0" for normal operation.

• Reserved bits (A8, A10, A11, BS)

These bits are reserved for future operations. They must be set to "0" for normal operation.

• Single Write mode (A9)

This bit is used to select the write mode. When the A9 bit is "0", Burst Read and Burst Write mode are selected. When the A9 bit is "1", Burst Read and Single Write mode are selected.

А9	Write Mode
0	Burst Read and Burst Write
1	Burst Read and Single Write

8. Refresh Operation

Two types of Refresh operation can be performed on the device: Auto Refresh and Self Refresh. Auto Refresh is similar to the $\overline{\text{CAS}}$ -before- $\overline{\text{RAS}}$ refresh of conventional DRAMs and is performed by issuing the Auto Refresh command while all banks are in the idle state. By repeating the Auto Refresh cycle, each bank in turn refreshed automatically. The Refresh operation must be performed 4096 times (rows) within 64ms (Figure 11). The period between the Auto Refresh command and the next command is specified by t_{RC} .

Self Refresh mode is entered by issuing the Self Refresh command (CKE asserted "low") while all banks are in the idle state. The device is in Self Refresh mode for as long as CKE is held "low". In Self Refresh mode all input/output buffers (except the CKE buffer) are disabled, resulting in lower power dissipation (Figure 12).


9. Power Down Mode

When the device enters the Power Down mode, all input/output buffers (except CKE buffer) are disabled resulting in lower power dissipation in the idle state. Power Down mode is entered by asserting CKE "low" while the device is not running a Burst cycle. Taking CKE "high" exit this mode. When CKE goes high, a No-operation command must be input at next CLK rising edge of CLK (Figure 13).

10.CLK suspension and Input/Output Mask

When the device is running a Burst cycle, the internal CLK is suspended by asserting CKE "low" and is frozen from the next cycle. A Read/Write operation is held intact until the CKE signal is taken "high".

The Output Disable/Write Mask signal (DQM) has two functions, controlling the output data in a Read cycle and performing word mask in a Write cycle. When the DQM is asserted "high" at the positive edge of CLK, the output data is disabled after two clock cycles in the case of a Read operation and the write data is masked at the same clock cycle in the case of a Write operation. The timing relation between the CKE timing and DQM is described in Figure 21(a) and 21(b).

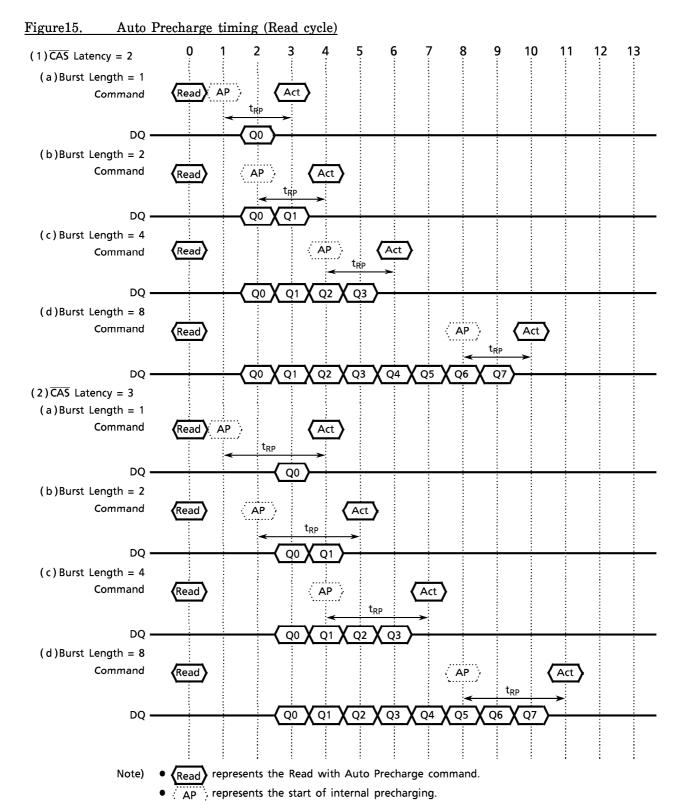


represents the Bank Activate command.

When the Auto Precharge command is asseted, the period from the Bank Activate

command to the start of internal precharging must be at least t_{RAS}(min).

Act

1998-01-12 42/51

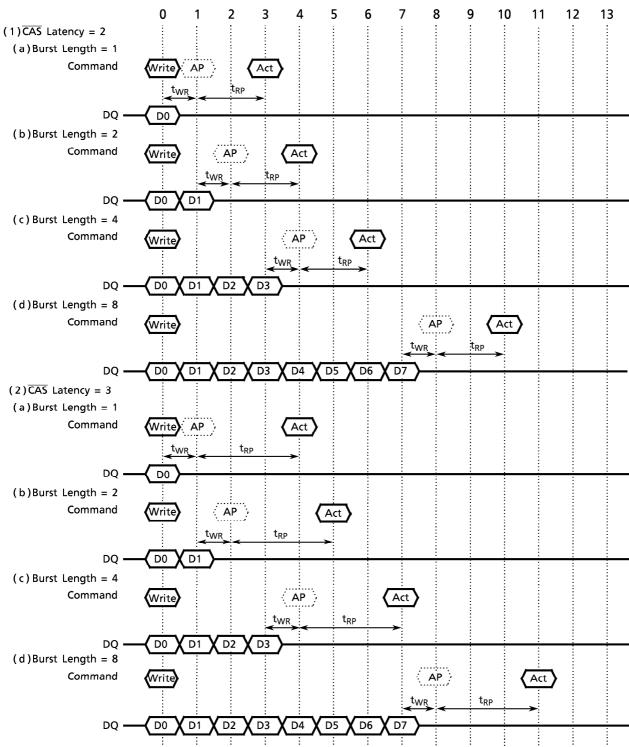

Auto Precharge timing (Write cycle) Figure 16.

- Note)
- Write represents the Write with Auto Precharge command.
 - represents the start of internal precharging.
 - Act represents the Bank Activate command.
 - When the Auto Precharge command is asseted, the period from the Bank Activate command to the start of internal precharging must be at least t_{RAS}(min).

Figure 17. Timing chart for Read-to-Write cycle


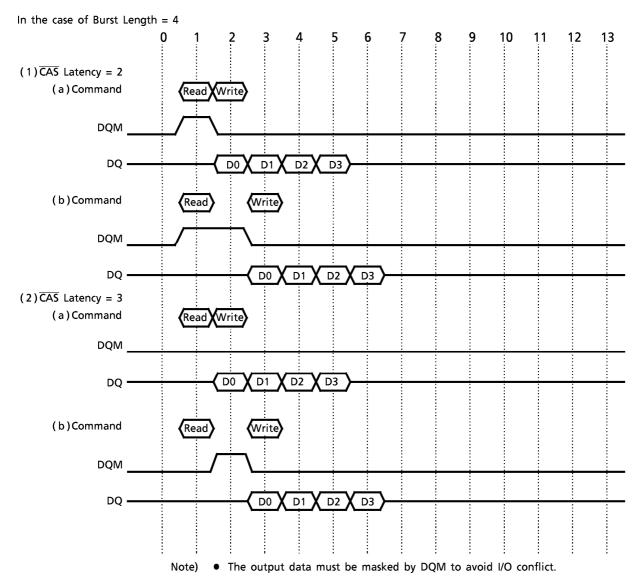



Figure 18. Timing chart for Write-to-Read cycle

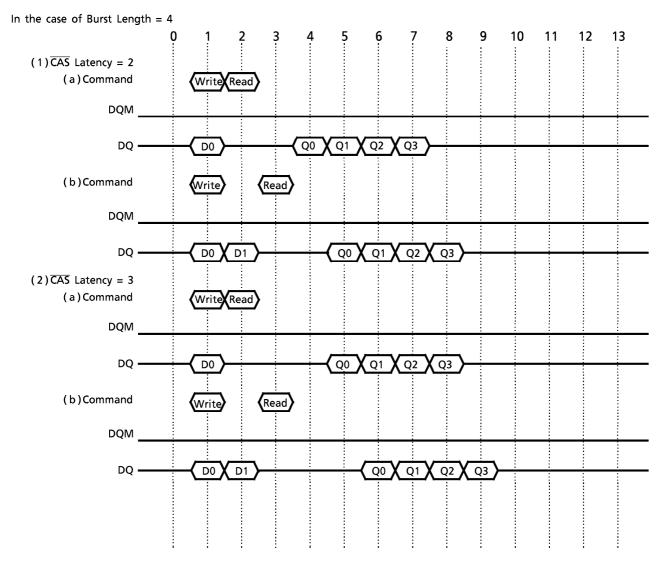



0 2 3 9 10 12 13 11 (1) Read cycle $(a)\overline{CAS}$ Latency = 2 BST Command **(**Read) DQ Q2 Q3 $(b)\overline{CAS}$ Latency = 3 Command BST Q1 Q2 Q3 DQ Q4 (2)Write Cylcle Command (Write) BST D0 D2 D4


(BST) represents the Burst stop command.


Figure 19. Timing chart for Burst Stop cycle (Burst stop command)

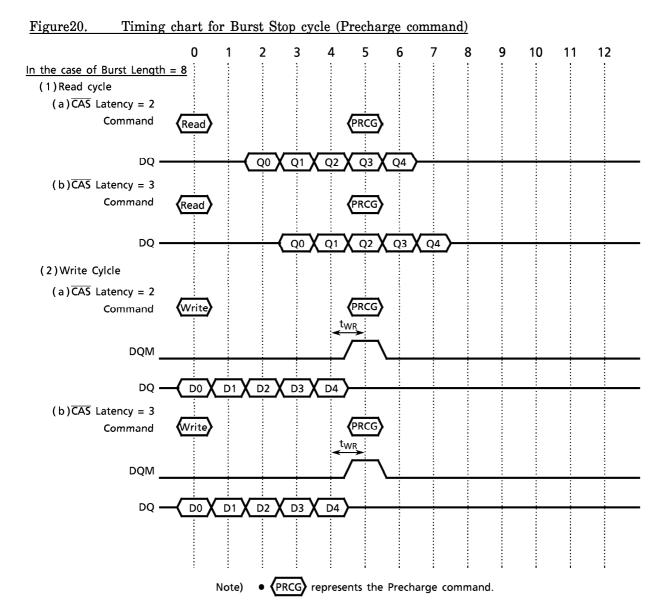




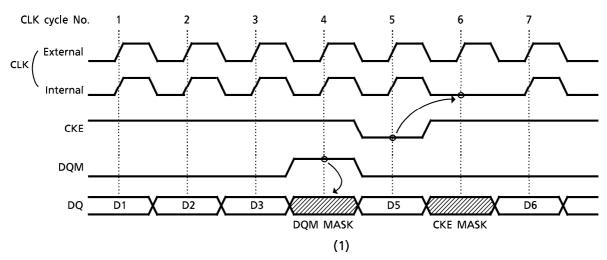


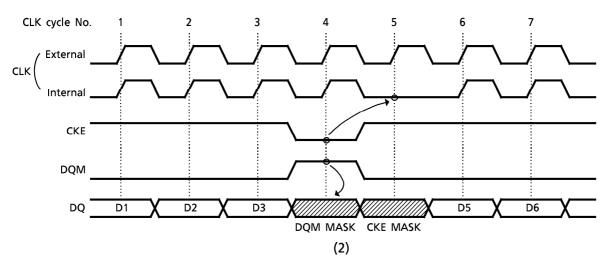

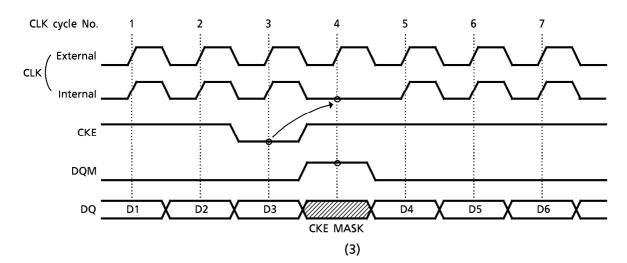



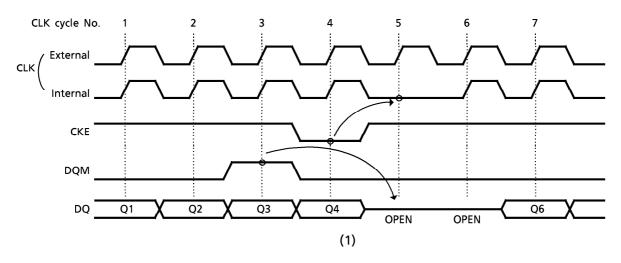

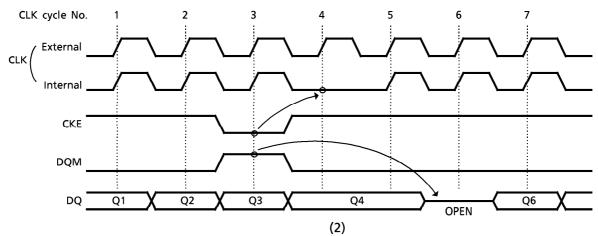


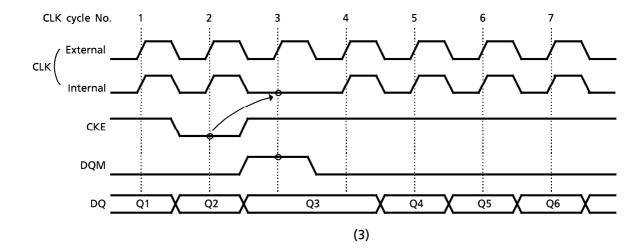



Figure 22.

Self Refresh/Power Down Mode Exit Timing

- Asynchronous Control Input Buffer turn on time (Power Down mode exit time) is specified by t_{CKS}(min) + t_{CK}(min).
 - A) $t_{CK} < t_{CKS}(min) + t_{CK}(min)$

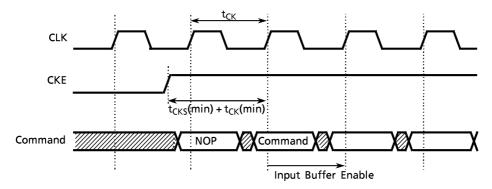

B) $t_{CK} \ge t_{CKS}(min) + t_{CK}(min)$

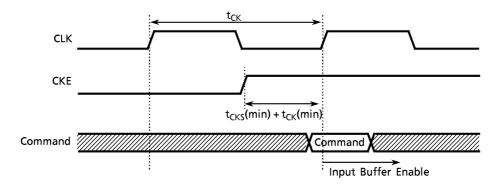

- NOTE) All Input Buffer (Include CLK Buffer) are turned off in the Power Down mode and Self Refresh mode
 - $\langle NOP \rangle$ represents the No-Operation command.
 - (Command) represents one command.

OUTLINE DRAWING (TSOPII 54 - P - 400 - 0.80B)

Unit in mm

