# **GP2Y3A001K0F**



**Optoelectronic Device** 

## **FEATURES**

- Wide Angle Sensors
- Trigger point set at factory to 25°
- Analog output
- Range: 4 to 30 cm
- Response Time: 20.2 Max.
- Response time: 16.5 Typ.
- Typical response time: 16.5 ms
- Typical start up delay: 21.2 ms

## **DESCRIPTION**

The GP2Y3A001K0F is a distance measuring sensor with integrated signal processing and analog voltage output.

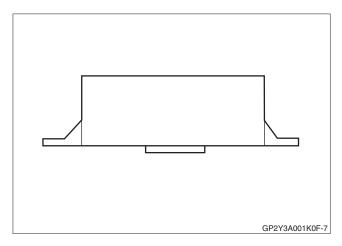


Figure 1. Pinout

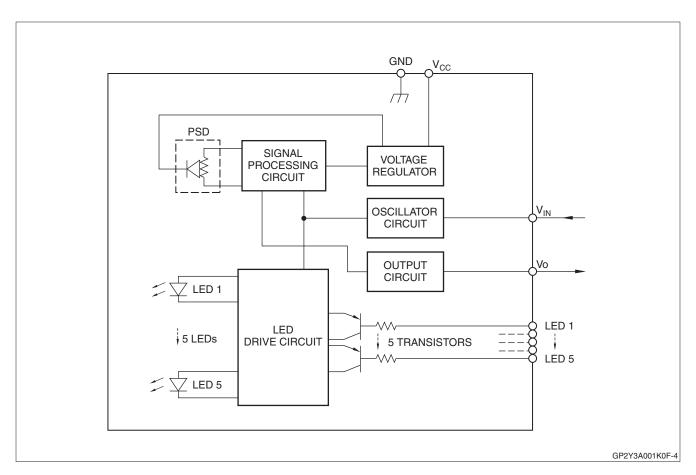


Figure 2. Block Diagram

1

## **ELECTRICAL SPECIFICATIONS**

## **Absolute Maximum Ratings**

 $Ta = 25^{\circ}C$ ,  $V_{CC} = 5$  VDC

PARAMETER	SYMBOL	RATING	UNIT
Supply Voltage	V <sub>CC</sub>	-0.3 to +7.0	V
Output Terminal Voltage	V <sub>O</sub>	-0.3 to (V <sub>CC</sub> + 0.3)	V
Input Voltage	V <sub>IN</sub> , LED 1 to LED 5	-0.3 to (V <sub>CC</sub> + 0.3)	V
Operating Temperature	Topr	-10 to +60	°C
Storage Temperature	Tstg	-40 to +70	°C

## **Operating Supply Voltage**

PARAMETER	SYMBOL	RATING	UNIT
Operating Supply Voltage	$V_{CC}$	4.5 to 5.5	V

## **Electro-optical Characteristics**

## **DISTANCE MEASURING SENSOR**

PARAMETER	SYMBOL	CONDITIONS	MIN.	TYP.	MAX.	UNIT
Measuring Distance Range	ΔL	(Note 1)	40	_	300	mm
Output Terminal Voltage	V <sub>O</sub>	L = 300 mm (Note 1)	(A-0.3)	(A)	(A+0.3)	V
Output Voltage Gap	ΔV <sub>O</sub>	Output voltage gap between L= 85 mm and L = 40 mm (Note 1)	(B-0.3)	(B)	(B+0.3)	V
Input Voltage	V <sub>IN</sub> H	Input voltage for operating distance measuring sensor	4.5	_	_	V
	V <sub>IN</sub> L	Input voltage for turning off distance measuring sensor	_	_	0.3	V
	LED H	Input voltage for turning LED OFF	4.5	_	_	V
	LED L	Input voltage for turning LED ON	_	_	0.5	V

#### NOTES

- 1. Measurements made with Kodak R-27 Gray Card, using the white side, (90% reflectivity).
- 2. L = Distance to reflective object
- 3. The voltage value of A and B is TBD.

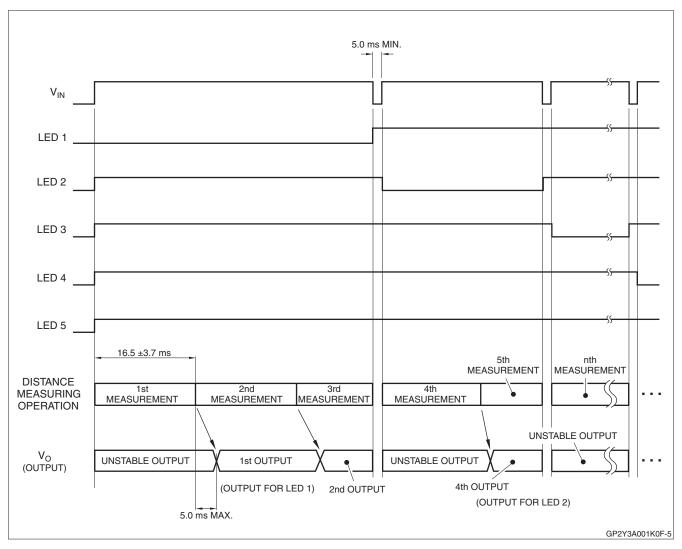


Figure 3. Timing Diagram

3

Data Sheet


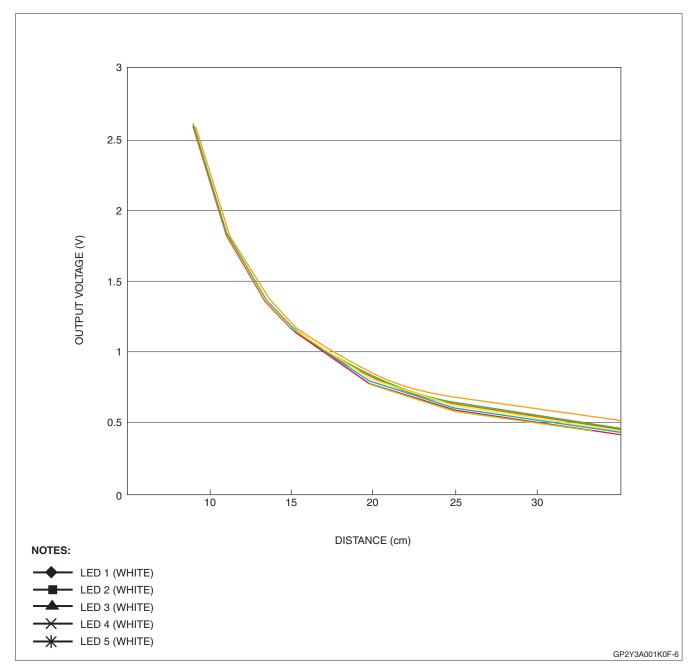


Figure 4. Example of Distance Measuring Characteristics (Output)


## **PACKAGE SPECIFICATIONS**

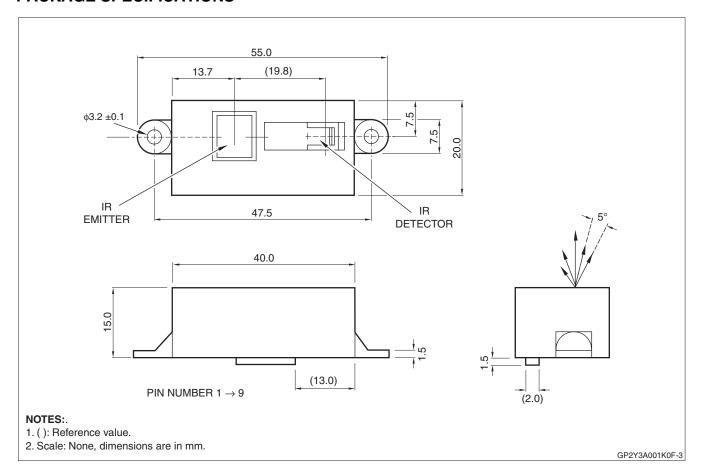

**Data Sheet** 

5

## **PACKING SPECIFICATION**

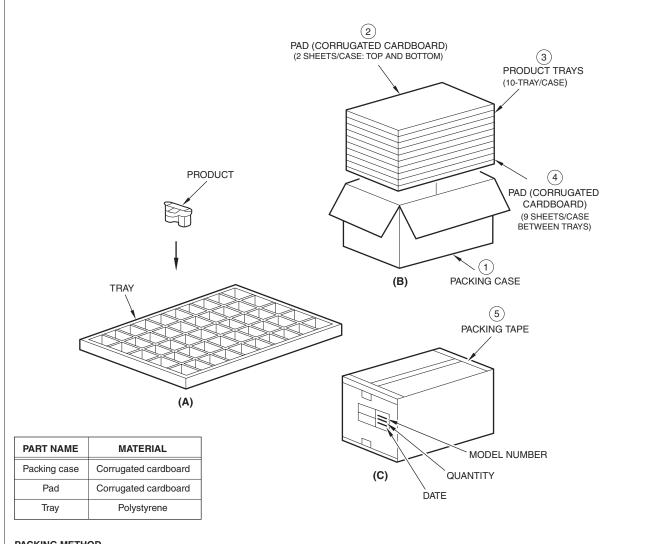

6

## PACKING METHOD

- 1. Each tray holds 50 pieces. Packing methods are shown in (A).
- 2. Each box holds 10 trays. Pads are added to top and bottom, and between layers, as in (B). top and bottom. Put pads between each tray (9 pads total) see above drawing (B).
- 3. The box is sealed with packing tape. (C) shows the location of the Model number, Quantity, and Inspection date.
- 4. Package weight: Approximately 4 kg.

GP2Y3A001K0F-8

**Data Sheet** 

### **NOTES**

- Keep the sensor lens clean. Dust, water, oil, and other contaminants can deteriorate the characteristics of this device. Applications should be designed to eliminate sources of lens contamination.
- When using a protective cover over the emitter and detector, ensure the cover efficiently transmits light throughout the wavelength range of the LED (λ = 850 nm ± 70 nm). Both sides of the protective cover should be highly polished. Use of a protective cover may decrease the effective distance over which the sensor operates. Ensure that any cover does not negatively affect the operation over the intended application range.
- Objects in proximity to the sensor may cause reflections that can affect the operation of the sensor.
- Sources of high ambient light (the sun or strong artificial light) may affect measurement. For best results, the application should be designed to prevent interference from direct sunlight or artificial light.

- Using the sensor with a mirror can induce measurement errors. Often, changing the incident angle on the mirror can correct this problem.
- If a prominent boundary line exists in the surface being measured, it should be aligned vertically to avoid measurement error. See Figure 5 for further details.
- When measuring the distance to objects in motion, align the sensor so that the motion is in the horizontal direction instead of vertical. Figure 6 illustrates the preferred alignment.
- A 10 μF (or larger) bypass capacitor between V<sub>CC</sub> and GND near the sensor is recommended.
- To clean the sensor, use a dry cloth. Use of any liquid to clean the device may result in decreased sensitivity or complete failure.
- Excessive mechanical stress can damage the internal sensor or lens.

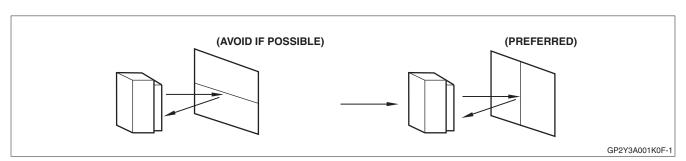


Figure 5. Proper Alignment to Surface Being Measured

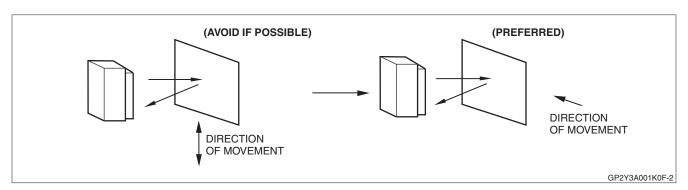


Figure 6. Proper Alignment to Moving Surfaces

7

Data Sheet

SHARP GP2Y3A001K0F

## NOTICE

The circuit application examples in this publication are provided to explain representative applications of SHARP devices and are not intended to guarantee any circuit design or license any intellectual property right. SHARP takes no responsibility for any problems related to any intellectual property right of a third party resulting from the use of SHARP devices.

SHARP reserves the right to make changes in the specifications, characteristics, data, materials, structures and other contents described herein at any time without notice in order to improve design or reliability.

Contact SHARP in order to obtain the latest device specification sheets before using any SHARP device. Manufacturing locations are also subject to change without notice.

In the absence of confirmation by device specification sheets, SHARP takes no responsibility for any defects that occur in equipment using any SHARP devices shown in catalogs, data books, etc.

The devices listed in this publication are designed for standard applications for use in general electronic equipment. SHARP's devices shall not be used for or in connection with equipment that requires an extremely high level of reliability, such as military and aerospace applications, telecommunication equipment (trunk lines), nuclear power control equipment and medical or other life support equipment (e.g. Scuba). SHARP takes no responsibility for damage caused by improper use of device, which does not meet the conditions for use specified in the relevant specification sheet.

If the SHARP devices listed in the publication fall within the scope of strategic products described in the Foreign Exchange and Foreign Trade Law of Japan, it is necessary to obtain approval to export such SHARP devices.

This publication is the proprietary product of SHARP and is copyrighted, with all rights reserved. Under the copyright laws, no part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical for any purpose, in whole or in part, without the express written permission of SHARP. Express written permission is also required before any use of this publication may be made by a third party.

Contact and consult with a SHARP representative if there are any questions about the contents of this publication.



### SHARP CORPORATION

SALES & MARKETING GROUP

**ELECTRONIC COMPONENTS & DEVICES** 

22-22 NAGAIKE-CHO, ABENO-KU, OSAKA 545-8522, JAPAN

PHONE: (81) 6-6621-1221

FAX: (81) 6117-725300, 6117-725301, 6117-725302

http://sharp-world.com/products/device

Specifications are subject to change without notice.

### Countries and Areas

#### U.S.A.

SHARP MICROELECTRONICS OF THE AMERICAS

#### North American Head Office

5700 North West Pacific Rim Boulevard Camas, Washington 98607 USA PHONE: (1)360-834-2500 FAX: (1)360-834-8903 http://www.sharpsma.com

#### Western Area

1980 Zanker Road, San Jose, CA 95112 PHONE: (1)408-436-4900 FAX: (1)408-436-0924

5901 Bolsa Ave

Huntington Beach, CA 92647-2053 PHONE: (1)714-903-4600 FAX: (1)714-903-0295

6390 Greenwich Drive, S uite 175 San Diego, CA 92122 PHONE: (1)858-597-0982 FAX: (1)858-597-8701

#### Central Area

85 W. Algonquin Road, Suite 280 Arlington Heights, IL 60005 PHONE: (1)847-258-2750 FAX: (1)847-439-2479

6303 Commerce Drive, Suite 175 Irving, TX 75063

PHONE: (1)972-582-1710 FAX: (1)972-580-7537

8911 Capitol of Texas Hwv. Suite 3130

Austin, TX 78759 PHONE: (1)512-349-7262 FAX: (1)512-349-7002

20333 State Hwy. 249, Suite 200 Houston, TX 77070 PHONE: (1)281-378-1520

FAX: (1)281-378-1521

W129 S 9647 Tony Lema Lane Muskego, WI 53150

PHONE: (1)414-529-9568 FAX: (1)414-529-9569

3001 West Big Beaver Road, Suite 722

Troy, ML 48084 PHONE: (1)248-458-1527 FAX: (1)248-458-6255

#### Eastern Area

1070 N. Kimbles Road, Yardley, PA 19067

PHONE: (1)215-321-5530 FAX: (1)215-321-5534

200 Wheeler Rd., Burlington, MA 01803 PHONE: (1)781-270-7979; (1)781-229-5100

FAX: (1)781-229-9117

8000 Regency Parkway, Suite 280 Cary, NC 27511

PHONE: (1)919-460-0695 FAX: (1)919-460-0795

2321 Sidney St. Pittsburgh, PA 15203

PHONE: (1)412-381-1191 FAX: (1)412-381-1192

4875 North Federal Highway, Third Floor

Ft. Lauderlade, FL 33318 PHONE: (1)954-267-8883 FAX: (1)954-267-0254

### **EUROPE**

SHARP MICROELECTRONICS EUROPE A division of Sharp Electronics (Europe) GmbH

#### **Head Office**

Sonninstrasse 3, 20097, Hamburg, Germany

PHONE: (49)180-5073507 FAX: (49)40-2376-2232 http://www.sharpsme.com/

#### Germany

SME München Office Fuerstenriederstrasse 5, 80687 München, Germany

PHONE: (49)89-5468420 FAX: (49)89-54 684250

#### France

SME Paris Office 1 Rue Raoul Follereau Bussy Saint Georges 77608 Marne la Vallee Cedex 3

PHONE: (33)1 6476 22 22 FAX: (33)1 6476 22 23

#### Italy

SME Milano Office Centro Direzionale Colleoni Palazzo Taurus Ingresso 2 20041 Agrate Brianza, Milano, Italy PHONE: (390)39-68 99 946 FAX: (390)39-68 99 948

SME London Office Centennial Court, Easthampstead Road, Bracknell, Berkshire R G12 1YQ, United Kingdom PHONE: (44)1344-86 99 22 FAX: (44)1344-36 09 03

### Ireland

SME Dublin Office First Floor, Block 1, St. Johns Court, Santry, Dublin 9, Ireland

PHONE: (353)1-842 87 05 FAX: (353)1-842 84 55

### **ASIA**

SHARP ELECTRONICS (SHANGHAI) CO., LTD. Microelectronics Sales & Marketing Division 16F, King Tower, 28 Xin Jin Qiao Road, Pudong DIST, Shanghai 201206 P.R. China PHONE: (86)21-5854-7710/21-5834-6056 FAX: (86)21-5854-4340/21-5834-6057

Registered Address

No. 11, De Bao Road, Xin Development BLDG 46 Wai Gao Qiao Free Trade Zone, Shanghai 200131, P.R. China

#### **Beijing Office**

Room 1062, Beijing Jing An Center No. 8 East Bei San Huan Road, Chao Yang DIST, Beijing 100028 P.R . China

PHONE: (86) 10-6466-7543/10-6466-6561

FAX: (86) 10-6468-8920

http://sharp-world.com/products/devicechina/

index.html

SHARP-ROXY (HONG KONG) LTD. Device Sales Division, 17/F, Admiralty Centre, Tower 1, 18 Harcourt Road, Hong Kong

PHONE: (852)28229311 FAX: (852)28660779 http://www.sharp.com.hk

#### **Shenzhen Representative Office**

Room 13B1, Tower C, Electronics Science & Technology Building, Shen Nan Zhong Road, Shenzhen, P.R. China

PHONE: (86)755-83273731 FAX: (86)755-83273735

SHARP ELECTRONIC COMPONENTS (TAIWAN) CORPORATION

8F-A, No. 16, Sec. 4, Nanking E. R d., Taipei, Taiwan PHONE: (886)2-2577-7341

FAX: (886)2-2577-7326/2-2577-7328

SHARP ELECTRONICS (SINGAPORE) PTE., LTD. 396 Alexandra Road #07-00 BP Tower Singapore 119954 PHONE: (65) 62713566 FAX: (65) 62713855 http://www.sesl-sharp.com

SHARP MICROELECTRONICS TECHNOLOGY (M) SDN BHD. Suite E 408, 4th Floor, East Tower, Wisma Consplant 1, No. 2 J In. SS 16/4, Subng Jaya, 47500, Selangor Darul Ehsan, Malaysia

PHONE: (60) 3-5637-8964 FAX: (60) 3-5638-4029

SHARP ELECTRONIC COMPONENTS (KOREA) CORPORATION RM 501 iLsin B/D. 541, Dohwa-dong, Mapo-ku, Seoul, Korea, 121-701 PHONE: (82)2-711-5813 ~ 8 FAX: (82)2-711-5819

Distributed By