


# BP-204SS-P2

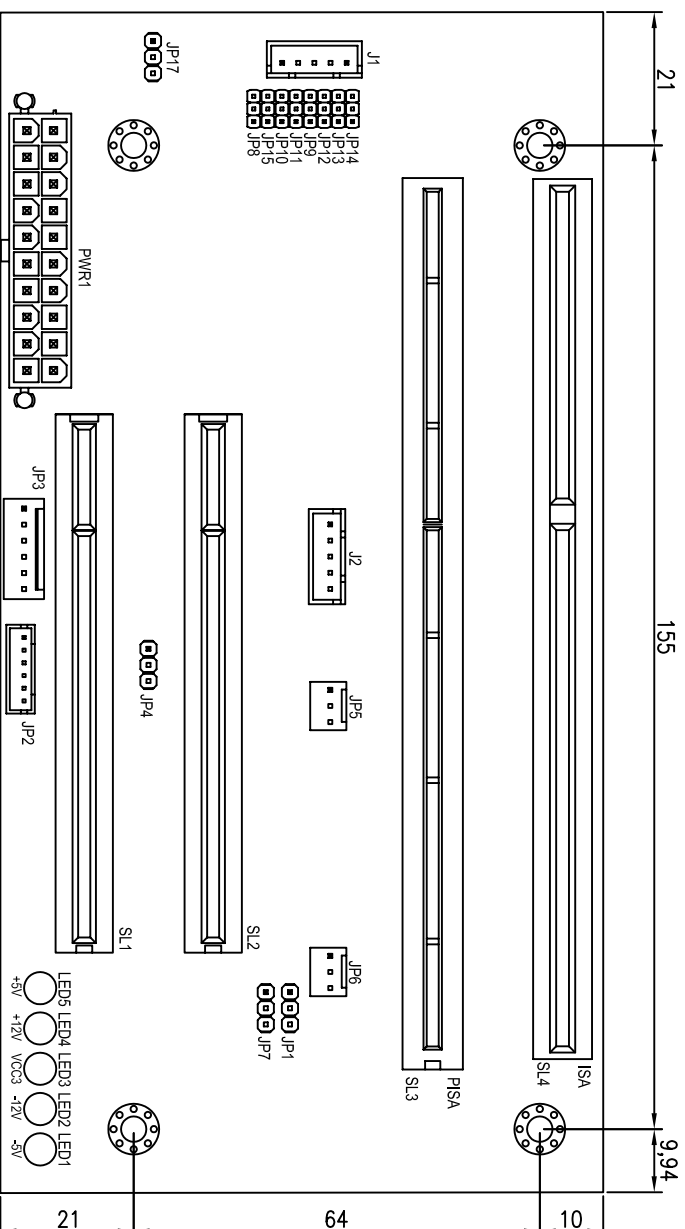

## PCI Routing Table

Slot	IDSEL	Interrupt Routing Table	REQ
SL1	AD30	INTC INTD INTA INTB	REQ_B

### NOTE

- A.PISA CPU Card Used  
 1.PISA CPU card only can plug in SL3  
 2.Available Slot: PCI:SL1 ISA:SL4
- B.PCI CPU Card Used  
 1.PCI CPU card only can plug in SL2  
 2.Available Slot: PCI:SL1 ISA:SL3,SL4
- C.ISA CPU Card Used  
 1.ISA CPU card can plug in SL3 or SL4  
 2.Available Slot: ISA:SL3 or sl4

JP1: PISA BUS V\_L/I/O Select  
 1-2Pin +5V (Default)  
 2-3Pin +3.3v

JP2,3: PS-ON Function, to CPU card  
 for ATX Power signal

JP2 JP3  
 Pin1:NC  
 Pin2:GND  
 Pin3:Power-ok  
 Pin4:GND  
 PIN5:PS\_on  
 Pin6:5VSB

JP4: PCI Slot IS select (default)  
 1-2Pin AD30  
 2-3Pin AD21

JP5,6: +12V DC Fan connector  
 Pin1:NC  
 Pin2:+12V  
 Pin3:GND

JP7: +3.3V Power select  
 1-2Pin ATX Power  
 2-3Pin On board (default)

JP8~15: PICMG PCI  
 or PISA CPU Card select  
 1-2Pin PICMG PCI CPU Card  
 2-3Pin PISA CPU Card

JP17: Keyboard Power Select  
 1-2Pin +5V (default)  
 2-3Pin +5VSB

J1,2: Keyboard Connector  
 Pin1:KB\_CLOCK  
 Pin2:KB\_DATA  
 Pin3:NC  
 Pin4:GND  
 Pin5:KBVCC