

STRUCTURE	Silicon monolithic integrated circuits
PRODUCT SERIES	Bipolar stepping motor driver
ТҮРЕ	BD63847EFV
FUNCTION	PWM constant current controllable

- le two H bridge driver
- Built-in translator circuit for CLK-IN control
- · Full, Half, Eighth, and Sixteenth step modes
- Mix decay control

OAbsolute maximum ratings(Ta=25°C)

Item	Symbol	Ratings	Unit	
Supply voltage	V _{CC1,2}	-0.3~+36.0	V	
Dewer dissinction		1.45 ^{×1}	W	
Power dissipation	Pd	4.70 ^{%2}	W	
Input voltage for control pin	V _{IN}	-0.3~+7.0	V	
RNF voltage	V _{RNF}	0.7	V	
Output current	IOUT	2.0 ^{**3}	A/phase	
Output current(peak) ^{**4}	IOUTPEAK	2.5 ^{**3}	A/phase	
Operating temperature range	T _{opr}	-25~+85	°C	
Storage temperature range	T _{stg}	-55~+150	°C	
Junction temperature	T _{jmax}	+150	°C	

^{*1} 70mm × 70mm × 1.6mm glass epoxy board. Derating in done at 11.6mW/°C for operating above Ta=25°C.

 $*^2$ 4-layer recommended board. Derating in done at 37.6mW/°C for operating above Ta=25°C.

 *3 Do not, however exceed Pd, ASO and Tjmax=150°C.

 *4 Pulse width tw \leq 1ms, duty 20%.

OOperating conditions (Ta=-25~+85°C)

Item	Symbol	Min.	Тур.	Max.	Unit
Supply voltage	V _{CC1,2}	19	24	28	V
Input voltage for control pin	V _{IN}	0	-	5.5	V

This product isn't designed for protection against radioactive rays.




OElectrical characteristics (Unless otherwise specified, Ta=25°C, V_{CC1,2}=24V)


ltere	Symbol	Limit			1.1	O an alitica a
Item		Min.	Тур.	Max.	Unit	Conditions
Whole						
Circuit current at standby	I _{CCST}	-	1.0	2.5	mA	PS=L
Circuit current	I _{CC}	-	2.5	5.0	mA	PS=H, VREF=3V
Control input (CLK, CW_CCW, M	NODE0, MOI	DE1, ENAB	LE, PS)			
H level input voltage	V _{INH}	2.0	-	-	V	
L level input voltage	VINL	-	-	0.8	V	
H level input current	l _{inh}	35	50	100	μA	V _{IN} =5V
L level input current	I _{INL}	-10	0	-	μA	V _{IN} =0V
Output (OUT1A, OUT1B, OUT2A	, OUT2B)					
Output ON resistance	R _{ON}	-	0.85	1.10	Ω	I _{OUT} =1.5A, Sum of upper and lower
Output leak current	I _{LEAK}	-	-	10	μA	
Current control		l		l		
RNFXS input current	I _{RNFS}	-2.0	-0.1	-	μA	RNFXS=0V
RNFX input current	I _{RNF}	-40	-20	-	μA	RNFX=0V
VREF input current	I _{VREF}	-2.0	-0.1	-	μA	VREF=0V
VREF input voltage range	V _{REF}	0	-	3.0	V	
MTH input current	I _{MTH}	-2.0	-0.1	-	μA	MTH=0V
MTH input voltage range	V _{MTH}	0	-	3.5	V	
Minimum on time (Blank time)	tonmin	0.3	0.8	1.5	μs	C=1000pF, R=39kΩ
Comparator threshold 1	V _{CTH1}	0.570	0.600	0.630	V	VREF=3V, 100%
Comparator threshold 2	V _{CTH2}	0.403	0.424	0.445	V	VREF=3V, 70.71%
Comparator threshold 3	V _{СТН3}	0.196	0.230	0.264	V	VREF=3V, 38.27%



OPackage outline

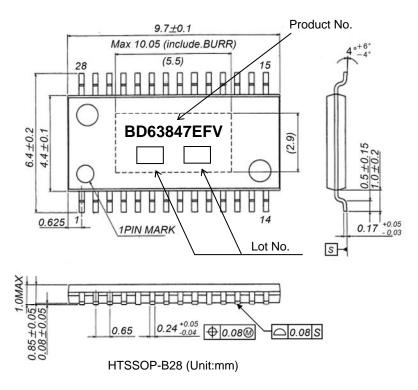

OBlock diagram

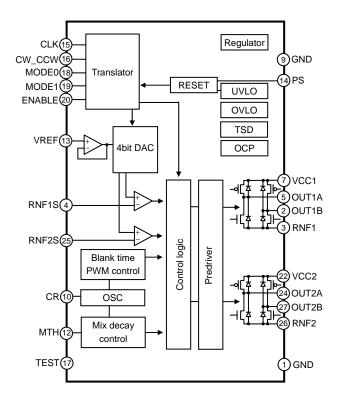

OPin No. / Pin name

Pin No.	Pin name	Pin No.	Pin name
1	GND	15	CLK
2	OUT1B	16	CW_CCW
3	RNF1	17	TEST
4	RNF1S	18	MODE0
5	OUT1A	19	MODE1
6	NC	20	ENABLE
7	VCC1	21	NC
8	NC	22	VCC2
9	GND	23	NC
10	CR	24	OUT2A
11	NC	25	RNF2S
12	MTH	26	RNF2
13	VREF	27	OUT2B
14	PS	28	NC

NC : Non Connection



OOperation Notes

(1) Absolute maximum ratings

An excess in the absolute maximum ratings, such as supply voltage, temperature range of operating conditions, etc., can break down the devices, thus making impossible to identify breaking mode, such as a short circuit or an open circuit. If any over rated values will expect to exceed the absolute maximum ratings, consider adding circuit protection devices, such as fuses.

(2) Power supply lines

As return of current regenerated by back EMF of motor happens, take steps such as putting capacitor between power supply and GND as an electric pathway for the regenerated current. Be sure that there is no problem with each property such as emptied capacity at lower temperature regarding electrolytic capacitor to decide capacity value. If the connected power supply does not have sufficient current absorption capacity, regenerative current will cause the voltage on the power supply line to rise, which combined with the product and its peripheral circuitry may exceed the absolute maximum ratings. It is recommended to implement a physical safety measure such as the insertion of a voltage clamp diode between the power supply and GND pins.

(3) GND potential

The potential of GND pin must be minimum potential in all operating conditions.

(4) Metal on the backside (Define the side where product markings are printed as front) The metal on the backside is shorted with the backside of IC chip therefore it should be connected to GND.

Be aware that there is a possibility of malfunction or destruction if it is shorted with any potential other than GND.

(5) Thermal design

Use a thermal design that allows for a sufficient margin in light of the power dissipation (Pd) in actual operating conditions. This IC exposes the metal on the backside of package. Note that this part is assumed to use after providing heat dissipation treatment to improve heat dissipation efficiency. Try to occupy as wide as possible with heat dissipation pattern not only on the board surface but also the backside.

(6) Operation in strong electromagnetic field

Use caution when using the IC in the presence of a strong electromagnetic field as doing so may cause the IC to malfunction.

(7) ASO

When using the IC, set the output transistor so that it does not exceed absolute maximum ratings or ASO.

(8) Thermal shutdown circuit

The IC has a built-in thermal shutdown circuit (TSD circuit). If the chip temperature becomes Tjmax=150°C, and higher, coil output to the motor will be open. The TSD circuit is designed only to shut the IC off to prevent runaway thermal operation. It is not designed to protect or indemnify peripheral equipment. Do not use the TSD function to protect peripheral equipment.

(9) Ground wiring pattern

When using both large current and small signal GND patterns, it is recommended to isolate the two ground patterns, placing a single ground point at the ground potential of application so that the pattern wiring resistance and voltage variations caused by large currents do not cause variations in the small signal ground voltage. Be careful not to change the GND wiring pattern of any external components, either.

(10) TEST pin

Be sure to connect TEST pin to GND.

	copying or reproduction of this document, in part or in whole, is permitted without the asent of ROHM Co.,Ltd.
The	e content specified herein is subject to change for improvement without notice.
"Pr	e content specified herein is for the purpose of introducing ROHM's products (hereinafte oducts"). If you wish to use any such Product, please be sure to refer to the specifications ich can be obtained from ROHM upon request.
illu	amples of application circuits, circuit constants and any other information contained herein strate the standard usage and operations of the Products. The peripheral conditions mus taken into account when designing circuits for mass production.
Ho	eat care was taken in ensuring the accuracy of the information specified in this document wever, should you incur any damage arising from any inaccuracy or misprint of such prmation, ROHM shall bear no responsibility for such damage.
exa imp oth	e technical information specified herein is intended only to show the typical functions of an imples of application circuits for the Products. ROHM does not grant you, explicitly o plicitly, any license to use or exercise intellectual property or other rights held by ROHM and er parties. ROHM shall bear no responsibility whatsoever for any dispute arising from the of such technical information.
equ	Products specified in this document are intended to be used with general-use electronic upment or devices (such as audio visual equipment, office-automation equipment, commu ation devices, electronic appliances and amusement devices).
The	Products specified in this document are not designed to be radiation tolerant.
	ile ROHM always makes efforts to enhance the quality and reliability of its Products, a duct may fail or malfunction for a variety of reasons.
aga fail sha	ase be sure to implement in your equipment using the Products safety measures to guard ainst the possibility of physical injury, fire or any other damage caused in the event of the ure of any Product, such as derating, redundancy, fire control and fail-safe designs. ROHM all bear no responsibility whatsoever for your use of any Product outside of the prescribed uppe or not in accordance with the instruction manual.
sys ma ins cor of t	e Products are not designed or manufactured to be used with any equipment, device o tem which requires an extremely high level of reliability the failure or malfunction of which y result in a direct threat to human life or create a risk of human injury (such as a medica trument, transportation equipment, aerospace machinery, nuclear-reactor controller, fuel- ntroller or other safety device). ROHM shall bear no responsibility in any way for use of any the Products for the above special purposes. If a Product is intended to be used for any ch special purpose, please contact a ROHM sales representative before purchasing.
be	ou intend to export or ship overseas any Product or technology specified herein that ma controlled under the Foreign Exchange and the Foreign Trade Law, you will be required to ain a license or permit under the Law.



Thank you for your accessing to ROHM product informations. More detail product informations and catalogs are available, please contact us.

ROHM Customer Support System

http://www.rohm.com/contact/