



3-polige Schütze UA...-RA, UAF...-RA zum Schalten von Kondensatoren Spitzenstrom \hat{I} unbegrenzt

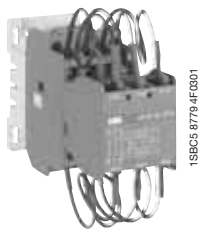


UA 16-30-10 RA

1SBC5 8779 4F001

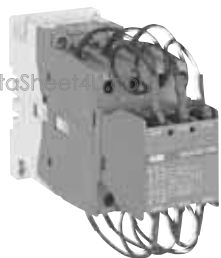

UA 30-30-10 RA

1SBC5 8777 4F001

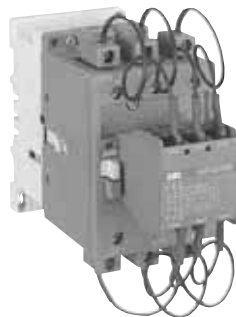

UA 75-30-00 RA

1SBC5 8779 4F001



UA 110-30-00 RA

1SBC5 9144 4F002

Bestelldaten

Typ	Leistung 400 V	Hilfskontakte 	Bestell-Nummer	Gewicht 1 Stück kg Verp.- Einheit 1 Stück
	40 °C kvar			
UA 16-30-10-RA	12,5	1 -	1SBL 181 024 R <input type="checkbox"/> <input type="checkbox"/> 10	0,460
UA 16-30-01-RA	12,5	1 -	1SBL 181 024 R <input type="checkbox"/> <input type="checkbox"/> 01	0,460
UA 26-30-10-RA	22	1 -	1SBL 241 024 R <input type="checkbox"/> <input type="checkbox"/> 10	0,710
UA 30-30-10-RA	30	1 -	1SBL 281 024 R <input type="checkbox"/> <input type="checkbox"/> 10	0,810
UA 50-30-00-RA	40	- -	1SBL 351 024 R <input type="checkbox"/> <input type="checkbox"/> 00	1,350
UA 63-30-00-RA	50	- -	1SBL 371 024 R <input type="checkbox"/> <input type="checkbox"/> 00	1,350
UA 75-30-00-RA	60	- -	1SBL 411 024 R <input type="checkbox"/> <input type="checkbox"/> 00	1,350
UA 95-30-00-RA	70	- -	1SFL 431 024 R <input type="checkbox"/> <input type="checkbox"/> 00	2,000
UA 110-30-00-RA	80	- -	1SFL 451 024 R <input type="checkbox"/> <input type="checkbox"/> 00	2,000

Spulenspannungen und Kennziffern

Spannung V - 50 Hz	Spannung V - 60 Hz	Kennziffer <input type="checkbox"/> <input type="checkbox"/>
24	24	8 1
48	48	8 3
110	110 ... 120	8 4
220 ... 230	230 ... 240	8 0
230 ... 240	240 ... 260	8 8
380 ... 400	400 ... 415	8 5
400 ... 415	415 ... 440	8 6

Andere Spannungen: siehe Seite U/3.

Unsere Lösung bei Störungen der Steuerspannung

Typ	Leistung 400 V 40 °C kvar	Spulenspannung V		Bestell-Nummer
		AC 50/60 Hz	DC	
UAF 75-30-00-RA	60	48...130	48...130	1SBL 417 024 R6900
UAF 75-30-00-RA		100...250	48...130	1SBL 417 024 R7000
UAF 95-30-00-RA	70	-	20...60 (1)	1SFL 437 024 R7200
UAF 95-30-00-RA		48...130	48...130	1SFL 437 024 R6900
UAF 95-30-00-RA		100...250	100...250	1SFL 437 024 R7000
UAF 110-30-00-RA	80	-	20...60 (1)	1SFL 457 024 R7200
UAF 110-30-00-RA		48...130	48...130	1SFL 457 024 R6900
UAF 110-30-00-RA		100...250	100...250	1SFL 457 024 R7000

(1) Auf den richtigen Anschluss der Spulenklemmen achten:
Klemme **A1** an Pluspol (+) und Klemme **A2** an Minuspol (-)