

Features

CAS Latency and Frequency

	Maximum Operating Frequency (MHz)							
CAS Latency	DDR200	DDR266A	DDR333					
	-8	-7	-6					
2	100	133	133					
2.5	125	143	166					

- Double data rate architecture: two data transfers per clock cycle
- Bidirectional data strobe (DQS) is transmitted and received with data, to be used in capturing data at the receiver
- DQS is edge-aligned with data for reads and is center-aligned with data for writes
- Differential clock inputs (CK and CK)
- · Four internal banks for concurrent operation
- Data mask (DM) for write data. The x16 organi-

Description

The 128Mb DDR SDRAM is a high-speed CMOS, dynamic random-access memory containing 134,217,728 bits. It is internally configured as a quad-bank DRAM.

The 128Mb DDR SDRAM uses a double-data-rate architecture to achieve high-speed operation. The double data rate architecture is essentially a 2n prefetch architecture with an interface designed to transfer two data words per clock cycle at the I/O pins. A single read or write access for the 128Mb DDR SDRAM effectively consists of a single 2n-bit wide, one clock cycle data transfer at the internal DRAM core and two corresponding n-bit wide, onehalf-clock-cycle data transfers at the I/O pins.

A bidirectional data strobe (DQS) is transmitted externally, along with data, for use in data capture at the receiver. DQS is a strobe transmitted by the DDR SDRAM during Reads and by the memory controller during Writes. DQS is edge-aligned with data for Reads and center-aligned with data for Writes.

The 128Mb DDR SDRAM operates from a differential ______ clock (CK and CK; the crossing of CK going HIGH and CK going LOW is referred to as the positive edge of CK). Commands (address and control signals) are registered at every positive edge of CK. Input data is registered on both edges of DQS, and output data is referenced to both edges of DQS, as well as to both edges of CK.

Read and write accesses to the DDR SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an Active command, which is then followed by a Read or Write command. The address bits registered coincident with the Active command are used to select the bank and row to be accessed. The address bits registered coincization has two (LDM, UDM), one per byte.

- DLL aligns DQ and DQS transitions with CK transitions
- Commands entered on each positive CK edge; data and data mask referenced to both edges of DQS
- Burst Lengths: 2, 4, or 8
- CAS Latency: 2, 2.5, (3)
- · Auto Precharge option for each burst access
- · Auto Refresh and Self Refresh Modes
- 15.6 μs Maximum Average Periodic Refresh Interval (4k refresh)
- 2.5V (SSTL_2 compatible) I/O
- $V_{DDQ} = 2.5V \pm 0.2V / V_{DD} = 2.5V \pm 0.2V$
- TSOP66 package

dent with the Read or Write command are used to select the bank and the starting column location for the burst access.

The DDR SDRAM provides for programmable Read or Write burst lengths of 2, 4 or 8 locations. An Auto Precharge function may be enabled to provide a self-timed row precharge that is initiated at the end of the burst access.

As with standard SDRAMs, the pipelined, multibank architecture of DDR SDRAMs allows for concurrent operation, thereby providing high effective bandwidth by hiding row precharge and activation time.

An auto refresh mode is provided along with a power-saving power-down mode. All inputs are compatible with the JEDEC Standard for SSTL_2. All outputs are SSTL_2, Class II compatible.

Note: The functionality described and the timing specifications included in this data sheet are for the DLL Enabled mode of operation.



Ordering Information

Part Number	CAS Latency	Clock (MHz)	CAS Latency	Clock (MHz)	Speed	Org.	Package
HYB25D128400AT(L)-8 *)						x 4	
HYB25D128800AT(L)-8 *)		125		100	DDR200	x 8	
HYB25D128160AT(L)-8 *)						x 16	
HYB25D128400AT(L)-7 *)	-			x 4			
HYB25D128800AT(L)-7 *)	2.5	143	2	133	DDR266A	x 8	66 pin TSOP-II
HYB25D128160AT(L)-7 *)						x 16	
HYB25D128400AT(L)-6 *)						x 4	
HYB25D128800AT(L)-6 *)		166		133	DDR333	x 8	
HYB25D128160AT(L)-6 *)						x 16	

*) Low Power Versions have a "L" in the partnumber, f.e. HYB25D128400ATL-8. These components are specifically selected for low IDD6 Self Refresh currents.



Pin Configuration

	L	I .	-					I	1
V _{DD}	V_{DD}	V _{DD}	Н	1		66 🗖	V _{SS}	V _{SS}	V _{SS}
NC	DQ0	DQ0	9	2		65	DQ15	DQ7	NC
V_{DDQ}	V_{DDQ}	V _{DDQ}		3		64 🗌	V _{SSQ}	V _{SSQ}	V _{SSQ}
NC	NC	DQ1		4		63 🗌	DQ14	NC	NC
DQ0	DQ1	DQ2		5		62 🗋	DQ13	DQ6	DQ3
V _{SSQ}	V_{SSQ}	V _{SSQ}		6		61 🗆	V_{DDQ}	V_{DDQ}	V _{DDQ}
NC	NC	DQ3	d	7		60 🗋	DQ12	NC	NC
NC	DQ2	DQ4		8		59 🗌	DQ11	DQ5	NC
V_{DDQ}	V_{DDQ}	V _{DDQ}		9		58 🗆	V _{SSQ}	V _{SSQ}	V _{SSQ}
NC	NC	DQ5		10		57	DQ10	NC	NC
DQ1	DQ3	DQ6	9	11		56	DQ9	DQ4	DQ2
V _{SSQ}	V _{SSQ}	V _{SSQ}	Ц	12		55	V_{DDQ}	V_{DDQ}	V _{DDQ}
NC	NC	DQ7	q	13		54 🗆	DQ8	NC	NC
NC	NC	NC	q	14		53 🗆	NC	NC	NC
V_{DDQ}	V_{DDQ}	V_{DDQ}		15		52 🗆	V _{SSQ}	V _{SSQ}	V _{SSQ}
NC	NC	LDQS	q	16		51	UDQS	DQS	DQS
NC	NC	NC	q	17		50	NC	NC	NC
V _{DD}	V _{DD}		9	18		49	V _{REF}	V _{REF}	V _{REF}
NC	NC	NC	9	19		48	V _{SS}	V _{SS}	V _{SS}
NC	NC	LDM	9	20		47	UDM	DM	DM
WE	WE	WE	Ц	21		46	CK	CK	CK
CAS	CAS	CAS	Ц	22		45	CK	CK	CK
RAS	RAS CS	RAS	님	23		44	CKE	CKE	CKE
CS NC	NC	CS NC	님	24		43	NC NC	NC NC	NC NC
	BAO		님	25		42			
BA0 BA1	BAU BA1	BA0 BA1	님	26 27		41 □ 40 □	A11 A9	A11 A9	A11 A9
A10/AP	A10/AP	A10/AP	님	27		40 🗆 39 🗖	A9 A8	A9 A8	A8
A0	A0	A0	님	20 29		39 🗆	A7	A7	A7
AU A1	A0 A1	A0 A1	님	29 30		30 L 37 L	A6	A6	A6
A2	A2	A1 A2	H	30 31		37 🗆	A5	A5	A5
A3	A3	A3	님	32		30 L 35 L	A4	A4	A4
V _{DD}	V _{DD}	V _{DD}	Н	33		34	V _{SS}	V _{ss}	V _{SS}
55	20	55	ч			<u> </u>			
					– 8Mb x 16 —				
		<u> </u>			- 16Mb x 8			Ţ	
					- 32Mb x 4				1
					JENIN A 7				




Input/Output Functional Description

Symbol	Туре	Function
СК, <u>СК</u>	Input	Clock: CK and \overline{CK} are differential clock inputs. All address and control input signals are sampled on the crossing of the positive edge of CK and negative edge of \overline{CK} . Output (read) data is referenced to the crossings of CK and \overline{CK} (both directions of crossing).
CKE	Input	Clock Enable: CKE HIGH activates, and CKE Low deactivates, internal clock signals and device input buffers and output drivers. Taking CKE Low provides Precharge Power-Down and Self Refresh operation (all banks idle), or Active Power-Down (row Active in any bank). CKE is synchronous for power down entry and exit, and for self refresh entry. CKE is asynchronous for self refresh exit. CKE must be maintained high throughout read and write accesses. Input buffers, excluding CK, CK and CKE are disabled during power-down. Input buffers, excluding CKE, are disabled during self refresh.
CS	Input	Chip Select: All commands are masked when \overline{CS} is registered HIGH. \overline{CS} provides for external bank selection on systems with multiple banks. \overline{CS} is considered part of the command code. The standard pinout includes one \overline{CS} pin.
RAS, CAS, WE	Input	Command Inputs: \overline{RAS} , \overline{CAS} and \overline{WE} (along with \overline{CS}) define the command being entered.
DM UDM, LDM	Input	Input Data Mask: DM is an input mask signal for write data. Input data is masked when DM is sampled HIGH coincident with that input data during a Write access. DM is sampled on both edges of DQS. Although DM pins are input only, the DM loading matches the DQ and DQS loading. For the x16, LDM corresponds to the data on DQ0-DQ7; UDM corresponds to the data on DQ8-DQ15.
BA0, BA1	Input	Bank Address Inputs: BA0 and BA1 define to which bank an Active, Read, Write or Pre- charge command is being applied. BA0 and BA1 also determines if the mode register or extended mode register is to be accessed during a MRS or EMRS cycle.
A0 - A11	Input	Address Inputs: Provide the row address for Active commands, and the column address and Auto Precharge bit for Read/Write commands, to select one location out of the memory array in the respective bank. A10 is sampled during a Precharge command to determine whether the Precharge applies to one bank (A10 LOW) or all banks (A10 HIGH). If only one bank is to be precharged, the bank is selected by BA0, BA1. The address inputs also provide the op-code during a Mode Register Set command.
DQ	Input/Output	Data Input/Output: Data bus.
DQS UDQS,LDQS	Input/Output	Data Strobe: Output with read data, input with write data. Edge-aligned with read data, centered in write data. Used to capture write data.For the x16, LDQS corresponds to the data on DQ0-DQ7; UDQS corresponds to the data on DQ8-DQ15.
NC		No Connect: No internal electrical connection is present.
V _{DDQ}	Supply	DQ Power Supply: $2.5V \pm 0.2V$.
V _{SSQ}	Supply	DQ Ground
V _{DD}	Supply	Power Supply: $2.5V \pm 0.2V$.
V _{SS}	Supply	Ground
V _{REF}	Supply	SSTL_2 reference voltage: (V _{DDQ} / 2)




Block Diagram (32Mb x 4)

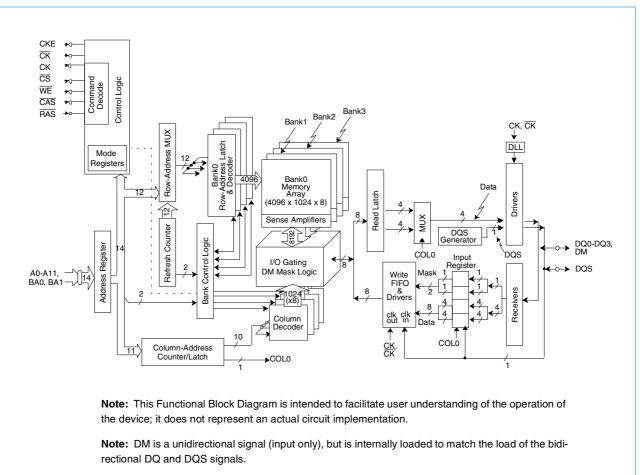




Block Diagram (16Mb x 8)

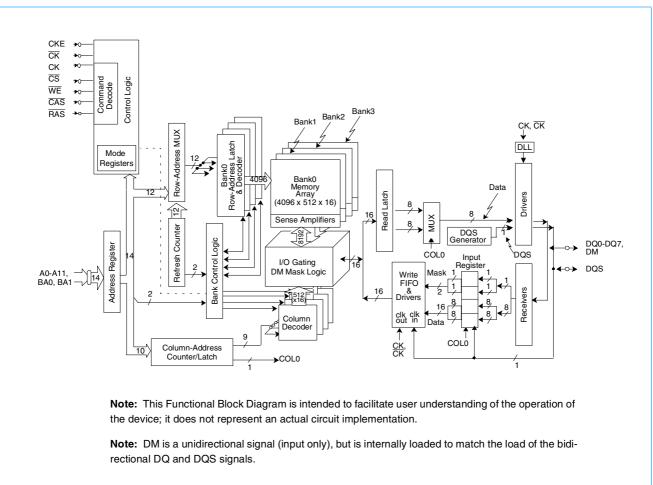



Block Diagram (8Mb x 16)

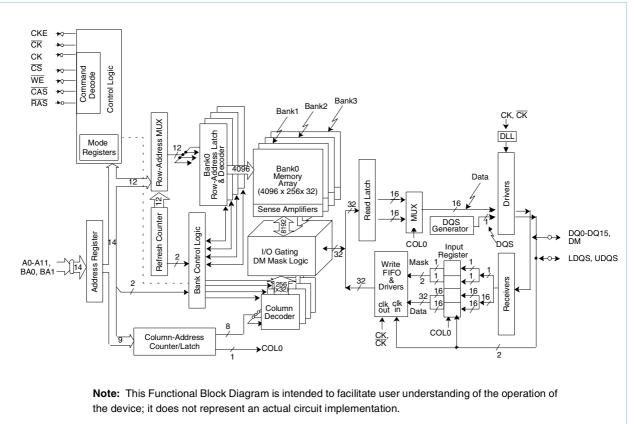

Note: UDM and LDM are unidirectional signals (input only), but is internally loaded to match the load of the bidirectional DQ, UDQS and LDQS signals.



Functional Description

The 128Mb DDR SDRAM is a high-speed CMOS, dynamic random-access memory containing 134,217,728 bits. The 128Mb DDR SDRAM is internally configured as a quad-bank DRAM.

The 128Mb DDR SDRAM uses a double-data-rate architecture to achieve high-speed operation. The doubledata-rate architecture is essentially a 2n prefetch architecture, with an interface designed to transfer two data words per clock cycle at the I/O pins. A single read or write access for the 128Mb DDR SDRAM consists of a single 2n-bit wide, one clock cycle data transfer at the internal DRAM core and two corresponding n-bit wide, one-half clock cycle data transfers at the I/O pins.

Read and write accesses to the DDR SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an Active command, which is then followed by a Read or Write command. The address bits registered coincident with the Active command are used to select the bank and row to be accessed (BA0, BA1 select the bank; A0-A11 select the row). The address bits registered coincident with the Read or Write command are used to select the burst access.

Prior to normal operation, the DDR SDRAM must be initialized. The following sections provide detailed information covering device initialization, register definition, command descriptions and device operation.

Initialization

DDR SDRAMs must be powered up and initialized in a predefined manner. Operational procedures other than those specified may result in undefined operation. The following criteria must be met:

No power sequencing is specified during power up or power down given the following criteria:

 V_{DD} and V_{DDQ} are driven from a single power converter output

V_{TT} meets the specification

A minimum resistance of 42 ohms limits the input current from the V_{TT} supply into any pin and V_{REF} tracks $V_{DDQ}\!/\!2$

or

The following relationship must be followed:

 V_{DDQ} is driven after or with V_{DDQ} such that $V_{DDQ} < V_{DD} + 0.3 V$ V_{TT} is driven after or with V_{DDQ} such that $V_{TT} < V_{DDQ} + 0.3 V$

 V_{REF} is driven after or with V_{DDQ} such that $V_{\text{REF}} < V_{\text{DDQ}} + 0.3V$

The DQ and DQS outputs are in the High-Z state, where they remain until driven in normal operation (by a read access). After all power supply and reference voltages are stable, and the clock is stable, the DDR SDRAM requires a 200µs delay prior to applying an executable command.

Once the 200µs delay has been satisfied, a Deselect or NOP command should be applied, and CKE should be brought HIGH. Following the NOP command, a Precharge ALL command should be applied. Next a Mode Register Set command should be issued for the Extended Mode Register, to enable the DLL, then a Mode Register Set command should be issued for the Mode Register, to reset the DLL, and to program the operating parameters. 200 clock cycles are required between the DLL reset and any executable command. During the 200 cycles of clock for DLL locking, a Deselect or NOP command must be applied. After the 200 clock cycles, a Precharge ALL command should be applied, placing the device in the "all banks idle" state.

Once in the idle state, two AUTO REFRESH cycles must be performed. Additionally, a Mode Register Set command for the Mode Register, with the reset DLL bit deactivated (i.e. to program operating parameters without resetting the DLL) must be performed. Following these cycles, the DDR SDRAM is ready for normal operation.



Register Definition

Mode Register

The Mode Register is used to define the specific mode of operation of the DDR SDRAM. This definition includes the selection of a burst length, a burst type, a CAS latency, and an operating mode. The Mode Register is programmed via the Mode Register Set command (with BA0 = 0 and BA1 = 0) and retains the stored information until it is programmed again or the device loses power (except for bit A8, which is self-clearing).

Mode Register bits A0-A2 specify the burst length, A3 specifies the type of burst (sequential or interleaved), A4-A6 specify the CAS latency, and A7-A11 specify the operating mode.

The Mode Register must be loaded when all banks are idle, and the controller must wait the specified time before initiating the subsequent operation. Violating either of these requirements results in unspecified operation.

Burst Length

Read and write accesses to the DDR SDRAM are burst oriented, with the burst length being programmable. The burst length determines the maximum number of column locations that can be accessed for a given Read or Write command. Burst lengths of 2, 4, or 8 locations are available for both the sequential and the interleaved burst types.

Reserved states should not be used, as unknown operation or incompatibility with future versions may result.

When a Read or Write command is issued, a block of columns equal to the burst length is effectively selected. All accesses for that burst take place within this block, meaning that the burst wraps within the block if a boundary is reached. The block is uniquely selected by A1-Ai when the burst length is set to two, by A2-Ai when the burst length is set to four and by A3-Ai when the burst length is set to eight (where Ai is the most significant column address bit for a given configuration). The remaining (least significant) address bit(s) is (are) used to select the starting location within the block. The programmed burst length applies to both Read and Write bursts.



Mode Register Operation

	BA1	BA0	A11	A10	A9	A8	A7	A6	A5	A4	A3	A2	A1	A0	Address Bu
	0*	0*	С	perati	ng Moc	le		CA	AS Late	ency	вт	Bu	rst Leng	gth	Mode Regi
A11 - A9	A8	A7	A6 - A	0	Operat	ing Mod	de		_		+		_		
0	0	0	Valid		Normal operation					A3		st Type			
•	Ŭ				Do not reset DLL					0	Seq	uential			
0	1	0	Valio	1 k	Normal in DL	operati L Rese	ion t			1	Inte	rleave			
0	0	1			Tes	t Mode									
		_			Res	served									
_	-			C 4 6								Burct	Long	th	
					Later	-				Δ <u>2</u>		Burst	Leng	· · · · ·	urst Length
		A6	A5	A4		Late				A2	A1	Burst	A0	Βι	urst Length
_		A6 0	A5 0	A4 0		Late Rese	erved			0	A1 0	Burst	A0 0	Βι	Reserved
_		A6	A5	A4		Late	erved erved			0 0	A1	Burst	A0 0 1	Βι	-
		A6 0 0	A5 0 0	A4 0 1		Late Rese Rese	erved erved			0	A1 0 0	Burst	A0 0	Βι	Reserved 2
_		A6 0 0 0	A5 0 0 1	A4 0 1 0		Late Rese Rese 2	erved erved 2 ional)			0 0 0	A1 0 0 1	Burst	A0 0 1 0	Bu	Reserved 2 4
		A6 0 0 0 0	A5 0 1 1	A4 0 1 0 1	Later	Late Rese Rese 2 3 (opti Rese	erved erved 2 ional)			0 0 0 0	A1 0 0 1	Burst	A0 0 1 0 1	Bu	Reserved 2 4 8
		A6 0 0 0 0 0 1	A5 0 1 1 0	A4 0 1 0 1 0	Later	Late Rese Rese 2 3 (opti Rese	erved erved 2 ional) erved d (1.5**)		0 0 0 0 1	A1 0 0 1 1 0	Burst	A0 0 1 0 1 0	Bu F F	Reserved 2 4 8 Reserved

- * BA0 and BA1 must be 0, 0 to select the Mode Register (vs. the Extended Mode Register).
- ** will be supported in future versions of this product



Burst Definition

Durret Longeth	Startir	ng Column A	ddress	Order of Access	es Within a Burst		
Burst Length	th A2 A1 A0			Type = Sequential	Type = Interleaved		
	0		0-1	0-1			
2		1		1-0	1-0		
		0	0	0-1-2-3	0-1-2-3		
_		0	1	1-2-3-0	1-0-3-2		
4		1	0	2-3-0-1	2-3-0-1		
	1		1	3-0-1-2	3-2-1-0		
	0	0	0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7		
	0	0	1	1-2-3-4-5-6-7-0	1-0-3-2-5-4-7-6		
	0	1	0	2-3-4-5-6-7-0-1	2-3-0-1-6-7-4-5		
	0	1	1	3-4-5-6-7-0-1-2	3-2-1-0-7-6-5-4		
8	1	0	0	4-5-6-7-0-1-2-3	4-5-6-7-0-1-2-3		
	1	0	1	5-6-7-0-1-2-3-4	5-4-7-6-1-0-3-2		
	1	1	0	6-7-0-1-2-3-4-5	6-7-4-5-2-3-0-1		
	1	1	1	7-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0		

Notes:

- 1. For a burst length of two, A1-Ai selects the two-data-element block; A0 selects the first access within the block.
- 2. For a burst length of four, A2-Ai selects the four-data-element block; A0-A1 selects the first access within the block.
- 3. For a burst length of eight, A3-Ai selects the eight-data- element block; A0-A2 selects the first access within the block.
- 4. Whenever a boundary of the block is reached within a given sequence above, the following access wraps within the block.

Burst Type

Accesses within a given burst may be programmed to be either sequential or interleaved; this is referred to as the burst type and is selected via bit A3. The ordering of accesses within a burst is determined by the burst length, the burst type and the starting column address, as shown in Burst Definition on page 11.

Read Latency

The Read latency, or CAS latency, is the delay, in clock cycles, between the registration of a Read command and the availability of the first burst of output data. The latency can be programmed 2, 2.5 or 3 clocks.

If a Read command is registered at clock edge n, and the latency is m clocks, the data is available nominally coincident with clock edge n + m.


Reserved states should not be used as unknown operation or incompatibility with future versions may result.



Operating Mode

The normal operating mode is selected by issuing a Mode Register Set Command with bits A7-A11 set to zero, and bits A0-A6 set to the desired values. A DLL reset is initiated by issuing a Mode Register Set command with bits A7 and A9-A11 each set to zero, bit A8 set to one, and bits A0-A6 set to the desired values. A Mode Register Set command issued to reset the DLL should always be followed by a Mode Register Set command to select normal operating mode.

All other combinations of values for A7-A11 are reserved for future use and/or test modes. Test modes and reserved states should not be used as unknown operation or incompatibility with future versions may result.

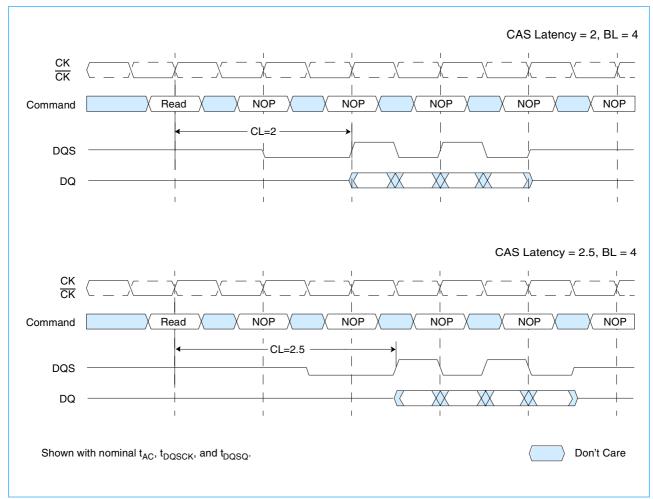

Required CAS Latencies



Extended Mode Register

The Extended Mode Register controls functions beyond those controlled by the Mode Register; these additional functions include DLL enable/disable, and output drive strength selection (optional). These functions are controlled via the bits shown in the Extended Mode Register Definition. The Extended Mode Register is programmed via the Mode Register Set command (with BA0 = 1 and BA1 = 0) and retains the stored information until it is programmed again or the device loses power. The Extended Mode Register must be loaded when all banks are idle, and the controller must wait the specified time before initiating any subsequent operation. Violating either of these requirements result in unspecified operation.


DLL Enable/Disable

The DLL must be enabled for normal operation. DLL enable is required during power up initialization, and upon returning to normal operation after having disabled the DLL for the purpose of debug or evaluation. The DLL is automatically disabled when entering self refresh operation and is automatically re-enabled upon exit of self refresh operation. Any time the DLL is enabled, 200 clock cycles must occur before a Read command can be issued. This is the reason 200 clock cycles must occur before issuing a Read or Write command upon exit of self refresh operation.

Output Drive Strength

The normal drive strength for all outputs is specified to be SSTL_2, Class II. I-V curves for the normal drive strength are included in this document. In addition this design version supports a weak driver mode for lighter load and/or point-to-point environments which can be activated during mode register set. I-V curves for the weak driver mode will be included in this document later.



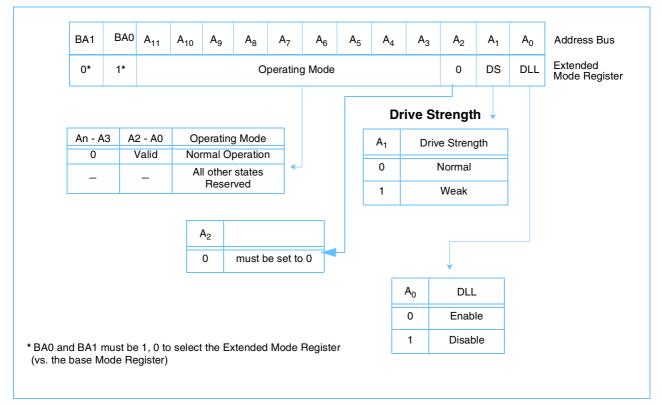

Extended Mode Register Definition



Commands

Deselect

The Deselect function prevents new commands from being executed by the DDR SDRAM. The DDR SDRAM is effectively deselected. Operations already in progress are not affected.

No Operation (NOP)

The No Operation (NOP) command is used to perform a NOP to a DDR SDRAM. This prevents unwanted commands from being registered during idle or wait states. Operations already in progress are not affected.

Mode Register Set

The mode registers are loaded via inputs A0-A11, BA0 and BA1. See mode register descriptions in the Register Definition section. The Mode Register Set command can only be issued when all banks are idle and no bursts are in progress. A subsequent executable command cannot be issued until t_{MRD} is met.

Active

The Active command is used to open (or activate) a row in a particular bank for a subsequent access. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-A11 selects the row. This row remains active (or open) for accesses until a Precharge (or Read or Write with Auto Precharge) is issued to that bank. A Precharge (or Read or Write with Auto Precharge) command must be issued and completed before opening a different row in the same bank.

Read

The Read command is used to initiate a burst read access to an active (open) row. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-Ai, Aj (where [i = 8, j = don't care] for x16, [i = 9, j = don't care] for x8 and [i = 9, j = 11] for x4) selects the starting column location. The value on input A10 determines whether or not Auto Precharge is used. If Auto Precharge is selected, the row being accessed is precharged at the end of the Read burst; if Auto Precharge is not selected, the row remains open for subsequent accesses.

Write

The Write command is used to initiate a burst write access to an active (open) row. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-Ai, Aj (where [i = 9, j = don't care] for x8; where [i = 9, j = 11] for x4) selects the starting column location. The value on input A10 determines whether or not Auto Precharge is used. If Auto Precharge is selected, the row being accessed is precharged at the end of the Write burst; if Auto Precharge is not selected, the row remains open for subsequent accesses. Input data appearing on the DQs is written to the memory array subject to the DM input logic level appearing coincident with the data. If a given DM signal is registered low, the corresponding data is written to memory; if the DM signal is registered high, the corresponding data inputs are ignored, and a Write is not executed to that byte/column location.

Precharge

The Precharge command is used to deactivate (close) the open row in a particular bank or the open row(s) in all banks. The bank(s) will be available for a subsequent row access a specified time (t_{RP}) after the Precharge command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA0, BA1 select the bank. Otherwise BA0, BA1 are treated



as "Don't Care." Once a bank has been precharged, it is in the idle state and must be activated prior to any Read or Write commands being issued to that bank. A precharge command is treated as a NOP if there is no open row in that bank, or if the previously open row is already in the process of precharging.

Auto Precharge

Auto Precharge is a feature which performs the same individual-bank precharge functions described above, but without requiring an explicit command. This is accomplished by using A10 to enable Auto Precharge in conjunction with a specific Read or Write command. A precharge of the bank/row that is addressed with the Read or Write command is automatically performed upon completion of the Read or Write burst. Auto Precharge is nonpersistent in that it is either enabled or disabled for each individual Read or Write command. Auto Precharge ensures that the precharge is initiated at the earliest valid stage within a burst. The user must not issue another command to the same bank until the precharge (t_{RP}) is completed. This is determined as if an explicit Precharge command was issued at the earliest possible time, as described for each burst type in the Operation section of this data sheet.

Burst Terminate

The Burst Terminate command is used to truncate read bursts (with Auto Precharge disabled). The most recently registered Read command prior to the Burst Terminate command is truncated, as shown in the Operation section of this data sheet.

Auto Refresh

Auto Refresh is used during normal operation of the DDR SDRAM and is analogous to CAS Before RAS (CBR) Refresh in previous DRAM types. This command is nonpersistent, so it must be issued each time a refresh is required.

The refresh addressing is generated by the internal refresh controller. This makes the address bits "Don't Care" during an Auto Refresh command. The 128Mb DDR SDRAM requires Auto Refresh cycles at an average periodic interval of 15.6 μ s (maximum).

To allow for improved efficiency in scheduling and switching between tasks, some flexibility in the absolute refresh interval is provided. A maximum of eight Auto Refresh commands can be posted in the system, meaning that the maximum absolute interval between any Auto Refresh command and the next Auto Refresh command is 9 * 15.6 μ s. This maximum absolute interval is short enough to allow for DLL updates internal to the DDR SDRAM to be restricted to Auto Refresh cycles, without allowing too much drift in t_{AC} between updates.

Self Refresh

The Self Refresh command can be used to retain data in the DDR SDRAM, even if the rest of the system is powered down. When in the self refresh mode, the DDR SDRAM retains data without external clocking. The Self Refresh command is initiated as an Auto Refresh command coincident with CKE transitioning low. The DLL is automatically disabled upon entering Self Refresh, and is automatically enabled upon exiting Self Refresh (200 clock cycles must then occur before a Read command can be issued). Input signals except CKE (low) are "Don't Care" during Self Refresh operation.

The procedure for exiting self refresh requires a sequence of commands. CK (and \overline{CK}) must be stable prior to CKE returning high. Once CKE is high, the SDRAM must have NOP commands issued for t_{XSNR} because time is required for the completion of any internal refresh in progress. A simple algorithm for meeting both refresh and DLL requirements is to apply NOPs for 200 clock cycles before applying any other command.



Truth Table 1a: Commands

Name (Function)	CS	RAS	CAS	WE	Address	MNE	Notes
Deselect (Nop)	н	х	Х	Х	Х	NOP	1, 9
No Operation (Nop)	L	н	н	н	Х	NOP	1, 9
Active (Select Bank And Activate Row)	L	L	н	н	Bank/Row	ACT	1, 3
Read (Select Bank And Column, And Start Read Burst)	L	н	L	н	Bank/Col	Read	1, 4
Write (Select Bank And Column, And Start Write Burst)	L	н	L	L	Bank/Col	Write	1, 4
Burst Terminate	L	н	н	L	Х	BST	1, 8
Precharge (Deactivate Row In Bank Or Banks)	L	L	н	L	Code	PRE	1, 5
Auto Refresh Or Self Refresh (Enter Self Refresh Mode)	L	L	L	н	Х	AR / SR	1, 6, 7
Mode Register Set	L	L	L	L	Op-Code	MRS	1, 2

1. CKE is HIGH for all commands shown except Self Refresh.

2. BA0, BA1 select either the Base or the Extended Mode Register (BA0 = 0, BA1 = 0 selects Mode Register; BA0 = 1, BA1 = 0 selects Extended Mode Register; other combinations of BA0-BA1 are reserved; A0-A11 provide the op-code to be written to the selected Mode Register.)

- 3. BA0-BA1 provide bank address and A0-A11 provide row address.
- 4. BA0, BA1 provide bank address; A0-Ai provide column address (where i = 8 for x16, i = 9 for x8 and 9, 11 for x4); A10 HIGH enables the Auto Precharge feature (nonpersistent), A10 LOW disables the Auto Precharge feature.
- 5. A10 LOW: BA0, BA1 determine which bank is precharged.
- A10 HIGH: all banks are precharged and BA0, BA1 are "Don't Care."
- 6. This command is AUTO REFRESH if CKE is HIGH; Self Refresh if CKE is LOW.
- 7. Internal refresh counter controls row and bank addressing; all inputs and I/Os are "Don't Care" except for CKE.
- 8. Applies only to read bursts with Auto Precharge disabled; this command is undefined (and should not be used) for read bursts with Auto Precharge enabled or for write bursts
- 9. Deselect and NOP are functionally interchangeable.

Truth Table 1b: DM Operation

Name (Function)	DM	DQs	Notes
Write Enable	L	Valid	1
Write Inhibit	н	Х	1
1. Used to mask write data; provided coincident with the corresponding data.			




Operations

Bank/Row Activation


Before any Read or Write commands can be issued to a bank within the DDR SDRAM, a row in that bank must be "opened" (activated). This is accomplished via the Active command and addresses A0-A11, BA0 and BA1 (see Activating a Specific Row in a Specific Bank), which decode and select both the bank and the row to be activated. After opening a row (issuing an Active command), a Read or Write command may be issued to that row, subject to the t_{RCD} specification. A subsequent Active command to a different row in the same bank can only be issued after the previous active row has been "closed" (precharged). The minimum time interval between successive Active commands to the same bank is defined by t_{RC} . A subsequent Active command to another bank can be issued while the first bank is being accessed, which results in a reduction of total row-access overhead. The minimum time interval between successive Active commands to different banks is defined by t_{RD} .

Activating a Specific Row in a Specific Bank

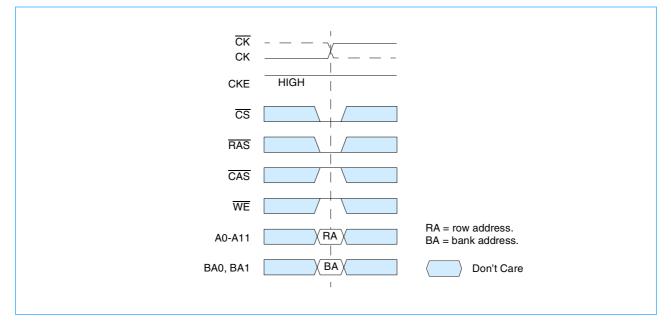



t_{RCD} and t_{RRD} Definition

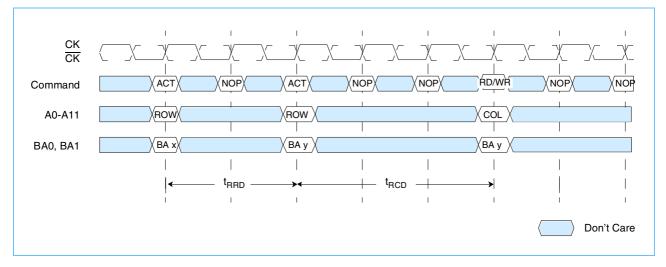

Reads


Subsequent to programming the mode register with CAS latency, burst type, and burst length, Read bursts are initiated with a Read command, as shown on Read Command on page 20.

The starting column and bank addresses are provided with the Read command and Auto Precharge is either enabled or disabled for that burst access. If Auto Precharge is enabled, the row that is accessed starts precharge at the completion of the burst, provided t_{RAS} has been satisfied. For the generic Read commands used in the following illustrations, Auto Precharge is disabled.


During Read bursts, the valid data-out element from the starting column address is available following the CAS latency after the Read command. Each subsequent data-out element is valid nominally at the next positive or negative clock edge (i.e. at the next crossing of CK and CK). Page Read Burst: CAS Latencies (Burst Length = 4) on page 21 shows general timing for each supported CAS latency setting. DQS is driven by the DDR SDRAM along with output data. The initial low state on DQS is known as the read preamble; the low state coincident with the last data-out element is known as the read postamble. Upon completion of a burst, assuming no other commands have been initiated, the DQs goes High-Z. Data from any Read burst may be concatenated with or truncated with data from a subsequent Read command. In either case, a continuous flow of data can be maintained. The first data element from the new burst follows either the last element of a completed burst or the last desired data element of a longer burst which is being truncated. The new Read command should be issued x cycles after the first Read command, where x equals the number of desired data element pairs (pairs are required by the 2n prefetch architecture). This is shown on Consecutive Read Bursts: CAS Latencies (Burst Length = 4 or 8) on page 22. A Read command can be initiated on any clock cycle following a previous Read command. Nonconsecutive Read data is illustrated on Non-Consecutive Read Bursts: CAS Latencies (Burst Length = 4) on page 23. Full-speed Random Read Accesses: CAS Latencies (Burst Length = 2, 4 or 8) within a page (or pages) can be performed as shown on page 24.



Read Command

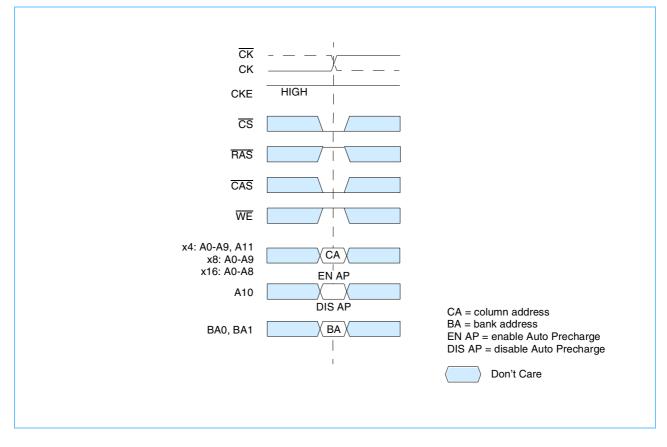




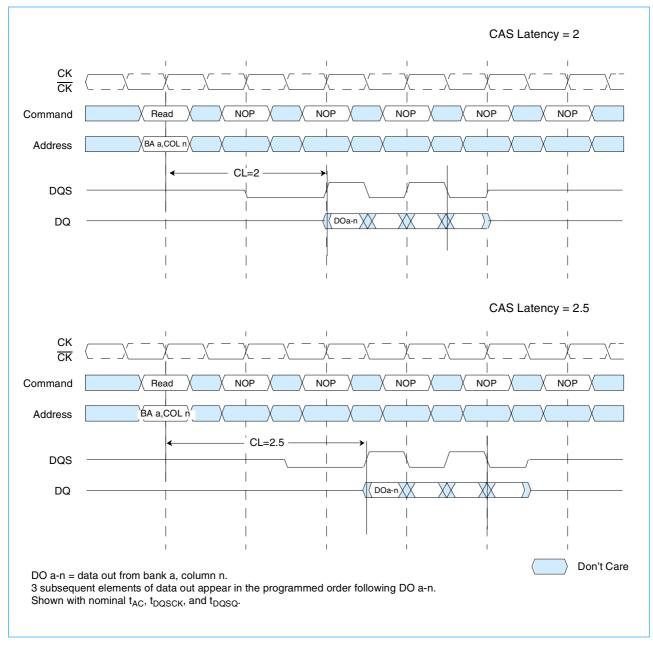


Read Burst: CAS Latencies (Burst Length = 4)



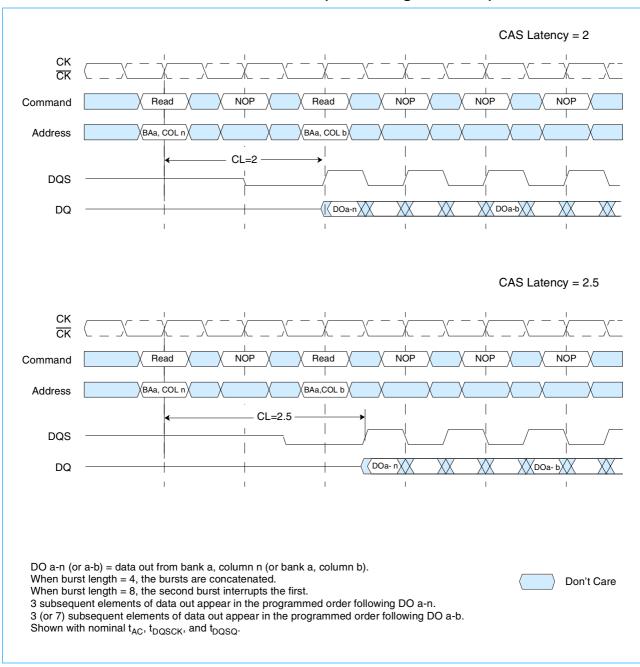


Consecutive Read Bursts: CAS Latencies (Burst Length = 4 or 8)



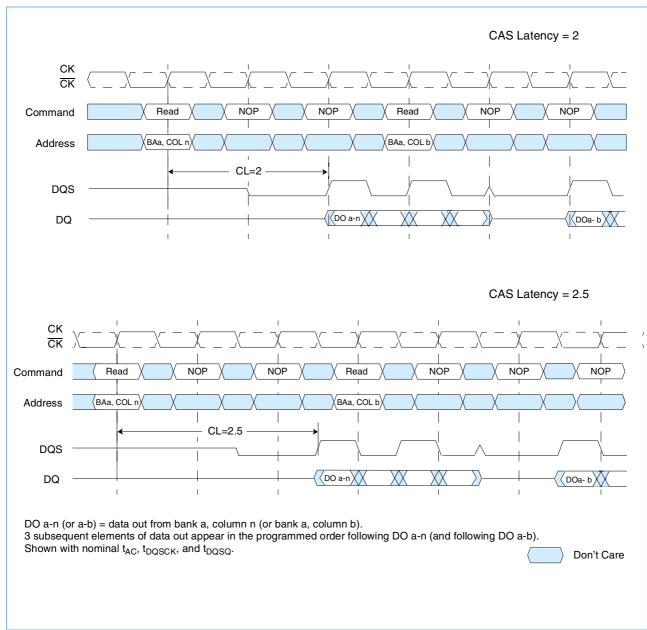

Non-Consecutive Read Bursts: CAS Latencies (Burst Length = 4)



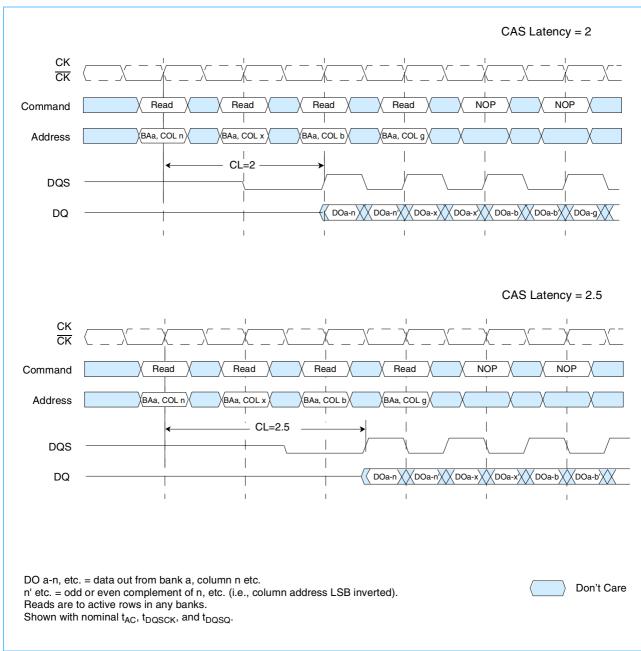

Random Read Accesses: CAS Latencies (Burst Length = 2, 4 or 8)




Data from any Read burst may be truncated with a Burst Terminate command, as shown on Terminating a Read Burst: CAS Latencies (Burst Length = 8) on page 26. The Burst Terminate latency is equal to the read (CAS) latency, i.e. the Burst Terminate command should be issued x cycles after the Read command, where x equals the number of desired data element pairs.

Data from any Read burst must be completed or truncated before a subsequent Write command can be issued. If truncation is necessary, the Burst Terminate command must be used, as shown on Read to Write: CAS Latencies (Burst Length = 4 or 8) on page 27. The example is shown for $t_{DQSS}(min)$. The $t_{DQSS}(max)$ case, not shown here, has a longer bus idle time. $t_{DQSS}(min)$ and $t_{DQSS}(max)$ are defined in the section on Writes.

A Read burst may be followed by, or truncated with, a Precharge command to the same bank (provided that Auto Precharge was not activated). The Precharge command should be issued x cycles after the Read command, where x equals the number of desired data element pairs (pairs are required by the 2n prefetch architecture). This is shown on Read to Precharge: CAS Latencies (Burst Length = 4 or 8) on page 28 for Read latencies of 2 and 2.5. Following the Precharge command, a subsequent command to the same bank cannot be issued until t_{RP} is met. Note that part of the row precharge time is hidden during the access of the last data elements.


In the case of a Read being executed to completion, a Precharge command issued at the optimum time (as described above) provides the same operation that would result from the same Read burst with Auto Precharge enabled. The disadvantage of the Precharge command is that it requires that the command and address busses be available at the appropriate time to issue the command. The advantage of the Precharge command is that it can be used to truncate bursts.



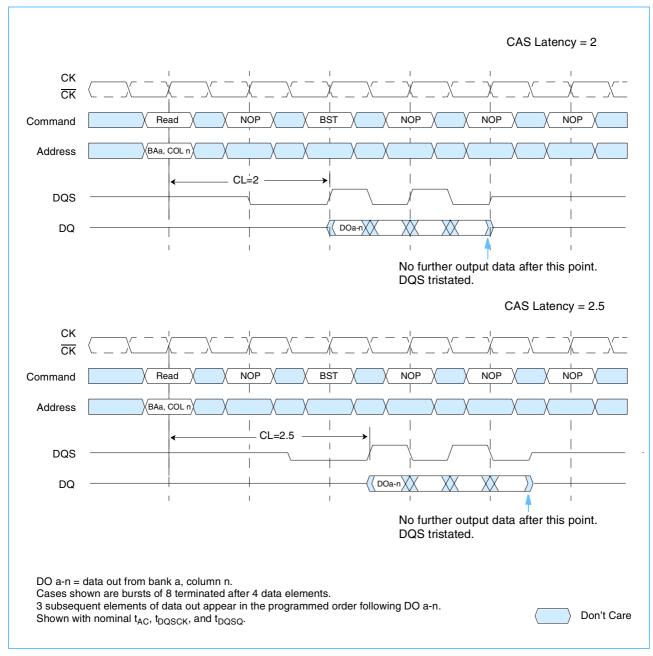


Terminating a Read Burst: CAS Latencies (Burst Length = 8)



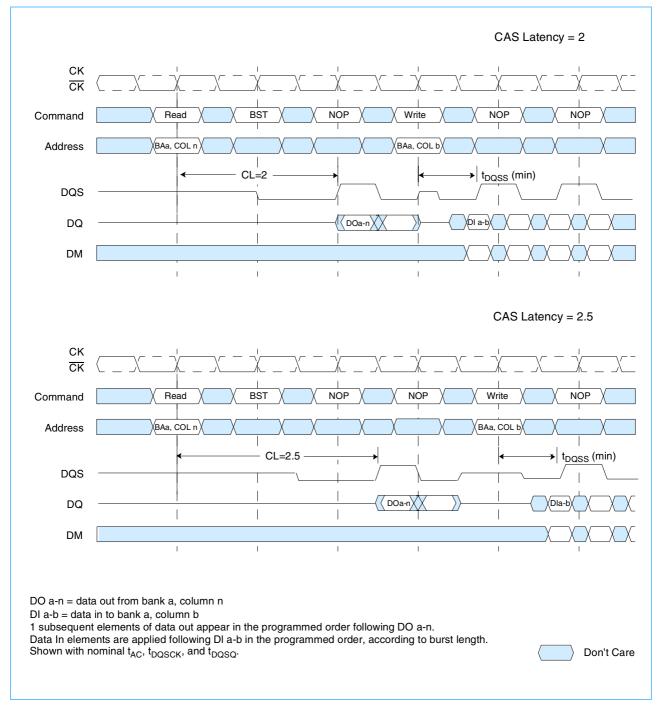

Read to Write: CAS Latencies (Burst Length = 4 or 8)



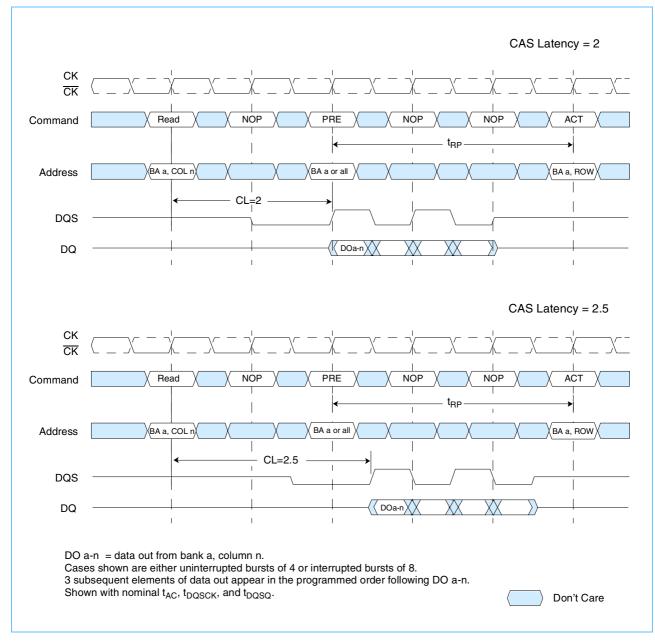

Read to Precharge: CAS Latencies (Burst Length = 4 or 8)



Writes

Write bursts are initiated with a Write command, as shown on Write Command on page 30.

The starting column and bank addresses are provided with the Write command, and Auto Precharge is either enabled or disabled for that access. If Auto Precharge is enabled, the row being accessed is precharged at the completion of the burst. For the generic Write commands used in the following illustrations, Auto Precharge is disabled.

During Write bursts, the first valid data-in element is registered on the first rising edge of DQS following the write command, and subsequent data elements are registered on successive edges of DQS. The Low state on DQS between the Write command and the first rising edge is known as the write preamble; the Low state on DQS following the last data-in element is known as the write postamble. The time between the Write command and the first corresponding rising edge of DQS (t_{DQSS}) is specified with a relatively wide range (from 75% to 125% of one clock cycle), so most of the Write diagrams that follow are drawn for the two extreme cases (i.e. t_{DQSS} (min) and t_{DQSS} (max)). Write Burst (Burst Length = 4) on page 31 shows the two extremes of t_{DQSS} for a burst of four. Upon completion of a burst, assuming no other commands have been initiated, the DQs enters High-Z and any additional input data is ignored.

Data for any Write burst may be concatenated with or truncated with a subsequent Write command. In either case, a continuous flow of input data can be maintained. The new Write command can be issued on any positive edge of clock following the previous Write command. The first data element from the new burst is applied after either the last element of a completed burst or the last desired data element of a longer burst which is being truncated. The new Write command should be issued x cycles after the first Write command, where x equals the number of desired data element pairs (pairs are required by the 2n prefetch architecture). Write to Write (Burst Length = 4) on page 32 shows concatenated bursts of 4. An example of non-consecutive Writes is shown on Write to Write: Max DQSS, Non-Consecutive (Burst Length = 4) on page 33. Full-speed random write accesses within a page or pages can be performed as shown on Random Write Cycles (Burst Length = 2, 4 or 8) on page 34. Data for any Write burst may be followed by a subsequent Read command. To follow a Write without truncating the write burst, t_{WTR} (Write to Read) should be met as shown on Write to Read: Non-Interrupting (CAS Latency = 2; Burst Length = 4) on page 35.

Data for any Write burst may be truncated by a subsequent Read command, as shown in the figures on Write to Read: Interrupting (CAS Latency = 2; Burst Length = 8) on page 36 to Write to Read: Nominal DQSS, Interrupting (CAS Latency = 2; Burst Length = 8) on page 38. Note that only the data-in pairs that are registered prior to the t_{WTR} period are written to the internal array, and any subsequent data-in must be masked with DM, as shown in the diagrams noted previously.


Data for any Write burst may be followed by a subsequent Precharge command. To follow a Write without truncating the write burst, t_{WR} should be met as shown on Write to Precharge: Non-Interrupting (Burst Length = 4) on page 39.

Data for any Write burst may be truncated by a subsequent Precharge command, as shown in the figures on Write to Precharge: Interrupting (Burst Length = 4 or 8) on page 40 to Write to Precharge: Nominal DQSS (2 bit Write), Interrupting (Burst Length = 4 or 8) on page 42. Note that only the data-in pairs that are registered prior to the t_{WR} period are written to the internal array, and any subsequent data in should be masked with DM. Following the Precharge command, a subsequent command to the same bank cannot be issued until t_{RP} is met.

In the case of a Write burst being executed to completion, a Precharge command issued at the optimum time (as described above) provides the same operation that would result from the same burst with Auto Precharge. The disadvantage of the Precharge command is that it requires that the command and address busses be available at the appropriate time to issue the command. The advantage of the Precharge command is that it can be used to truncate bursts.




Write Command

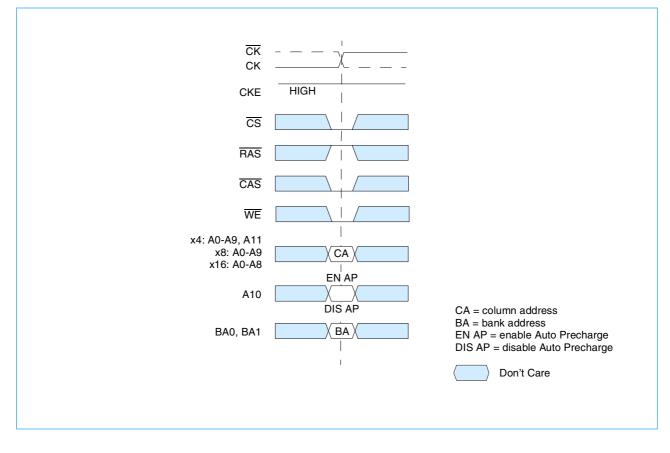




Write Burst (Burst Length = 4)

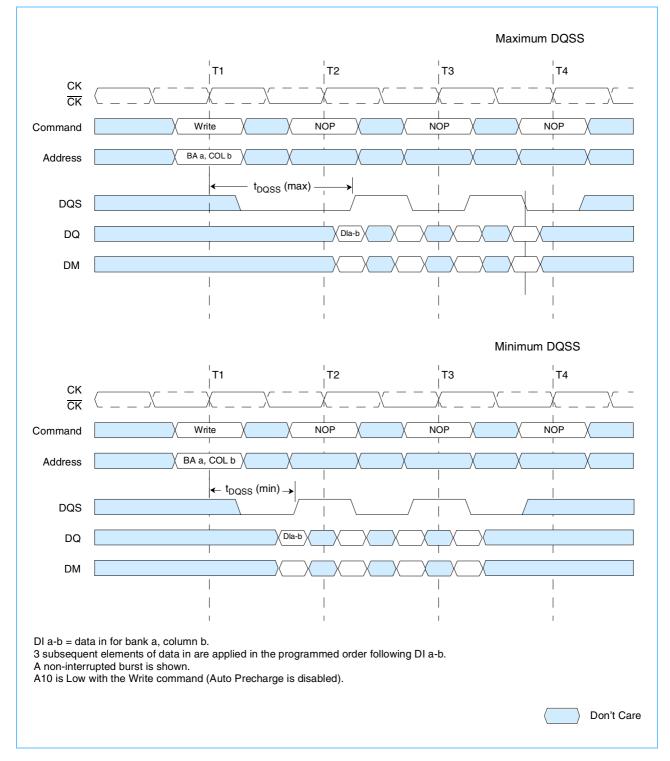




Write to Write (Burst Length = 4)

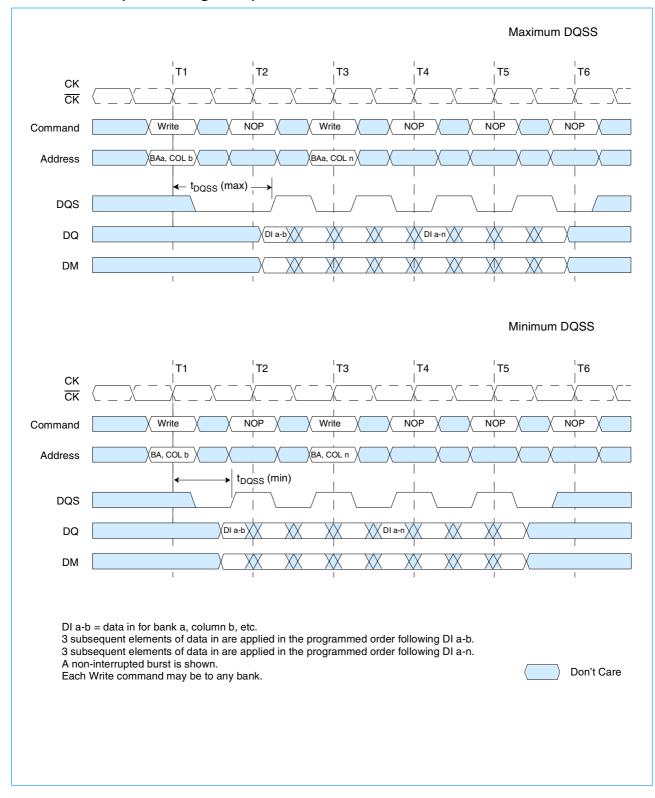




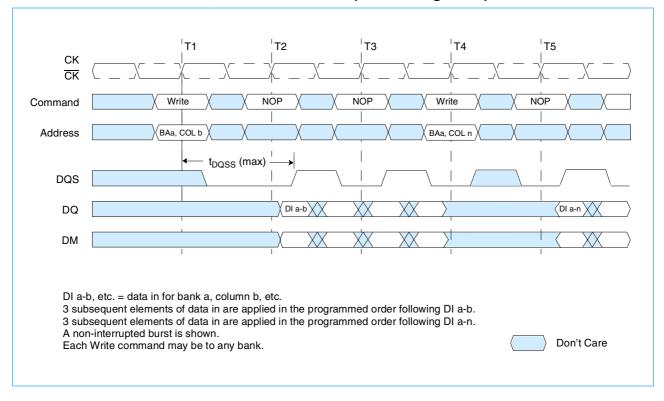


Write to Write: Max DQSS, Non-Consecutive (Burst Length = 4)



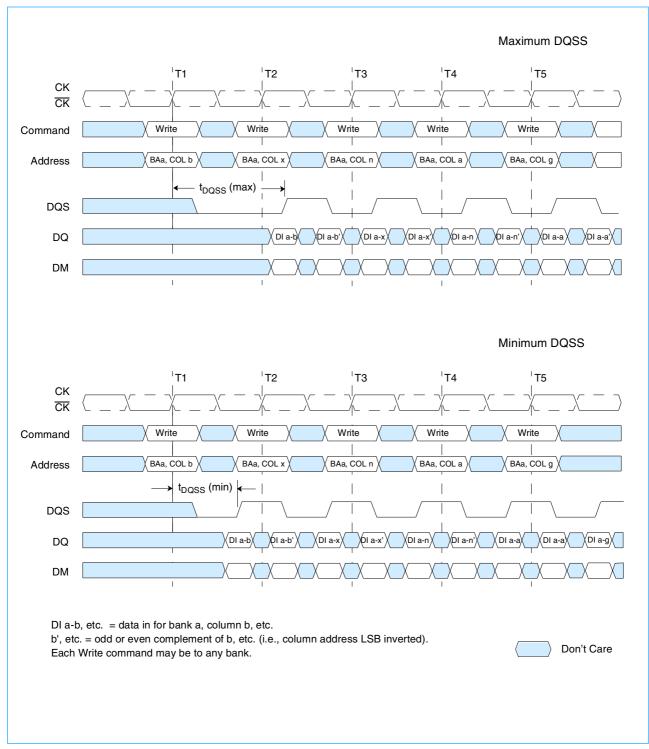


Random Write Cycles (Burst Length = 2, 4 or 8)



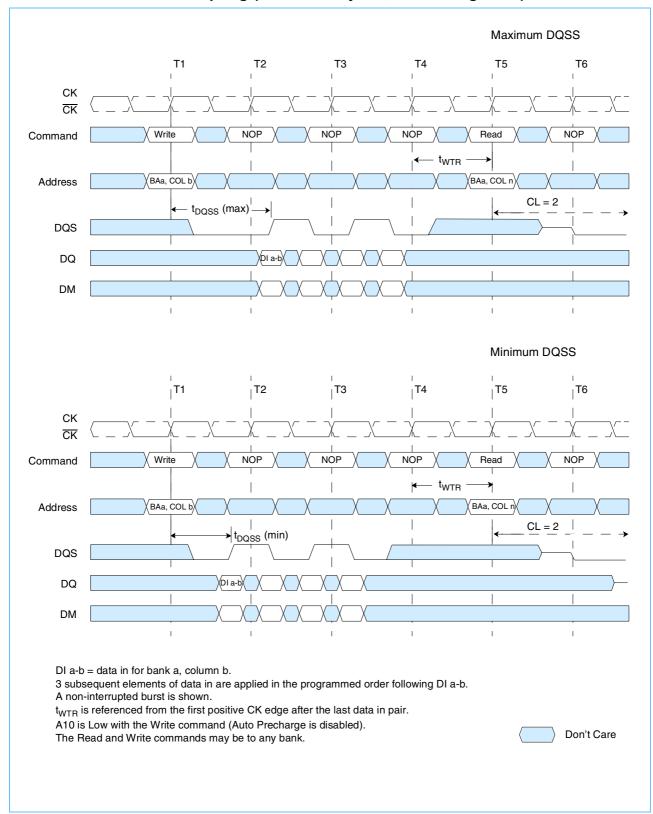


Write to Read: Non-Interrupting (CAS Latency = 2; Burst Length = 4)



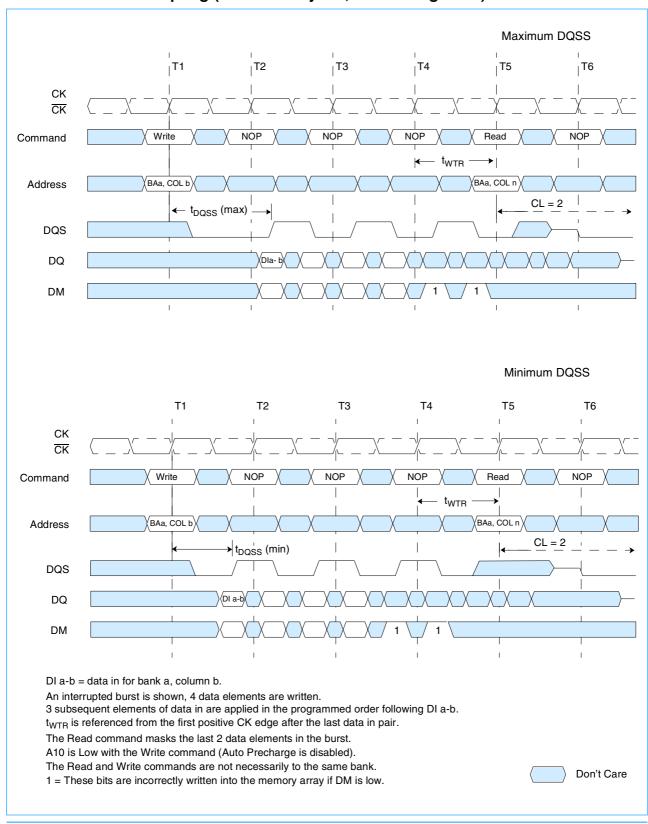


Write to Read: Interrupting (CAS Latency = 2; Burst Length = 8)



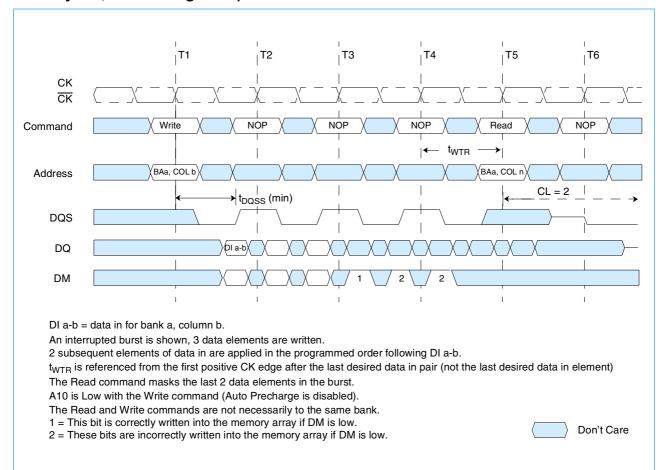


Write to Read: Minimum DQSS, Odd Number of Data (3 bit Write), Interrupting (CAS Latency = 2; Burst Length = 8)



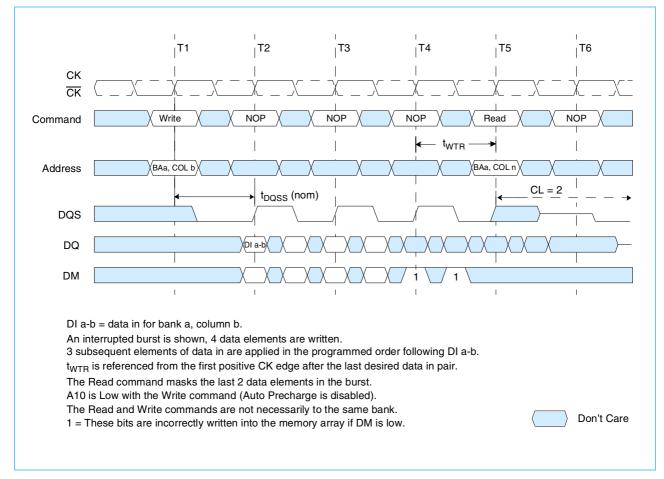


Write to Read: Nominal DQSS, Interrupting (CAS Latency = 2; Burst Length = 8)



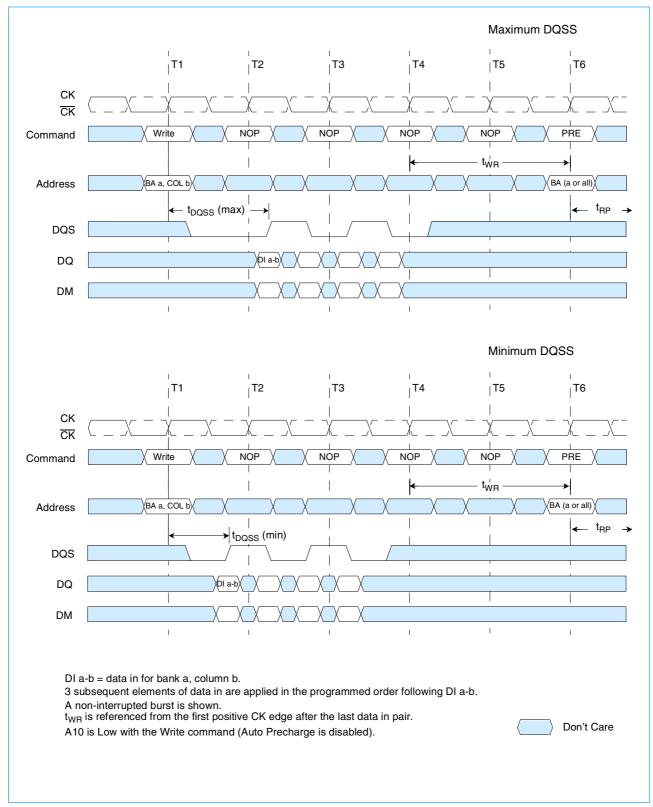


Write to Precharge: Non-Interrupting (Burst Length = 4)



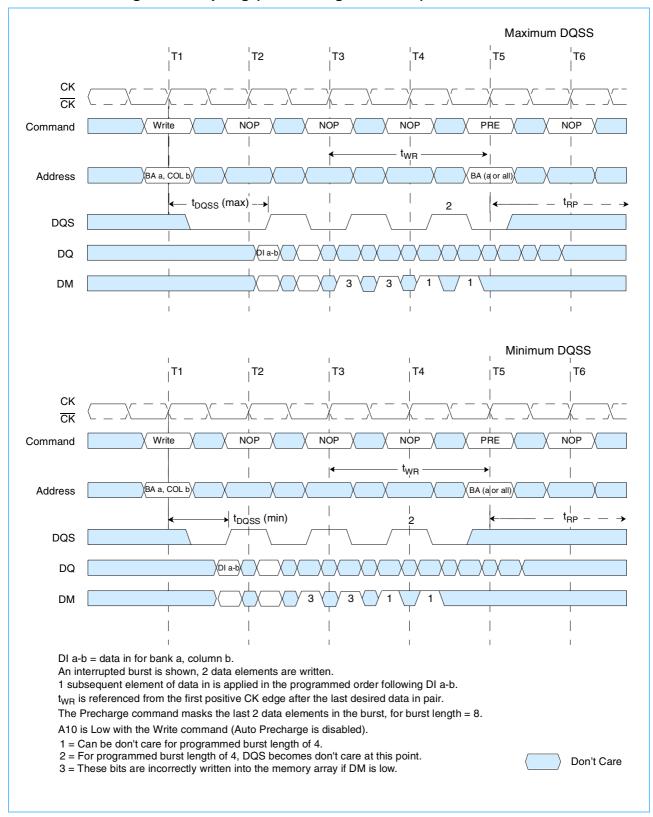


Write to Precharge: Interrupting (Burst Length = 4 or 8)



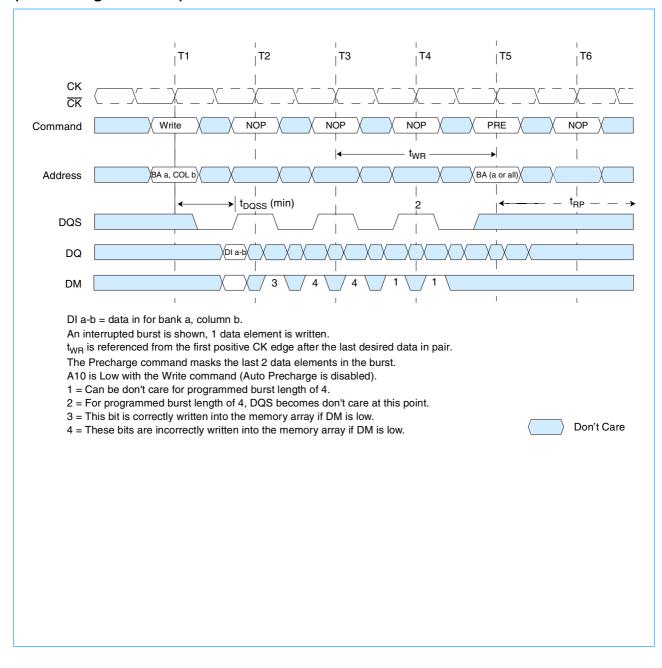

Write to Precharge: Minimum DQSS, Odd Number of Data (1 bit Write), Interrupting (Burst Length = 4 or 8)




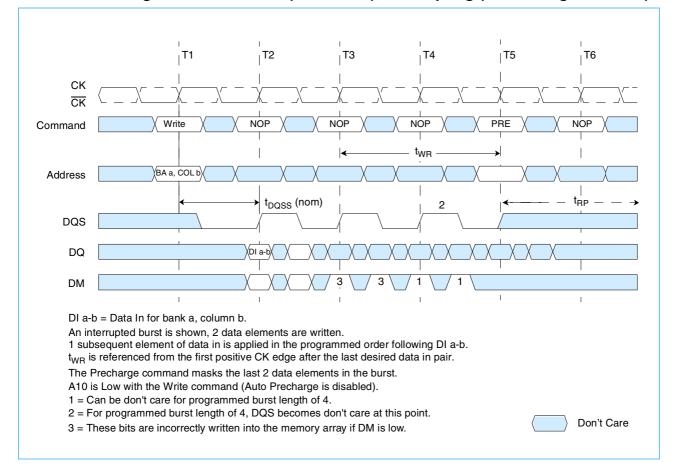

Write to Precharge: Nominal DQSS (2 bit Write), Interrupting (Burst Length = 4 or 8)



Precharge Command

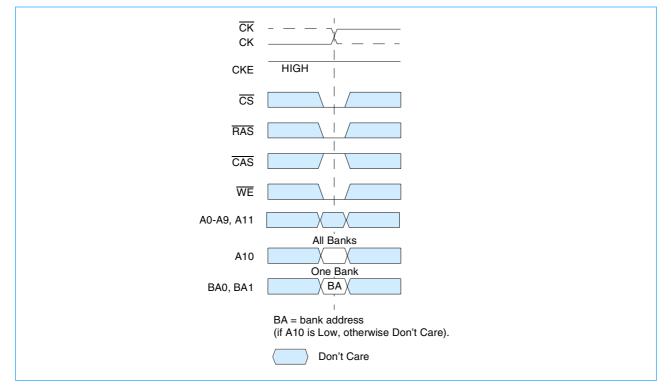

Precharge


The Precharge command is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) will be available for a subsequent row access some specified time (t_{RP}) after the Precharge command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA0, BA1 select the bank. When all banks are to be precharged, inputs BA0, BA1 select the bank been precharged, it is in the idle state and must be activated prior to any Read or Write commands being issued to that bank.



Power-Down

Power-down is entered when CKE is registered LOW (no accesses can be in progress). If power-down occurs when all banks are idle, this mode is referred to as precharge power-down; if power-down occurs when there is a row active in any bank, this mode is referred to as active power-down. Entering power-down deactivates the input and output buffers, excluding CK, CK and CKE. The DLL is still running in Power Down mode, so for maximum power savings, the user has the option of disabling the DLL prior to entering Power-down. In that case, the DLL must be enabled after exiting power-down, and 200 clock cycles must occur before a Read command can be issued. In power-down mode, CKE Low and a stable clock signal must be maintained at the inputs of the DDR SDRAM, and all other input signals are "Don't Care". However, power-down duration is limited by the refresh requirements of the device, so in most applications, the self refresh mode is preferred over the DLL-disabled power-down mode.

The power-down state is synchronously exited when CKE is registered HIGH (along with a Nop or Deselect command). A valid, executable command may be applied one clock cycle later.

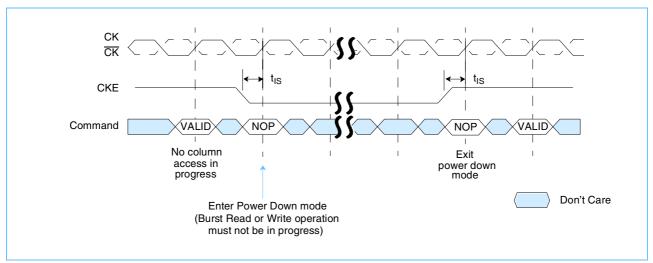

Power Down



Truth Table 2: Clock Enable (CKE)

- 1. CKEn is the logic state of CKE at clock edge n: CKE n-1 was the state of CKE at the previous clock edge.
- 2. Current state is the state of the DDR SDRAM immediately prior to clock edge n.
- 3. COMMAND n is the command registered at clock edge n, and ACTION n is a result of COMMAND n.
- 4. All states and sequences not shown are illegal or reserved.

	CKE n-1	CKEn			
Current State	Previous Cycle	Current Cycle	Command n	Action n	Notes
Self Refresh	L	L	Х	Maintain Self-Refresh	
Self Refresh	L	н	Deselect or NOP	Exit Self-Refresh	1
Power Down	L	L	Х	Maintain Power-Down	
Power Down	L	н	Deselect or NOP	Exit Power-Down	
All Banks Idle	н	L	Deselect or NOP	Precharge Power-Down Entry	
All Banks Idle	н	L	AUTO REFRESH	Self Refresh Entry	
Bank(s) Active	н	L	Deselect or NOP	Active Power-Down Entry	
	Н	Н	See "Truth Table 3: Current State Bank n - Command to Bank n (Same Bank)" on page 46		

 Deselect or NOP commands should be issued on any clock edges occurring during the Self Refresh Exit (t_{XSNR}) period. A minimum of 200 clock cycles are needed before applying a read command to allow the DLL to lock to the input clock.



 has been met (if the 2. This table is bank-sp allowed to be issued 3. Current state definitie Idle: The bar Row Active: A row ir in progr Read: A Read Write: A Write 4. The following states Precharging: Starts v state. Row Activating: Starts v state. Row Activating: Starts v active? Read w/Auto Precha has been Write w/Auto Precha has been Deselect or NOP cor states. 5. The following states positive clock edge of Refreshing: Starts v is in the Accessing Mode Ref. 	previou becific, e I to that ons: nk has b	s state w except w bank wh been pre	was self here not hen in th echarged	refresh). ted, i.e., the current state is at state. Exceptions are cov	NOP. Continue previous operation NOP. Continue previous operation Select and activate row Select and activate row Select column and start Read burst Select column and start Write burst Deactivate row in bank(s) Select column and start new Read burst Truncate Read burst, start Precharge BURST TERMINATE Select column and start Write burst Truncate Write burst, start Precharge runcate Write burst, start Precharge ruth Table 2: Clock Enable (CKE) and after type for a specific bank and the commands shown wered in the notes below.	
Idle L Idle L Idle L Row Active L Read L Auto Precharge L Disabled) L Auto Precharge L Disabled) L Auto Precharge L Disabled) L 1. This table applies whas been met (if the 2. This table is bank-sp allowed to be issued 3. Current state definiti Idle: The bar Row Active: A row ir in progrates Read: A Read Write: A Write 4. The following states Precharging: Starts v state. Row Activating: Starts v state. Row Activatior Precharging: Starts v state. Row Activating: Starts v state. Row Activatior Precharging: Starts v state. Row Activatior Starts v state. Boselect or NOP cor states. 5. The following states positive clock edge of Refreshing: Starts v is in the Accessing Mode Reference	L L H H L H L H H L L Dreviou Decific, e I to that ons: nk has b	H L L L H H L L H E n-1 wa s state v except w bank wh	H H L H L L H L L S HIGH was self here nother in the	Active AUTO REFRESH MODE REGISTER SET Read Write Precharge BURST TERMINATE Read Write Precharge and CKE n is HIGH (see Tr refresh). ted, i.e., the current state is at state. Exceptions are cov	Select and activate row Select column and start Read burst Select column and start Write burst Deactivate row in bank(s) Select column and start new Read burst Truncate Read burst, start Precharge BURST TERMINATE Select column and start Read burst Select column and start Write burst Truncate Write burst, start Precharge ruth Table 2: Clock Enable (CKE) and after tx for a specific bank and the commands shown	1-6 1-7 1-7 1-6, 10 1-6, 10 1-6, 8 1-6, 10 1-6, 8 1-6, 9 1-6, 10, 11 1-6, 10 1-6, 8, 11 SNR / [†] xSRD
Idle L L L Row Active L Row Active L L Read (Auto Precharge Disabled) L (Auto Precharge Disabled) L L (Auto Precharge Disabled) L L 1. This table applies wh has been met (if the 2. This table is bank-sp allowed to be allowed to be sued 3. Current state definiti Idle: The ban Row Active: A row ir in progr Read: A Read Write: A Write 4. The following states Precharging:Starts v state. Row Activating:Start active? Read w/Auto Precha has bee Write w/Auto Precha has bee Write w/Auto Precha has bee Deselect or NOP cor states. 5. The following states positive clock edge of Refreshing: Starts v is in the Accessing Mode Reference	L H H L H L H H H L Decific, e I to that ons: nk has b	L L L H H L H En-1 wa s state v except w bank wh	H L L L L L H L L S HIGH was self here no nen in th	AUTO REFRESH MODE REGISTER SET Read Write Precharge BURST TERMINATE Read Write Precharge and CKE n is HIGH (see Tr refresh). ted, i.e., the current state is at state. Exceptions are cov	Select column and start Read burst Select column and start Write burst Deactivate row in bank(s) Select column and start new Read burst Truncate Read burst, start Precharge BURST TERMINATE Select column and start Read burst Select column and start Read burst Select column and start Read burst Select column and start Write burst Truncate Write burst, start Precharge ruth Table 2: Clock Enable (CKE) and after types for a specific bank and the commands shown	1-7 1-6, 10 1-6, 10 1-6, 8 1-6, 10 1-6, 8 1-6, 9 1-6, 10, 11 1-6, 10 1-6, 8, 11 SNR / [†] xSRD
L Row Active L Row Active L L Read Auto Precharge Disabled) L Write Auto Precharge Disabled) L U U U U U U U U U U U U U U U U U U	L H H L H H H H H L Decific, e I to that ons: nk has b	L L H H H L L L L H E n-1 wa s state v except w bank wh	L H L L L L H L L s HIGH was self here not here in th	MODE REGISTER SET Read Write Precharge Read Precharge BURST TERMINATE Read Write Precharge and CKE n is HIGH (see Tr refresh). ted, i.e., the current state is at state. Exceptions are cov	Select column and start Write burst Deactivate row in bank(s) Select column and start new Read burst Truncate Read burst, start Precharge BURST TERMINATE Select column and start Read burst Select column and start Read burst Select column and start Read burst Select column and start Write burst Truncate Write burst, start Precharge ruth Table 2: Clock Enable (CKE) and after tx for a specific bank and the commands shown	1-7 1-6, 10 1-6, 8 1-6, 8 1-6, 10 1-6, 8 1-6, 9 1-6, 10, 11 1-6, 10 1-6, 8, 11 SNR / [†] xSRD
Image: state of the system Image: state of the system Read Image: state of the system Auto Precharge Disabled) Image: state of the system Muto Precharge Disabled) Image: state of the system Auto Precharge Disabled) Image: state of the system 1. This table applies whas been met (if the system of the	H H L H H H H L Decific, e I to that ons: nk has b	L H H H L H En-1 wa s state v except w bank wh	H L L H L H L L s HIGH was self here no nen in th	Read Write Precharge Read Precharge BURST TERMINATE Read Write Precharge and CKE n is HIGH (see Tr refresh). ted, i.e., the current state is at state. Exceptions are cov	Select column and start Write burst Deactivate row in bank(s) Select column and start new Read burst Truncate Read burst, start Precharge BURST TERMINATE Select column and start Read burst Select column and start Read burst Select column and start Read burst Select column and start Write burst Truncate Write burst, start Precharge ruth Table 2: Clock Enable (CKE) and after tx for a specific bank and the commands shown	1-6, 10 1-6, 10 1-6, 8 1-6, 10 1-6, 8 1-6, 9 1-6, 10, 11 1-6, 10 1-6, 8, 11 SNR / [†] xSRD
Row Active L Read L Auto Precharge L Disabled) L Write L Auto Precharge L Disabled) L Urite L Auto Precharge L Disabled) L 1. This table applies what been met (if the 2. 1. This table is bank-sp allowed to be issued 3. Current state definiting Idle: The bar Row Active: A Read Write: A Write 4. The following states Precharging: Starts wastate. Row Activating:Start active? Read w/Auto Prechara has bee Write w/Auto Prechara has bee Deselect or NOP corstates. 5. The following states positive clock edge corstates. Starts wastates positive clock edge corstates. Starts wastates Accessing Mode Readitional corditional cortice of the corditional cord	H L H H H H L Deen CKE previou Decific, e I to that ons: nk has b	L H H L L L L E n-1 wa s state v except w bank wh	L H L L H L s HIGH was self here not hen in th	Write Precharge Read Precharge BURST TERMINATE Read Write Precharge and CKE n is HIGH (see Tr refresh). ted, i.e., the current state is at state. Exceptions are cov	Select column and start Write burst Deactivate row in bank(s) Select column and start new Read burst Truncate Read burst, start Precharge BURST TERMINATE Select column and start Read burst Select column and start Read burst Select column and start Read burst Select column and start Write burst Truncate Write burst, start Precharge ruth Table 2: Clock Enable (CKE) and after tx for a specific bank and the commands shown	1-6, 10 1-6, 8 1-6, 10 1-6, 8 1-6, 9 1-6, 10, 11 1-6, 10 1-6, 8, 11 SNR / [†] xSRD
Image: Constraint of the second se	L H H H H L Deen CKE previou pecific, e I to that ons: nk has b	H L H L L H E n-1 wa s state v except w bank wh	L H L L L S HIGH was self here no nen in th	Precharge Read Precharge BURST TERMINATE Read Write Precharge and CKE n is HIGH (see Tr refresh). ted, i.e., the current state is at state. Exceptions are cov	Deactivate row in bank(s) Select column and start new Read burst Truncate Read burst, start Precharge BURST TERMINATE Select column and start Read burst Select column and start Read burst Select column and start Read burst Truncate Write burst, start Precharge runcate Write burst, start Precharge ruth Table 2: Clock Enable (CKE) and after tx for a specific bank and the commands shown	1-6, 8 1-6, 10 1-6, 8 1-6, 9 1-6, 10, 11 1-6, 10 1-6, 8, 11 SNR / [†] xSRD
Read L Auto Precharge L Disabled) L Auto Precharge L Auto Precharge L Jisabled) L Auto Precharge L Jisabled) L 1. This table applies whas been met (if the 2. 1. This table is bank-sp allowed to be issued 3. Current state definiting table: Idle: The bar Row Active: A row in in progrates Read: A Read Write: A Write 4. The following states Precharging: Starts wastate. Row Activating:Start active? Read w/Auto Precharactive? Read w/Auto Precharactive? Beselect or NOP correstates. 5. The following states positive clock edge of Refreshing: Starts was in the Accessing Mode Reference	H L H H L Deen CKE previou Decific, e I to that ons: nk has b	L H L L H E n-1 wa s state v except w bank wh	H L H L L s HIGH was self here not here in th	Read Precharge BURST TERMINATE Read Write Precharge and CKE n is HIGH (see Tr refresh). ted, i.e., the current state is at state. Exceptions are cov	Select column and start new Read burst Truncate Read burst, start Precharge BURST TERMINATE Select column and start Read burst Select column and start Write burst Truncate Write burst, start Precharge ruth Table 2: Clock Enable (CKE) and after tx for a specific bank and the commands shown	1-6, 10 1-6, 8 1-6, 9 1-6, 10, 11 1-6, 10 1-6, 8, 11
Read Auto Precharge Disabled) L Write Auto Precharge Disabled) L Auto Precharge Disabled) L Ithis table applies whas been met (if the 2. This table is bank-sp allowed to be issued 3. Current state definiting idle: The bar Row Active: A row ir in progr Read: A Read Write: A Write 4. The following states Precharging: Starts v state. Row Activating:Starts v state. Row Activating:Starts v state. Row Activating:Starts v state. Row Activating:Starts v state. Deselect or NOP cor states. positive clock edge cor Refreshing: Starts v is in the Accessing Mode Ref	H H H L previou pecific, e I to that ons: nk has b	H H L H E n-1 wa s state v except w bank wh	L H L L s HIGH was self here not here in th	Precharge BURST TERMINATE Read Write Precharge and CKE n is HIGH (see Tr refresh). ted, i.e., the current state is at state. Exceptions are cov	Truncate Read burst, start Precharge BURST TERMINATE Select column and start Read burst Select column and start Write burst Truncate Write burst, start Precharge ruth Table 2: Clock Enable (CKE) and after tx for a specific bank and the commands shown	1-6, 8 1-6, 9 1-6, 10, 11 1-6, 10 1-6, 8, 11
Auto Precharge Disabled) L Write Auto Precharge Disabled) L Auto Precharge Disabled) L 1. This table applies wh has been met (if the 2. This table is bank-sp allowed to be issued 3. Current state definiti Idle: The bar Row Active: A row ir in progr Read: A Read Write: A Write 4. The following states Precharging:Starts v state. Row Activating:Starts v state. 4. The following states Precharging:Starts v state. Bead w/Auto Prechar has bee Write w/Auto Prechar has bee Deselect or NOP cor states. 5. The following states positive clock edge of Refreshing: Starts v is in the Accessing Mode Reference	H H L Deen CKE previou Decific, e I to that ons: nk has b	H L H E n-1 wa s state v except w bank wh	L H L us HIGH was self here not here in th	BURST TERMINATE Read Write Precharge and CKE n is HIGH (see Tr refresh). ted, i.e., the current state is at state. Exceptions are cov	BURST TERMINATE Select column and start Read burst Select column and start Write burst Truncate Write burst, start Precharge ruth Table 2: Clock Enable (CKE) and after tx for a specific bank and the commands shown	1-6, 9 1-6, 10, 11 1-6, 10 1-6, 8, 11 SNR / ^t xSRD
Write L Auto Precharge Disabled) L 1. This table applies whas been met (if the 2. This table is bank-sp allowed to be issued 3. Current state definiting the: The bar Row Active: A row ir in progradies and the second states of the second states	H H L previou pecific, e I to that ons: nk has b	L H E n-1 wa s state v except w bank wh	H L L as HIGH was self here no hen in th	Read Write Precharge and CKE n is HIGH (see Tr refresh). ted, i.e., the current state is at state. Exceptions are cov	Select column and start Read burst Select column and start Write burst Truncate Write burst, start Precharge ruth Table 2: Clock Enable (CKE) and after tx for a specific bank and the commands shown	1-6, 10, 11 1-6, 10 1-6, 8, 11 SNR / ^t XSRD
Write Auto Precharge Disabled) 1. This table applies wh has been met (if the 2. This table is bank-sp allowed to be issued 3. Current state definiti Idle: The bar Row Active: A row ir in progr Read: A Read Write: A Write 4. The following states Precharging: Starts v state. Row Activating:Start active": Read w/Auto Precha has bee Write w/Auto Precha beselect or NOP cor states. 5. The following states positive clock edge of Refreshing: Starts v is in the Accessing Mode Ref	H L previou pecific, e I to that ons: nk has b	L H E n-1 wa s state w except w bank wh	L L was self here not hen in th echarged	Write Precharge and CKE n is HIGH (see Tr refresh). ted, i.e., the current state is at state. Exceptions are cov	Select column and start Write burst Truncate Write burst, start Precharge ruth Table 2: Clock Enable (CKE) and after t _x for a specific bank and the commands shown	1-6, 10 1-6, 8, 11 SNR / ^t XSRD
Auto Precharge Disabled) L 1. This table applies whas been met (if the 2. This table is bank-sp allowed to be issued 3. Current state definiti Idle: The bank Row Active: A row ir in progr Read: A Read Write: A Write 4. The following states Precharging: Starts w state. Row Activating:Starts w state. Row Activating:Starts w state. Row Activating:Starts w state. Bead w/Auto Prechar has bee Write w/Auto Precha has bee Deselect or NOP cor states. 5. The following states positive clock edge of Refreshing: Starts w is in the Accessing Mode Res	L previou pecific, e to that ons: nk has b	H E n-1 wa s state w except w bank wh	L was HIGH was self here not hen in th echarged	Precharge and CKE n is HIGH (see Tr refresh). ted, i.e., the current state is at state. Exceptions are cov	Truncate Write burst, start Precharge ruth Table 2: Clock Enable (CKE) and after t _x for a specific bank and the commands show	1-6, 8, 11 SNR / ^t XSRD
 This table applies wh has been met (if the This table is bank-sp allowed to be issued Current state definiti Idle: The bar Row Active: A row ir in progr Read: A Read Write: A Write The following states Precharging:Starts w state. Row Activating:Starts w state. Row Activating:Starts w state. Read w/Auto Precha has bee Deselect or NOP cor states. The following states positive clock edge of Refreshing: Starts w is in the Accessing Mode Ref 	nen CKE previou pecific, e I to that ions: nk has b	E n-1 wa s state v except w bank wh	is HIGH was self here not hen in th echarged	and CKE n is HIGH (see Tr refresh). ted, i.e., the current state is at state. Exceptions are cov	ruth Table 2: Clock Enable (CKE) and after t_x for a specific bank and the commands shown	SNR / ^t XSRD
 has been met (if the 2. This table is bank-sp allowed to be issued 3. Current state definitie Idle: The bar Row Active: A row ir in progr Read: A Read Write: A Write 4. The following states Precharging: Starts v state. Row Activating:Start active": Read w/Auto Precha has been Write w/Auto Precha bas been Write w/Auto Precha has been Deselect or NOP cor states. 5. The following states positive clock edge of Refreshing: Starts v is in the Accessing Mode Ref. 	previou becific, e I to that ons: nk has b	s state w except w bank wh been pre	was self here not hen in th echarged	refresh). ted, i.e., the current state is at state. Exceptions are cov	for a specific bank and the commands show	
active": Read w/Auto Precha has bee Write w/Auto Precha has bee Deselect or NOP cor states. 5. The following states positive clock edge of Refreshing: Starts w is in the Accessing Mode Reg	must no vith regi	ot be inte stration	errupted of a Pre	by a command issued to th charge command and ends	bled, and has not yet terminated or been tern ne same bank. s when t_{RP} is met. Once t_{RP} is met, the bank i when t_{RCD} is met. Once t_{RCD} is met, the bank	s in the idle
 Write w/Auto Precha has bee Deselect or NOP cor states. 5. The following states positive clock edge of Refreshing: Starts w is in the Accessing Mode Reg 	state. arge Ena	abled: S	tarts witl		nmand with Auto Precharge enabled and end	
5. The following states positive clock edge of Refreshing: Starts w is in the Accessing Mode Ref	arge Ena en met.	abled: Si Once t _R	tarts with _P is met	h registration of a Write com , the bank is in the idle state	nmand with Auto Precharge enabled and end e.	
Refreshing: Starts w is in the Accessing Mode Re	Allowab must no	le comm ot be inte	nands to errupted	the other bank are determine	should be issued on any clock edge occurring ined by its current state and according to Trut nd; Deselect or NOP commands must be app	h Table 4.
	e "all ba	nks idle"	state.		ands when t_{RFC} is met. Once t_{RFC} is met, the last command and ends when t_{MRD} has been i	
	met, the	e DDR S	BDRAM	is in the "all banks idle" state		
6. All states and seque	te.	ot shown		-		
9. Not bank-specific; B	ences no	hot all h			all/any must be in a valid state for prechargir urst, regardless of bank. r Writes with Auto Precharge enabled and Re	-

Truth Table 3: Current State Bank n - Command to Bank n (Same Bank)

11. Requires appropriate DM masking.



Truth Table 4: Current State Bank n - Command to Bank m (Different bank)

Current State	CS	RAS	CAS	WE	Command	Action	Notes
Any	Н	Х	Х	Х	Deselect	NOP/continue previous operation	1-6
Any	L	н	Н	Н	No Operation	NOP/continue previous operation	1-6
Idle	х	х	х	х	Any Command Otherwise Allowed to Bank m		1-6
	L	L	Н	Н	Active	Select and activate row	1-6
Row Activating, Active, or	L	н	L	Н	Read	Select column and start Read burst	1-7
Precharging	L	н	L	L	Write	Select column and start Write burst	1-7
	L	L	Н	L	Precharge		1-6
Read	L	L	Н	Н	Active	Select and activate row	1-6
(Auto Precharge Disabled)	L	н	L	Н	Read	Select column and start new Read burst	1-7
	L	L	Н	L	Precharge		1-6
	L	L	Н	Н	Active	Select and activate row	1-6
Write (Auto Precharge	L	н	L	Н	Read	Select column and start Read burst	1-8
Disabled)	L	н	L	L	Write	Select column and start new Write burst	1-7
	L	L	Н	L	Precharge		1-6
	L	L	Н	Н	Active	Select and activate row	1-6
Read (With	L	н	L	н	Read	Select column and start new Read burst	1-7,10
Auto Precharge)	L	н	L	L	Write	Select column and start Write burst	1-7,9,10
	L	L	Н	L	Precharge		1-6
	L	L	Н	Н	Active	Select and activate row	1-6
Write (With	L	н	L	Н	Read	Select column and start Read burst	1-7,10
Auto Precharge)	L	н	L	L	Write	Select column and start new Write burst	1-7,10
	L	L	Н	L	Precharge		1-6

1. This table applies when CKE n-1 was HIGH and CKE n is HIGH (see Truth Table 2: Clock Enable (CKE) and after t_{XSNR /} t_{XSRD} has been met (if the previous state was self refresh).

2. This table describes alternate bank operation, except where noted, i.e., the current state is for bank n and the commands shown are those allowed to be issued to bank m (assuming that bank m is in such a state that the given command is allowable). Exceptions are covered in the notes below.

3. Current state definitions:

Idle: The bank has been precharged, and t_{BP} has been met.

Row Active: A row in the bank has been activated, and t_{RCD} has been met. No data bursts/accesses and no register accesses are in progress.

Read:A Read burst has been initiated, with Auto Precharge disabled, and has not yet terminated or been terminated.Write:A Write burst has been initiated, with Auto Precharge disabled, and has not yet terminated or been terminated.Read with Auto Precharge Enabled: See note 10.

Write with Auto Precharge Enabled: See note 10.

- 4. AUTO REFRESH and Mode Register Set commands may only be issued when all banks are idle.
- 5. A BURST TERMINATE command cannot be issued to another bank; it applies to the bank represented by the current state only.
- 6. All states and sequences not shown are illegal or reserved.
- 7. Reads or Writes listed in the Command/Action column include Reads or Writes with Auto Precharge enabled and Reads or Writes with Auto Precharge disabled.
- 8. Requires appropriate DM masking.
- 9. A Write command may be applied after the completion of data output.
- 10. Concurrent Auto Precharge:

This device supports "Concurrent Auto Precharge". When a read with auto precharge or a write with auto precharge is enabled any command may follow to the other banks as long as that command does not interrupt the read or write data transfer and all other limitations apply (e.g. contention between READ data and WRITE data must be avoided). The minimum delay from a read or write command with auto precharge enable, to a command to a different banks is summarized in table 4a.




Truth Table 5: Concurrent Auto Precharge

From Command	To Command (different bank)	Minimum Delay with Con- current Auto Precharge Support	Units
	Read or Read w/AP	1 + (BL/2) + tWTR	tCK
WRITE w/AP	Write ot Write w/AP	BL/2	tCK
	Precharge or Activate	1	tCK
	Read or Read w/AP	BL/2	tCK
Read w/AP	Write or Write w/AP	CL (rounded up)+ BL/2	tCK
	Precharge or Activate	1	tCK



Simplified State Diagram

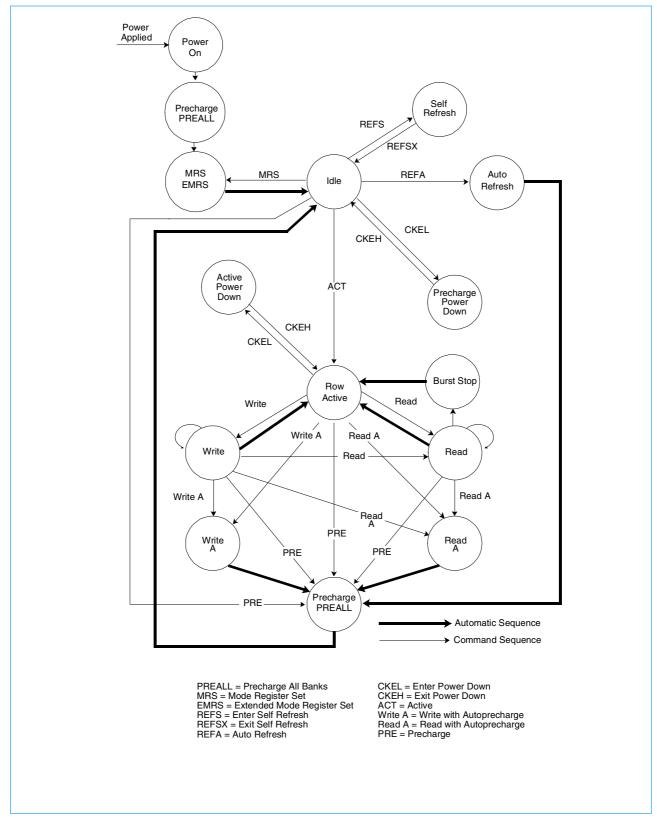



Operating Conditions Absolute Maximum Ratings

Symbol	Parameter	Rating	Units
V _{IN} , V _{OUT}	Voltage on I/O pins relative to V _{SS}	–0.5 to V _{DDQ} + 0.5	V
V _{IN}	Voltage on Inputs relative to V _{SS}	-0.5 to +3.6	V
V _{DD}	Voltage on V_{DD} supply relative to V_{SS}	-0.5 to +3.6	v
V _{DDQ}	Voltage on V_{DDQ} supply relative to V_{SS}	-0.5 to +3.6	V
T _A	Operating Temperature (Ambient)	0 to +70	°C
T _{STG}	Storage Temperature (Plastic)	-55 to +150	°C
PD	Power Dissipation	1.0	w
I _{OUT}	Short Circuit Output Current	50	mA

Note: Stresses greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

Input and Output Capacitances

Parameter	Symbol	Min.	Max.	Units	Notes
Input Capacitance: CK, CK	C _{I1}	2.0	3.0	pF	1
Delta Input Capacitance: CK, CK	C _{dl1}	-	0.25	pF	1
Input Capacitance: All other input-only pins	C _{I2}	2.0	3.0	pF	1
Delta Input Capacitance: All other input-only pins	C _{dl2}	-	0.5	pF	1
Input/Output Capacitance: DQ, DQS, DM	C _{IO}	4.0	5.0	pF	1, 2
Delta Input/Output Capacitance : DQ, DQS, DM	C _{dIO}	-	0.5	pF	1

1. These values are guaranteed by design and are tested on a sample base only. $V_{DDQ} = V_{DD} = 2.5V \pm 0.2V$, f = 100MHz, T_A = 25°C, V_{OUT} (DC) = $V_{DDQ/2}$, VOUT (Peak to Peak) 0.2V. Unused pins are tied to groundVOUT (Peak to Peak) = 0.2V.

2. DM inputs are grouped with I/O pins reflecting the fact that they are matched in loading to DQ and DQS to facilitate trace matching at the board level.



DC Electrical Operating Conditions

 $(0^{\circ}C \le T_{A} \le 70^{\circ}C; V_{DDQ} = 2.5V \pm 0.2V, V_{DD} = +2.5V \pm 0.2V)$

Symbol	Parameter	Min	Max	Units	Notes
V _{DD}	Supply Voltage	2.3	2.7	V	1
V _{DDQ}	I/O Supply Voltage	2.3	2.7	V	1
V_{SS}, V_{SSQ}	Supply Voltage I/O Supply Voltage	0	0	V	
V _{REF}	I/O Reference Voltage	0.49 x V _{DDQ}	0.51 x V _{DDQ}	V	1, 2
V _{TT}	I/O Termination Voltage (System)	V _{REF} – 0.04	V _{REF} + 0.04	V	1, 3
V _{IH(DC)}	Input High (Logic1) Voltage	V _{REF} + 0.15	V _{DDQ} + 0.3	V	1
V _{IL(DC)}	Input Low (Logic0) Voltage	- 0.3	V _{REF} – 0.15	V	1
V _{IN(DC)}	Input Voltage Level, CK and CK Inputs	- 0.3	V _{DDQ} + 0.3	V	1
V _{ID(DC)}	Input Differential Voltage, CK and CK Inputs	0.36	V _{DDQ} + 0.6	V	1, 4
VI _{Ratio}	VI-Matching Pullup Current to Pulldown Current	0.71	1.4		5
I _I	Input Leakage Current Any input $0V \le V_{IN} \le V_{DD}$ (All other pins not under test = 0V)	-2	2	μA	1
I _{OZ}	Output Leakage Current (DQs are disabled; 0V \leq V _{out} \leq V _{DDQ}	- 5	5	μA	1
I _{OH}	Output High Current, Normal Strength Driver ($V_{OUT} = 1.95 V$)	- 15.2		mA	1
I _{OL}	Output Low Current, Normal Strength Driver ($V_{OUT} = 0.35 V$)	15.2		mA	1

1. Inputs are not recognized as valid until V_{REF} stabilizes.

2. V_{REF} is expected to be equal to 0.5 V_{DDQ} of the transmitting device, and to track variations in the DC level of the same. Peak-to-peak noise on V_{REF} may not exceed $\pm 2\%$ of the DC value.

3. V_{TT} is not applied directly to the device. V_{TT} is a system supply for signal termination resistors, is expected to be set equal to V_{REF}, and must track variations in the DC level of V_{REF}

4. V_{ID} is the magnitude of the difference between the input level on CK and the input level on \overline{CK} .

5. The ration of the pullup current to the pulldown current is specified for the same temperature and voltage, over the entire temperature and voltage range, for device drain to source voltage from 0.25 to 1.0V. For a given output, it represents the maximum difference between pullup and pulldown drivers due to process variation.



Normal Mode Pulldown and Pullup Characteristics


- 1. The nominal pulldown V-I curve for DDR SDRAM devices is expected, but not guaranteed, to lie within the inner bounding lines of the V-I curve.
- 2. The full variation in driver pulldown current from minimum to maximum process, temperature, and voltage lie within the outer bounding lines of the V-I curve.

140 Maximum 120 100 I OUT (mA) Nominal High 80 60 Nominal Low 40 Minimum 20 0 0.5 1 1.5 2 2.5 V_{OUT} (V)

Normal Mode Pulldown Characteristics

- 3. The nominal pullup V-I curve for DDR SDRAM devices is expected, but not guaranteed, to lie within the inner bounding lines of the V-I curve.
- 4. The full variation in driver pullup current from minimum to maximum process, temperature, and voltage lie within the outer bounding lines of the V-I curve.

Normal Mode Pullup Characteristics

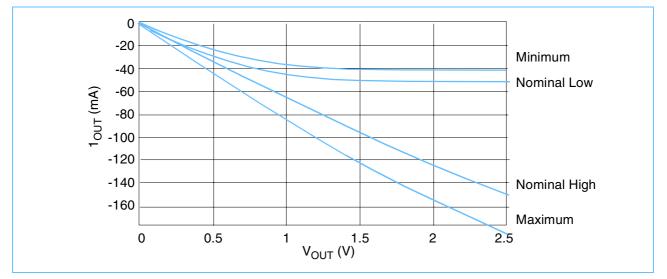

- 5. The full variation in the ratio of the maximum to minimum pullup and pulldown current does not exceed 1.7, for device drain to source voltages from 0.1 to 1.0.
- 6. The full variation in the ratio of the nominal pullup to pulldown current should be unity \pm 10%, for device drain to source voltages from 0.1 to 1.0V.



Normal Mode Pulldown and Pullup Currents


	Pulldown Current (mA) Pullup Current (mA)							
Voltage (V)	Nominal Low	Nominal High	Min	Max	Nominal Low	Nominal High	Min	Мах
0.1	6.0	6.8	4.6	9.6	-6.1	-7.6	-4.6	-10.0
0.2	12.2	13.5	9.2	18.2	-12.2	-14.5	-9.2	-20.0
0.3	18.1	20.1	13.8	26.0	-18.1	-21.2	-13.8	-29.8
0.4	24.1	26.6	18.4	33.9	-24.0	-27.7	-18.4	-38.8
0.5	29.8	33.0	23.0	41.8	-29.8	-34.1	-23.0	-46.8
0.6	34.6	39.1	27.7	49.4	-34.3	-40.5	-27.7	-54.4
0.7	39.4	44.2	32.2	56.8	-38.1	-46.9	-32.2	-61.8
0.8	43.7	49.8	36.8	63.2	-41.1	-53.1	-36.0	-69.5
0.9	47.5	55.2	39.6	69.9	-43.8	-59.4	-38.2	-77.3
1.0	51.3	60.3	42.6	76.3	-46.0	-65.5	-38.7	-85.2
1.1	54.1	65.2	44.8	82.5	-47.8	-71.6	-39.0	-93.0
1.2	56.2	69.9	46.2	88.3	-49.2	-77.6	-39.2	-100.6
1.3	57.9	74.2	47.1	93.8	-50.0	-83.6	-39.4	-108.1
1.4	59.3	78.4	47.4	99.1	-50.5	-89.7	-39.6	-115.5
1.5	60.1	82.3	47.7	103.8	-50.7	-95.5	-39.9	-123.0
1.6	60.5	85.9	48.0	108.4	-51.0	-101.3	-40.1	-130.4
1.7	61.0	89.1	48.4	112.1	-51.1	-107.1	-40.2	-136.7
1.8	61.5	92.2	48.9	115.9	-51.3	-112.4	-40.3	-144.2
1.9	62.0	95.3	49.1	119.6	-51.5	-118.7	-40.4	-150.5
2.0	62.5	97.2	49.4	123.3	-51.6	-124.0	-40.5	-156.9
2.1	62.9	99.1	49.6	126.5	-51.8	-129.3	-40.6	-163.2
2.2	63.3	100.9	49.8	129.5	-52.0	-134.6	-40.7	-169.6
2.3	63.8	101.9	49.9	132.4	-52.2	-139.9	-40.8	-176.0
2.4	64.1	102.8	50.0	135.0	-52.3	-145.2	-40.9	-181.3
2.5	64.6	103.8	50.2	137.3	-52.5	-150.5	-41.0	-187.6
2.6	64.8	104.6	50.4	139.2	-52.7	-155.3	-41.1	-192.9
2.7	65.0	105.4	50.5	140.8	-52.8	-160.1	-41.2	-198.2

Evaluation Conditions for I/O Driver Characteristics


	Nominal	Minimum	Maximum
Operating Temperature	25 °C	70 °C	O° 0
V_{DD} / V_{DDQ}	2.5V	2.3V	2.7V
Process Corner	typical	slow-slow	fast-fast



...Weak Mode Pulldown and Pullup Characteristics Weak Strength Pulldown Characteristics

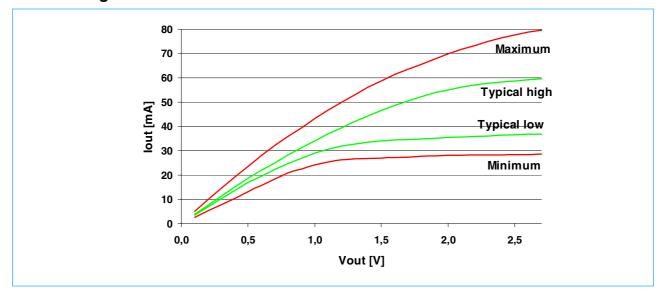

- 1. The weak pulldown V-I curve for DDR SDRAM devices is expected, but not guaranteed, to lie within the inner bounding lines of the V-I curve
- 2. The weak pullup V-I curve for DDR SDRAM devices is expected, but not guaranteed, to lie within the inner bounding lines of the V-I curve.
- 3. The full variation in driver pullup current from minimum to maximum process, temperature, and voltage lie within the outer bounding lines of the V-I curve.

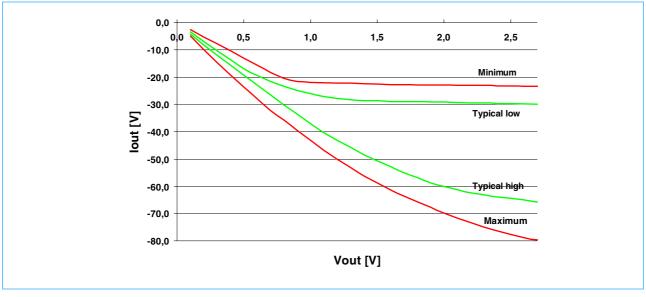

Weak Strength Pullup Characteristics

- 4. The full variation in the ratio of the maximum to minimum pullup and pulldown current does not exceed 1.7, for device drain to source voltages from 0.1 to 1.0.
- 5. The full variation in the ratio of the nominal pullup to pulldown current should be unity \pm 10%, for device drain to source voltages from 0.1 to 1.0V.



Weak Strength Driver Pulldown and Pullup Currents

		Pulldown C	urrent (mA)		Pullup Current (mA)					
Voltage (V)	Nominal Low	Nominal High	Min	Max	Nominal Low	Nominal High	Min	Max		
0.1	3.4	3.8	2.6	5.0	-3.5	-4.3	-2.6	-5.0		
0.2	6.9	7.6	5.2	9.9	-6.9	-8.2	-5.2	-9.9		
0.3	10.3	11.4	7.8	14.6	-10.3	-12.0	-7.8	-14.6		
0.4	13.6	15.1	10.4	19.2	-13.6	-15.7	-10.4	-19.2		
0.5	16.9	18.7	13.0	23.6	-16.9	-19.3	-13.0	-23.6		
0.6	19.6	22.1	15.7	28.0	-19.4	-22.9	-15.7	-28.0		
0.7	22.3	25.0	18.2	32.2	-21.5	-26.5	-18.2	-32.2		
0.8	24.7	28.2	20.8	35.8	-23.3	-30.1	-20.4	-35.8		
0.9	26.9	31.3	22.4	39.5	-24.8	-33.6	-21.6	-39.5		
1.0	29.0	34.1	24.1	43.2	-26.0	-37.1	-21.9	-43.2		
1.1	30.6	36.9	25.4	46.7	-27.1	-40.3	-22.1	-46.7		
1.2	31.8	39.5	26.2	50.0	-27.8	-43.1	-22.2	-50.0		
1.3	32.8	42.0	26.6	53.1	-28.3	-45.8	-22.3	-53.1		
1.4	33.5	44.4	26.8	56.1	-28.6	-48.4	-22.4	-56.1		
1.5	34.0	46.6	27.0	58.7	-28.7	-50.7	-22.6	-58.7		
1.6	34.3	48.6	27.2	61.4	-28.9	-52.9	-22.7	-61.4		
1.7	34.5	50.5	27.4	63.5	-28.9	-55.0	-22.7	-63.5		
1.8	34.8	52.2	27.7	65.6	-29.0	-56.8	-22.8	-65.6		
1.9	35.1	53.9	27.8	67.7	-29.2	-58.7	-22.9	-67.7		
2.0	35.4	55.0	28.0	69.8	-29.2	-60.0	-22.9	-69.8		
2.1	35.6	56.1	28.1	71.6	-29.3	-61.2	-23.0	-71.6		
2.2	35.8	57.1	28.2	73.3	-29.5	-62.4	-23.0	-73.3		
2.3	36.1	57.7	28.3	74.9	-29.5	-63.1	-23.1	-74.9		
2.4	36.3	58.2	28.3	76.4	-29.6	-63.8	-23.2	-76.4		
2.5	36.5	58.7	28.4	77.7	-29.7	-64.4	-23.2	-77.7		
2.6	36.7	59.2	28.5	78.8	-29.8	-65.1	-23.3	-78.8		
2.7	36.8	59.6	28.6	79.7	-29.9	-65.8	-23.3	-79.7		



IDD Specification and Conditions

(0 °C \leq T_A \leq 70 °C; V_{DDQ} = 2.5V \pm 0.2V; V_{DD} = 2.5V \pm 0.2V)

Symbol	Parameter/Condition		DDF	R200	DDR266		6 DDR333		Unit	Notes
Зушьої	Farameter/Condition		typical	max	typical	max	typical	max	Unit	4
IDD0	Operating Current : one bank; active / precharge; tRC = tRC MIN; tCl DM, and DQS inputs changing once per clock cycle; address and changing once every two clock cycles		65	85	72	90	82	105	mA	1,2
IDD1	Operating Current : one bank; active/read/precharge; Bur Refer to the following page for detailed test condition:		67	100	74	110	84	125	mA	1,2
IDD2P	Precharge Power-Down Standby Current: all banks idle; power-dow VIL MAX; tCK = tCK MIN	n mode; CKE <=	2,4	4,5	2,7	5,0	3,0	5,5	mA	1,2
IDD2F	Precharge Floating Standby Current: /CS >= VIH MIN, all banks idle; tCK = tCK MIN ,address and other control inputs changing once per clo VREF for DQ, DQS and DM.		17	35	22	45	26	58	mA	1,2
IDD2Q	Precharge Quiet Standby Current: /CS >= VIH MIN, all banks idle; CKE >= VIH MIN; tCK = tCK MIN ,address and other control inputs state or <= VIL MAX; VIN = VREF for DQ, DQS and DM.	K = tCK MIN, address and other control inputs stable at >= VIH MIN			16	45	19	58	mA	1,2
IDD3P	Active Power-Down Standby Current: one bank active; power-down MAX; tCK = tCK MIN;VIN = VREF for DQ, DQS and DM.	ower-Down Standby Current: one bank active; power-down mode; CKE <= VIL K = tCK MIN;VIN = VREF for DQ, DQS and DM.			12	15	12	15	mA	1,2
IDD3N	Active Standby Current: one bank active; active / precharge;CS >= VIH MIN; CKE >= VIH MIN; tRC = tRAS MAX; tCK = tCK MIN; DQ, DM, and DQS inputs changing twice per clock cycle; address and control inputs changing once per clock cycle			35	32	45	38	58	mA	1,2
IDD4R	Operating Current : one bank active; Burst = 2; reads; continuous bu control inputs changing once per clock cycle; 50% of data outputs ch clock edge; CL = 2 for DDR200, and DDR266A, CL=3 for DDR333; tC = 0mA	nanging on every	54	90	69	110	83	120	mA	1,2
IDD4W	Operating Current : one bank active; Burst = 2; writes; continuous bu control inputs changing once per clock cycle; 50% of data outputs ch clock edge; CL = 2 for DDR200, and DDR266A, CL=3 for DDR333	anging on every	65	95	84	110	102	130	mA	1,2
IDD5	Auto-Refresh Current: tRC = tRFC MIN, distributed refresh		142	180	153	190	161	205	mA	1,2
		standard version	1,9	2,5	1,9	2,5	1,9	2,5	mA	1.0.0
IDD6	Self-Refresh Current: CKE <= 0.2V; external clock on; tCK = tCK MIN	low power version	0,9	1,0	0,9	1,0	0,9	1,0	mA	1, 2, 3
IDD7	Operating Current : four bank; four bank interleaving with Refer to the following page for detailed test condition:		164	270	221	280	235	350		1.0
	······································							mA	1,2	

2. Input slew rate = 1 V/ns.

3. Enables on-chip refresh and address counters

4. Test condition for typical values : VDD = 2.5V, Ta = 25°C, test condition for maximum values: test limit at VDD = 2.7V, Ta = 10°C



IDD Current Measurement Conditions

IDD1 : Operating current : One bank operation

 Only one bank is accessed with t_{RC(min)}, Burst Mode, Address and Control inputs on NOP edge are changing once per clock cycle. l_{out} = 0 mA
 Timing patterns

DDR200 (100Mhz, CL=2) : tCK = 10 ns, CL=2, BL=4, tRCD = 2 * tCK, tRAS = 5 * tCK Setup: A0 N R0 N N P0 N
Read : A0 N R0 N N P0 N - repeat the same timing with random address changing 50% of data changing at every burst
DDR266A (133Mhz, CL=2) : tCK = 7.5 ns, CL=2, BL=4, tRCD = 3 * tCK, tRC = 9 * tCK, tRAS = 5 * tCK Setup: A0 N N R0 N P0 N N N
Read : A0 N N R0 N P0 N NN - repeat the same timing with random address changing 50% of data changing at every burst
DDR333 (166Mhz, CL=2.5) : tCK = 6 ns, CL=2.5, BL=4, tRCD = 3 * tCK, tRC = 9 * tCK, tRAS = 5 * tCK Setup: A0 N N R0 N P0 N N
Read : A0 N N R0 N P0 N N
Read : A0 N N R0 N P0 N N N

3.Legend : A=Activate, R=Read, W=Write, P=Precharge, N=NOP

IDD7 : Operating current: Four bank operation

- 1. Four banks are being interleaved with t_{RC(min)}, Burst Mode, Address and Control inputs on NOP edge are not changing. I_{out} = 0 mA
- 2. Timing patterns

DDR200 (100Mhz, CL=2) : tCK = 10 ns, CL=2, BL=4, tRRD = 2 * tCK, tRCD= 3 * tCK, Read with autoprecharge Setup: A0 N A1 R0 A2 R1 A3 R2
 Read : A0 R3 A1 R0 A2 R1 A3 R2- repeat the same timing with random address changing 50% of data changing at every burst

DDR266A (133Mhz, CL=2) : tCK = 7.5 ns, CL=2, BL=4, tRRD = 2 * tCK, tRCD = 3 * tCK Setup: A0 N A1 R0 A2 R1 A3 R2 N R3 Read : A0 N A1 R0 A2 R1 A3 R2 N R3 - repeat the same timing with random address changing 50% of data changing at every burst
DDR333 (166Mhz, CL=2.5) : tCK = 6 ns, CL=2.5, BL=4, tRRD = 2 * tCK, tRCD = 3 * tCK

Setup: A0 N A1 R0 A2 R1 A3 R2 N R3 Read : A0 N A1 R0 A2 R1 A3 R2 N R3 - repeat the same timing with random address changing 50% of data changing at every burst

3.Legend : A=Activate, R=Read, W=Write, P=Precharge, N=NOP




AC Characteristics

(Notes 1-5 apply to the following Tables; Electrical Characteristics and DC Operating Conditions, AC Operating Conditions, I_{DD} Specifications and Conditions, and Electrical Characteristics and AC Timing.)

- 1. All voltages referenced to V_{SS}.
- 2. Tests for AC timing, I_{DD}, and electrical, AC and DC characteristics, may be conducted at nominal reference/supply voltage levels, but the related specifications and device operation are guaranteed for the full voltage range specified.
- 3. The figure below represents the timing reference load used in defining the relevant timing parameters of the part. It is not intended to be either a precise representation of the typical system environment nor a depiction of the actual load presented by a production tester. System designers will use IBIS or other simulation tools to correlate the timing reference load to a system environment. Manufacturers will correlate to their production test conditions (generally a coaxial transmission line terminated at the tester electronics).
- 4. AC timing and I_{DD} tests may use a V_{IL} to V_{IH} swing of up to 1.5V in the test environment, but input timing is still referenced to V_{REF} (or to the crossing point for CK, CK), and parameter specifications are guaranteed for the specified AC input levels under normal use conditions. The minimum slew rate for the input signals is 1V/ns in the range between V_{IL(AC)} and V_{IH(AC)}.
- 5. The AC and DC input level specifications are as defined in the SSTL_2 Standard (i.e. the receiver effectively switches as a result of the signal crossing the AC input level, and remains in that state as long as the signal does not ring back above (below) the DC input LOW (HIGH) level)
- For System Characteristics like Setup & Holdtime Derating for Slew Rate, I/O Delta Rise/Fall Derating,DDR SDRAM Slew Rate Standards, Overshoot & Undershoot specification and Clamp V-I characteristics see the latest JEDEC specification for DDR components

AC Output Load Circuit Diagram / Timing Reference Load

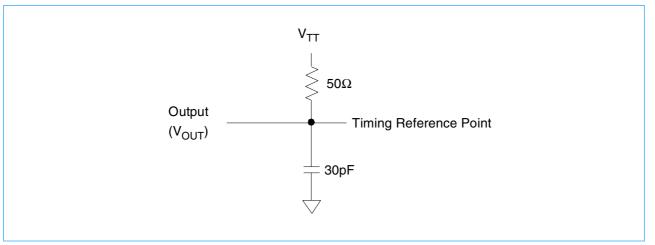

AC Operating Conditions

 $(0 \ ^{\circ}C \le T_{A} \le 70 \ ^{\circ}C; V_{DDQ} = 2.5V \pm 0.2V; V_{DD} = 2.5V \pm 0.2V)$

Symbol	Parameter/Condition	Min	Max	Unit	Notes
V _{IH(AC)}	Input High (Logic 1) Voltage, DQ, DQS, and DM Signals	V _{REF} + 0.31		V	1, 2
V _{IL(AC)}	Input Low (Logic 0) Voltage, DQ, DQS, and DM Signals		V _{REF} – 0.31	V	1, 2
V _{ID(AC)}	Input Differential Voltage, CK and CK Inputs	0.7	V _{DDQ} + 0.6	V	1, 2, 3
V _{IX(AC)}	Input Closing Point Voltage, CK and CK Inputs	0.5*V _{DDQ} - 0.2	$0.5^{*}V_{DDQ} + 0.2$	V	1, 2, 4

1. Input slew rate = 1V/ns.

2. Inputs are not recognized as valid until $\ensuremath{\mathsf{V_{\mathsf{REF}}}}$ stabilizes.

3. V_{ID} is the magnitude of the difference between the input level on CK and the input level on \overline{CK} .

4. The value of V_{IX} is expected to equal 0.5* V_{DDQ} of the transmitting device and must track variations in the DC level of the same.



Electrical Characteristics & AC Timing - Absolute Specifications (0 °C \leq T_A \leq 70 °C; V_{DDQ} = 2.5V \pm 0.2V; V_{DD} = 2.5V \pm 0.2V, See AC Characteristics) (Part 1 of 2)

Symbol	Parameter		DDR200 -8		DDR266A -7		DDR333 -6		Unit	Notes
			Min	Мах	Min	Max	Min	Мах		
t _{AC}	DQ output access time from CK/C	ĸ	- 0.8	+ 0.8	- 0.75	+ 0.75	- 0.7	+ 0.7	ns	1-4
t _{DQSCK}	DQS output access time from CK/CK		- 0.8	+ 0.8	- 0.75	+ 0.75	- 0.6	+ 0.6	ns	1-4
t _{CH}	CK high-level width		0.45	0.55	0.45	0.55	0.45	0.55	t _{CK}	1-4
t _{CL}	CK low-level width		0.45	0.55	0.45	0.55	0.45	0.55	t _{CK}	1-4
t _{HP}	Clock Half Period		min (t _o	_{CL} , t _{CH})	min (t _{CL} , t _{CH})		min (t _{CL} , t _{CH})		ns	1-4
t _{CK}		CL = 3.0	8	12	7	12	6	12	ns	1-4
t _{CK}	Clock cycle time	CL = 2.5	8	12	7	12	6	12	ns	1-4
t _{CK}		CL = 2.0	10	12	7.5	12	7.5	12	ns	1-4
t _{DH}	DQ and DM input hold time		0.5		0.5		0.45		ns	1-4
t _{DS}	DQ and DM input setup time		0.5		0.5		0.45		ns	1-4
t _{IPW}	Control and Addr. input pulse width (each input)		2.5		2.2		2.2		ns	1-4,10
t _{DIPW}	DQ and DM input pulse width (ea	ch input)	2.0		1.75		1.75		ns	1-4,10
t _{HZ}	Data-out high-impedence time fro	m CK/ CK	- 0.8	+ 0.8	- 0.75	+ 0.75	- 0.7	+ 0.7	ns	1-4, 5
t _{LZ}	Data-out low-impedence time fror	n CK/ CK	- 0.8	+ 0.8	- 0.75	+ 0.75	- 0.7	+ 0.7	ns	1-4, 5
t _{DQSS}	Write command to 1st DQS latchi	ng transition	0.75	1.25	0.75	1.25	0.75	1.25	t _{CK}	1-4
t _{DQSQ}	DQS-DQ skew (DQS & associated DQ signals)			+ 0.6		+ 0.5		+ 0.45	ns	1-4
t _{QHS}	Data hold skew factor			1.0		0.75		0.55	ns	1-4
t _{QH}	DQ output hold time from DQS		t _{HP} -t _{QHS}		t _{HP} -t _{QHS}		t _{HP} -t _{QHS}		ns	1-4
t _{DQSL,H}	DQS input low (high) pulse width	(write cycle)	0.35		0.35		0.35		t _{CK}	1-4
t _{DSS}	DQS falling edge to CK setup tim	e (write cycle)	0.2		0.2		0.2		t _{CK}	1-4
t _{DSH}	DQS falling edge hold time from (CK (write cycle)	0.2		0.2		0.2		t _{CK}	1-4
t _{MRD}	Mode register set command cycle	time	2		2		2		t _{CK}	1-4
t _{WPRES}	Write preamble setup time		0		0		0		ns	1-4, 7
t _{WPST}	Write postamble		0.40	0.60	0.40	0.60	0.40	0.60	t _{CK}	1-4, 6
t _{WPRE}	Write preamble		0.25		0.25		0.25		t _{CK}	1-4
	Address and control input setup time	fast slew rate	1.1		0.9		0.75		ns	2-4, 10,11
t _{IS}		slow slew rate	1.1		1.0		0.8		ns	
t _{iH}	Address and control input hold time	fast slew rate	1.1		0.9		0.75		ns	
		slow slew rate	1.1		1.0		0.8		ns	
t _{RPRE}	Read preamble		0.9	1.1	0.9	1.1	0.9	1.1	t _{CK}	1-4
t _{RPST}	Read postamble		0.40	0.60	0.40	0.60	0.40	0.60	t _{CK}	1-4
t _{RAS}	Active to Precharge command		50	120,000	45	120,000	42	70,000	ns	1-4
t _{RC}	Active to Active/Auto-refresh com	mand period	70		65		60		ns	1-4



Electrical Characteristics & AC Timing - Absolute Specifications

(0 °C \leq T_A \leq 70 °C; V_{DDQ} = 2.5V \pm 0.2V; V_{DD} = 2.5V \pm 0.2V, See AC Characteristics) (Part 2 of 2)

Symbol	Parameter	DDR200 -8		DDR266A -7		DDR333 -6		Unit	Notes
		Min	Max	Min	Max	Min	Max		
t _{RFC}	Auto-refresh to Active/Auto-refresh command period	80		75		72		ns	1-4
t _{RCD}	Active to Read or Write delay	20		20		18		ns	1-4
t _{RP}	Precharge command period	20		20		18		ns	1-4
t _{RAP}	Active to Autoprecharge delay	20		20		18		ns	1-4
t _{RRD}	Active bank A to Active bank B command	15		15		12		ns	1-4
t _{WR}	Write recovery time	15		15		15		ns	1-4
t _{DAL}	Auto precharge write recovery + precharge time	(twr/tck) + (trp/tck)						t _{CK}	1-4,9
t _{WTR}	Internal write to read command delay	1		1		1		t _{CK}	1-4
t _{XSNR}	Exit self-refresh to non-read command	80		75		75		ns	1-4
t _{XSRD}	Exit self-refresh to read command	200		200		200		t _{CK}	1-4
t _{REFI}	Average Periodic Refresh Interval (4096 refresh commands per 64ms refresh period)		15.6		15.6		15.6	μs	1-4, 8

1. Input slew rate \geq 1V/ns for DDR266 & DDR333 and = 1V/ns for DDR200.

 The CK/CK input reference level (for timing reference to CK/CK) is the point at which CK and CK cross: the input reference level for signals other than CK/CK, is V_{REF} CK/CK slew rate are >= 1.0 V/ns

3. Inputs are not recognized as valid until V_{REF} stabilizes.

4. The Output timing reference level, as measured at the timing reference point indicated in AC Characteristics (Note 3) is V_{TT}.

 t_{HZ} and t_{LZ} transitions occur in the same access time windows as valid data transitions. These parameters are not referred to a specific voltage level, but specify when the device is no longer driving (HZ), or begins driving (LZ).

- 6. The maximum limit for this parameter is not a device limit. The device operates with a greater value for this parameter, but system performance (bus turnaround) degrades accordingly.
- 7. The specific requirement is that DQS be valid (HIGH, LOW, or some point on a valid transition) on or before this CK edge. A valid transition is defined as monotonic and meeting the input slew rate specifications of the device. When no writes were previously in progress on the bus, DQS will be transitioning from Hi-Z to logic LOW. If a previous write was in progress, DQS could be HIGH, LOW, or transitioning from HIGH to LOW at this time, depending on t_{DQSS}.
- 8. A maximum of eight Autorefresh commands can be posted to any given DDR SDRAM device.
- 9. For each of the terms, if not already an integer, round to the next highest integer. tCK is equal to the actual system clock cycle time.
 10. These parameters guarantee device timing, but they are not necessarily tested on each device
- 11. Fast slew rate >= 1.0 V/ns , slow slew rate >= 0.5 V/ns and < 1V/ns for command/address and CK & CK slew rate >1.0 V/ns, measured between VOH(ac) and VOL(ac)



Electrical Characteristics & AC Timing for DDR266 - Applicable Specifications

Expressed in Clock Cycles (0 °C \leq T_A \leq 70 °C; V_{DDQ} = 2.5V \pm 0.2V; V_{DD} = 2.5V \pm 0.2V, See AC Characteristics)

Symbol	Provide	DD266A	@ CL=2	l lucita	.
	Parameter		Max	Units	Notes
t _{MRD}	Mode register set command cycle time	2		t _{CK}	1-5
t _{WPRE}	Write preamble	0.25		t _{CK}	1-5
t _{RAS}	Active to Precharge command	6	16000	t _{CK}	1-5
t _{RC}	Active to Active/Auto-refresh command period	9		t _{CK}	1-5
t _{RFC}	Auto-refresh to Active/Auto-refresh command period	10		t _{СК}	1-5
t _{RCD}	Active to Read or Write delay	3		t _{CK}	1-5
t _{RP}	Precharge command period	3		t _{CK}	1-5
t _{RRD}	Active bank A to Active bank B command	2		t _{CK}	1-5
t _{WR}	Write recovery time	2		t _{CK}	1-5
t _{DAL}	Auto precharge write recovery + precharge time	5		t _{CK}	1-5
t _{WTR}	Internal write to read command delay	1		t _{CK}	1-5
t _{XSNR}	Exit self-refresh to non-read command	10		t _{CK}	1-5
t _{XSRD}	Exit self-refresh to read command	200		t _{CK}	1-5

1. Input slew rate = 1V/ns

2. The CK/CK input reference level (for timing reference to CK/CK) is the point at which CK and CK cross: the input reference level for signals other than CK/CK, is V_{REF.}


3. Inputs are not recognized as valid until $\ensuremath{\mathsf{V_{\mathsf{REF}}}}$ stabilizes.


4. The Output timing reference level, as measured at the timing reference point indicated in AC Characteristics (Note 3) is V_{TT}.

5. t_{HZ} and t_{LZ} transitions occur in the same access time windows as valid data transitions. These parameters are not referred to a specific voltage level, but specify when the device is no longer driving (HZ), or begins driving (LZ).




Timing Diagrams



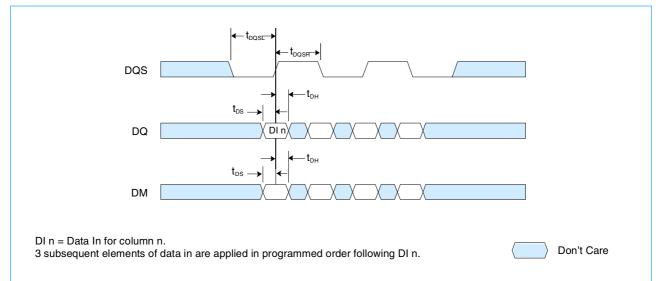


Data Output (Read) (Timing Burst Length = 4)

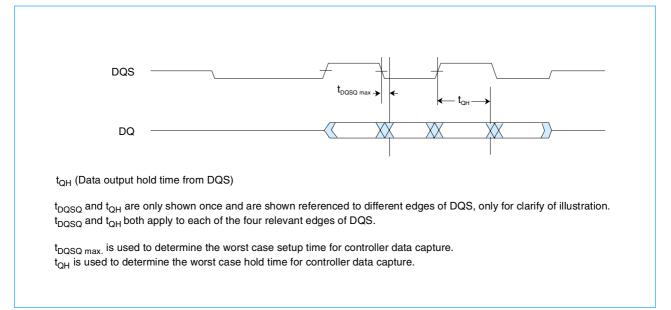




Initialize and Mode Register Sets

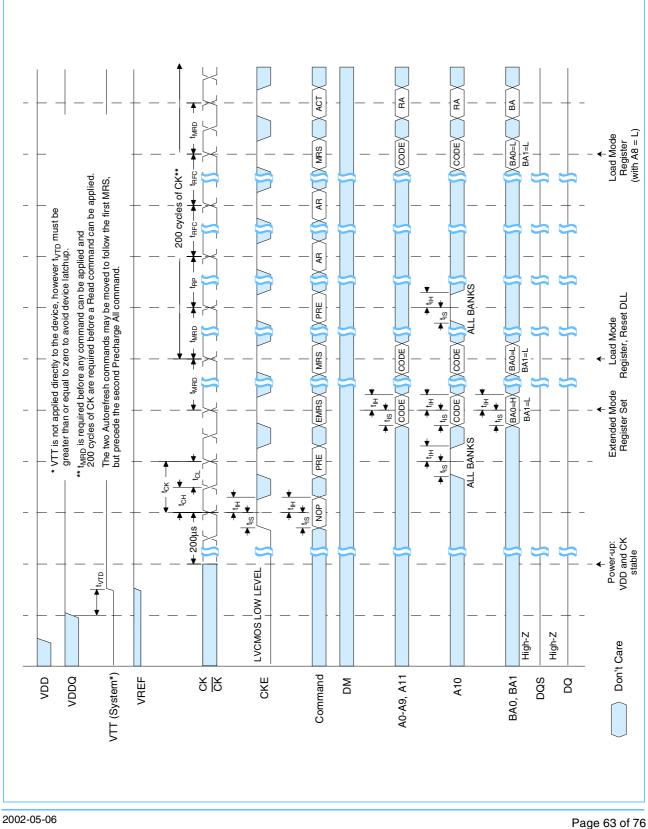




Power Down Mode

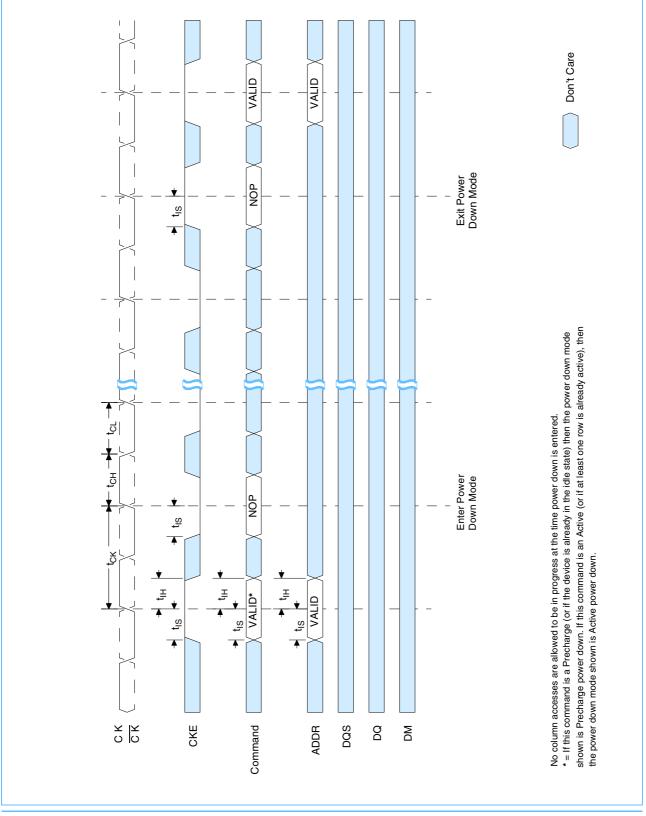




Auto Refresh Mode

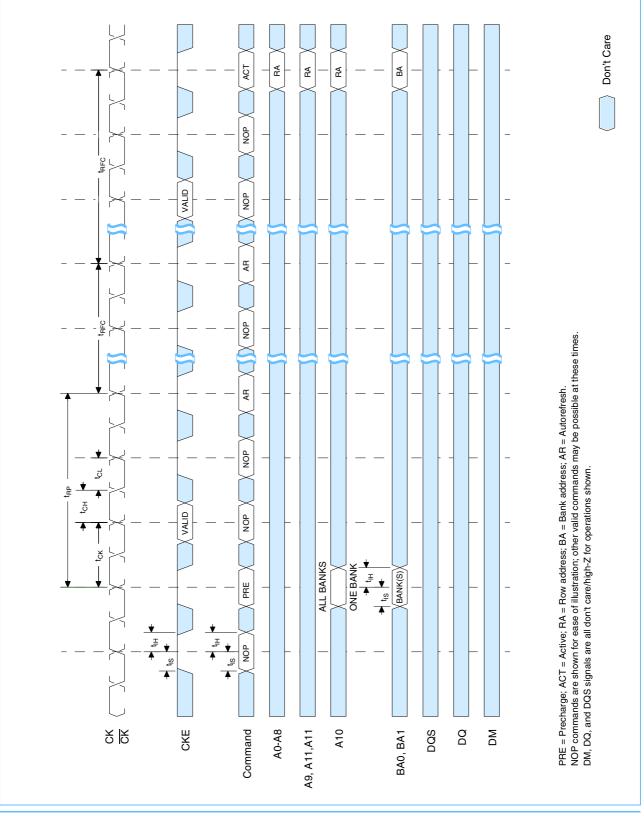




Self Refresh Mode

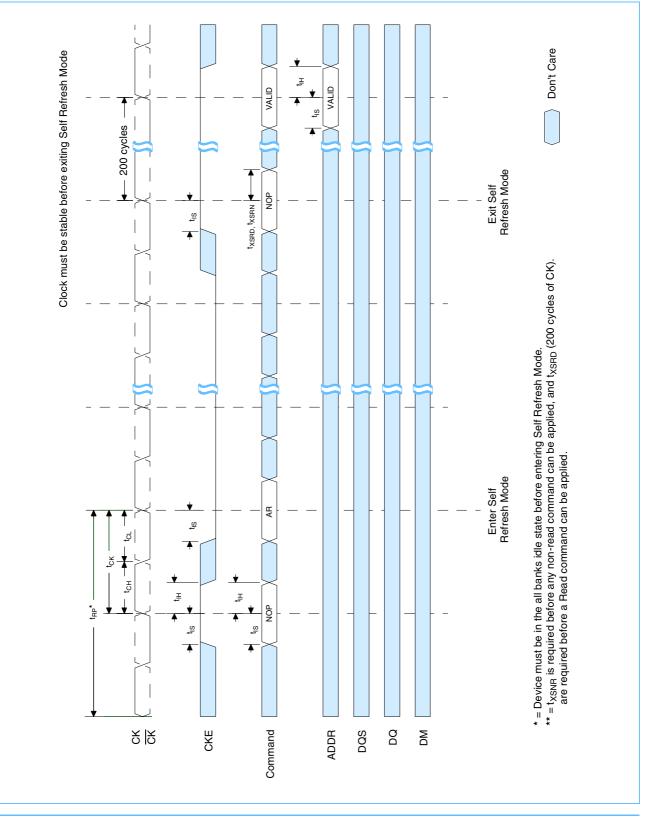




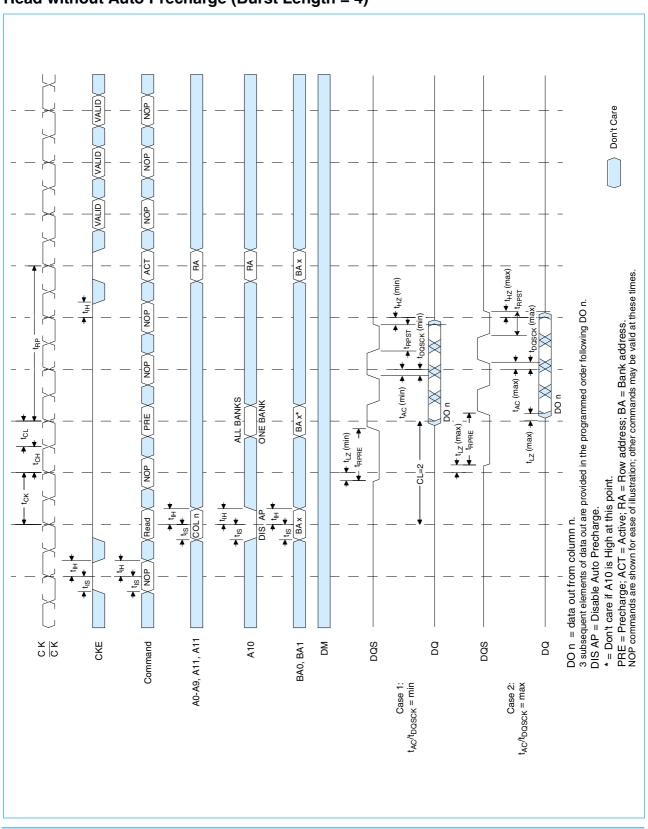


Read without Auto Precharge (Burst Length = 4)




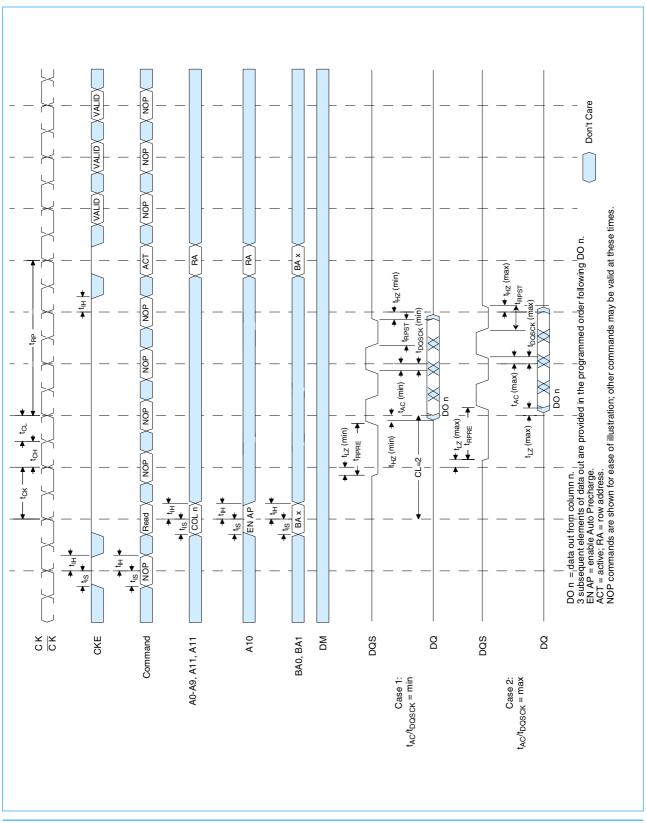


Read with Auto Precharge (Burst Length = 4)





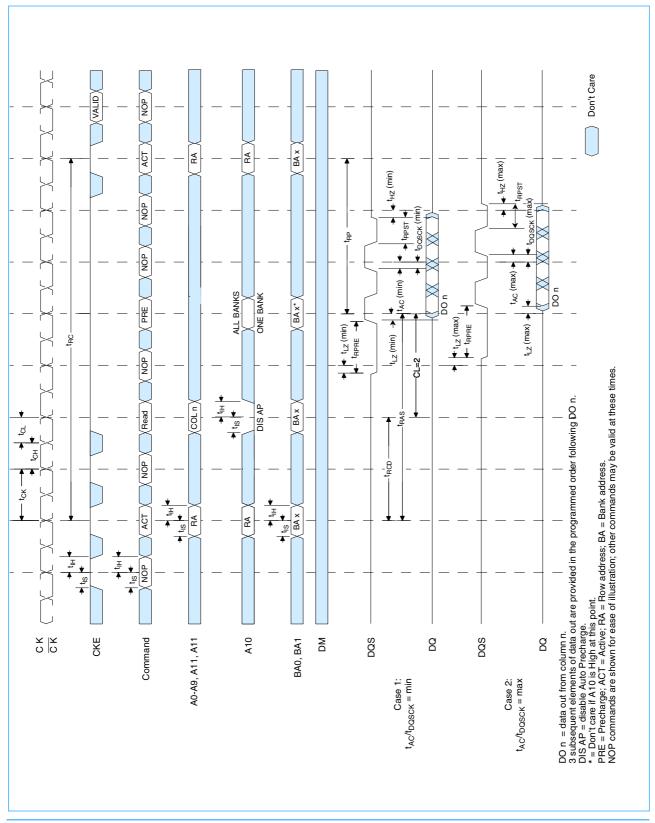




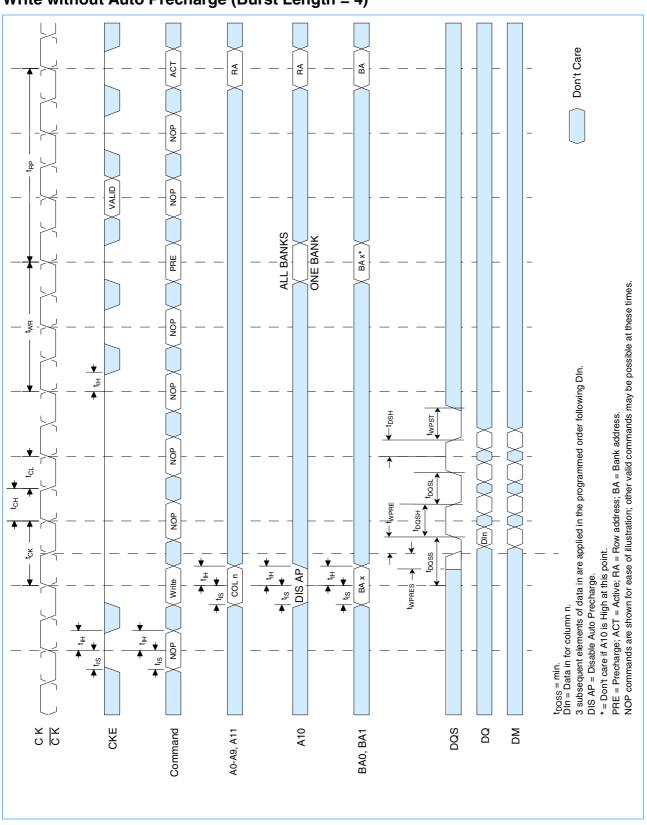

Write without Auto Precharge (Burst Length = 4)




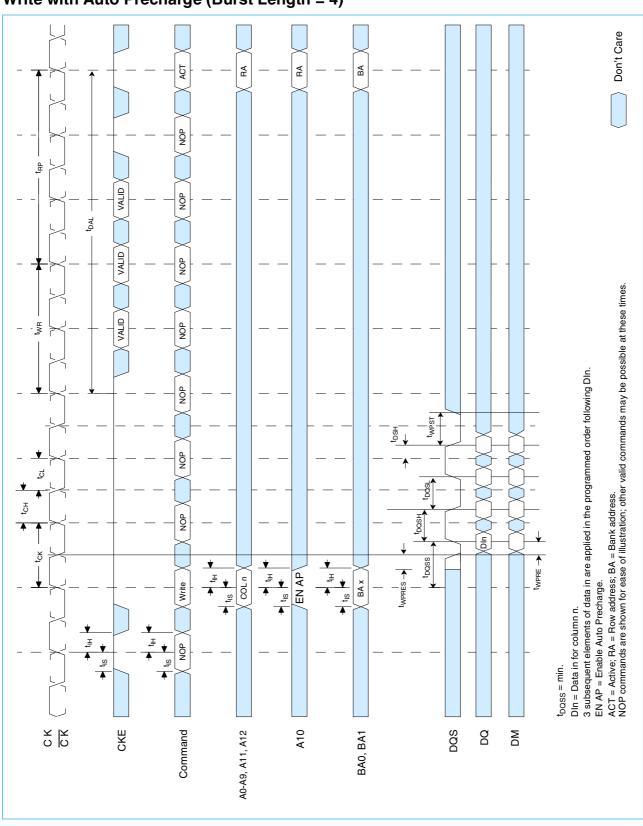

Write with Auto Precharge (Burst Length = 4)



Bank Write Access (Burst Length = 4)

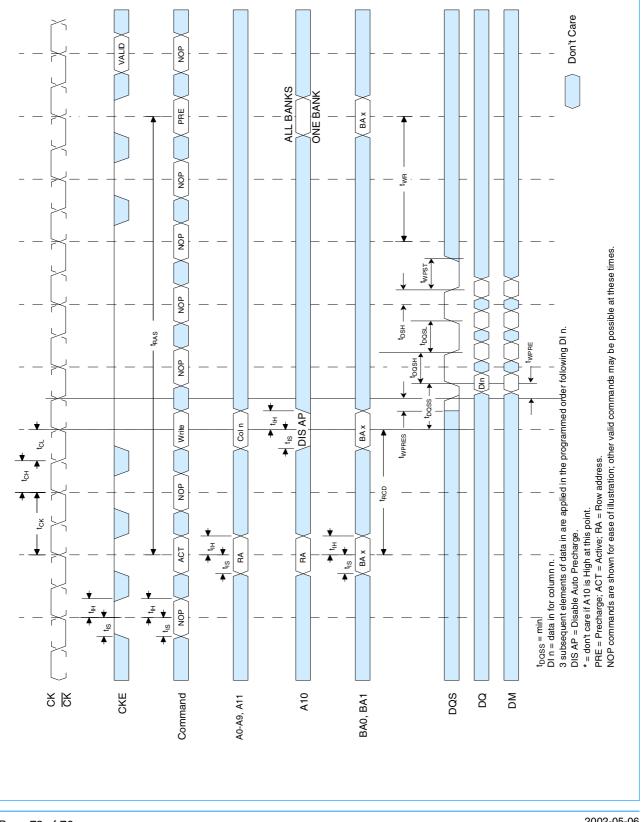



Don't Care ACT BA Å Å NOP ₽ VALID 3 subsequent elements of data in are applied in the programmed order following DI n (the second element of the 4 is masked). DIS AP = Disable Auto Precharge. NOP ALL BANKS ONE BANK BA x* РНЩ * = Don't care if A10 is High at this point. PRE = Precharge; ACT = Active; RA = Row address; BA = Bank address. NOP commands are shown for ease of illustration; other valid commands may be possible at these times. tooss = min. NOP NOP tosh twpst NOP لح ل _**t** tpast f NOP tbash . DIN ţ DOSS ¥ ¥ | t_{is} |▲ | DIS AP/ ≣. ₹ COL n Ę. ₹ WPRES t Is BA X ♦ t_{IS} 4 Write DI n = data in for column n. Ŧ ₽ NOP t tis ŝ . СKE DQS ğ ΜQ <u>ર્</u>ચ કુ A10 Command A0-A9, A11 BA0, BA1

Write DM Operation (Burst Length = 4)



Package Dimensions

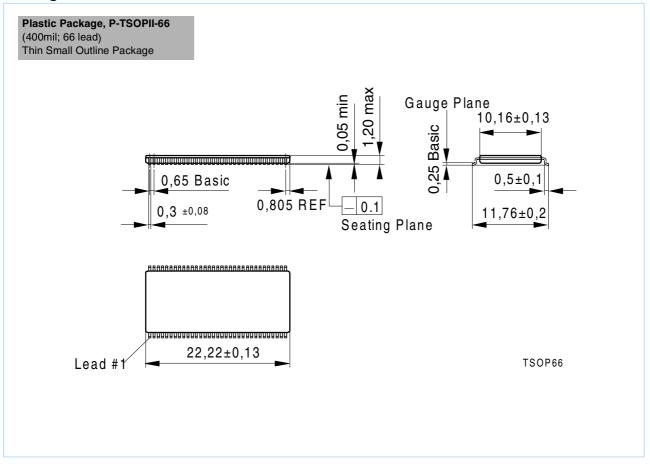




TABLE OF CONTENT

Features	1
Description Pin Configuration Input/Output Functional Description Block Diagram (32Mb x 4) Block Diagram (16Mb x 8) Block Diagram (8Mb x 16)	1 2 3 5 6 7
Functional Description Initialization Register Definition Mode Register Operation Burst Definition Required CAS Latencies Extended Mode Register Extended Mode Register Definition	8 9 10 11 12 13 14
Commands Delesect, No Operation Mode Register Set Active Read Write Precharge Auto Precharge Burst Terminate Auto Refresh Self Refresh	15 15 15 15 15 15 16 16 16
Truth Table 1a: Commands Truth Table 1b: DM Operation	17 17
Operations Activating a Specific Row in a Specific Bank tRCD and tRRD Definition Read Command Read Burst Consecutive Read Bursts Non-Consecutive Read Bursts Random Read Accesses Terminating a Read Burst Read to Write Read to Precharge Write Command Write Burst (Burst Length = 4) Write to Write Random Write Cycles	18 18 19 20 21 22 23 24 26 27 28 30 31 32 33 34

HYB25D128400/800/160AT(L) 128-Mbit Double Data Rate SDRAM

Write to Read Write to Read Interrupting Write to Read: Minimum DQSS Write to Read: Nominal DQSS Write to Precharge Non-Interrupting Write to Precharge Interrupting Write to Precharge Minimum DQSS Write to Precharge: Nominal DQSS Write to Precharge: Nominal DQSS Precharge Power-Down Truth Table 2: Clock Enable (CKE) Truth Table 3: Current State, SameBank Truth Table 4: Current State, Different Bank Truth Table 5: Concurrent Auto Precharge Simplified State Diagram	35 36 37 38 39 40 41 42 43 44 45 46 47 48 49
Operating Conditions Absolute Maximum Ratings Input and Output Capacitances DC Electrical Operating Conditions Normal Mode Pulldown Characteristics Normal ModePullup Characteristics Normal ModePulldown and Pullup Currents Weak Mode Pulldown Characteristics Weak ModePullup Characteristics Weak ModePulldown and Pullup Currents IDD Specifications and Conditions AC Characteristics AC Output Load Circuit Diagram AC Operating Conditions	50 50 51 52 53 54 55 56 56 58 58 60
Electrical Characteristics & AC Timing	61
Timing Diagrams Data Input (Write) Data Output (Read) Initialize and Mode Register Sets Power Down Mode Auto Refresh Mode Self Refresh Mode Read without Auto Precharge Read with Auto Precharge Bank Read Access Write without Auto Precharge. Write without Auto Precharge Bank Write Access Write with Auto Precharge Bank Write Access Write DM Operation	62 62 63 64 65 66 67 68 69 70 71 72 73
Package Dimensions Table of Content Security Information	74 75 76



Attention please !

As far as patents or other rights of third parties are concerned, liability is only assumed for components, not for applications, processes and circuits implemented within components or assemblies. This information describes the type of components and shall not be considered as assured characteristics. Terms of delivery and rights to change design reserved.

For questions on technology, delivery and prices please contact INFINEON Technologies Offices in Munich or the INFINEON Technologies Sales Offices and Representatives worldwide.

Due to technical requirements components may contain dangerous substances. For information on the types in question please contact your nearest INFINEON Technologies office or representative.

Packing

Please use the recycling operators known to you. We can help you - get in touch with your nearest sales office. By agreement we will take packing material back, if it is sorted. You must bear the costs of transport. For packing material that is returned to us unsorted or which we are not obliged to accept, we shall have to invoice you for any costs incurred.

Components used in life-support devices or systems must be expressly authorized for such purpose!

Critical components¹ of INFINEON Technologies, may only be used in lifesupport devices or systems² with the express written approval of INFINEON Technologies.

1. A critical component is a component used in a life-support device or system whose failure can reasonably be expected to cause the failure of that life-support device or system, or to affect the safety or effectiveness of that device or system.

2. Life support devices or systems are intended (a) to be implanted in the human body, or (b) to support and/or maintain and sustain human life. If they fail, it is reasonable to assume that the health of the user may be endangered.