

# L6470

# Fully integrated microstepping motor driver with motion engine and SPI

**Target specification** 

### **Features**


- Operating voltage: 8 45 V
- 7.0 A output peak current (3.0 A r.m.s.)
- Low R<sub>DSon</sub> power MOSFETS
- Programmable speed profile and positioning
- Programmable power MOS slew-rate
- Up to 1/128 microstepping
- Sensorless stall detection
- SPI interface
- Low guiescent and standby currents
- Programmable non dissipative overcurrent protection on high and low-side
- Two levels overtemperature protection
- Miniaturized and thermally enhanced packages: QFN7X7-48, HTSSOP28 and POWERSO36

# **Applications**

■ Bipolar stepper motor

### www.Data Description

The L6470, realized in analog mixed signal technology, is an advanced fully integrated solution suitable for driving two phase bipolar stepper motors with microstepping.

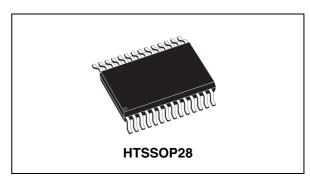

It integrates a dual low R<sub>DSon</sub> DMOS full bridge with all of the power switches equipped with an accurate on chip current sensing circuitry suitable for non dissipative current control and overcurrent protections. Thanks to a unique control system a true 1/128 steps resolution is achieved. The digital control core can generate user defined motion profiles with acceleration, deceleration, speed or target position easily programmed through a dedicated registers set. All commands and data registers, including those used to set analogue values (i.e. current control value, current protection trip point, dead time, PWM frequency etc.) are sent through a standard 5Mbit/s SPI.

A very rich set of protections (thermal, low bus voltage, overcurrent, motor stall) allows designing a fully protected application, as required by most demanding motor control applications

Table 1. Device summary

Order codes	Package	Packing
L6470H	HTSSOP28	Tube
L6470Q	QFN7X748	Tray
L6470PD	POWERSO36	Tube

Contents L6470

# **Contents**

1	Block	k diagra	m	8
2	Elect	rical da	ta	9
	2.1	Absolut	e maximum ratings	9
	2.2	Recom	mended operating conditions	. 10
3	Elect	rical ch	aracteristics	. 11
4	Pin c	onnecti	on	. 16
	4.1	Pin list		. 16
5	Туріс	al appli	cations	. 18
6	Func	tional d	escription	. 19
	6.1	Device	power-up	. 19
	6.2	Logic I/	0	. 19
	6.3	Charge	pump	. 19
	6.4	Microst	epping	. 20
	6.5	Absolut	e position counter	. 21
	6.6	Prograr	nmable speed profiles	. 21
	6.7	Motor o	ontrol commands	. 21
www.DataSheet4U.com		6.7.1	Constant speed commands	. 22
		6.7.2	Positioning commands	
		6.7.3	Motion commands	
		6.7.4	Stop commands	
		6.7.5	Step-clock mode	
	6.8		oscillator and oscillator driver	
		6.8.1	Internal oscillator	
		6.8.2	External clock source	
	6.9		rrent detection	
	6.10		oltage lock-out (UVLO)	
	6.11	Therma	ા warning and thermal shutdown	. 26
	6.12	Reset a	and standby	. 26

L6470 Contents

	6.13	Externa	I switch (SW pin)	26
	6.14	Progran	nmable DMOS slew-rate, dead-time and blanking-time	27
	6.15	Integrat	ed analog to digital converter	27
	6.16	Internal	voltage regulator	27
	6.17		in	
	6.18	•	in	
7	Phase	e currer	nt control	29
	7.1	PWM s	newave generators	29
	7.2	Sensor	ess stall detection	29
	7.3	BEMF o	compensation	30
	7.4	Motor s	upply voltage compensation	30
	7.5		resistance thermal drift compensation	
		•	,	
8	Seria	l interfa	ce	32
_	_	_	_	
9	Progr		g manual	
	9.1	Ū	rs and flags description	
		9.1.1	ABS_POS	
		9.1.2	EL_POS	
		9.1.3	MARK	
		9.1.4	SPEED	
		9.1.5	ACC	
www.DataSheet4U.com		9.1.6	DEC	
		9.1.7 9.1.8	MAX_SPEED	
		9.1.9	FS SPD	
		9.1.10	KVAL_HOLD, KVAL_RUN, KVAL_ACC and KVAL_DEC	
		9.1.11	INT_SPEED	
		9.1.12	ST SLP	
		9.1.13	FN_SLP_ACC	. 39
		9.1.14	FN_SLP_DEC	. 39
		9.1.15	K_THERM	. 40
		9.1.16	ADC_OUT	. 40
		9.1.17	OCD_TH	. 41
		9.1.18	STALL_TH	. 41

L6470		Contents
STEP_MODE	9.1.19	
ALARM_EN43	9.1.20	
CONFIG	9.1.21	
STATUS	9.1.22	
tion commands	9.2 Applica	
Nop51	9.2.1	
SetParam (PARAM, VALUE)51	9.2.2	
GetParam (PARAM)	9.2.3	
Run (DIR, SPD)	9.2.4	
StepClock (DIR)	9.2.5	
Move (DIR, N_STEP)	9.2.6	
GoTo (ABS_POS)	9.2.7	
GoTo_DIR (DIR, ABS_POS)	9.2.8	
GoUntil (ACT, DIR, SPD)	9.2.9	
GoHome54	9.2.10	
ResetPos	9.2.11	
ResetDevice	9.2.12	
SoftStop	9.2.13	
HardStop	9.2.14	
SoftHiZ	9.2.15	
HardHiZ	9.2.16	
LastCommand	9.2.17	
GetStatus	9.2.18	
chanical data	Package med	h <b>Q</b> et4U.com
tory	Revision his	11

List of tables

# List of tables

Table 1.	Device summary	1
Table 2.	Absolute maximum ratings	9
Table 3.	Recommended operating conditions	. 10
Table 4.	Electrical characteristics	. 11
Table 5.	Pin description	. 16
Table 6.	Typical application values	. 18
Table 7.	CL values according to external oscillator frequency	
Table 8.	Registers map	
Table 9.	EL_POS register	
Table 10.	Voltage amplitude regulation registers	
Table 11.	Winding resistance thermal drift compensation coefficient	. 40
Table 12.	ADC_OUT value and motor supply voltage compensation feature	
Table 13.	Overcurrent detection threshold	
Table 14.	Stall detection threshold	
Table 15.	STEP_MODE register	. 42
Table 16.	Step mode selection	
Table 17.	ALARM_EN register	
Table 18.	CONFIG register	
Table 19.	Oscillator management	
Table 20.	External switch hard stop interrupt mode	
Table 21.	Overcurrent event	
Table 22.	Programmable power bridge output slew-rate values	
Table 23.	Motor supply voltage compensation enable	
Table 24.	PWM frequency: integer division factor	
Table 25.	PWM frequency: multiplication factor	
Table 26.	Available PWM frequencies [kHz]: 8 MHz oscillator frequency	
Table 27.	Available PWM frequencies [kHz]: 16 MHz oscillator frequency	
Table 28.	Available PWM frequencies [kHz]: 24 MHz oscillator frequency	
Table 29.	Available PWM frequencies [kHz]: 32 MHz oscillator frequency	
Table 30.	STATUS register	
www.DataSheet4U.com	STATUS register DIR bit	
Table 32.	STATUS register MOT_STATE bits	
Table 33.	Application commands	
Table 34.	Nop command structure	
Table 35.	SetParam command structure	
Table 36.	GetParam command structure	. 51
Table 37.	Run command structure	. 52
Table 38.	Stepclock command structure	. 52
Table 39.	Move command structure	. 53
Table 40.	GoTo command structure	. 53
Table 41.	GoTo_DIR command structure	. 53
Table 42.	GoUntil command structure	
Table 43.	GoHome command structure	
Table 44.	ResetPos command structure	
Table 45.	ResetDevice command structure	
Table 46.	SoftStop command structure	
Table 47.	HardStop command structure	
Table 48.	SoftHiZ command structure	

# Table 49. HardHiZ command structure. 56 Table 50. LastCommand command structure. 56 Table 51. GetStatus command structure. 57 Table 52. HTSSOP28 mechanical data. 58 Table 53. Document revision history. 60



List of figures

# **List of figures**


Figure 1.	Block diagram	8
Figure 2.	Pin connection (top view)	. 16
Figure 3.	Bipolar stepper motor control application using L6470	. 18
Figure 4.	Charge pump circuitry	. 20
Figure 5.	Normal mode and microstepping (128 microsteps)	. 20
Figure 6.	Constant speed commands examples	. 22
Figure 7.	Positioning command examples	. 22
Figure 8.	Motion commands examples	. 23
Figure 9.	OSCIN and OSCOUT pins configurations	. 25
Figure 10.	External switch connection	. 27
Figure 11.	Internal 3 V linear regulator	. 28
Figure 12.	BEMF compensation curve	. 30
Figure 13.	Motor supply voltage compensation circuit	. 31
Figure 14.	SPI timings diagram	. 32
Figure 15.	Daisy-chain configuration	. 33
Figure 16.	HTSSOP28 mechanical data	. 59



**Block diagram** L6470

### **Block diagram** 1

Figure 1. **Block diagram** 

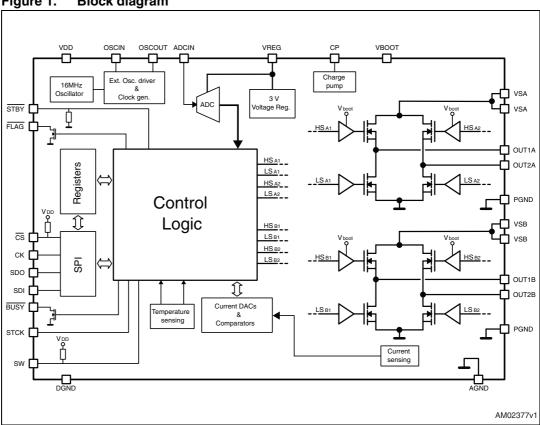

L6470 Electrical data

# 2 Electrical data

# 2.1 Absolute maximum ratings

Table 2. Absolute maximum ratings

Symbol	Parameter	Test condition	Value	Unit
$V_{DD}$	Logic interface supply voltage		5.5	V
V <sub>S</sub>	Motor supply voltage	$V_{SA} = V_{SB} = V_{S}$	48	V
V <sub>GND, diff</sub>	Differential voltage between AGND, PGND and DGND		±0.3	٧
V <sub>boot</sub>	Bootstrap peak voltage		55	V
V <sub>REG</sub>	Internal voltage regulator output pin and logic supply voltage		3.6	٧
V <sub>ADCIN</sub>	Integrated ADC input voltage range (ADCIN pin)		-0.3 to +3.6	٧
V <sub>OSC</sub>	OSCIN and OSCOUT pin voltage range		-0.3 to +3.6	V
$V_{out\_diff}$	Differential voltage between V <sub>SA</sub> , OUT1 <sub>A</sub> , OUT2 <sub>A</sub> , PGND and V <sub>SB</sub> , OUT1 <sub>B</sub> , OUT2 <sub>B</sub> , PGND pins	$V_{SA} = V_{SB} = V_{S}$	48	V
V <sub>LOGIC</sub>	Logic inputs voltage range		-0.3 to +5.5	V
I <sub>out</sub> (1)	R.m.s. output current		3	Α
I <sub>out_peak</sub> (1)	Pulsed output current	T <sub>PULSE</sub> < 1 ms	7	Α
T <sub>OP</sub>	Operating junction temperature		150	°C
T <sub>s</sub>	Storage temperature range		-55 to 150	°C
P <sub>tot</sub>	Total power dissipation (T <sub>A</sub> = 25°C)	TBD	TBD	W
All pins	Maximum withstanding voltage range Test condition: CDF-AEC-Q100-002- "human body model" Acceptance criteria "normal performance" all pins vs. all pins		± 2000	V
	Maximum withstanding voltage range test condition: TBD - "charge device model" all pins vs. all pins		TBD	V

Maximum output current limit is related to metal connection and bonding characteristics. Actual limit must satisfy maximum thermal dissipation constraints.

Electrical data L6470

# 2.2 Recommended operating conditions

Table 3. Recommended operating conditions

Symbol	Parameter	Test condition	Value		Unit		
V	Logio interface cumply voltage	3.3 V logic outputs		3.3		V	
V <sub>DD</sub>	Logic interface supply voltage	5 V logic outputs		5		V	
V <sub>S</sub>	Motor supply voltage	$V_{SA} = V_{SB} = V_{S}$	8		45	V	
V <sub>out_diff</sub>	Differential voltage between $V_{SA}$ , $OUT1_A$ , $OUT2_A$ , $PGND$ and $V_{SB}$ , $OUT1_B$ , $OUT2_B$ , $PGND$ pins	$V_{SA} = V_{SB} = V_{S}$			45	<b>V</b>	
V <sub>REG,in</sub>	Logic supply voltage	V <sub>REG</sub> voltage imposed by external source		3.3		٧	
V <sub>ADC</sub>	Integrated ADC input voltage (ADCIN pin)		0		V <sub>REG</sub>	٧	
T <sub>j</sub>	Operating junction temperature		- 25		125	°C	

# 3 Electrical characteristics

 $V_{SA} = V_{SB} = 36 \text{ V}; V_{DD} = 3.3 \text{ V}; V_{REG} = 3 \text{ V}; T_{J} = 25 \,^{\circ}\text{C}, \text{ unless otherwise specified.}$ 

Table 4. Electrical characteristics

Table 4. Electrical characteristics										
Symbol	Parameter	Test condition	Min	Тур	Max	Unit				
General										
V <sub>SthOn</sub>	V <sub>S</sub> UVLO turn on threshold		TBD	8	TBD	٧				
V <sub>SthOff</sub>	V <sub>S</sub> UVLO turn off threshold		TBD	6.8	TBD	V				
V <sub>REGth</sub>	V <sub>REG</sub> OK threshold			2.8		V				
I <sub>qu</sub>	Undervoltage motor quiescent supply current			TBD	TBD	μΑ				
Iq	Quiescent motor supply current	Internal oscillator selected		7	TBD	mA				
T <sub>j(WRN)</sub>	Thermal warning temperature		TBD	130	TBD	°C				
T <sub>j(OFF)</sub>	Thermal shutdown temperature		TBD	160	TBD	°C				
Charge pu	Charge pump									
V <sub>pump</sub>	Voltage swing for charge pump oscillator			10		V				
f <sub>pump,min</sub>	Minimum charge pump oscillator frequency (1)			660		kHz				
f <sub>pump,max</sub>	Maximum charge pump oscillator frequency (1)			800		kHz				
I <sub>boot</sub>	Average boot current	f <sub>sw,A</sub> = f <sub>sw,B</sub> = 15.6 kHz POW_SR = '10'		870		μΑ				
Output DMOS transistor										
	High side switch ON resistance	$T_j = 25 ^{\circ}\text{C},$ $I_{out} = 3\text{A}$		0.37	TBD					
Sheet4U.com	riigii side switcii Oiv resistance	$T_j = 125  ^{\circ}\text{C},  ^{(2)}$ $I_{out} = 3\text{A}$		0.51	TBD	Ω				
R <sub>DS(ON)</sub>	Low side switch ON resistance	$T_j = 25$ °C, $I_{out} = 3A$		0.18	TBD	22				
	Low side Switch On resistance	$T_j = 125  ^{\circ}\text{C},  ^{(2)}$ $I_{out} = 3\text{A}$		0.23	TBD					
l	Leakage current	OUT = V <sub>S</sub>			TBD	mΛ				
I <sub>DSS</sub>	Leakage current	OUT = GND	TBD			mA				
		POW_SR = '11' I <sub>out</sub> = ±1A		TBD						
t <sub>r</sub>	t <sub>r</sub> Hise time (9)	$POW\_SR = '10'$ $I_{lout} = \pm 1A$		TBD		ns				
		POW_SR = '01' I <sub>out</sub> = ±1A		TBD						

Table 4. Electrical characteristics (continued)

Symbol	Parameter	Test condition	Min	Тур	Max	Unit
		POW_SR = '11'		TBD		
		$I_{out} = \pm 1A$		100		
t <sub>f</sub>	Fall time <sup>(3)</sup>	POW_SR = '10'		TBD		ns
		$I_{out} = \pm 1A$				
		POW_SR = '01'		TBD		
		$I_{load} = \pm 1A$		500		
SR <sub>out</sub>		POW_SR = '11'		530		
	Output slew-rate	POW_SR = '10'		290		V/µs
		POW_SR = '01'		180		
Dead time	and blanking					
	Dead time	POW_SR = '11',		500		
t <sub>DT</sub>		$f_{OSC} = 16MHz$		300		
		POW_SR = '10',		750		ns
		f <sub>OSC</sub> = 16MHz				
		$POW\_SR = '01',$ $f_{OSC} = 16MHz$		1000		
		POW_SR = '11',				
	Blanking time	$f_{OSC} = 16MHz$		875		
		POW_SR = '10',				
t <sub>blank</sub>		f <sub>OSC</sub> = 16MHz		1375		ns
		POW_SR = '01',		1875		
		f <sub>OSC</sub> = 16MHz		1073		
Source-dra	in diodes					
V <sub>SD,HS</sub>	High side diode forward ON voltage	I <sub>out</sub> = 3A		TBD	TBD	V
V <sub>SD,LS</sub>	Low side diode forward ON voltage	I <sub>out</sub> = 3A		TBD	TBD	٧
t <sub>rrHS</sub>	High side diode reverse recovery time	I <sub>out</sub> = 3A		TBD		ns
t <sub>rrLS</sub>	Low side diode reverse recovery time	I <sub>out</sub> = 3A		TBD		ns
Logic		·	•	•	•	
V <sub>IL</sub>	Low level logic input voltage				0.8	٧
V <sub>IH</sub>	High level logic input voltage		2			٧
I <sub>IH</sub>	High level logic input current	V <sub>IN</sub> = 5V			1	μΑ
I <sub>IL</sub>	Low level logic input current	V <sub>IN</sub> = 0V	-1			μΑ
		V <sub>DD</sub> = 3.3V,			0.3	
$V_{OL}$	Low level logic output voltage (4)	$I_{OL} = 4mA$		0.3		٧
OL	3 , 1 - 1 - 1 - 1 - 1	$V_{DD} = 5V$ , $I_{OL} = 4mA$			0.3	
		IOL = 4IIIA			1	

www.Data



 Table 4.
 Electrical characteristics (continued)

	Symbol	Parameter	Test condition	Min	Тур	Max	Unit
	V	High level legic output voltage	$V_{DD} = 3.3V$ , $I_{OH} = 4mA$	2.4			V
	V <sub>OH</sub>	High level logic output voltage	V <sub>DD</sub> = 5V, I <sub>OH</sub> = 4mA	4.7			V
	R <sub>PU</sub> R <sub>PD</sub>	CS Pull-up and STBY pull-down resistors		TBD	430	TBD	kΩ
			3.3V V <sub>REG</sub> externally supplied internal oscillator		TBD		
	I <sub>logic</sub>	Internal logic supply current	3.3V V <sub>REG</sub> externally supplied external 8MHz oscillator		TBD		mA
			3.3V V <sub>REG</sub> externally supplied external 32MHz oscillator		TBD		
	I <sub>logic,STBY</sub>	Standby mode internal logic supply current	3.3V V <sub>REG</sub> externally supplied		TBD		μΑ
	f <sub>STCK</sub>	Step clock input frequency				TBD	MHz
	Internal osc	illator and external oscillator driver					
	f <sub>osc,i</sub>	Internal oscillator frequency	$T_j = 25^{\circ}\text{C},$ $V_{REG} = 3.3\text{V}$	-3%	16	+3%	MHz
	f <sub>osc,e</sub>	Programmable external oscillator frequency		8		32	MHz
	V <sub>OSCOUTH</sub>	OSCOUT clock source high level voltage	Internal oscillator	2.4			>
	V <sub>OSCOUTL</sub>	OSCOUT clock source low level voltage	Internal oscillator			0.3	V
	t <sub>rOSCOUT</sub> t <sub>fOSCOUT</sub>	OSCOUT clock source rise and fall time	Internal oscillator		TBD		ns
.Data\$	Shee <sup>t</sup> extosom	Internal to external oscillator switching delay			TBD		ms
	t <sub>intosc</sub>	External to internal oscillator switching delay			TBD		μs
	SPI						
	f <sub>CK,MAX</sub>	Maximum SPI clock frequency (5)		TBD	5		MHz
	t <sub>rCK</sub> t <sub>fCK</sub>	SPI clock rise and fall time <sup>(5)</sup>			TBD		μs
	t <sub>hCK</sub>	SPI clock high and low time <sup>(5)</sup>			TBD		ns
	t <sub>setCS</sub>	Chip select setup time (5)			TBD		ns
	t <sub>holCS</sub>	Chip select hold time <sup>(5)</sup>			TBD		ns
	t <sub>disCS</sub>	Deselect time <sup>(5)</sup>			TBD		ns
	t <sub>setSDI</sub>	Data input setup time <sup>(5)</sup>			TBD		ns

Table 4. Electrical characteristics (continued)

	Symbol	Parameter	Test condition	Min	Тур	Max	Unit
	t <sub>holSDI</sub>	Data input hold time <sup>(5)</sup>			TBD		ns
	t <sub>enSDO</sub>	Data output enable time <sup>(5)</sup>			TBD		ns
	t <sub>disSDO</sub>	Data output disable time (5)			TBD		ns
	t <sub>vSDO</sub>	Data output valid time (5)			TBD		ns
	t <sub>holSDO</sub>	Data output hold time <sup>(5)</sup>			TBD		ns
	Switch inpu	t (SW)					
	R <sub>PUSW</sub>	SW input pull-up resistance			65.2	TBD	kΩ
	PWM modul	ators					
		Drawnson bla DMM fragues (1)	f <sub>osc</sub> = 16MHz	2.8		62.5	I.I.I.
	f <sub>PWM</sub>	Programmable PWM frequency (1)	f <sub>osc</sub> = 32MHz	5.6		125	kHz
	N <sub>PWM</sub>	PWM resolution			8		bit
	Overcurrent	protection					
	OCD_th <sub>MAX</sub>	Maximum programmable overcurrent detection threshold	OCD_TH = '1111'	TBD	6	TBD	Α
	OCD_th <sub>MIN</sub>	Minimum programmable overcurrent detection threshold	OCD_TH = '0000'	TBD	0.375	TBD	Α
	OCD_th <sub>3A</sub>		OCD_TH = '0111'	TBD	3	TBD	Α
	OCD_th <sub>RES</sub>	Programmable overcurrent detection threshold resolution			0.375		Α
	t <sub>OCD,Flag</sub>	OCD to Flag signal delay time	$dI_{out}/dt = 350A/is,$ $R_{FLAG} = TBD$		TBD		ns
	t <sub>OCD,SD</sub>	OCD to shut-down delay time	dl <sub>out</sub> /dt = 350A/is POW_SR = '10'		TBD		μs
www.Data	Standby						
		Quiescent motor supply current in standby	V <sub>S</sub> = 8V		TBD		
	I <sub>qSTBY</sub>	conditions	V <sub>S</sub> = 24V		TBD		μΑ
	t <sub>STBY,min</sub>	Minimum standby time			TBD		ms
	t <sub>logicwu</sub>	Logic power-on and wake-up time			TBD		μs
	t <sub>cpwu</sub>	Charge pump power-on and wake-up time	Power bridges disabled, C <sub>p</sub> = 10nF, C <sub>boot</sub> = 220nF		TBD		ms
	Internal volt	age regulator					
	V <sub>REG</sub>	Voltage regulator output voltage		TBD	3	TBD	٧
	I <sub>REG</sub>	Voltage regulator output current				TBD	mA
	P <sub>REG</sub>	Voltage regulator power dissipation				TBD	mW
	I <sub>REG,STBY</sub>	Voltage regulator standby output current				TBD	mA

14/61 Doc ID 16737 Rev 1

Table 4. Electrical characteristics (continued)


Symbol	Parameter	Test condition	Min	Тур	Max	Unit
Integrated a	nalog to digital converter					
N <sub>ADC</sub>	Analog to digital converter resolution			5		bit
V <sub>ADC,ref</sub>	Analog to digital converter reference voltage			$V_{REG}$		٧
f <sub>S</sub>	Analog to digital converter sampling frequency			f <sub>PWM</sub>		kHz

- 1. Accuracy depends on oscillator frequency accuracy.
- 2. Tested at 25°C in a restricted range and guaranteed by characterization.
- 3. Rise and fall time depends on motor supply voltage value. Refer to SR<sub>out</sub> values in order to evaluate the actual rise and fall time
- 4.  $\overline{\text{FLAG}}$  and  $\overline{\text{BUSY}}$  open drain outputs included.
- 5. See Figure 14- SPI timings diagram for details.

Pin connection L6470

# 4 Pin connection

Figure 2. Pin connection (top view)

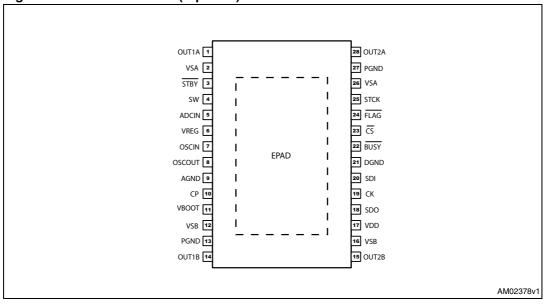

## 4.1 Pin list

Table 5. Pin description

N.	Name	Туре	Function
17	VDD	Power	Logic outputs supply voltage (pull-up reference)
6	VREG	Power	Internal 3 V voltage regulator output and 3.3 V external logic supply
7	OSCIN	Analog input	Oscillator pin 1. To connect an external oscillator or clock source
8	OSCOUT	Analog output	Oscillator pin 2. To connect an external oscillator. When the internal oscillator is used this pin can supply a 2/4/8/16 MHz clock
10	СР	Output	Charge pump oscillator output
11	VBOOT	Supply voltage	Bootstrap voltage needed for driving the high side power DMOS of both bridges (A and B)
5	ADCIN Analog input		Internal analog to digital converter input
2	- VSA Power supply		Full bridge A power supply pin. must be connected to
26			$V_{SB}$
12	- VSB Power supply		Full bridge B power supply pin. must be connected to
16			V <sub>SA</sub>

L6470 Pin connection

Table 5. Pin description (continued)

N.	Name	Туре	Function			
27	PGND	Ground	Power ground pin			
13	FGND	Giodila	Fower ground pin			
1	OUT1A	Power output	Full bridge A output 1			
28	OUT2A	Power output	Full bridge A output 2			
14	OUT1B	Power output	Full bridge B output 1			
15	OUT2B	Power output	Full bridge B output 2			
9	AGND	Ground	Analog ground.			
4	SW	Logical input	External switch input pin			
21	DGND	Ground	Digital ground			
22	BUSY	Open drain output	BUSY pin is forced low when the device is performing a command			
18	SDO	Logic output	Data output pin for serial interface			
20	SDI	Logic input	Data input pin for serial interface			
19	CK	Logic input	Serial interface clock			
23	CS	Logic input	Chip Select input pin for serial interface			
24	FLAG	Open drain output	Status Flag pin. An internal open drain transistor can pull the pin to GND when a programmed alarm condition occurs (step loss, OCD, thermal pre-warning or shutdown, UVLO, wrong command, non performable command)			
3	STBY	Logic input	Standby pin. LOW logic level puts the device in standby mode. If not used, should be connected to VDD			
25	STCK	Logic input	Step clock input			
EPAD	Exposed pad	Ground	Internally connected to PGND, AGND and DGND pins			


Typical applications L6470

# 5 Typical applications

Table 6. Typical application values

Name	value
C <sub>VS</sub>	220nF
C <sub>VSPOL</sub>	100μF
C <sub>REG</sub>	100nF
C <sub>REGPOL</sub>	47μF
C <sub>DD</sub>	100nF
C <sub>DDPOL</sub>	10μF
D1	BAT46SW or 2x 1N4148
C <sub>BOOT</sub>	220nF
C <sub>FLY</sub>	10nF
R <sub>PU</sub>	39kΩ
R <sub>SW</sub>	100Ω
C <sub>SW</sub>	10nF
R <sub>A</sub>	2.7kΩ (VS = 36V)
R <sub>B</sub>	62kΩ (VS = 36V)

Figure 3. Bipolar stepper motor control application using L6470

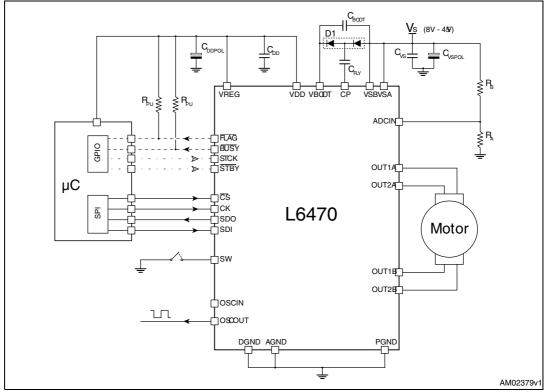

www.DataSheet4U.com

477

# 6 Functional description

### 6.1 Device power-up

At power-up end, the device state is the following:

- Registers are set to default,
- Internal logic is driven by internal oscillator and a 2MHz clock is provided by OSCOUT pin,
- Bridges are disabled (High Z),
- UVLO bit in STATUS register is forced low (fail condition),
- FLAG output is forced low

During power-up the device is under reset (all logic IO disabled and power bridges in high impedance state) until the following conditions are satisfied:

- V<sub>S</sub> is greater than V<sub>SthOn</sub>,
- V<sub>REG</sub> is greater than V<sub>REGth</sub>,
- Internal oscillator is operative.

Any motion command makes the device exiting from High Z state (HardStop and SoftStop included).

### 6.2 Logic I/O

Pins CS, CK, SDI, STCK, SW and STBY are TTL/CMOS 3.3V-5V compatible logic inputs.

Pin SDO is a TTL/CMOS compatible logic output. VDD pin voltage sets the logic output pins voltage range.

A  $10\mu F$  capacitor should be connected to  $V_{DD}$  pin in order to obtain a correct operation.

Pins FLAG and BUSY are open drain outputs.

www.DataSheet4U.com

# 6.3 Charge pump

To ensure the correct driving of the high side integrated mosfets a voltage higher than the motor power supply voltage needs to be applied to the VBOOT pin. The high side gate driver supply voltage  $V_{boot}$  is obtained through an oscillator and a few external components realizing a charge pump (see *Figure 4*).

AM02380v1

-о V<sub>s</sub> Dδ D<sub>1</sub>  $C_{FLY}$ V<sub>S</sub> + V<sub>CP</sub> - V<sub>D1</sub> - V<sub>D2</sub> **VBOOT** CP to high side CHARGE PUMP OS

Figure 4. Charge pump circuitry

### 6.4 **Microstepping**

The driver is able to divide the single step into up to 128 microsteps. Stepping mode can be programmed by STEP\_SEL parameter in STEP\_MODE register (see Table 12, Section 9.1.19: STEP\_MODE on page 42).

Step mode can be only changed when motor is stopped. Every time the step mode is changed the electrical position (i.e. the point of microstepping sinewave that is generated) is reset to first microstep and the absolute position counter value (see Section 6.5 on page 21) becomes meaningless.



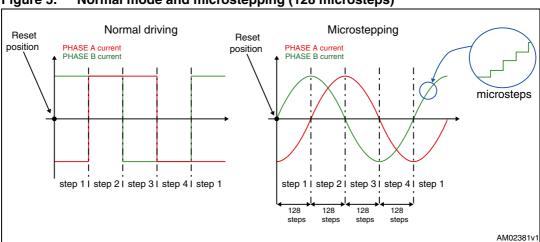


Figure 5. Normal mode and microstepping (128 microsteps) When motor speed is greater than a programmable full step speed threshold, the L6470 switches automatically to full-step mode; the driving mode returns to microstepping when motor speed decrease below the full step speed threshold. Full step speed threshold is set through the FS\_SPD register (see *Section 9.1.9 on page 38*).

### 6.5 Absolute position counter

An internal 22 bit register (ABS\_POS) takes memory of motor motion according to selected step mode; the stored value unit is equal to the selected step mode (full, half, quarter, etc.). The position range is from  $-2^{21}$ to  $+2^{21}$ -1 ( $\mu$ )steps (see *Section 9.1.1 on page 35*).

### 6.6 Programmable speed profiles

The user can easily program a customized speed profile defining independently minimum speed, maximum speed, acceleration and deceleration values by MIN\_SPEED, MAX\_SPEED, ACC and DEC registers respectively (see *Section 9.1.5*, *9.1.6*: *DEC*, *9.1.7*: *MAX\_SPEED* and *9.1.8*: *MIN\_SPEED*).

When a command is sent to the device, the integrated logic generates the microstep frequency profile that performs a motor motion compliant to speed profile boundaries.

All acceleration parameters are expressed in step/tick<sup>2</sup> and all speed parameters are expressed in step/tick; the unit of measure does not depend on selected step mode. Acceleration and deceleration parameters range from 2<sup>-40</sup> to (2<sup>12</sup>-2)•2<sup>-40</sup> step/tick<sup>2</sup> (equivalent to 14.55 to 59590 step/s<sup>2</sup>).

Minimum speed parameter ranges from 0 to  $(2^{12}-1) \cdot 2^{-24}$  step/tick (equivalent to 0 to 976.3 step/s).

Maximum speed parameter ranges from  $2^{-18}$  to  $(2^{10}-1) \cdot 2^{-18}$  step/tick (equivalent to 15.25 to 15610 step/s).

### 6.7 Motor control commands

www.DataSheet4U.com

The L6470 can accept different types of commands:

- constant speed commands (Run, GoUntil),
- absolute positioning commands (GoTo, GoTo\_DIR, GoHome),
- motion commands (Move),
- stop commands (SoftStop, HardStop, SoftHiz, HardHiz).

### 6.7.1 Constant speed commands

A constant speed command will produce a motion in order to reach and maintain a user-defined target speed starting from the programmed minimum speed (set in MIN\_SPEED register) and with the programmed acceleration/deceleration value (set in ACC and DEC registers) (see *Figure 14*). A new constant speed command can be requested anytime.

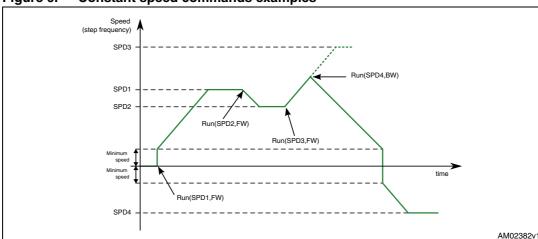


Figure 6. Constant speed commands examples


### 6.7.2 Positioning commands

An absolute positioning command will produce a motion in order to reach a user-defined position that is sent to the device together with the command. The position can be reached performing the minimum path (minimum physical distance) or forcing a direction (see *Figure 7*).

Performed motor motion is compliant to programmed speed profile boundaries (acceleration, deceleration, minimum and maximum speed).

Note that with some speed profiles or positioning commands, the deceleration phase starts before the maximum speed is reached.



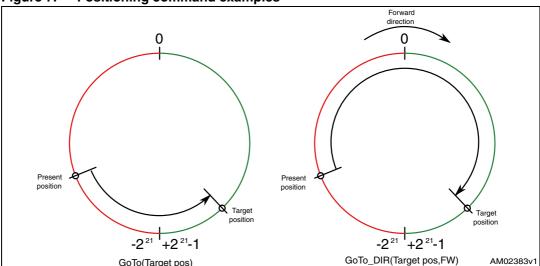


### 6.7.3 Motion commands

Motion commands will produce a motion in order to perform a user-defined number of microsteps in a user-defined direction that are sent to the device together with the command (see *Figure 8*).

Performed motor motion is compliant to programmed speed profile boundaries (acceleration, deceleration, minimum and maximum speed).

Note that with some speed profiles or motion commands, the deceleration phase starts before the maximum speed is reached.

Figure 8. Motion commands examples

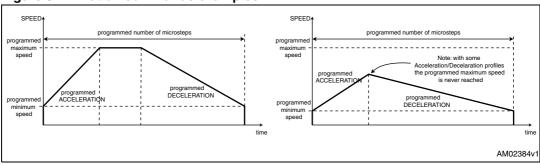

### 6.7.4 Stop commands

A stop command forces the motor to stop. Stop commands can be sent anytime.

SoftStop command causes the motor to decelerate, ignoring MIN\_SPEED constraint, with programmed deceleration value and then to stop.

HardStop command stops the motor instantly ignoring deceleration constraint.

SoftHiZ command causes the motor to decelerate, ignoring MIN\_SPEED constraint, with programmed deceleration value and then forces the bridges in high impedance state (no holding torque is present).

www.DataSheet4U.com

HardHiZ command instantly forces the bridges in high impedance state (no holding torque is present).

### 6.7.5 Step-clock mode

In step clock mode the motor motion is defined by the step clock signal applied to STCK pin. At each step clock rising edge, the motor is moved of one microstep in the programmed direction and absolute position is consequently updated.

When the system is in step clock mode the SCK\_MOD flag in STATUS register is raised, SPEED register is set to zero and motor status is considered stopped whatever the STCK signal frequency (MOT\_STAUS parameter in STATUS register equal to "00").

### 6.8 Internal oscillator and oscillator driver

Control logic clock can be supplied by the internal 16 MHz oscillator, an external oscillator (crystal or ceramic resonator) or a direct clock signal.

These working modes can be selected by EXT\_CLK and OSC\_SEL parameters of CONFIG register (see *Table 15*, paragraph *Section 9.1.21 on page 43*).

At power-up the device starts using the internal oscillator and provides a 2 MHz clock signal on the OSCOUT pin.

Attention: In any case, before changing clock source configuration, a hardware reset is mandatory.

### 6.8.1 Internal oscillator

In this mode the internal oscillator is activated and OSCIN is unused. If OSCOUT clock source is enabled, OSCOUT pin provides a 2, 4, 8 or 16 MHz clock signal (according to OSC\_SEL value); otherwise it is unused (see *Figure 9*).

### 6.8.2 External clock source

Two types of external clock source can be selected: crystal/ceramic resonator or direct clock source. Four programmable clock frequencies are available for each external clock source: 8, 16, 24 and 32 MHz.

When an external crystal/resonator is selected, OSCIN and OSCOUT pins are used to drive the crystal/resonator (see *Figure 9*). Crystal/resonator and load capacitors ( $C_L$ ) must be placed as close as possible to the pins (see *Table 3*).

 Crystal/resonator freq.  $^{(1)}$   $C_L$   $^{(2)}$  

 8MHz
 25pF (ESR<sub>max</sub> =  $80\Omega$ )

 16MHz
 18pF (ESR<sub>max</sub> =  $50\Omega$ )

 24MHz
 15pF (ESR<sub>max</sub> =  $40\Omega$ )

 32MHz
 10pF (ESR<sub>max</sub> =  $40\Omega$ )

Table 7. CL values according to external oscillator frequency

www.DataSheet4U.com

- 1. First harmonic resonance frequency
- 2. Lower ESR value allows driving greater load capacitors

If a direct clock source is used, it must be connected to OSCIN pin and OSCOUT pin supplies the inverted OSCIN signal (see *Figure 9*).

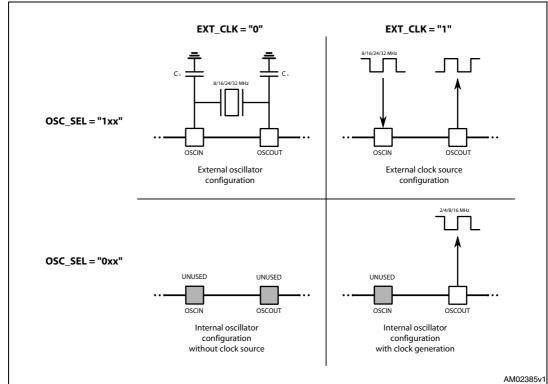


Figure 9. OSCIN and OSCOUT pins configurations

### 6.9 Overcurrent detection

When the current in any of the power MOSFETs exceeds a programmed overcurrent threshold, STATUS register OCD flag is forced low until the overcurrent event is expired and a GetStatus command is sent to the IC (see paragraphs 9.1.22: STATUS and 9.1.18: STALL\_TH). Overcurrent event expires when all the power MOSFET currents fall below the programmed overcurrent threshold.

www.DataSheet4U.com

The overcurrent threshold can be programmed through the OCD\_TH register in one of 16 available values ranging from 375 mA to 6 A with steps of 375 mA (see *Table 9*, paragraph *9.1.17: OCD\_TH*).

Through the CONFIG register OC\_SD bit it is possible to set if an overcurrent event causes or not bridges turn-off (switch to High Z state); the OCD flag in the STATUS register is raised anyway (see *Table 17*, paragraphs *9.1.22: STATUS*).

# 6.10 Undervoltage lock-out (UVLO)

The L6470 provides a motor supply UVLO protection. When the motor supply voltage falls below the V<sub>SthOff</sub> threshold, STATUS register UVLO flag is forced low. When a GetStatus command is sent to the IC, the UVLO flag is released even if the UVLO condition is still present (see paragraphs *9.1.22: STATUS* and *9.2.18: GetStatus*). Undervoltage condition expires when the motor supply voltage exceeds the V<sub>SthOn</sub> voltage. When the device is in undervoltage condition no motion command can be performed. UVLO flag is forced low by logic reset even (power-up included) if no UVLO condition is present.

### 6.11 Thermal warning and thermal shutdown

An internal sensor allows the L6470 to detect when the device internal temperature exceeds a thermal warning or an overtemperature threshold.

When the thermal warning threshold  $(T_{j(WRN)})$  is reached the STATUS register TH\_WRN flag is forced low (see paragraph 9.1.22: STATUS) until the temperature decrease below  $T_{j(WRN)}$  and a GetStatus command is sent to the IC (see paragraphs 9.1.22 and 9.2.18).

When the thermal shutdown threshold ( $T_{j(OFF)}$ ) is reached the device goes in thermal shutdown condition: the STATUS register TH\_SD flag is forced low, the power bridges are disabled (switch to High Z state) and the STATUS register HiZ flag is raised (see paragraph 9.1.22).

Thermal shutdown condition only expires when the temperature goes below the thermal warning threshold  $(T_{i(WRN)})$ .

On exit from thermal shutdown condition bridges are still disabled (HiZ flag high); whichever motion command makes the device exiting from High Z state (HardStop and SoftStop included).

### 6.12 Reset and standby

The device can be reset and put into standby mode through a dedicated pin. When  $\overline{STBY}$  pin is driven low, the bridges are left open (High Z state), the internal charge pump is stopped, the SPI interface and control logic are disabled and the internal 3 V voltage regulator maximum output current is reduced to  $I_{REG,STBY}$ ; as a result the L6470 heavily reduces the power consumption. At the same time the registers values are reset to default and all protection functions are disabled.  $\overline{STBY}$  input has to be forced low at least for  $t_{STBY,min}$  in order to ensure the complete switch to standby mode.

On exit from standby mode, as well as for IC power-up, a delay of up to  $t_{logicwu}$  must be given before applying a new command to allow proper oscillator and logic startup and a delay of up to  $t_{cowu}$  must be given to allow the charge pump startup.

On exit from standby mode the bridges are disabled (HiZ flag high) and whichever motion command makes the device exiting from High Z state (HardStop and SoftStop included).

www.DataSheet4U.com

# 6.13 External switch (SW pin)

SW pin sources a current towards an external switch in order to test whether it is CLOSED or OPEN: the SW input is internally pulled-up to  $V_{DD}$  and detects if the pin is open or connected to ground (see *Figure 10*).


SW\_F bit of STATUS register indicates if the switch is open ('0') or closed ('1') (see paragraph *9.1.22*); the bit value is refreshed at every system clock cycle (125 ns). SW\_EVN flag of STATUS register is raised when a switch turn-on event (SW input falling edge) is detected (see paragraph *9.1.22*). A GetStatus command releases the SW\_EVN flag (see paragraph *9.2.18*.

By default a switch turn-on event causes a HardStop interrupt (SW\_MODE bit of CONFIG register set to '0'). Otherwise (SW\_MODE bit of CONFIG register set to '1'), switch input events do not cause interrupts and the switch status information are at user disposal (see *Table 16*, paragraph *9.1.22*).

**577** 

Switch input can used by GoUntil command as described in paragraph *9.2.9*. If the SW input is unused, it should be connected to VDD.

Figure 10. External switch connection

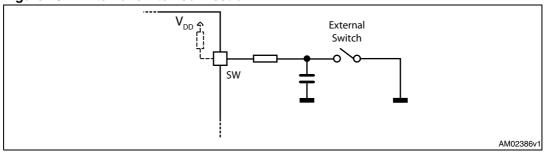

# 6.14 Programmable DMOS slew-rate, dead-time and blanking-time

Using CONFIG register POW\_SR parameter, it is possible to set the commutation speed of the power bridges output (see *Table 18*, paragraph *9.1.21*).

### 6.15 Integrated analog to digital converter

The L6470 integrates a NADC bit ramp-compare analog to digital converter with a reference voltage equal to VREG. The analog to digital converter input is available through the ADCIN pin and the conversion result is available in the ADC OUT register (see paragraph 9.1.16).

Sampling frequency is equal to the programmed PWM frequency.

The ADC\_OUT value can be used for motor supply voltage compensation or can be at user disposal.

# 6.16 Internal voltage regulator

www.DataSheet4U.com

The L6470 integrates a voltage regulator which generates a 3 V voltage starting from motor power supply (VSA and VSB). In order to make the voltage regulator stable, at least 22  $\mu$ F should be connected between VREG pin and ground (suggested value is 47  $\mu$ F).

The internal voltage regulator can be used to supply the VDD pin in order to make the device digital output range 3.3 V compatible (*Figure 11*). A digital output range 5 V compatible can be obtained connecting VDD pin to an external 5 V voltage source. In both cases, a 10  $\mu$ F capacitance should be connected to VDD pin in order to obtain a correct operation.

The internal voltage regulator is able to supply a current up to IREG,MAX, internal logic consumption included (llogic). When the device is in standby mode the maximum current that can be supplied is IREG, STBY, internal consumption included (llogic, STBY).

If an external 3.3 V regulated voltage is available, it can be applied to the VREG pin in order to supply all the internal logic and avoiding power dissipation of the internal 3 V voltage regulator (*Figure 11*).

Need Voo Vs 333V REG. Voo Vs 445Vs Vs 455Vs Vs 4

Figure 11. Internal 3 V linear regulator

### 6.17 BUSY pin

This pin is an open drain output forced low while a constant speed, absolute positioning or motion command is under execution. BUSY pin is released when the command has been executed. The STATUS register includes a BUSY flag that is the BUSY pin mirror (see paragraph *9.1.22*). In case of daisy-chain configuration, BUSY pins of different ICs can be or-wired to save host controller GPIOs.

### 6.18 FLAG pin

An internal open drain transistor pulls the FLAG pin to ground when at least one of the following conditions occurs:

- Power-up or standby/reset exit,
- Stall detected on A bridge,
- Stall detected on B bridge,
- Overcurrent detection,
- Thermal warning,
- Thermal shutdown,
- UVLO,
- A switch turn-on event,
- Wrong command,
- Non performable command.

It is possible to mask one or more alarm conditions by programming the ALARM\_EN register (see paragraph *9.1.20*, *Table 13*.). If the corresponding bit of ALARM\_EN register is low, the alarm condition is masked and it does not cause a FLAG pin transition; all other actions imposed by alarm conditions are performed anyway. In case of daisy-chain configuration, FLAG pins of different ICs can be or-wired to save host controller GPIOs.



L6470 Phase current control

### 7 Phase current control

L6470 controls the phase current applying a sinusoidal voltage to motor windings (*Figure 12*). Phase current amplitude is not directly controlled but depends on phase voltage amplitude, load torque, motor electrical characteristics and rotation speed. Sinewave amplitude is proportional to the motor supply voltage multiplied by a coefficient ( $K_{VAL}$ ).  $K_{VAL}$  ranges from 0 to 100% and the sinewave amplitude can be obtained through the following formula:

### **Equation 1**

$$V_{OUT} = V_S \cdot K_{VAL}$$

Different K<sub>VAL</sub> values can be programmed for acceleration, deceleration and constant speed phases and when motor is stopped (HOLD phase) through KVAL\_ACC, KVAL\_DEC, KVAL\_RUN and KVAL\_HOLD registers (see paragraph *9.1.10*).

L6470 offers various methods to guarantee a stable current value, allowing the compensation of:

- back electromotive force value (see paragraph 7.3);
- motor supply voltage variation (see paragraph 7.4);
- windings resistance variation (see paragraph 7.5).

### 7.1 PWM sinewave generators

Two voltage sinewaves applied to stepper motor phases are generated by two PWM modulators.

PWM frequency ( $f_{PWM}$ ) is proportional to the oscillator frequency ( $f_{OSC}$ ) and can be obtained through the following formula:

### **Equation 2**

www.DataSheet4U.com

$$f_{PWM} = \frac{f_{OSC}}{512 \cdot N} \cdot m$$

'N' is the integer division factor and 'm' is the multiplication factor. 'N' and 'm' values can be programmed by F\_PWM\_INT and F\_PWM\_DEC parameters in CONFIG register (see *Table 20* and *Table 21*, paragraph *9.1.21*).

Available PWM frequencies are listed in paragraph 9.1.21 from Table 22 to Table 25.

### 7.2 Sensorless stall detection

Depending on motor speed and load angle characteristics, L6470 offers a motor stall condition detection using a programmable current comparator.

When a stall event occurs, the respective flag (STEP\_LOSS\_A or STEP\_LOSS\_B) is forced low until a GetStaus command or a system reset occurs (see paragraph 9.2.18).


Phase current control L6470

### 7.3 BEMF compensation

Using the speed information, a compensation curve is added to the amplitude of the voltage waveform applied to the motor winding in order to compensate the BEMF variations during acceleration and deceleration (see *Figure 12*.).

Compensation curve is approximated by a stacked line with a starting slope (ST\_SLP) when speed is lower than a programmable threshold speed (INT\_SPEED) and a fine slope (FN\_SLP\_ACC and FN\_SLP\_DEC) when speed is greater than the threshold speed (see paragraphs 9.1.11, 9.1.12, 9.1.13 and 9.1.14).

Figure 12. BEMF compensation curve

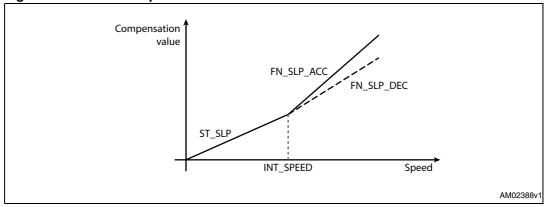

To obtain different current values during acceleration and deceleration two different final slope values, and consequently two different compensation curves, can be programmed.

Acceleration compensation curve is applied when the motor runs. No BEMF compensation is applied when the motor is stopped.

# 7.4 Motor supply voltage compensation

www.DataSheet4U.com


The sinewave amplitude generated by the PWM modulators is directly proportional to the motor supply voltage ( $V_S$ ). When the motor supply voltage is different from its nominal value, motor phases are driven with an incorrect voltage. The L6470 can compensate motor supply voltage variations in order to avoid this effect.

Motor supply voltage should be connected to the integrated ADC input through a resistor divider in order to obtain  $V_{REG}/2$  voltage at the ADCIN pin when  $V_{S}$  is at its nominal value (see *Figure 13*).

ADC input is sampled at f<sub>S</sub> frequency, which is equal to PWM frequency.

L6470 Phase current control

Figure 13. Motor supply voltage compensation circuit

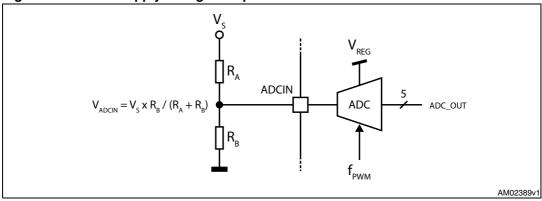

Motor supply voltage compensation can be enabled setting high the EN\_VSCOMP bit of CONFIG register (see *Table 19*, paragraph *9.1.21*). If EN\_VSCOMP bit is low the compensation is disabled and the internal analog to digital converter is at user disposal; sampling rate is always equal to PWM frequency.

### 7.5 Winding resistance thermal drift compensation

The higher is the winding resistance the greater is the voltage to be applied in order to obtain the same phase current.

In order to compensate the winding resistance drift an initial system calibration is needed. Calibration should be performed when the motor is cold (before working).

www.DataSheet4U.com

57

Serial interface L6470

### 8 Serial interface

The integrated 8bit serial peripheral interface (SPI) is used for a synchronous serial communication between the host microprocessor (always master) and the L6470 (always slave).

The SPI comprises chip select  $(\overline{CS})$ , serial clock (CK), serial data input (SDI) and serial data output (SDO) pins. When  $\overline{CS}$  is high the device is unselected and the SDO line is inactive (high-impedance).

The communication starts when  $\overline{\text{CS}}$  is forced low. CK line is used for synchronization of data communication.


All commands and data bytes are shifted into the device, most significant bit first, through SDI input. The SDI is sampled on the rising edges of the CK.

All output data bytes are shifted out of the device, most significant bit first, through SDO output. The SDO is latched on the falling edges of the CK. When a return value from the device is not available an all zero byte is sent.

After each byte transmission the  $\overline{\text{CS}}$  input must be raised and be kept high for at least  $t_{\text{disCS}}$  in order to allow the device to decode the received command and put into the shift register the return value.

All timing requirements are shown in *Figure 14* (see respective electrical characteristics section for values).

Multiple devices can be connected in daisy-chain configuration, as shown in Figure 15.

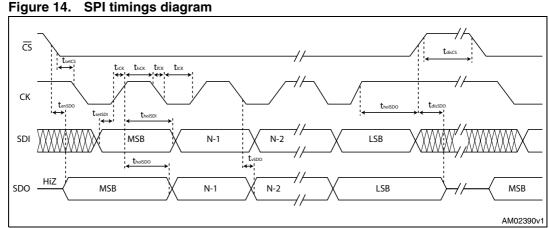


www.DataSheet4U.com

32/61 Doc ID 16737 Rev 1

L6470 Serial interface

Figure 15. Daisy-chain configuration

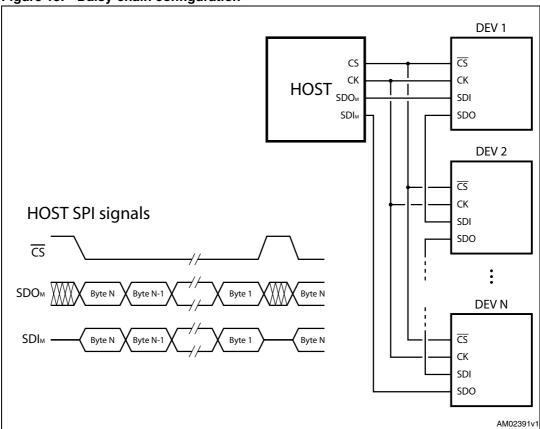

# 9 Programming manual

# 9.1 Registers and flags description

Following a map of the user available registers (detailed description in respective paragraphs):

Table 8. Registers map

	Address [Hex]	Register name	Register function	Len. [bit]	Reset Hex	Reset Value	Remarks (1)
	h01	ABS_POS	Current position	22	000000	0	R, WS
	h02	EL_POS	Electrical position	9	000	0	R, WS
	h03	MARK	Mark position	22	000000	0	R, WS, WR
	h04	SPEED	Current speed	20	00000	0 step/tick (0 step/s)	R
	h05	ACC	Acceleration	12	08A	125.5e-12 step/tick <sup>2</sup> (2008 step/s <sup>2</sup> )	R, WS
	h06	DEC	Deceleration	12	08A	125.5e-12 step/tick <sup>2</sup> (2008 step/s <sup>2</sup> )	R, WS
	h07	MAX_SPEED	Maximum speed	10	041	248e-6 step/tick (991.8 step/s)	R, WS, WR
	h08	MIN_SPEED	Minimum speed	12	000	0 step/tick (0 step/s)	R, WS
	h15	FS_SPD	Full step speed	10	027	150.7e-6 step/tick (602.7 step/s)	R, WS, WR
	h09	KVAL_HOLD	Holding K <sub>VAL</sub>	8	29	0.16·VS	R, WS, WR
	h0A	KVAL_RUN	Constant speed K <sub>VAL</sub>	8	29	0.16·VS	R, WS, WR
Data	She <b>h0B</b> .com	n KVAL_ACC	Acceleration starting K <sub>VAL</sub>	8	29	0.16·VS	R, WS, WR
•	h0C	KVAL_DEC	Deceleration starting K <sub>VAL</sub>	8	29	0.16·VS	R, WS, WR
•	h0D	INT_SPD	Intersect speed	14	0408	61.5e-6 step/tick (246 step/s)	R, WS
•	h0E	ST_SLP	Start slope	8	19	0.038% s/step	R, WS
•	h0F	FN_SLP_ACC	Acceleration final slope	8	29	0.063% s/step	R, WS
•	h10	FN_SLP_DEC	Deceleration final slope	8	29	0.063% s/step	R, WS
	h11	K_THERM	Thermal compensation factor	4	0	1.0	R, WS, WR
•	h12	ADC_OUT	ADC output	5	XX <sup>(2)</sup>		R
	h13	OCD_TH	OCD threshold	4	8	3.38A	R, WS, WR
	h14	STALL_TH	STALL threshold	7	40	2.03A	R, WS, WR
	h16	STEP_MODE	Step mode	8	7	128 microsteps	R, WS
	h17	ALARM_EN	Alarms enables	8	FF	All alarms enabled	R, WS, WR

34/61 Doc ID 16737 Rev 1

Address [Hex]	Register name	Register function	Len. [bit]	Reset Hex	Reset Value	Remarks
h18	CONFIG	IC configuration	16	2E88	Internal oscillator, 2MHz OSCOUT clock, supply voltage compensation disabled, overcurrent shutdown enabled, slew-rate = 290 V/µs PWM frequency = 15.6kHz.	R, WS
h19	STATUS	Status	16	XXXX <sup>(2)</sup>	High impedance state, UVLO/Reset flag set.	R
h1A	RESERVED	Reserved address				
h1B	RESERVED	Reserved address				

Table 8. Registers map (continued)

### 9.1.1 ABS POS

The ABS\_POS register contains the current motor absolute position in agreement to the selected step mode; the stored value unit is equal to the selected step mode (full, half, quarter, etc.). The available range is from  $-2^{21}$  to  $+2^{21}$ -1 microsteps.

At power-on the register is initialized to "0" (HOME position).

Any attempt to write to the register when the motor is running causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph 9.1.22).

### 9.1.2 EL\_POS

The EL\_POS register contains the current electrical position of the motor. The two MSbits indicate the current step and the other bits indicate the current microstep (expressed in step/128) within the step:

www.DataSheet4U.com

Table 9. EL\_POS register

Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
STEP				N	/ICROSTE	P		

When EL\_POS register is written by the user the new electrical position is instantly imposed. When EL\_POS register is written its value must be masked in order to mach with the step mode selected in STEP\_MODE register in order to avoid a wrong microstep value generation (see paragraph *9.1.19*); otherwise the resulting microstep sequence will be incorrect.

Any attempt to write to the register when the motor is running causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph 9.1.22).

<sup>1.</sup> R: Readable, WS: writable when motor is stopped, WR: writable when motor is running.

<sup>2.</sup> According to startup conditions.

### 9.1.3 MARK

The MARK register contains an absolute position called MARK in agreement to the selected step mode; the stored value unit is equal to the selected step mode (full, half, quarter, etc.). It is configurable by user through a SetParam or GoUntil command (see paragraphs 9.2.2 and 9.2.9).

### 9.1.4 SPEED

The SPEED register contains the current motor speed, expressed in step/tick (format unsigned fixed point 0.28).

In order to convert the SPEED value in step/s the following formula can be used:

### **Equation 3**

$$[\text{step/s}] = \frac{\text{SPEED} \cdot 2^{-28}}{\text{tick}}$$

Speed is the integer number stored into the register and tick is 250 ns.

The available range is from 0 to 15625 step/s with a resolution of 0.015 step/s.

Note: The range effectively available to the user is limited by the MAX\_SPEED parameter.

Any attempt to write to the register causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph *9.1.22*).

### 9.1.5 ACC

The ACC register contains the speed profile acceleration expressed in step/tick2 (format unsigned fixed point 0.40).

In order to convert ACC value in step/s2 the following formula can be used:

### **Equation 4**

www.DataSheet4U.com

$$\left[ \text{step/s}^2 \right] = \frac{\text{ACC} \cdot 2^{-40}}{\text{tick}^2}$$

ACC is the integer number stored into the register and tick is 250 ns.

The available range is from 14.55 to 59590 step/s<sup>2</sup> with a resolution of 14.55 step/s<sup>2</sup>.

If the user tries to set ACC parameter to zero, command is not performed and NOTPERF\_CMD flag is raised (see paragraph *9.1.22*).

Any attempt to write to the register when the motor is running causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph 9.1.22).

ACC value hFF is reserved.

#### 9.1.6 DEC

The DEC register contains the speed profile deceleration expressed in step/tick2 (format unsigned fixed point 0.40).

In order to convert DEC value in step/s<sup>2</sup> the following formula can be used:

#### **Equation 5**

$$\left[ \text{step/s}^2 \right] = \frac{\text{DEC} \cdot 2^{-40}}{\text{tick}^2}$$

DEC is the integer number stored into the register and tick is 250 ns.

The available range is from 14.55to 59590 step/s2 with a resolution of 14.55 step/s2.

If the user tries to set DEC parameter to zero, command is not performed and NOTPERF\_CMD flag is raised (see paragraph *9.1.22*).

Any attempt to write to the register when the motor is running causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph 9.1.22).

# 9.1.7 MAX SPEED

The MAX\_SPEED register contains the speed profile maximum speed expressed in step/tick (format unsigned fixed point 0.18).

In order to convert it in step/s the following formula can be used:

#### **Equation 6**

$$[step/s] = \frac{MAX\_SPEED \cdot 2^{-18}}{tick}$$

MAX\_SPEED is the integer number stored into the register and tick is 250 ns.

The available range is from 15.25 to 15610 step/s with a resolution of 15.25 step/s.

www.DataSheet4U.com

If the user tries to set MAX\_SPEED parameter to zero, command is not performed and NOTPERF\_CMD flag is raised (see paragraph *9.1.22*).

### **9.1.8 MIN SPEED**

The MIN\_SPEED register contains the speed profile minimum speed expressed in step/tick (format unsigned fixed point 0.24).

In order to convert it in step/s the following formula can be used:

# **Equation 7**

$$[step/s] = \frac{MIN\_SPEED \cdot 2^{-24}}{tick}$$

MIN\_SPEED is the integer number stored into the register and tick is 250 ns.

The available range is from 0 to 976.3 step/s with a resolution of 0.238 step/s.

Any attempt to write to the register when the motor is running causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph 9.1.22).

#### 9.1.9 FS\_SPD

The FS\_SPD register contains the threshold speed value over which the step mode is automatically switched to Full Step two-phase on. Its value is expressed in step/tick (format unsigned fixed point 0.18) and to convert it in step/s the following formula can be used:

#### **Equation 8**

$$[\text{step/s}] = \frac{(\text{FS}\_\text{SPD} + 0.5) \cdot 2^{-18}}{\text{tick}}$$

If FS\_SPD value is set to hFF (max) the system always works in microstepping mode (SPEED must go over the threshold to switch to full step mode). Setting FS\_SPD to zero has not the same effect as setting step mode to full step two phase on: zero FS\_SPD value is equivalent to a speed threshold of about 7.63 step/s

The available range is from 7.63 to 15625 step/s with a resolution of 15.25 step/s.

# 9.1.10 KVAL\_HOLD, KVAL\_RUN, KVAL\_ACC and KVAL\_DEC

The KVAL\_HOLD register contains the K<sub>VAL</sub> value that is assigned to the PWM modulators when the motor is stopped (compensations excluded).

The KVAL\_RUN register contains the  $K_{VAL}$  value that is assigned to the PWM modulators when the motor is running at constant speed (compensations excluded).

The KVAL\_ACC register contains the starting  $K_{VAL}$  value that can be assigned to the PWM modulators during acceleration (compensations excluded).

The KVAL\_DEC register contains the starting K<sub>VAL</sub> value that can be assigned to the PWM modulators during deceleration (compensations excluded).

The available range is from 0 to 0.996 x  $V_S$  with a resolution of 0.004 x  $V_S$  as shown in *Table 6*.

Table 10. Voltage amplitude regulation registers

			Output voltage					
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	1	V <sub>S</sub> x (1/256)
:	÷	:	:	:	÷	÷	:	:
1	1	1	1	1	1	1	0	V <sub>S</sub> x (254/256)
1	1	1	1	1	1	1	1	V <sub>S</sub> x (255/256)

# 9.1.11 INT SPEED

The INT\_SPEED register contains the speed value at which the BEMF compensation curve changes slope (see paragraph 7.3 for details). Its value is expressed in step/tick and to convert it in [step/s] the following formula can be used:

#### **Equation 9**

$$[step/s] = \frac{INT\_SPEED \cdot 2^{-24}}{tick}$$

where INT\_SPEED is the integer number stored into the register and tick is 250 ns.

The available range is from 0 to 3906 step/s with a resolution of 0.238 step/s.

Any attempt to write to the register when the motor is running causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph 9.1.22).

### 9.1.12 ST\_SLP

The ST\_SLP register contains the BEMF compensation curve slope that is used when the speed is lower than the intersect speed (see paragraph *7.3* for details). Its value is expressed in s/step and the available range is from 0 to 0.004 with a resolution of 0.000015.

When ST\_SLP, FN\_SLP\_ACC and FN\_SLP\_DEC parameters are set to zero no BEMF compensation is performed.

Any attempt to write to the register when the motor is running causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph 9.1.22).

#### 9.1.13 FN\_SLP\_ACC

The FN\_SLP\_ACC register contains the BEMF compensation curve slope that is used when the speed is greater than the intersect speed during acceleration (see paragraph 7.3 for details). Its value is expressed in s/step and the available range is from 0 to 0.004 with a resolution of 0.000015.

www.DataSheet4U.com

When ST\_SLP, FN\_SLP\_ACC and FN\_SLP\_DEC parameters are set to zero no BEMF compensation is performed.

Any attempt to write to the register when the motor is running causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph 9.1.22).

#### 9.1.14 FN SLP DEC

The FN\_SLP\_DEC register contains the BEMF compensation curve slope that is used when the speed is greater than the intersect speed during deceleration (see paragraph 7.3 for details). Its value is expressed in s/step and the available range is from 0 to 0.004 with a resolution of 0.000015.

When ST\_SLP, FN\_SLP\_ACC and FN\_SLP\_DEC parameters are set to zero no BEMF compensation is performed.

Any attempt to write to the register when the motor is running causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph 9.1.22).

#### 9.1.15 **K\_THERM**

The K\_THERM register contains the value used by the winding resistance thermal drift compensation system (see paragraph 7.5).

The available range is from 1 to 1.46875 with a resolution of 0.03125 as shown in Table 7.

Winding resistance thermal drift compensation coefficient

	K_THERM [30]			Compensation coeff.
0	0	0	0	1
0	0	0	1	1.03125
:	:	:	:	:
1	1	1	0	1.4375
1	1	1	1	1.46875

#### 9.1.16 ADC\_OUT

The ADC\_OUT register contains the result of the analog to digital conversion of the ADCIN pin voltage; the result is available even if the supply voltage compensation is disabled.

Any attempt to write to the register causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph 9.1.22).

ADC\_OUT value and motor supply voltage compensation feature Table 12.

Vs	V <sub>ADCIN</sub> /V <sub>REG</sub>	ADC_OUT [40]					Compensation coefficient
Greater than V <sub>S</sub> , <sub>nom</sub> + 50%	> 24/32	1	1	Χ	Χ	Χ	0.65625
V <sub>S</sub> , <sub>nom</sub> + 50%	24/32	1	1	0	0	0	0.65625
:				::			:
V <sub>S'nom</sub>	16/32	1	0	0	0	0	1
:	:	:	•	:		:	:
V <sub>S</sub> , <sub>nom</sub> – 50%	8/32	0	1	0	0	0	1.968875
Lower than V <sub>S</sub> , <sub>nom</sub> – 50%	< 8/32	0	0	Χ	Χ	Χ	1.968875

www.DataSheet4U.com

40/61 Doc ID 16737 Rev 1

# 9.1.17 OCD\_TH

The OCD\_TH register contains the overcurrent threshold value (see paragraph 6.9 for details). The available range is from 375 mA to 6 A, steps of 375 mA as shown in *Table 9*.

Table 13. Overcurrent detection threshold

	OCD_TH [30]			Overcurrent detection threshold
0	0	0	0	375 mA
0	0	0	1	750 mA
1	1	1	0	5.625 A
1	1	1	1	6 A

# 9.1.18 STALL\_TH

The STALL\_TH register contains the stall detection threshold value (see paragraph 7.2 for details). The available range is from 31.25 mA to 4 A with a resolution of 31.25 mA.

Table 14. Stall detection threshold

		STAI	LL_th	[60]			Stall detection threshold
0	0	0	0	0	0	0	31.25 mA
0	0	0	0	0	0	1	62.5 mA
1	1	1	1	1	1	0	3.969 A
1	1	1	1	1	1	1	4 A

L6470

# 9.1.19 STEP\_MODE

The STEP\_MODE register has the following structure:

Table 15. STEP\_MODE register

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	0	0		STEP_SEL	

STEP\_SEL selects one of eight possible stepping modes:

Table 16. Step mode selection

:	STEP_SEL[20]		Step mode
0	0	0	Full step
0	0	1	Half step
0	1	0	1/4 microstep
0	1	1	1/8 microstep
1	0	0	1/16 microstep
1	0	1	1/32 microstep ( <sup>1</sup> )
1	1	0	1/64 microstep (1)
1	1	1	1/128 microstep ( <sup>1</sup> )

Every time the step mode is changed the electrical position (i.e. the point of microstepping sinewave that is generated) is reset to the first microstep.

Warning: Every time STEP\_SEL is changed the value in ABS\_POS register looses meaning and should be reset.

www.DataSheet4U.com

Any attempt to write to the register when the motor is running causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph 9.1.22).

# 9.1.20 ALARM\_EN

The ALARM\_EN register allows selecting which alarm signals are used to generate the FLAG output. If the respective bit of ALARM\_EN register is set high, the alarm condition forces the FLAG pin output down.

Table 17. ALARM\_EN register

ALARM_EN bit	Alarm condition		
0 (LSB)	Overcurrent		
1	Thermal shutdown		
2	Thermal warning		
3	Under-voltage		
4	Stall detection (Bridge A)		
5	Stall detection (Bridge B)		
6	Switch turn-on event		
7 (MSB)	Wrong or not performable command		

# 9.1.21 **CONFIG**

The CONFIG register has the following structure:

Table 18. CONFIG register

Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8
	F_PWM_IN	Т	F_	PWM_DEC		POW	/_SR
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
OC_SD	RESERVED	EN_VSCOMP	SW_MODE	EXT_CLK		OSC_SEL	

www.DataSheet4U.com

The OSC\_SEL and EXT\_CLK bits set the system clock source:

Table 19. Oscillator management

EXT_CLK	CLK OSC_SEL[20]			Clock source	OSCIN	OSCOUT
0	0	0	0			
0	0	0	1	Internal Oscillator: 16MHz	Unused	Unused
0	0	1	0	internal Oscillator. Tolviriz	Onuseu	Olluseu
0	0	1	1			
1	0	0	0	Internal Oscillator: 16MHz	Unused	Supplies a 2MHz clock
1	0	0	1	Internal Oscillator: 16MHz	Unused	Supplies a 4MHz clock
1	0	1	0	Internal oscillator: 16MHz	Unused	Supplies a 8MHz clock

Table 19. Oscillator management (continued)

EXT_CLK	EXT_CLK OSC_SEL[20]			Clock source	OSCIN	оѕсоит
1	0	1	1	Internal oscillator: 16MHz	Unused	Supplies a 16MHz clock
0	1	0	0	External crystal or resonator: 8MHz	Crystal/reson ator driving	Crystal/resonator driving
0	1	0	1	External crystal or resonator: 16MHz	Crystal/reson ator driving	Crystal/resonator driving
0	1	1	0	External crystal or resonator: 24MHz	Crystal/reson ator driving	Crystal/resonator driving
0	1	1	1	External crystal or resonator: 32MHz	Crystal/reson ator driving	Crystal/resonator driving
1	1	0	0	Ext clock source: 8MHz (Crystal/resonator driver disabled)	Clock source	Supplies inverted OSCIN signal
1	1	0	1	Ext clock source: 16MHz (Crystal/resonator driver disabled)	Clock source	Supplies inverted OSCIN signal
1	1	1	0	Ext clock source: 24MHz (Crystal/resonator driver disabled)	Clock source	Supplies inverted OSCIN signal
1	1	1	1	Ext clock source: 32MHz (Crystal/resonator driver disabled)	Clock source	Supplies inverted OSCIN signal

The SW\_MODE bit sets the external switch to act as HardStop interrupt or not:

 Table 20.
 External switch hard stop interrupt mode

www.DataSheet4U.com

SW_MODE	Switch mode
0	HardStop interrupt
1	User disposal

The OC\_SD bit sets if an overcurrent event causes or not the bridges to turn-off; the OCD flag in status register is forced low anyway:

Table 21. Overcurrent event

OC_SD	Overcurrent event
1	Bridges shut down
0	Bridges do not shut down

The POW\_SR bits set the slew rate value of power bridge output:

Table 22. Programmable power bridge output slew-rate values

	/_SR .0]	Output Slew-rate ( <sup>1</sup> ) [V/is]
0	0	180
0	1	180
1	0	290
1	1	530

See SRout parameter in electrical characteristics table for details

The EN\_VSCOMP bit sets if the motor supply voltage compensation is enabled or not.

Table 23. Motor supply voltage compensation enable

EN_VSCOMP	Motor supply voltage compensation
0	Disabled
1	Enabled

The F\_PWM\_INT bits set the integer division factor of PWM frequency generation:

Table 24. PWM frequency: integer division factor

	F_PWM_INT [20]		Integer division factor
0	0	0	1
0	0	1	2
0	1	0	3
0	1	1	4
1	0	0	5
1	0	1	6
1	1	0	7
1	1	1	

The F\_PWM\_DEC bits set the multiplication factor of PWM frequency generation:

Table 25. PWM frequency: multiplication factor

F_PWM_DEC [20]			Multiplication factor
0	0	0	0.625
0	0	1	0.75
0	1	0	0.875
0	1	1	1
1	0	0	1.25
1	0	1	1.5
1	1	0	1.75
1	1	1	2

In the following tables all available PWM frequencies are listed according to oscillator frequency, F\_PWM\_INT and F\_PWM\_DEC values (CONFIG register OSC\_SEL parameter has to be correctly programmed).

Table 26. Available PWM frequencies [kHz]: 8 MHz oscillator frequency

	F_PWM_DEC							
F_PWM_ INT	000	001	010	011	100	101	110	111
000	9.8	11.7	13.7	15.6	19.5	23.4	27.3	31.3
001	4.9	5.9	6.8	7.8	9.8	11.7	13.7	15.6
010	3.3	3.9	4.6	5.2	6.5	7.8	9.1	10.4
011	2.4	2.9	3.4	3.9	4.9	5.9	6.8	7.8
100	2.0	2.3	2.7	3.1	3.9	4.7	5.5	6.3
101	1.6	2.0	2.3	2.6	3.3	3.9	4.6	5.2
110	1.4	1.7	2.0	2.2	2.8	3.3	3.9	4.5

www.DataSheet4U.com

46/61 Doc ID 16737 Rev 1

Table 27. Available PWM frequencies [kHz]: 16 MHz oscillator frequency

	F_PWM_DEC							
F_PWM_INT	000	001	010	011	100	101	110	111
000	19.5	23.4	27.3	31.3	39.1	46.9	54.7	62.5
001	9.8	11.7	13.7	15.6	19.5	23.4	27.3	31.3
010	6.5	7.8	9.1	10.4	13.0	15.6	18.2	20.8
011	4.9	5.9	6.8	7.8	9.8	11.7	13.7	15.6
100	3.9	4.7	5.5	6.3	7.8	9.4	10.9	12.5
101	3.3	3.9	4.6	5.2	6.5	7.8	9.1	10.4
110	2.8	3.3	3.9	4.5	5.6	6.7	7.8	8.9

Table 28. Available PWM frequencies [kHz]: 24 MHz oscillator frequency

	F_PWM_DEC							
F_PWM_INT	000	001	010	011	100	101	110	111
000	29.3	35.2	41.0	46.9	58.6	70.3	82.0	93.8
001	14.6	17.6	20.5	23.4	29.3	35.2	41.0	46.9
010	9.8	11.7	13.7	15.6	19.5	23.4	27.3	31.3
011	7.3	8.8	10.3	11.7	14.6	17.6	20.5	23.4
100	5.9	7.0	8.2	9.4	11.7	14.1	16.4	18.8
101	4.9	5.9	6.8	7.8	9.8	11.7	13.7	15.6
110	4.2	5.0	5.9	6.7	8.4	10.0	11.7	13.4

L6470

Table 29. Available PWM frequencies [kHz]: 32 MHz oscillator frequency

	F_PWM_DEC							
F_PWM_ INT	000	001	010	011	100	101	110	111
000	39.1	46.9	54.7	62.5	78.1	93.8	109.4	125.0
001	19.5	23.4	27.3	31.3	39.1	46.9	54.7	62.5
010	13.0	15.6	18.2	20.8	26.0	31.3	36.5	41.7
011	9.8	11.7	13.7	15.6	19.5	23.4	27.3	31.3
100	7.8	9.4	10.9	12.5	15.6	18.8	21.9	25.0
101	6.5	7.8	9.1	10.4	13.0	15.6	18.2	20.8
110	5.6	6.7	7.8	8.9	11.2	13.4	15.6	17.9

Any attempt to write the CONFIG register when the motor is running causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph 9.1.22).

# 9.1.22 STATUS

Table 30. STATUS register

Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8
SCK_MOD	STEP_LOSS_B	STEP_LOSS_A	OCD	TH_SD	TH_WRN	UVLO	WRONG_CMD
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
NOTPERF_CMD	MOT_STATUS		DIR	SW_EVN	SW_F	BUSY	HiZ

www.DataSheet4U.com

When HiZ flag is high it indicates that the bridges are in high impedance state. Whichever motion command makes the device to exit from High Z state (HardStop and SoftStop included), unless error flags forcing a High Z state are active.

The UVLO flag is active low and is set by an under-voltage lock out or reset events (power-up included).

The TH\_WRN, TH\_SD, OCD flags are active low and indicate respectively thermal warning, thermal shutdown and over-current detection events.

STEP\_LOSS\_A and STEP\_LOSS\_B flags are forced low when a stall is detected on bridge A or bridge B respectively.

The NOTPERF\_CMD and WRONG\_CMD flags are active high and indicate respectively that the command received by SPI can't be performed or does not exist at all.

SW\_F report the SW input status (low for open and high for closed).

SW\_EVN flag is active high and indicates a switch turn-on event (SW input falling edge).

UVLO, TH\_WRN, TH\_SD, OCD, STEP\_LOSS\_A, STEP\_LOSS\_B, NOTPERF\_CMD, WRONG\_CMD and SW\_EVN flags are latched: when the respective conditions make them active (low or high) they remain in that state until a GetStatus command is sent to the IC.

The BUSY bit reflects the BUSY pin status. BUSY flag is low when a constant speed, positioning or motion command is under execution and is released (high) after the command have been completed.

The DIR bit indicates the current motor direction:

Table 31. STATUS register DIR bit

DIR	Motor direction
1	Forward
0	Reverse

MOT\_STATUS indicates the current motor status:

Table 32. STATUS register MOT\_STATE bits

MOT_STATUS		Motor status
0	0	Stopped
0	1	Acceleration
1	0	Deceleration
1	1	Constant speed

Any attempt to write to the register causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph *9.1.22*).

# 9.2 Application commands

The commands summary is given in the table below.

Table 33. Application commands

	Command Mnemonic	Con	nma	nd bir	nary co	ode	Action
		[75]	[4]	[3]	[21]	[0]	
	NOP	000	0	0	00	0	Nothing
	SetParam(PARAM,VALUE)	000		[PA	RAM]	ı	Writes VALUE in PARAM register
	GetParam(PARAM)	001		[PA	RAM]		Returns the stored value in PARAM register
	Run(DIR,SPD)	010	1	0	00	DIR	Sets the target speed and the motor direction
	StepClock(DIR)	010	1	1	00	DIR	Put the device in step clock mode and impose DIR direction
	Move(DIR,N_STEP)	010	0	0	00	DIR	Makes N_STEP (micro)steps in DIR direction (Not performable when motor is running)
	GoTo(ABS_POS)	011	0	0	00	0	Brings motor in ABS_POS position (minimum path)
	GoTo_DIR(DIR,ABS_POS)	011	0	1	00	DIR	Brings motor in ABS_POS position forcing DIR direction
	GoUntil(ACT,DIR,SPD)	100	0	ACT	01	DIR	Perform a motion in DIR direction with speed SPD until SW is closed, the ACT action is executed then a SoftStop takes place
	RESERVED	100	1	0	01	0	RESERVED COMMAND
	RESERVED	100	1	0	01	1	RESERVED COMMAND
	RESERVED	100	1	1	01	0	RESERVED COMMAND
	RESERVED	100	1	1	01	1	RESERVED COMMAND
	GoHome	011	1	0	00	0	Brings the motor in HOME position
	RESERVED	011	1	1	00	0	RESERVED COMMAND
Data\$	Sheet4U.com	110	1	1	00	0	Reset the ABS_POS register (set HOME position)
	ResetDevice	110	0	0	00	0	Device is reset to power-up conditions.
	SoftStop	101	1	0	00	0	Stops motor with a deceleration phase
	HardStop	101	1	1	00	0	Stops motor immediately
	SoftHiZ	101	0	0	00	0	Puts the bridges in High Impedance status after a deceleration phase
	HardHiZ	101	0	1	00	0	Puts the bridges in High Impedance status immediately
	LastCommand	110	0	1	00	0	Returns last programmed command
	GetStatus	110	1	0	00	0	Returns the status register value
	RESERVED	111	0	1	01	1	RESERVED COMMAND
Ī	RESERVED	111	1	1	00	0	RESERVED COMMAND

50/61 Doc ID 16737 Rev 1

When a binary sequence that does not correspond to a command is sent to the IC, nothing is performed and the STATUS register WRONG CMD flag to rise (see paragraph 9.1.22).

The commands are described in details hereafter.

#### 9.2.1 Nop

Table 34. Nop command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
0	0	0	0	0	0	0	0	From host

Nothing is performed.

# 9.2.2 SetParam (PARAM, VALUE)

Table 35. SetParam command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	
0	0	0			PARAM	
			From host			
			Byte 1 (if	needed	)	FIOIII 1105t

This command sets the PARAM register value equal to VALUE; PARAM is the respective register address listed in *Table 4*.

Some registers cannot be written (see *Table 4*); any attempt to write one of those registers causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph *9.1.22*).

www.DataSheet4U.com

Some registers can only be written when the motor is stopped (see *Table 4*); any attempt to write one of those registers when the motor is running causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph *9.1.22*).

Any attempt to set ACC, DEC or MAX\_SPEED values to zero causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph 9.1.22).

# 9.2.3 GetParam (PARAM)

Table 36. GetParam command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
0	0	1			from host			
		to host						
		to host						
		to host						

This command reads the current PARAM register value; PARAM is the respective register address listed in *Table 4*. All registers can be read anytime.

### 9.2.4 Run (DIR, SPD)

Table 37. Run command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
0	1	0	1	0	0	0	DIR	from host		
Х	Х	Х	Х		SPD (I	from host				
			SPD (I	Byte 1)		from host				
	SPD (Byte 0)									

Run command produces a motion at SPD speed; the direction is selected by DIR bit: '1' forward or '0' reverse.

Note that SPD value should be lower than MAX\_SPEED and greater than MIN\_SPEED otherwise the RUN command will be executed at MAX\_SPEED or MIN\_SPEED respectively.

This command can be given anytime and is immediately executed.

# 9.2.5 StepClock (DIR)

Table 38. Stepclock command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
0	1	0	1	1	0	0	DIR	from host

www.DataSheet4U.com

StepClock command switches the device in step clock mode (see paragraph 6.7.4) and impose the forward (DIR = '1') or reverse (DIR = '0') direction.

When the device is in step clock mode the SCK\_MOD flag in STATUS register is raised and the motor is always considered stopped (see paragraphs 6.7.4 and 9.1.22).

Device exits from step clock mode when a constant speed, absolute positioning or motion command is sent through SPI. Motion direction is imposed by the respective StepClock command argument and can by changed by a new StepClock command without exiting the step clock mode.

Events that cause bridges to be forced in high impedance state (overtemperature, overcurrent, etc.) do not cause the device to leave step clock mode.

This command can only be given when the motor is stopped. If a motion is in progress the motor should be stopped and then it is possible to send a StepClock command.

Any attempt to perform a StepClock command when the motor is running causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph *9.1.22*).

52/61 Doc ID 16737 Rev 1

# 9.2.6 Move (DIR, N\_STEP)

Table 39. Move command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
0	1	0	0	from host				
Х	Х			from host				
		from host						
	from host							

Move command produces a motion of  $N_STEP$  ( $\mu$ )steps; the direction is selected by DIR bit ('1' forward or '0' reverse).

The N\_STEP value is always in agreement with the selected step mode; the parameter value unit is equal to the selected step mode (full, half, quarter, etc.).

This command can be only performed when the motor is stopped. If a motion is in progress the motor must be stopped and then it is possible to perform a Move command.

Any attempt to perform a Move command when the motor is running causes the command to be ignored and the NOTPERF\_CMD to rise (see paragraph *9.1.22*).

# 9.2.7 GoTo (ABS\_POS)

Table 40. GoTo command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
0	1	1	0	from host				
Х	Х			from host				
		,	ABS_POS	from host				
	from host							

www.DataSheet4U.com

GoTo command produces a motion to ABS\_POS absolute position through the shortest path. The ABS\_POS value is always in agreement with the selected step mode; the parameter value unit is equal to the selected step mode (full, half, quarter, etc.).

This command can be given anytime and is immediately executed.

# 9.2.8 GoTo\_DIR (DIR, ABS\_POS)

Table 41. GoTo\_DIR command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
0	1	1	0	from host				
Х	Х			from host				
			ABS_PO	from host				
	from host							

GoTo\_DIR command produces a motion to ABS\_POS absolute position imposing a forward (DIR = '1') or a reverse (DIR = '0') rotation. The ABS\_POS value is always in agreement with the selected step mode; the parameter value unit is equal to the selected step mode (full, half, quarter, etc.).

This command can be given anytime and is immediately executed.

### 9.2.9 GoUntil (ACT, DIR, SPD)

Table 42. GoUntil command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
1	0	0	0	ACT	0	1	DIR	from host	
Х	Х	Х	Х		SPD (E	from host			
			SPD (	Byte 1)				from host	
	SPD (Byte 0)								

GoUntil command produces a motion at SPD speed imposing a forward (DIR = '1') or a reverse (DIR = '0') direction. When an external switch turn-on event occurs (see paragraph 6.13), the ABS\_POS register is reset (if ACT = '0') or the ABS\_POS register value is copied into the MARK register (if ACT = '1'); then the system performs a SoftStop command.

SPD value should be lower than MAX\_SPEED and greater than MIN\_SPEED, otherwise the target speed will be imposed at MAX\_SPEED or MIN\_SPEED respectively.

If SW\_MODE bit of CONFIG register is set low, the external switch turn-on event causes a HardStop interrupt instead of the SoftStop command (see paragraphs 6.13 and 9.1.22).

This command can be given anytime and is immediately executed.

#### 9.2.10 GoHome

www.DataSheet4U.com

Table 43. GoHome command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
0	1	1	1	0	0	0	0	from host

GoHome command produces a motion to HOME position (zero position) via the shortest path.S

Note that this command is equivalent to "GoTo(0...0)" command. If a motor direction is mandatory the GoTo\_DIR command has to be used (see paragraph 9.2.8).

This command can be given anytime and is immediately executed.

#### 9.2.11 ResetPos

Table 44. ResetPos command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
1	1	0	1	1	0	0	0	from host

ResetPos command resets the ABS\_POS register to zero. The zero position is also defined as HOME position (see paragraph *6.5*).

#### 9.2.12 ResetDevice

Table 45. ResetDevice command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
1	1	0	0	0	0	0	0	from host

ResetDevice command resets the device to power-up conditions (see paragraph 6.1).

Note: At power-up the power bridges are disabled.

# 9.2.13 SoftStop

Table 46. SoftStop command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
1	0	1	1	0	0	0	0	from host

The SoftStop command causes an immediate deceleration to zero speed and a consequent motor stop; the deceleration value used is the one stored in DEC register (see paragraph 9.1.6).

When the motor is in high-impedance state, a SoftStop command forces the bridges to exit from high impedance state; no motion is performed.

# 9.2.14 HardStop

www.DataSheet4U.com

Table 47. HardStop command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
1	0	1	1	1	0	0	0	from host

The HardStop command causes an immediate motor stop with infinite deceleration.

When the motor is in high-impedance state, a HardStop command forces the bridges to exit from high impedance state; no motion is performed.

#### 9.2.15 **SoftHiZ**

Table 48. SoftHiZ command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
1	0	1	0	0	0	0	0	from host

The SoftHiZ command disables the power bridges (high-impedance state) after a deceleration to zero; the deceleration value used is the one stored in DEC register (see paragraph *9.1.6*). When bridges are disabled the HiZ flag is raised.

When the motor is stopped, a SoftHiZ command forces the bridges to enter in high-impedance state.

#### 9.2.16 HardHiZ

Table 49. HardHiZ command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
1	0	1	0	1	0	0	0	from host

The HardHiZ command immediately disables the power bridges (high-impedance state) and raises the HiZ flag.

When the motor is stopped, a HardHiZ command forces the bridges to enter in high-impedance state.

#### 9.2.17 LastCommand

Table 50. LastCommand command structure

www.DataSheet4U.com

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0				
1	1	0	0	1	0	0	0	from host			
	Last command byte										
		Argı	ument byte	2 (if need	ded)			to host			
	Argument byte 1 (if needed)										
	Argument byte 0 (if needed)										

This command returns the last command, parameters included, sent to the device.

Note:

LastCommand is considered as a normal command and then it becomes the new "last command".

56/61 Doc ID 16737 Rev 1

# 9.2.18 GetStatus

Table 51. GetStatus command structure

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0					
1	1	0	1	0	0	0	0	from host				
	to host											
	to host											

GetStatus command returns the Status register value.

GetStatus command resets the STATUS register warning flags. The command forces the system to exit from any error state. GetStatus command DO NOT reset HiZ flag.

# 10 Package mechanical data

In order to meet environmental requirements, ST offers these devices in different grades of ECOPACK® packages, depending on their level of environmental compliance. ECOPACK® specifications, grade definitions and product status are available at: www.st.com. ECOPACK is an ST trademark.

Table 52. HTSSOP28 mechanical data

Di		mm	
Dim	Min	Тур	Max
А			1.2
A1			0.15
A2	0.8	1.0	1.05
b	0.19		0.3
С	0.09		0.2
D <sup>(1)</sup>	9.6	9.7	9.8
D1		5.5	
Е	6.2	6.4	6.6
E1 <sup>(2)</sup>	4.3	4.4	4.5
E2		2.8	
Е		0.65	
L	0.45	0.6	0.75
L1		1.0	
K	0°		8°
Aaa		0.1	


www.DataSheet4U.com

58/61

Dimension "D" does not include mold flash, protrusions or gate burrs. Mold flash, protrusions or gate burrs shall not exceed 0.15 mm per side.

Dimension "E1" does not include interlead flash or protrusions. Interlead flash or protrusions shall not exceed 0.25 mm per side.

Figure 16. HTSSOP28 mechanical data

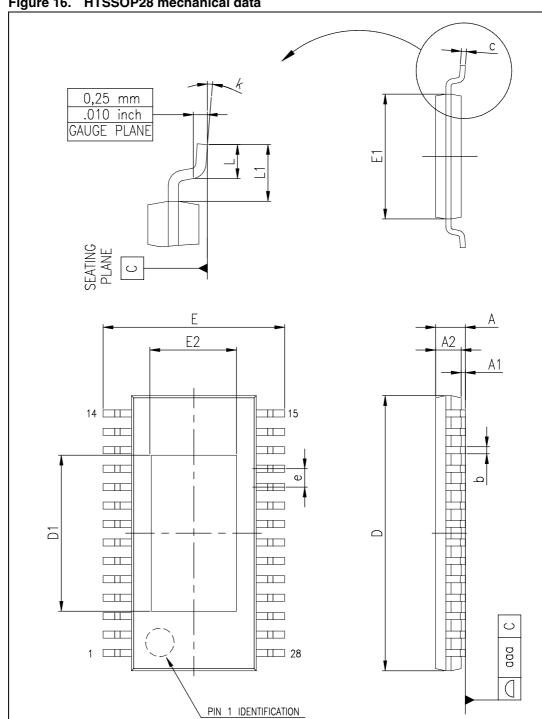

www.DataSheet4U.com

AM02392v1

Revision history L6470

# 11 Revision history

Table 53. Document revision history

Date	Revision	Changes
06-Nov-2009	1	Initial release.

#### Please Read Carefully:

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

UNLESS EXPRESSLY APPROVED IN WRITING BY AN AUTHORIZED ST REPRESENTATIVE, ST PRODUCTS ARE NOT RECOMMENDED, AUTHORIZED OR WARRANTED FOR USE IN MILITARY, AIR CRAFT, SPACE, LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE. ST PRODUCTS WHICH ARE NOT SPECIFIED AS "AUTOMOTIVE GRADE" MAY ONLY BE USED IN AUTOMOTIVE APPLICATIONS AT USER'S OWN RISK.

www.DataSheet4U.com

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2009 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Philippines - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com

