MIL-DTL-38999 Features and Application Series III



Features and Application

MIL-DTL-38999 Series III is the newest cylindrical connector designed for highest performance capabilities used in both general purpose and severe environment applications.

These connectors feature an improved "one-turn" coupling system, utilizing self-locking acme thread. Acme threads provide coupling durability, while thicker wall sections and greater coupling surface area improve strength and shock resistance. Blunting of the threads on both receptacle and plug coupling nut eliminates cross threading.

Elongated mounting holes permit the Series III Connector to intermount with various existing Mil-spec flange mounted receptacles, giving it a design replacement advantage.

Wall mount receptacle, jam nut receptacle and straight self-locking RFI plug are offered in 9 shell sizes and 54 insert arrangements utilizing M39029 contacts in sizes 22D, 20, 16, 12, 10 power and 8 twinax.

These connectors are available in wide range of shell materials and finishes. Aluminum shells are offered in electroless nickel and olive drab cadmium. Other finishes such as anodic and zinc nickel are available upon request to commercial callouts only. In addition, we offer stainless steel shells (both passivated and electro-deposited nickel plated) with firewall inserts, and for highly corrosive environments, nickel-aluminum-bronze shells with standard environment-resisting inserts (commercial callouts only).

MIL-STD-1560 Insert Arrangements – Series III connectors use insert patterns and contacts common to Series I, making for an easy transition from bayonet to triple-lead, acme-thread, self-locking coupling.

Metal-to-Metal Bottoming – This feature precludes relative shell-to-shell motion, which may result in ordinary connector wear and moisture entrapment.

Lockwiring Eliminated – Self-locking quick coupling plug eliminates the need for lockwiring.

Firewall Capability - Stainless steel shells in both K and S firewall classes are offered.

Universal I/R Tool – A single, expendable plastic tool is used for both insertion and removal of contacts.

Scoop-Proof Design – Recessed pins in elongated shells minimize the possibility for contact damage. In a blind mating application, mating shells cannot "scoop" the pins, and cause a shorting or bending of contacts.

Closed-Entry Socket Insert – Hard dielectric socket face has lead-in chamfers for positive alignment of pins (even partially bent within pre-established limits) with sockets.

Interfacial Pin Insert Seal – Raised moisture barriers around each pin, which mate into lead-in chamfers of hard face socket insert, provide individual contact sealing. Interfacial seal is never touched by service tools.

Elastomer Wire Sealing Grommet – Sealing over a wide range of wire diameters is assured by a triple wire seal in each cavity at the rear of the connector.

Superior Contact Stability – Rear release crimp contact system features a stamped beryllium-copper retaining clip captivated by molded-in shoulders of each contact cavity in the insulator. A rear-inserted M81969 plastic tool expands the tines beyond the shoulder, releasing the contact.

Metric Accessory Thread – Metric thread results in additional wall thickness giving greater strength and shock resistance.





MIL-DTL-38999 Performance Specifications Series III

Performance Specifications

Operating Temperature Range

Classes F, K, S and BZ*: -65°C to +200°C (-85°F to +392°F) Classes W and ZC*: -65°C to +175°C (-85°F to +347°F)

Material and Finish Data (Class)

- F aluminum shell, electroless nickel finish
- K stainless steel shell, passivated, firewall
- S stainless steel shell, electrodeposited nickel, firewall
- W– aluminum shell, olive drab cadmium over nickel base

 BZ^* – aluminum nickel bronze shell, std insert

 Z^* – aluminum shell, zinc nickel finish

Corrosion Resistance

Classes K, W, BZ^{*} and Z^{*} withstand 500-hour salt spray. Classes F and S withstand 48-hour salt spray.

Durability

Minimum of 500 mating cycles.

Fluid Resistance

Connectors resist specified immersions in MIL-PRF-7808, MIL-PRF-23699, MIL-PRF-5606, M2-V Chevron oil, Coolanol 25, MIL-DTL-83133 (JP-8), MIL-DTL-5624 (JP-4, JP-5), SAE-AMS1424 Type I, and other solvents and cleaning agents.

Shielding Effectiveness

RFI and EMI attenuation at the specified frequencies meet the requirements of MIL-DTL-38999.

- RFI shielding effectiveness of mated connectors with RFI backshells is measured in a triaxial radio frequency leakage fixture.
- EMI shielding effectiveness is measured at the interface of mated connectors and tested by the mode-stirred technique specified in method 3008 of MIL-STD-1344.

Environmental Seal

Wired, mated connectors with specified accessories attached, shall meet the altitude-immersion test specified in MIL-DTL-38999.

Shell-to-Shell Conductivity

Maximum potential drop shall not exceed:

- Classes F and S = 1.0 millivolt.
- Class W = 2.5 millivolts, Class K = 10.0 millivolts

Shock and Vibration Requirements

Wired, mated connectors shall not be damaged, nor shall there be a current interruption longer than one microsecond when subjected to the following:

Shock

Pulse of approximate half sine wave of 300 G \pm 15 percent magnitude with duration of 3 \pm 1 milliseconds applied in three axes.

High Impact Shock

When mounted as specified in MIL-S-901, grade A, a drop of a 400 lb. Hammer from 1 foot, 3 feet and 5 feet applied to connector in three axes, totaling nine impacts.

Vibration

Wired and mated connectors withstand the following vibration levels:

- Sine vibration where connector samples with simulated accessory load are subjected to simple harmonic motion from 10 to 2,000 Hz in three mutually perpendicular axes, in 20 minute sweeps, for 12 hours in each axis at velocity of 254 mm/sec from 10-50 Hz, displacement of 1.5 mm from 50-140Hz and acceleration of 60G from 140-2,000Hz.
- Random Vibration per MIL-STD-1344, method 205, test condition V at ambient temperature and test condition VI, Letter "J" at elevated temperature.

* Not on QPL, can be supplied to Aero-Electric part number only.

				-		
	Suggested Ope	rating Voltage	Test Voltage	Test Voltage	Test Voltage	Test Voltage
Service	(Sea L	evel)	Sea Level	50,000 Ft.	70,000 Ft.	100,000 Ft.
Rating	AC (RMS)	DC	V RMS	V RMS	V RMS	V RMS
Μ	400	550	1300	550	350	200
Ν	300	450	1000	400	260	200
I	600	850	1800	600	400	200
II	900	1250	2300	800	500	200

Note: The establishment of electrical safety factors is left entirely to the designer, as he is in the best position to know

exactly what peak voltages, switching currents, transients, etc., can be expected in a particular circuit.

Voltage Rating

MIL-DTL-38999 Part Number Development Series III



Military and Aero-Electric Part Number Development

Mil. Prefix	D38999/	20	W	C	35	Р	N	
Aero Prefix	AE3	20	W	С	35	Р	Ν	-340
Shell Type (Specification Sheet Number) 20 = Wall mount receptacle								
24 = Jam nut receptacle								
26 = Self-locking, RFI grounding plu	g							
Class (Material & Finish) F = Aluminum shell, electroless nic W = Aluminum shell, olive drab cac K = Stainless steel shell, passivated	mium over electi		base					
S = Stainless steel shell, electrodep			ort					
BZ* = Aluminum nickel bronze she								
Z* = Aluminum shell, zinc nickel pla			,,,,					
Shell Size	5 · · ·							
A, B, C, D, E, F, G, H or J								
Insert Arrangement See pages 15 thru 19								
Contact Style								
P = Pin								
S = Socket								
A = Pin connector less pins (with in								
B = Socket connector less sockets (with intent to use	e non-sta soc	.ket contacts)					
Polarization (Keying) N = Normal (Included in part numb	er)							
A, B, C, D, or E	,							
Modification (applies to Aero part numbers o	vnlv)							
01 = Less contacts (is not marked								
340 = Connector kitted with M8504	19/14-XXX							
341 = Connector kitted with M8504	19/38-XXX straigh	nt clamp						
342 = Connector kitted with M8504	19/39-XXX right a	ngle clamp						
Consult factory for other modificati	ons							


* Not on QPL, can be supplied to Aero-Electric part number only.

Note 1: Each connector is furnished with contacts unless ordered less contacts (L/C) as follows: One spare contact for inserts requiring 2 through 26 of each contact and two spares for inserts with 27 or more contacts, and a minimum of one sealing plug up to 10% of the number contacts. Spare Coax and Twinax contacts are not supplied. One insertion/extraction tool for each contact size is also included.

Note 2: Proper part number marking has no "0" in front of single digit layout. Example: JD38999/20WB5SN. "N" for normal is included. In addition, J or JAN must be marked immediately in front of MIL part number.



E ______ HINOR KEYWAYS

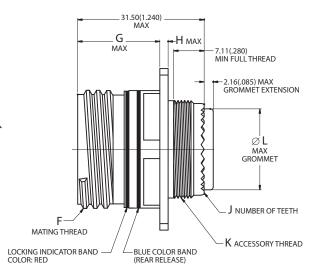

- Page 38 Completed Part Number
- Page 44 Contacts, Sealing Plugs and Tools
- Pages 17–19 Insert Arrangements
- Page 37 Performance Specifications
- Pages 15, 16Insert Availability and Contact InformationPage 42Polarization

Note 1: "K" Accessory Thread for AE320 is same as AE326 ("D" Accessory Thread) on page 41.

Note 2: "F" Mating Thread for AE320 is same as AE326 ("E" Mating Thread) on page 41 except it is Class 2A.


Note 3: Maximum Grommet Extension for insert layouts incorporating size 8 and 10 contacts = **5.95**(.234).

	ł	4	E	3	0	2	۵)	E			G	ŀ	1	J	Ø	L
Shell	±.012	±.30	(T	P)	(T	P)	±.008	±.20	±.008	±.20	Maxi	mum	Maxi	mum	No. of Teeth	Maxi	mum
Size	inch	mm	inch	mm	inch	mm	inch	mm	inch	mm	inch	mm	inch	mm		inch	mm
A	.937	23.80	.719	18.26	.594	15.09	.216	5.49	.128	3.25	.820	20.83	.098	2.50	12	.299	7.59
В	1.031	26.20	.812	20.62	.719	18.26	.194	4.93	.128	3.25	.820	20.83	.098	2.50	16	.427	10.85
С	1.126	28.60	.906	23.01	.812	20.62	.194	4.93	.128	3.25	.820	20.83	.098	2.50	20	.541	13.74
D	1.220	31.00	.969	24.61	.906	23.01	.173	4.39	.128	3.25	.820	20.83	.098	2.50	24	.666	16.92
E	1.311	33.30	1.062	26.97	.969	24.61	.194	4.93	.128	3.25	.820	20.83	.098	2.50	28	.791	20.09
F	1.437	36.50	1.156	29.36	1.062	26.97	.194	4.93	.128	3.25	.820	20.83	.098	2.50	32	.897	22.78
G	1.563	39.70	1.250	31.75	1.156	29.36	.194	4.93	.128	3.25	.790	20.07	.126	3.20	36	1.022	25.96
Н	1.689	42.90	1.375	34.93	1.250	31.75	.242	6.15	.154	3.91	.790	20.07	.126	3.20	40	1.147	29.13
J	1.811	46.00	1.500	38.10	1.375	34.93	.242	6.15	.154	3.91	.790	20.07	.126	3.20	44	1.272	32.31

Triple Start Threaded Coupling, Crimp Removable, Rear Release, Scoop-Proof

D38999/24 Jam Nut Receptacle AE324



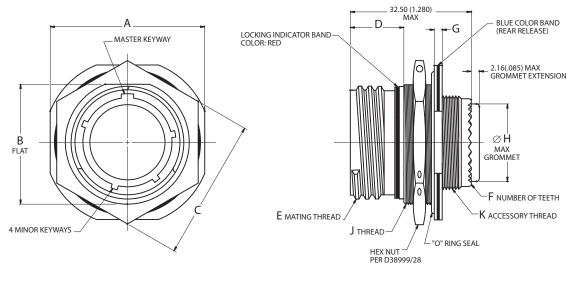

Triple Start Threaded Coupling, Crimp Removable, Rear Release, Scoop-Proof

PANEL THICKN	ESS
3.20(.126)	
1.58(.062)	

Completed Part Number
Contacts, Sealing Plugs and Tools
Insert Arrangements
Performance Specifications
Insert Availability and Contact Information
Polarization


Note 1: "K" Accessory Thread for AE324 is same as AE326 ("D" Accessory Thread) on page 41.

Note 2: "E" Mating Thread for AE324 is same as AE326 ("E" Mating Thread) on page 41 except it is Class 2A.

Note 3: Maximum Grommet Extension for insert layouts incorporating size 8 and 10 contacts = **5.95**(.234).

	ŀ	4	E	3	(С)	F	G		ØH		J
Shell	±.016	±.40	+.004 006	+.10 15			+.024 000	+.60 00	No. of Teeth	+.035 004	+.90 10	Maxi	mum	Jam Nut Thread
Size	inch	mm	inch	mm	inch	mm	inch	mm		inch	mm	inch	mm	0.100R
A	1.063	27.00	.651	16.53	.945/.859	24.00/21.82	.555	14.10	12	.087	2.20	.299	7.59	M17x1-6g
В	1.252	31.80	.751	19.07	1.063/.984	27.00/24.99	.555	14.10	16	.087	2.20	.427	10.85	M20x1-6g
С	1.374	34.90	.938	23.82	1.260/1.172	32.00/29.77	.555	14.10	20	.087	2.20	.541	13.74	M25x1-6g
D	1.500	38.10	1.062	26.97	1.417/1.296	36.00/32.91	.555	14.10	24	.087	2.20	.666	16.92	M28x1-6g
E	1.626	41.30	1.187	30.15	1.457/1.422	37.00/36.12	.555	14.10	28	.087	2.20	.791	20.09	M32x1-6g
F	1.811	46.00	1.312	33.32	1.614/1.546	41.00/39.26	.555	14.10	32	.118	3.00	.897	22.78	M35x1-6g
G	1.937	49.20	1.437	36.50	1.811/1.672	46.00/42.47	.555	14.10	36	.118	3.00	1.022	25.96	M38x1-6g
н	2.063	52.40	1.562	39.67	1.969/1.796	50.00/45.61	.555	14.10	40	.118	3.00	1.147	29.13	M41x1-6g
J	2.189	55.60	1.687	42.85	2.017/1.939	51.23/49.25	.555	14.10	44	.118	3.00	1.272	32.31	M44x1-6g



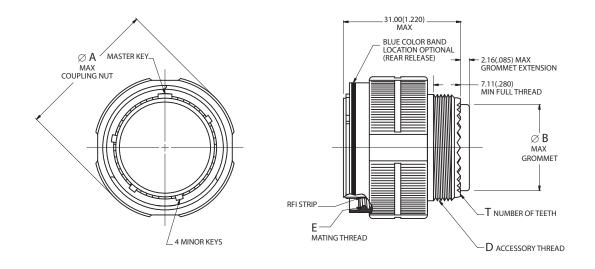

Triple Start Threaded Coupling, Crimp Removable, Rear Release, Scoop-Proof

Page 38	Completed Part Number
---------	-----------------------

- Page 44 Contacts, Sealing Plugs and Tools
- Pages 17–19 Insert Arrangements
- Page 37 Performance Specifications
- Pages 15, 16 Insert Availability and Contact Information
- Page 42 Polarization

Note : Maximum Grommet Extension for insert layouts incorporating size 8 and 10 contacts = **5.95**(.234).

	ØA		Ø	B	D	E	т
Shell	Maxi	imum	Maxi	mum	Accessory Thread Metric	Mating Thread Class 2B	No. of Teeth
Size	inch	mm	inch	mm			
A	.858	21.80	.299	7.59	M12x1.0-6g 0.100R	.6250-0.1P-0.3L	12
В	.984	25.00	.427	10.85	M15x1.0-6g 0.100R	.7500-0.1P-0.3L	16
С	1.157	29.40	.541	13.74	M18x1.0-6g 0.100R	.8750-0.1P-0.3L	20
D	1.280	32.50	.666	16.92	M22x1.0-6g 0.100R	1.0000-0.1P-0.3L	24
E	1.406	35.70	.791	20.09	M25x1.0-6g 0.100R	1.1875-0.1P-0.3L	28
F	1.516	38.50	.897	22.78	M28x1.0-6g 0.100R	1.2500-0.1P-0.3L	32
G	1.642	41.70	1.022	25.96	M31x1.0-6g 0.100R	1.3750-0.1P-0.3L	36
Н	1.768	44.90	1.147	29.13	M34x1.0-6g 0.100R	1.5000-0.1P-0.3L	40
J	1.890	48.00	1.272	32.31	M37x1.0-6g 0.100R	1.6250-0.1P-0.3L	44

MIL-DTL-38999 Polarization Series III



Keying Positions

Notes:


- 1. Mating face of receptacle shown (plug is opposite).
- 2. All minor keyways (keys) are rotated to provide shell polarization while master keyway (key) remains fixed as shown.
- 3. The angles for a given connector are the same whether it contains pin or socket inserts.
- 4. Insert arrangement does not rotate relative to the master keyway (key).

	Key/Keyway	Key/Keyway Positions						
Shell			E	SC				
Size	Identification Letter	A°	B°	C°	D°			
A (9)	Ν	105	140	215	265			
	A	102	132	248	320			
	В	80	118	230	312			
	С	35	140	205	275			
	D	64	155	234	304			
	E	91	131	197	240			
B (11)	Ν	95	141	208	236			
C (13)	A	113	156	182	292			
D (15)	В	90	145	195	252			
	С	53	156	220	255			
	D	119	146	176	298			
	E	51	141	184	242			
E (17)	Ν	80	142	196	293			
F (19)	А	135	170	200	310			
G (21)	В	49	169	200	244			
H (23)	С	66	140	200	257			
J (25)	D	62	145	180	280			
	E	79	153	197	272			



MIL-DTL-38999 Series III Flange and Jam Nut Receptacles Panel Cutouts

Panel Cutouts

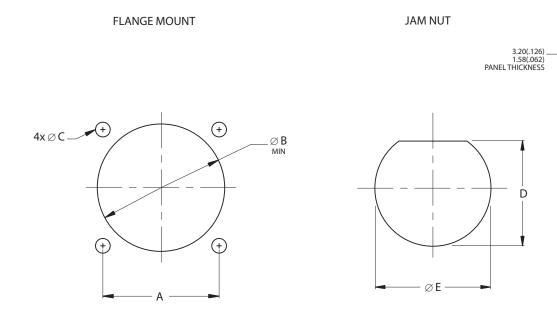

Note: Diameter B cutout dimensions are listed separately
for back and front of panel mounting.

		A	Ø	В	Ø	В	ØC		[)	ØE	
Shell	(T	P)		Mounting mum		Mounting mum	±.005	±.13	+.000 010	+.00 25	+.010 000	+.25 00
Size	inch	mm	inch	mm	inch	mm	inch	mm	inch	mm	inch	mm
A (9)	.719	18.26	.656	16.66	.516	13.11	.128	3.25	.670	17.02	.700	17.78
B (11)	.812	20.62	.796	20.22	.625	15.88	.128	3.25	.771	19.59	.825	20.96
C (13)	.906	23.01	.922	23.42	.750	19.05	.128	3.25	.955	24.26	1.010	25.65
D (15)	.969	24.61	1.047	26.59	.906	23.01	.128	3.25	1.085	27.56	1.135	28.83
E (17)	1.062	26.97	1.219	30.96	1.016	25.81	.128	3.25	1.210	30.73	1.260	32.01
F (19)	1.156	29.36	1.297	32.94	1.141	28.98	.128	3.25	1.335	33.91	1.385	35.18
G (21)	1.250	31.75	1.422	36.12	1.266	32.16	.128	3.25	1.460	37.08	1.510	38.35
H (23)	1.375	34.93	1.547	39.29	1.375	34.93	.154	3.91	1.585	40.26	1.635	41.53
J (25)	1.500	38.10	1.672	42.47	1.484	37.69	.154	3.91	1.710	43.43	1.760	44.70

MIL-DTL-38999 **Contacts, Tools and Seal Plugs** Series III



Application **Pin Contacts Socket Contacts** Seal Plugs Insertion/Removal Tools Plastic Contact Size Military No. Military No. Military No. Military No. Туре M39029/58-360 MS27488-22-1 M81969/14-01 22D Power/Signal M39029/56-348 20 Power/Signal M39029/58-363 M39029/56-351 MS27488-20-1 M81969/14-10 M39029/56-352 M81969/14-03 16 Power/Signal M39029/58-364 MS27488-16-1 12 Power/Signal M39029/58-365 M39029/56-353 M39029/75-416 12 Coax Coax M39029/28-211 MS27488-12-1 M81969/14-04 12 Coax Coax M39029/102-558 M39029/103-559 10 (Power) Power M39029/58-528 M39029/56-527 M85049/81-10*** M81969/14-05 8 Coax Coax M39029/60-367 M39029/59-366 MS27488-8-1 M81969/14-06 8 Twinax Twinax M39029/90-529 M39029/91-530 MS27488-8-1 M81969/14-12

Contacts, Plastic Insertion/Removal Tools and Seal Plugs

Crimping and Metal Insertion/Extraction Tools

	Crimp Tool	Positioner	Positioner	Insertion Tool	Extraction Tool	
Contact		For Pin Contacts	For Socket Contacts	Metal	Metal	
Size/Type	Military No.	Military No.	Military No.	Military No.	Military No.	
22D	M22520/2-01	M22520/2-09	M22520/2-07	M81969/8-01	M81969/8-02	
20	M22520/1-01	M22520/1-04	M22520/1-04	M81969/8-05	M81969/8-06	
20	M22520/2-01	M22520/2-10	M22520/2-10	10101909/0-05	10101909/0-00	
16	M22520/1-01	M22520/1-04	M22520/1-04	M81969/8-07	M81969/8-08	
12	M22520/1-01	M22520/1-04	M22520/1-04			
12 Coax Inner	M22520/2-01	M22520/2-34	M22520/2-34	M81969/8-09	M81969/8-10	
12 Coax Outer	M22520/31-01	M22520/31-02	M22520/31-02			
10 (Power)	1716P-1****	N/A	N/A	M81969/8-11	M81969/8-12	
8 Coax Inner	M22520/2-01	M22520/2-31	M22520/2-31			
8 Coax Outer	M22520/5-01	M22520/5-05	M22520/5-05	M81969/8-13**	M81969/8-14	
o Coax Outer	10122320/3-01	Die Closure B	Die Closure B			
8 Twinax Center	M22520/2-01	M22520/2-37	M22520/2-37			
8 Twinax Outer & Intermediate	M22520/5-01	M22520/5-200	M22520/5-200		_	

Contact and Wire Data

	Test Current*	Voltage*	Crimp Well Data			Wire Range		Finished Wire \varnothing Range			
Contact	DC Test	Max. Drop	Well Dia.	Minimum Well Dept				Minimum		Maximum	
Size	Amps	Millivolts	inch	inch	mm	AWG	mm ²	inch	mm	inch	mm
22D	5.0	73	.0345 ±.0010	.141	3.58	28-22	.0833	.030	.76	.054	1.37
20	7.5	55	.047 ±.001	.209	5.31	24-20	.2052	.040	1.02	.083	2.11
16	13.0	49	.067 ±.001	.209	5.31	20-16	.52-1.31	.065	1.65	.109	2.77
12	23.0	42	.100 ±.002	.209	5.31	14-12	2.08-3.31	.097	2.46	.142	3.61
10	33.0	33	.137 ±.003	.355	9.02	12-10†	3.31-5.26	.135	3.42	.162	4.12

+ MS3348 bushing required with 12 gauge wire.

When tested with silver-plated wire.

** Insertion tool is not required.

*** Dummy contact, used in lieu of unwired contact and seal plug.

**** Daniels Manufacturing part number.

Note: Size 8 coax contacts are used with M17/095-RG180 cable, while size 8 Twinax contacts are used with M17/176-00002 cable.



MIL-DTL-38999 Contact Installation Instructions Series III

Contact Installation Instructions

Crimping Contacts

- 1. Select the appropriate crimp tool and ensure that the proper crimp head positioner is used.
- 2. Cycle the tool to be sure the indentors are open.
- 3. Determine the correct selector setting for the wire size from the data plate on the positioner (turret head assembly) and set the selector knob on the crimp tool to match.
- 4. Place the contact, mating end first, into the tool.
- 5. Insert the stripped wire into the hollow end of the contact. Be sure the wire is inserted as far as it will go.
- 6. Close the tool completely to crimp. Unless the tool is closed completely, the tool will not release the contact.
- 7. Remove the crimped contact from the tool. Check the inspection hole to verify that the wire is fully inserted.

Insertion of Contacts

- 1. Before inserting the contacts, unscrew the accessories (clamps, backshells or adapters) from rear of plug or receptacle. Slide the hardware over the wire bundle in the proper order for reassembly after all the contacts are inserted.
- 2. To assist insertion of contacts, lubricate insulator (grommet) cavities with isopropyl alcohol. Alcohol will evaporate and will not leave a conductive film. **Caution: Never use any lubricant other than isopropyl alcohol.**

- 3. Place the correct insertion tool on the contact so that the wire runs along the groove in the tool. (Tool tip will butt against the shoulder.) Hold the plug or receptacle body firmly.
- 4. Beginning with a center cavity, insert the contact into the insulator with a slow, even pressure until the contact snaps into position. Make sure the contact and tool are held perpendicular to the face of the insert during the contact installation or the grommet could be damaged.
 - 4.1 If contacts are not inserted all the way prior to removing insertion tool, do not try to reinsert the insertion tool. Instead, remove the contact and try again; otherwise reinserting the insertion tool may damage the inside of the contact cavity.
- 5. Remove tool and check the face of the connector for proper contact installation. Proper installation may also be checked by pulling back lightly on the wire to make sure the contact is properly seated.

Completion

After all the cavities have been filled, slide the hardware back into position on the connector and tighten.

Extraction of Contacts (Rework)

- 1. Slide the hardware back over the wire bundle.
- 2. Select the appropriate tool. Place the wire into the extraction tool of the pin or socket.
- 3. Slowly slide the extraction tool down wire into the contact cavities until the tool tip bottoms against the contact shoulder, expanding the clip retaining tines. Hold the wire firmly in the tool and pull the wired contact and tool straight out of the rear of the insulator.

Size	Pin Contact	Socket Contact	Basic Crimp Tool	Pin Positioner	Socket Positioner	Insertion/Removal Tool
22D	M39029/58-360	M39029/56-348	M22520/2-01	M22520/2-09	M22520/07	M81969/14-01
20 M39029/58-363	M39029/56-351	M22520/1-01	M22520/1-04 Red	M22520/1-04 red	M81969/14-10	
	10139029/30-331	M22520/2-01	M22520/2-10	M22520/2-10	101909/14-10	
16	M39029/58-364	M39029/56-352	M22520/1-01	M22520/1-04 Blue	M22520/1-04 Blue	M81969/14-03
12	M39029/58-365	M39029/56-353	M22520/1-01	M22520/1-04 Yellow	M22520/1-04 Yellow	M81969/14-04
10	M39029/58-528	M39029/56-527	*	*	*	M81969/14-05

For Coax and Twinax contacts refer to instructions that are supplied with contacts.

* Contact Daniels Manufacturing for crimp tool/positioner.