# **MORNSUN®**

RS485 (Full-duplex) input isolation safety barrier TD102-EX-485(RS485 Full-duplex output) TD103-EX-485(RS232 output)



## **FEATURES**

- Three-port isolation (input, output and power supply)
- I High isolation voltage (2500VAC/60S)
- I High reliability (MTBF>500,000 hours)

## **GENERAL DESCRIPTION**

TD10x-EX-485 input isolation safety barrier, It can supply isolated DC power of the transmitters from the security zone to the danger zone, transform the RS-4 85 digital signal of danger zone into isolated RS-485 or RS-232 digital signal transmission to the security zone, while increasing the anti-jamming capability of the industrial production process control system, to ensure system stability and reliability. It meets IEC/EN61326 standards.

One independent power supply is required. Moreover, within the product power supply, input and output are mutually isolated. Field devices connected with this product: RS-485 bus

ELECTRICAL CHARACTERISTICS			
Power	Power Supply	18~32VDC (Typ. :24VDC)	
	Power Dissipation	About 1.5W	
	Power Protection	Reverse protection	
Hazardous	Input signal: RS-485 Full-duplex digital signal  On-site power supply: 5V, 6V:I≤100mA  8V, 9V:I≤50mA		
Area			
Safe Area	RS-485 Half-duplex digital signal (TD102-EX-485)		
	RS-232 digital signal (TD103-EX-485)		

SIGNAL CHARACTERISTICS		
RS-485	Signal level rules: Standard RS-485 differential level Transmission delay: ≤10µS Signal transmission rate: ≤56kbps	
RS-232	Signal level rules: Standard RS-232 Logic level Transmission delay: ≤10µS Signal transmission rate: ≤56kbps	


ISOLATION CHARACTERISTICS		
Galvanic Isolation	intrinsically safe end and non-intrinsically safe end 2500VAC 1Min	
Isolation Voltage	1.5KVDC between safe area power and signal	
Isolation voltage	1.5KVDC between hazardous area with isolated power output and signal	
Test conditions: testing for 1minute, humidity < 70%, leakage current < 5mA		


EMC CHARACTERISTICS	
EMC	EN61326

OTHER CHARACTERISTICS		
Signal Indicator	Green: Power, lighting at power on.	
	Yellow: Send Indicator, safety side lights when data is sending.	
	Red: Receive Indicator, safety side lights when data is receiving.	
Ambient Temperature	Operation temperature: -25°C ~ +71°C	
	Transport and storage temperature: -50°C ~ +105°C	
Field Devices Connected and Regions	Equipment with RS-485 communication interface Zone 0, Zone 1, Zone 2, II A, II B, II C, T4~T6 danger zone	
Package	35mm DIN-rail package: pluggable connection pin, thickness 22.5mm,Plastic UL94-V0	
Safety Class	IP20(IEC60529 / EN60529)	
Weight	about 150g	

EXPLOSION PROTECTION		
Explosion Protection Mark	[Exia Ga] II C	
Out the star December	Between the pin 9 and 10, 15 and 16 Uo=11.2 V, Io=12mA, Po= 33mW, Um=250V Co=1.2μF, Lo=2mH	
Certification Parameters	Between the pin 9 and 1 Uo=12.6V, Io=306mA, Po=0.96W, Um=250V Co=0.7μF, Lo=0.21mH	
Explosion protection certification agency	CHINA NATIONAL QUALITY SUPERVISION AND TEST CENTRE FOR EXPLOSION PROTECTED ELECTRICAL PRODUCTS	
Explosion qualified NO.	CNEx 12.2419(TD103-EX-485)	
Explosion qualified NO.	CNEx 12.2420(TD102-EX-485)	

## **ISOLATION POWER OUTPUT CURVE**

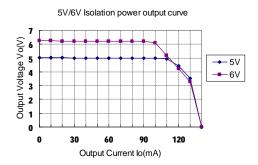

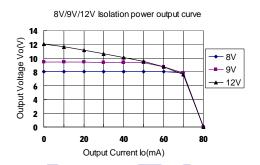

# CONNECTION

- 1. Removable terminal;
- 2. Cross section area of wiring: 0.5mm<sup>2</sup> ~2.5 mm<sup>2</sup>;
- 3. The length of bare wire is about 8mm, locked up by the M3 bolt.

## Selection guidelines for intrinsically safe explosion protection system

- 1. The explosion protection grade of the barrier must be not less than that of intrinsically safe explosion protection device in spot.
- 2. Take inconsideration of hazardous end output resistance and loop resistance make sure the barrier output voltage meets the minimum operation voltage requirement of intrinsically safe device in spot.
- 3. The safety parameters about intrinsically safe end meets:
  - $Uo \le UI$ ,  $Io \le Iin$ ,  $Po \le Pin$
  - Co ≥ Cin. Lo ≥ Lin
- 4. Select suitable safety barrier which matches the intrinsically safe device in spot according to the power polarity, signal type and transmission
- 5. Much more protection is required, which can avoid the influence of the leakage current generated by safety barrier on intrinsically safe device in
- 6. The wires leading to dangerous field should be constrainted in blue intrinsically safe wires, and its copper cross-section should be more than 0.5mm<sup>2</sup>; Insulation intensity should be more than 500VDC.


#### Operation notes


- 1. Please read the user manual carefully before using. If any question please contact our technical support department.
- 2. Please do not use this product in hazardous area.
- 3. The power supply of this product should be 24VDC power source. It is forbidden to use 220VAC power supply.
- 4. To avoid invalid explosion protection function, or any failure, users disassemble this product is forbidden.

#### After service

- 1. Products are carefully inspected and controlled before going out from our factory. If they operated abnormally or there were anything wrong in the inner parts, please contact with our agents near you or technical support in our company as soon as possible.
- 2. 3 years warranty since the delivery date. During the period of quality guarantee, our company will repair or change free of charge if product has any quality problem in the process of normally using.

# **APPLICATION CIRCUIT DIAGRAM**

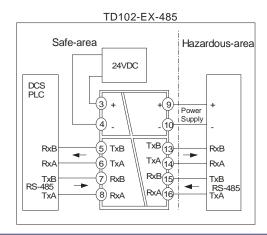

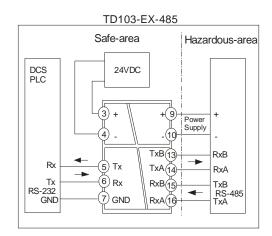


## **INSTALLATION & DISASSEMBLY**

## Installation


DIN35mm standard rail installation:

- 1. Insert the top of the instrument card in the rail;
- 2. Push the bottom of the instrument into the rail.

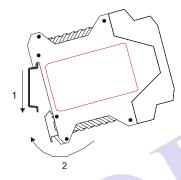



## Disassembly

- 1. Insert a screwdriver between the bottom of the card lock and the rail;
- Pull up the screwdriver and press the card lock downwards;
- Pull the instrument out of the rail.

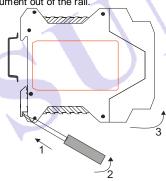

# PACKAGING DIMENSION & PACKAGING DIAGRAM

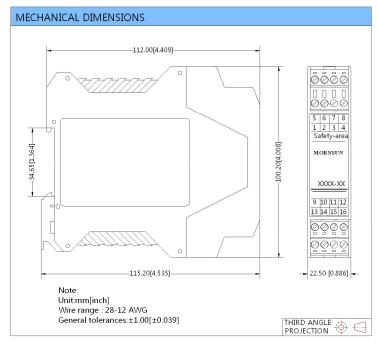

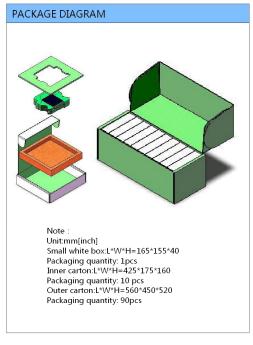

#### Note:

- 1. All specifications are measured at Ta=25°C, humidity<75%, nominal input voltage and rated output load unless otherwise specified.
- 2. In this datasheet, all the test setup and methods are based on our corporate standards.
- 3. All characteristics are meant for listed model, non-standard models may perform differently, you can contact MORNSUN FAE for more details.
- 4. Contact us for your specific requirement.
- 5. Specifications are subject to change without prior notice.

## MORNSUN Science & Technology Co.,Ltd.

Address: No. 5, Kehui St. 1, Kehui development center, Science Ave., Guangzhou Science City, Luogang district, Guangzhou, P.R.China.

Tel: 86-20-38601850 Fax:86-20-38601272 E-mail: info@mornsun.cn Http://www.mornsun-power.com

