HAMAMATSU FLAME SENSOR UV TRON® R9454, R9533

Quick Detection of Flame from Distance, Compact UV Sensor with High Sensitivity and Wide Directivity, Suitable for Flame Detectors and Fire Alarms.

The UV TRON R9533 and R9454 are UV sensors that utilize the photoelectric effect from metal and gas multiplication. These devices are sensitive only to UV light in a spectral range of 185 nm to 260 nm. This makes them easy to use since they do not require optical visible-cut filters. Their electrodes are optimized for ruggedness to resist mechanical shocks up to 10 times (10000 m/s²) greater than the conventional UV TRONs. The R9533 is a head-on type (UV light enters through the top of the bulb) that easily installs into equipment. The R9454 is a side-on type (UV light enters through the side of the bulb) whose outer appearance resembles the conventional flame sensor R2868. Both these types utilize a plate cathode and feature high sensitivity and a wide field of view (directivity).

APPLICATIONS

- Flame detectors for gas/oil lighters and matches
- Fire alarms
- Arson watch monitors
- Combustion monitors for burners
- Inspection of ultraviolet leakage
- Detection of discharge
- Ultraviolet switching

SPECIFICATIONS

GENERAL

Parameter	R9454	R9533	Unit
Spectral Response	185 to 260		
Window Material	UV glass		
Weight	Approx. 1.5	Approx. 2.5	g

MAXIMUM RATINGS

Parameter	R9454	R9533	Unit
Supply Voltage (DC)	500	400	V
Peak Current 1	30		mA
Average Discharge Current 2	1		mA
Operating Ambient Temperature	-20 to +60	-20 to +125	۵°

CHARACTERISTICS (at 25 °C)

Parameter	R9454	R9533	Unit
Discharge Starting Voltage (with UV radiation) (DC) Ma	x. 360	280	V
Recommended Operating Voltage (DC)	400 ± 25	350 ± 25	V
Background ³ Ma	10		min ⁻¹
Sensitivity ⁴ Type	b. 4000	10000	min ⁻¹

NOTE: ①This is the maximum momentary current that can be handled if its full width at half maximum is less than 10 μs.

2 If the tube is operated near this or higher, the service life is noticeably reduced. Use the tube within the recommended current values.

(3) Measured under room illuminations (approximately 500 lux) and recommended operating conditions. Note that these values may increase if the following environmental factors are present.

1. Mercury lamps, sterilization lamps, or halogen lamps are located nearby. 2. Direct or reflected sunlight is incident on the tube.

3. Electrical sparks such as welding sparks are present. 4. Radiation sources are present. 5. High electric field (including static field) generates across the tube.

(4) These are representative values for a wavelength of 200 nm and a light input of 10 pW/cm². In actual use, the sensitivity will vary with the wavelength of the ultraviolet radiation and the drive circuitry employed.

Subject to local technical requirements and regulations, availability of products included in this promotional material may vary. Please consult with our sales office. Information furnished by HAMAMATSU is believed to be reliable. However, no responsibility is assumed for possible inaccuracies or omissions. Specifications are granted to any of the circuits described herein. ©2007 Hamamatsu Photonics K.K.



Left: R9533 Right: R9454

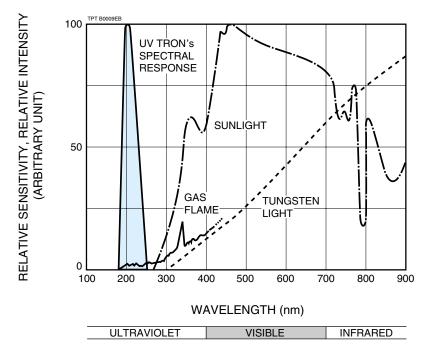




Figure 2: Angular Sensitivity (Directivity)





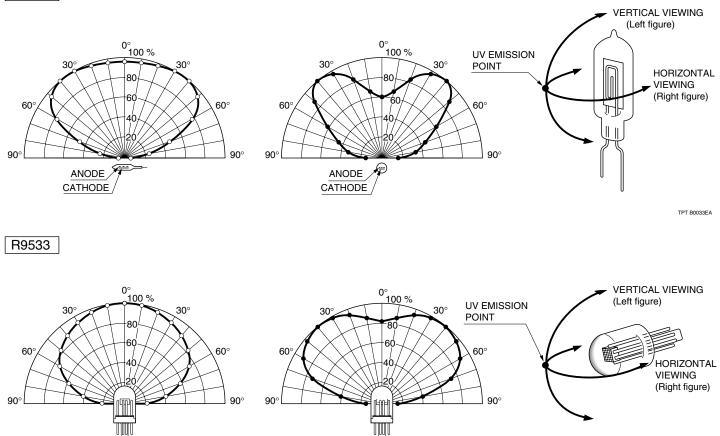


Figure 3: Dimensional Outline (Unit: mm)

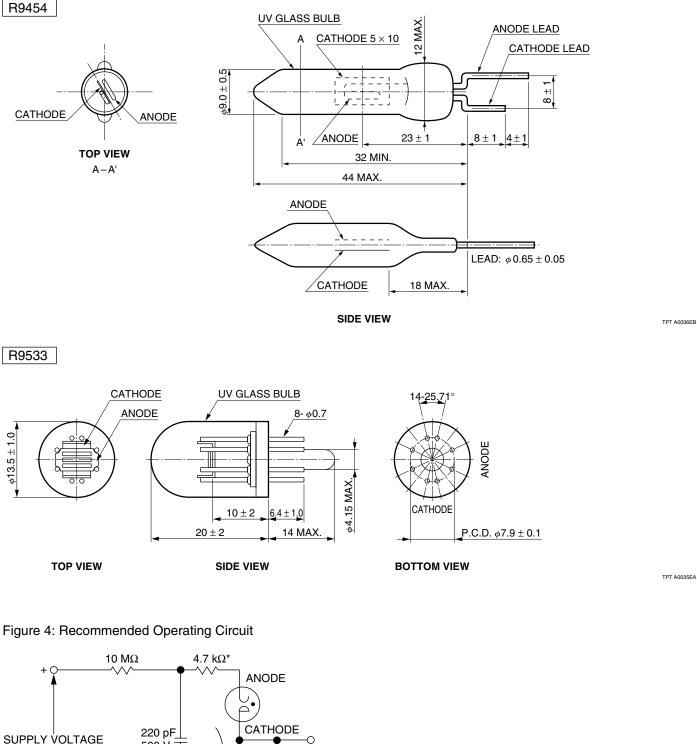

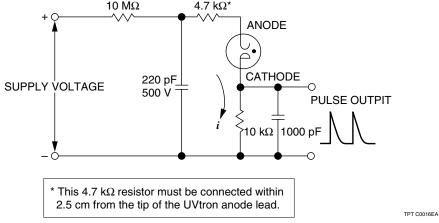

PRECAUTIONS FOR USE

Ultraviolet Radiation

The UV TRON itself emits ultraviolet radiation in operation. When using two or more UV TRONs at the same time in close position, care should be taken so that they do not optically interfere with each other.

Vibration and Shock

These UV TRONs passed JIS C 60068-2-6 (vibration test 3.0 mm peak to peak, 200 m/s², 10 Hz to 2000 Hz) and JIS C 60068-2-27 (impact test 10000 m/s², 1 ms). However, if subjected to strong mechanical shocks such as drop impacts in excess of the guaranteed values, the bulb may crack or internal electrodes may deform resulting in poor electrical characteristics. So use extreme care when handling the UV TRON.

Polarity

Connect the UV TRON at the correct polarity. Reverse polarity connection will cause malfunction or breakdown.


WARRANTY

The UV TRON is covered by a warranty for a period of one year after delivery. The warranty is limited to replacement of any defective tube due to defects traceable to the manufacturer.

RELATED PRODUCTS

UV TORON DRIVING CIRCUIT C3704 SERIES (Sold Separatery)

The C3704 series are flame sensor driver circuits. The C3704 has a high-voltage power supply and signal processor mounted on the same PC board. It works as a flame sensor unit just by hooking up a 5 V to 30 V DC supply and connecting to the R9533. Please note that the R9533 lead pins cannot be soldered directly to the C3704. A dedicated socket (E678-8F) must be used to make the connection. See the C3704 series data sheet for detailed information.

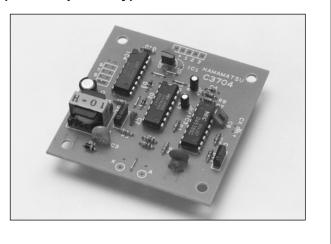

٨

WEB SITE www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Electron Tube Division

314-5, Shimokanzo, Iwata City, Shizuoka Pref., 438-0193, Japan, Telephone: (81)539/62-5248, Fax: (81)539/62-2205

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, P. O. Box 6910, Bridgewater, N.J. 08807-0910, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218 E-mail: usa@hamamatsu.com Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-2658 E-mail: info@hamamatsu.de France: Hamamatsu Photonics France S.A.R.L.: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10 E-mail: info@hamamatsu.fr United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road Welwyn Garden City Hertfordshire AL7 18W, United Kingdom, Telephone: 44-(0)1707-294888, Fax: 44(0)1707-325777 E-mail: info@hamamatsu.co.uk North Europe: Hamamatsu Photonics Norden AB: Smidesvägen 12, SE-171-41 SOLNA, Sweden, Telephone: (46)8-509-031-00. Fax: (46)8-509-031-01 E-mail: info@hamamatsu.se Italy: Hamamatsu Photonics Italia: S.R.L.: Strada della Moia, 1/E, 20020 Arese, (Milano), Italy, Telephone: (39)02-935 81 733, Fax: (39)02-935 81 741 E-mail: info@hamamatsu.it