



Information Sheet for Terminal Oiler
Order No. 63801-7240
For TM3000 Press
Side Loading Terminals

To install a Terminal Oiler (Order No. 63801-7240) to any FineAdjust or Mini-Mac Applicator mounted in the TM3000 Press use the following procedure.

1. Open the Front Guard.
2. Remove lid assembly from the oiler jar.
3. Remove upper oiler nut from lid assembly.
4. Place the oiler mounting bracket (63801-7230) over tube and replace upper nut and tighten securely.
5. Place lid assembly with mounting bracket on the oiler jar and turn until hand tight. Do not over tighten.
6. Mount terminal oiler assembly with bracket on the side of the Plate-Quick Change (63801-7222) installed on the TM-3000 Press. See Figure 1.
7. Close the Front Guard.
8. Recommended oil:

Product Name: Transdraw B-19

Vendor: Sure Lubricant, Inc.
356 South Lively Boulevard
Elk Grove Village, IL 60007-2010
Phone: 888-787-3582
Fax: 847-956-6655
E-Mail: surelube@aol.com

9. For replacement wicks use part no. 63890-0727 (package of 25).

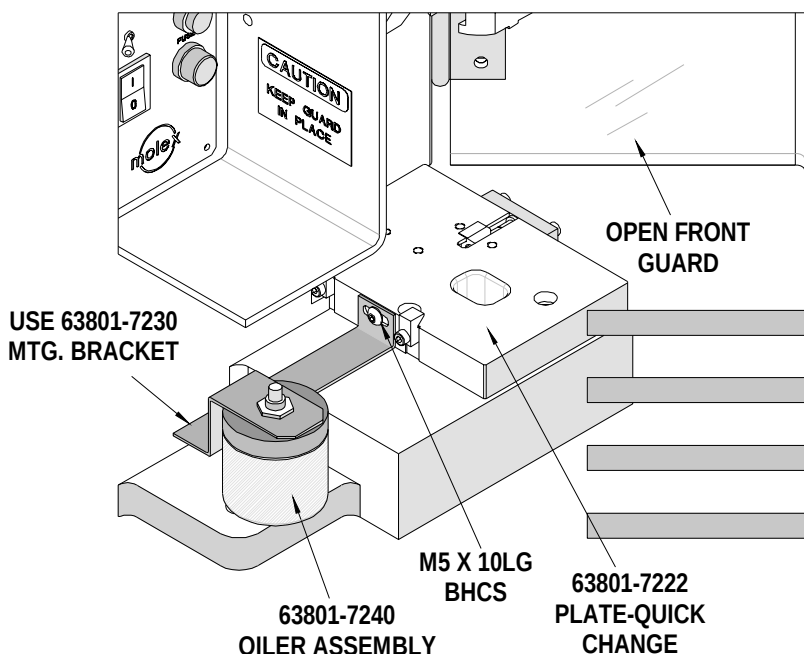


Figure 1

Americas Headquarters
Lisle, Illinois 60532 U.S.A.
1-800-78 MOLEX
amerinfo@molex.com

Far East North Headquarters
Yamato, Kanagawa, Japan
81-462-65-2324
feninfo@molex.com

Far East South Headquarters
Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters
Munich, Germany
49-89-413092-0
eurinfo@molex.com

Corporate Headquarters
2222 Wellington Ct.
Lisle, IL 60532 U.S.A.
630-969-4550
Fax: 630-969-1352

Visit our Web site at <http://www.molex.com>




Information Sheet for Terminal Oiler
Order No. 63801-7240
For TM3000 Press
Rear Loading Terminals

To install a Terminal Oiler (Order No. 63801-7240) to any FineAdjust or Mini-Mac Applicator mounted in the TM3000 Press use the following procedure.

1. Remove the Rear Guard (63801-7281).
2. Remove lid assembly from the oiler jar.
3. Remove upper oiler nut from lid assembly.
4. Place the oiler mounting bracket (63801-7230) over tube and replace upper nut and tighten securely.
5. Place lid assembly with mounting bracket on the oiler jar and turn until hand tight. Do not over tighten.
6. Mount terminal oiler assembly with bracket on the back of the Plate-Quick Change (63801-7222) installed on the TM-3000 Press. See Figure 1.
7. Replace the Rear Guard.
8. Recommended oil:

Product Name: Transdraw B-19

Vendor: Sure Lubricant, Inc.
356 South Lively Boulevard
Elk Grove Village, IL 60007-2010
Phone: 888-787-3582
Fax: 847-956-6655
E-Mail: surelube@aol.com

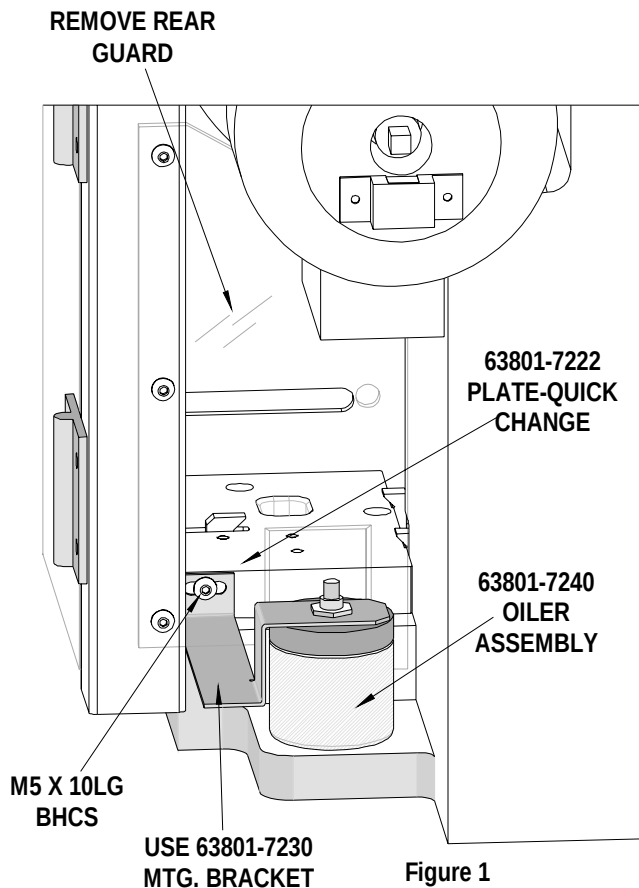

9. For replacement wicks use part no. 63890-0727 (package of 25).

Americas Headquarters
Lisle, Illinois 60532 U.S.A.
1-800-78MOLEX
amerinfo@molex.com

Far East North Headquarters
Yamato, Kanagawa, Japan
81-462-65-2324
feninfo@molex.com

Far East South Headquarters
Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters
Munich, Germany
49-89-413092-0
eurinfo@molex.com

Corporate Headquarters
2222 Wellington Ct.
Lisle, IL 60532 U.S.A.
630-969-4550
Fax: 630-969-1352

Visit our Web site at <http://www.molex.com>



**Information Sheet
Terminal Oiler
Order No. 63801-7240
For TM2000 with Guard 63800-8310**

To install a Terminal Oiler (Order No. 63801-7240) to any FineAdjust or Mini-Mac Applicator mounted in the TM2000 Press with Guard (Part No. 63800-8310), use the following procedure.

1. Remove the Guard 63800-8310.
2. Remove lid assembly from the oiler jar.
3. Remove upper oiler nut from lid assembly.
4. Place oiler mounting bracket over tube and replace upper nut and tighten securely.
5. Place lid assembly with mounting bracket on the oiler jar and turn until hand tight. Do not over tighten.
6. Mount terminal oiler assembly with bracket on the frame of the FineAdjust or Mini-Mac Applicator. See Figure 1
7. Replace the Guard.
8. Recommended oil:

Product Name: Transdraw B-19

Vendor: Sure Lubricant, Inc.
356 South Lively Boulevard
Elk Grove Village, IL
60007-2010
Phone: 888-787-3582
Fax: 847-956-6655
E-Mail: surelube@aol.com

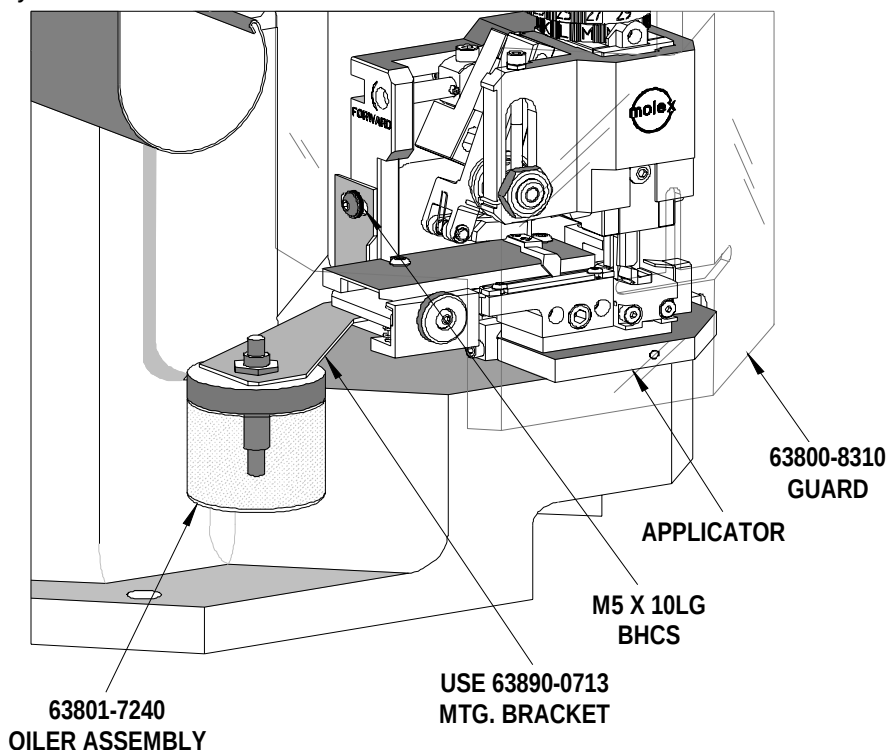


Figure 1

9. For replacement wicks use part no.63890-0727 (package of 25).

Americas Headquarters
Lisle, Illinois 60532 U.S.A.
1-800-78MOLEX
amerinfo@molex.com

Far East North Headquarters
Yamato, Kanagawa, Japan
81-462-65-2324
feninfo@molex.com

Far East South Headquarters
Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters
Munich, Germany
49-89-413092-0
eurinfo@molex.com

Corporate Headquarters
2222 Wellington Ct.
Lisle, IL 60532 U.S.A.
630-969-4550
Fax: 630-969-1352

Visit our Web site at <http://www.molex.com>



**Information Sheet
Terminal Oiler
Order No. 63801-7240
For TM2000 Press with Guard 63800-8350**


To install a Terminal Oiler (Order No. 63801-7240) to a TM2000 Press, use the following procedure.

1. Remove lid assembly from the oiler jar.
2. Remove upper oiler nut from lid assembly.
3. Place oiler mtg. bracket over tube and replace upper nut and tighten securely.
4. Place lid assembly with mtg. bracket on the oiler jar and turn until hand tight. Do not over tighten.
5. Mount terminal oiler assembly with bracket on the guard of the TM2000 Press.
6. Recommended lubricant oil:

Product Name: Transdraw B-19

Vendor: Sure Lubricant, Inc.
356 South Lively Boulevard
Elk Grove Village, IL 60007-2010
Phone: 888-787-3582
Fax: 847-956-6655
E-Mail: surelube@aol.com

7. For replacement wicks use part no. 63890-0727 (package of 25).

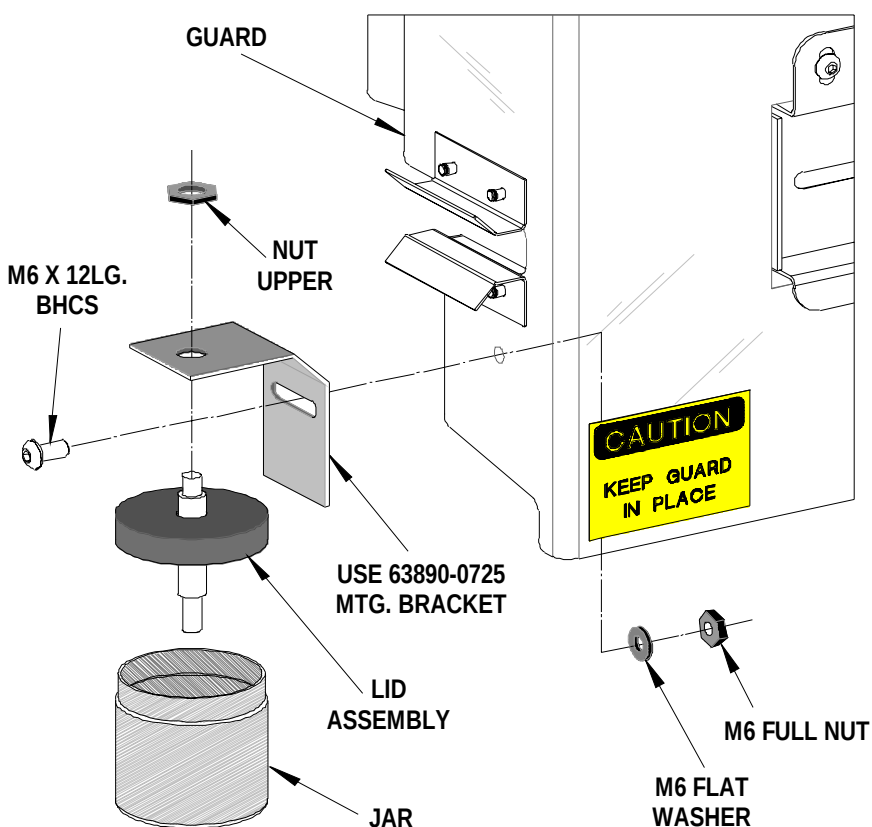

Americas Headquarters
Lisle, Illinois 60532 U.S.A.
1-800-78MOLEX
amerinfo@molex.com

Far East North Headquarters
Yamato, Kanagawa, Japan
81-462-65-2324
feninfo@molex.com

Far East South Headquarters
Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters
Munich, Germany
49-89-413092-0
eurinfo@molex.com

Corporate Headquarters
2222 Wellington Ct.
Lisle, IL 60532 U.S.A.
630-969-4550
Fax: 630-969-1352

Visit our Web site at <http://www.molex.com>



**Information Sheet
Terminal Oiler
Order No. 63801-7240
For FineAdjust and Mini-Mac Applicators**


To install a Terminal Oiler (Order No. 63801-7240) to any FineAdjust or Mini-Mac Applicator, use the following procedure.

1. Remove lid assembly from the oiler jar.
2. Remove upper oiler nut from lid assembly.
3. Place oiler mtg. bracket over tube and replace upper nut and tighten securely.
4. Place lid assembly with mounting bracket on the oiler jar and turn until hand tight. Do not over tighten.
5. Mount terminal oiler assembly with bracket on the frame of the FineAdjust or Mini-Mac Applicator.
6. Recommended lubricant oil:

Product Name: Transdraw B-19

Vendor: Sure Lubricant, Inc.
356 South Lively Boulevard
Elk Grove Village, IL 60007-2010
Phone: 888-787-3582
Fax: 847-956-6655
E-Mail: surelube@aol.com

7. For replacement wicks use part no. 63890-0727 (package of 25).

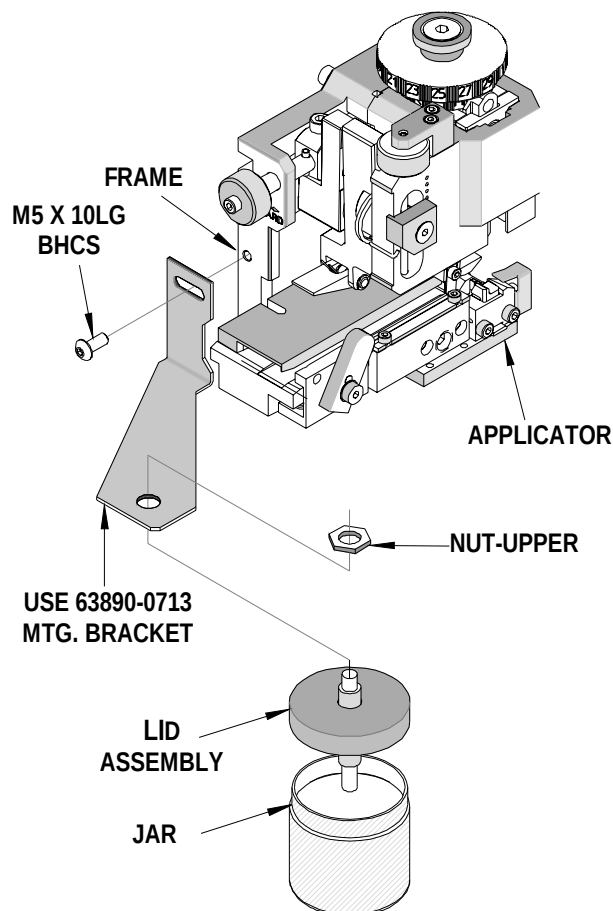

Americas Headquarters
Lisle, Illinois 60532 U.S.A.
1-800-78MOLEX
amerinfo@molex.com

Far East North Headquarters
Yamato, Kanagawa, Japan
81-462-65-2324
feninfo@molex.com

Far East South Headquarters
Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters
Munich, Germany
49-89-413092-0
eurinfo@molex.com

Corporate Headquarters
2222 Wellington Ct.
Lisle, IL 60532 U.S.A.
630-969-4550
Fax: 630-969-1352

Visit our Web site at <http://www.molex.com>



**Information Sheet
Terminal Oiler
Order No. 63801-7240
For a TM40/TM42 Press**

If your TM42 Presses was produced before 1996, it did not include provisions to mount an oiler.

To install a Terminal Oiler (Order No. 63801-7240) to your press you will need to add a mounting hole. Locate this hole on the left side of the frame, with the front of press facing you, under the track.

Use the following procedure to install the oiler.

1. Drill a 4.20mm (.165") diameter x 17.00mm (.62") deep in the location shown in the figure shown.
2. Tap a M6-1.0 x 12.00mm (.47") deep.
3. Use a M6 BHCS and M6 flat washer to secure oiler onto frame.


OR

4. Drill .159" (#21) x .62" deep.
5. Tap #10-32 x .62" deep.
6. Use #10-32 x 0.50" BHSC.
7. Recommended lubricant oil:

Product Name: Transdraw B-19

Vendor: Sure Lubricant, Inc.
356 South Lively Boulevard
Elk Grove Village, IL 60007-2010
Phone: 888-787-3582
Fax: 847-956-6655
E-Mail: surelube@aol.com

8. For replacement wicks use part no. 63890-0727 (package of 25).

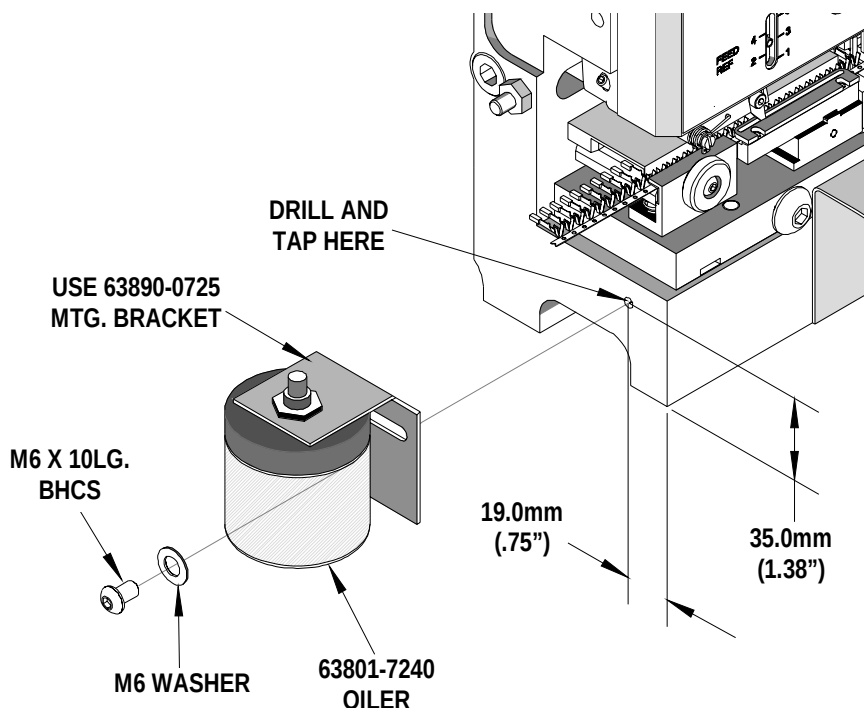

Americas Headquarters
Lisle, Illinois 60532 U.S.A.
1-800-78MOLEX
amerinfo@molex.com

Far East North Headquarters
Yamato, Kanagawa, Japan
81-462-65-2324
feninfo@molex.com

Far East South Headquarters
Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters
Munich, Germany
49-89-413092-0
eurinfo@molex.com

Corporate Headquarters
2222 Wellington Ct.
Lisle, IL 60532 U.S.A.
630-969-4550
Fax: 630-969-1352

Visit our Web site at <http://www.molex.com>