

8 Mbit (13 x 64KByte Blocks + 3 x 16 x 4KByte Sectors)
3V Supply Firmware Hub / Low Pin Count Flash Memory

#### **FEATURES SUMMARY**

- FLASH MEMORY
  - Compatible with either the LPC interface or the FWH interface (Intel Spec rev1.1) used in PC BIOS applications
  - 5 Signal Communication Interface supporting Read and Write Operations
  - 5 Additional General Purpose Inputs for platform design flexibility
  - Synchronized with 33MHz PCI clock
- 16 BLOCKS OF 64 KBYTES
  - 13 blocks of 64 KBytes each
  - 3 blocks, subdivided into 16 uniform sectors of 4 KBytes each

Two blocks at the top and one at the bottom (M50FLW080A)

One block at the top and two at the bottom (M50FLW080B)

#### ■ ENHANCED SECURITY

- Hardware Write Protect Pins for Block Protection
- Register-based Read and Write Protection
- Individual Lock Register for Each 4 KByte Sector


#### SUPPLY VOLTAGE

- V<sub>CC</sub> = 3.0 to 3.6V for Program, Erase and Read Operations
- V<sub>PP</sub> = 12V for Fast Program and Erase

### TWO INTERFACES

- Auto Detection of Firmware Hub (FWH) or Low Pin Count (LPC) Memory Cycles for Embedded Operation with PC Chipsets
- Address/Address Multiplexed (A/A Mux) Interface for programming equipment compatibility.
- PROGRAMMING TIME: 10µs typical
- PROGRAM/ERASE CONTROLLER
  - Embedded Program and Erase algorithms
  - Status Register Bits

Figure 1. Packages

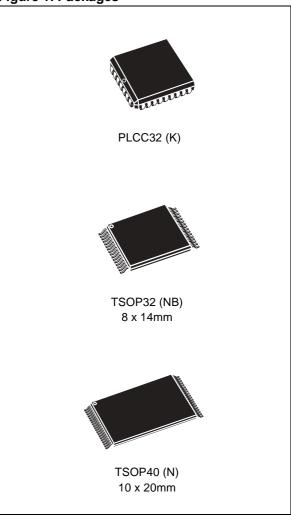

### ■ PROGRAM/ERASE SUSPEND

- Read other Blocks/Sectors during Program Suspend
- Program other Blocks/Sectors during Erase Suspend

#### ■ ELECTRONIC SIGNATURE

- Manufacturer Code: 20h
- Device Code (M50FLW080A): 80h
- Device Code (M50FLW080B): 81h

June 2005 1/53

## **TABLE OF CONTENTS**

FEATURES SUMMARY	1
Figure 1. Packages	1
SUMMARY DESCRIPTION	6
Figure 2. Logic Diagram (FWH/LPC Interface)	7
Figure 3. Logic Diagram (A/A Mux Interface)	
Table 1. Signal Names (FWH/LPC Interface)	7
Table 2. Signal Names (A/A Mux Interface)	7
Figure 4. PLCC Connections	8
Figure 5. TSOP32 Connections	8
Figure 6. TSOP40 Connections	9
Table 3. Addresses (M50FLW080A)	9
Table 4. Addresses (M50FLW080B)	9
OLONAL DECORPTIONS	4.0
SIGNAL DESCRIPTIONS	
Firmware Hub/Low Pin Count (FWH/LPC) Signal Descriptions	
Input/Output Communications (FWH0/LAD0-FWH3/LAD3)	
Input Communication Frame (FWH4/LFRAME)	
Identification Inputs (ID0-ID3)	
General Purpose Inputs (GPI0-GPI4)	
Interface Configuration (IC)	
Interface Reset (RP)	
CPU Reset (INIT)	
Clock (CLK)	10
Top Block Lock (TBL)	10
Write Protect (WP)	11
Reserved for Future Use (RFU)	11
Address/Address Multiplexed (A/A Mux) Signal Descriptions	11
Address Inputs (A0-A10)	11
Data Inputs/Outputs (DQ0-DQ7)	11
Output Enable ( $\overline{G}$ )	11
Write Enable ( $\overline{W}$ )	
Row/Column Address Select (RC)	11
Supply Signal Descriptions	11
V <sub>CC</sub> Supply Voltage	11
V <sub>PP</sub> Optional Supply Voltage	11
V <sub>SS</sub> Ground	11
Table 5. Memory Identification Input Configuration (LPC mode)	
BUS OPERATIONS	12
Firmware Hub/Low Pin Count (FWH/LPC) Bus Operations	
Bus Read	
Bus Write.	
Duo vviito	12

E	Bus Abort	12
(	Standby	13
F	Reset	13
	Block Protection	13
	Address/Address Multiplexed (A/A Mux) Bus Operations	13
	Bus Read	
	Bus Write	
(	Output Disable	13
F	Reset	13
-	Table 6. FWH Bus Read Field Definitions	14
F	Figure 7. FWH Bus Read Waveforms	14
-	Table 7. FWH Bus Write Field Definitions	15
F	Figure 8. FWH Bus Write Waveforms	15
-	Table 8. LPC Bus Read Field Definitions (1-Byte)	16
F	Figure 9. LPC Bus Read Waveforms (1-Byte)	16
-	Table 9. LPC Bus Write Field Definitions (1 Byte)	17
F	Figure 10.LPC Bus Write Waveforms (1 Byte)	17
-	Table 10. A/A Mux Bus Operations	17
CON	MMAND INTERFACE	18
-	Table 11. Command Codes	18
	Read Memory Array Command	
F	Read Status Register Command	18
	Read Electronic Signature Command	
	Гable 12. Electronic Signature Codes	
	Program Command	
	Quadruple Byte Program Command (A/A Mux Interface)	
	Double/Quadruple Byte Program Command (FWH Mode)	
	Chip Erase Command	
	Block Erase Command	
	Sector Erase Command	
	Clear Status Register Command	
	Program/Erase Suspend Command	
	Program/Erase Resume Command	
-	Table 13. Commands	21
CT 4	THE DECISTED	22
	TUS REGISTER	
	Program/Erase Controller Status (Bit SR7)	
	Erase Suspend Status (Bit SR6)	
	Erase Status (Bit SR5)	
	Program Status (Bit SR4)	
	V <sub>PP</sub> Status (Bit SR3)	
	Program Suspend Status (Bit SR2)	
	Block/Sector Protection Status (Bit SR1)	
	Reserved (Bit SR0)	
-	Гable 14. Status Register Bits	23

FIRMWARE HUB/LOW PIN COUNT (FWH/LPC) INTERFACE CONFIGURATION REGISTERS	. 24
Lock Registers	. 24
Write Lock	
Read Lock	. 24
Lock Down	. 24
Table 15. Configuration Register Map	. 24
Table 16. Lock Register Bit Definitions	. 25
Table 17. General Purpose Inputs Register Definition	. 25
Firmware Hub/Low Pin Count (FWH/LPC) General Purpose Input Register	
Manufacturer Code Register	. 25
PROGRAM AND ERASE TIMES	. 26
Table 18. Program and Erase Times	. 26
MAXIMUM RATING	27
Table 19. Absolute Maximum Ratings	. 27
DC and AC PARAMETERS	. 28
Table 20. Operating Conditions	. 28
Table 21. FWH/LPC Interface AC Measurement Conditions	. 28
Table 22. A/A Mux Interface AC Measurement Conditions	. 28
Figure 11.FWH/LPC Interface AC Measurement I/O Waveforms	. 28
Figure 12.A/A Mux Interface AC Measurement I/O Waveform	. 29
Figure 13.AC Measurement Load Circuit	. 29
Table 23. Impedance	
Table 24. DC Characteristics	. 30
Figure 14.FWH/LPC Interface Clock Waveform	
Table 25. FWH/LPC Interface Clock Characteristics	
Figure 15.FWH/LPC Interface AC Signal Timing Waveforms	
Table 26. FWH/LPC Interface AC Signal Timing Characteristics	
Figure 16.Reset AC Waveforms	
Table 27. Reset AC Characteristics.	
Figure 17.A/A Mux Interface Read AC Waveforms	
Table 28. A/A Mux Interface Read AC Characteristics	
Figure 18.A/A Mux Interface Write AC Waveforms	
Table 29. A/A Mux Interface Write AC Characteristics	. 35
PACKAGE MECHANICAL	. 36
Figure 19.PLCC32 – 32 pin Rectangular Plastic Leaded Chip Carrier, Package Outline	. 36
Table 30. PLCC32 – 32 pin Rectangular Plastic Leaded Chip Carrier, Package Mechanical Data	a 37
Figure 20.TSOP32 – 32 lead Plastic Thin Small Outline, 8x14 mm, Package Outline	. 38
Table 31. TSOP32 – 32 lead Plastic Thin Small Outline, 8x14 mm, Package Mechanical Data	. 38
Figure 21.TSOP40 – 40 lead Plastic Thin Small Outline, 10 x 20mm, Package Outline	
Table 32. TSOP40 – 40 lead Plastic Thin Small Outline, 10 x 20mm, Package Mechanical Data	. 39

PART NUMBERING	40
Table 33. Ordering Information Scheme	40
APPENDIX A.BLOCK AND SECTOR ADDRESS TABLE	41
Table 34. M50FLW080A Block, Sector and Lock Register Addresses	41
Table 35. M50FLW080B Block, Sector and Lock Register Addresses	43
APPENDIX B.FLOWCHARTS AND PSEUDO CODES	45
Figure 22.Program Flowchart and Pseudo Code	45
Figure 23.Double/Quadruple Byte Program Flowchart and Pseudo code (FWH Mode Onl	y)46
Figure 24. Quadruple Byte Program Flowchart and Pseudo Code (A/A Mux Interface Only	/) 47
Figure 25.Program Suspend and Resume Flowchart and Pseudo Code	48
Figure 26.Chip Erase Flowchart and Pseudo Code (A/A Mux Interface Only)	49
Figure 27.Sector/Block Erase Flowchart and Pseudo Code	50
Figure 28.Erase Suspend and Resume Flowchart and Pseudo Code	51
REVISION HISTORY	52
Table 36 Document Revision History	52

#### **SUMMARY DESCRIPTION**

The M50FLW080 is a 8 Mbit (1M x8) non-volatile memory that can be read, erased and reprogrammed. These operations can be performed using a single low voltage (3.0 to 3.6V) supply. For fast programming and fast erasing on production lines, an optional 12V power supply can be used to reduce the erasing and programming time.

The memory is divided into 16 Uniform Blocks of 64 KBytes each, three of which are divided into 16 uniform sectors of 4 KBytes each (see APPENDIX A. for details). All blocks and sectors can be erased independently. So, it is possible to preserve valid data while old data is erased. Blocks can be protected individually to prevent accidental program or erase commands from modifying their contents.

Program and erase commands are written to the Command Interface of the memory. An on-chip Program/Erase Controller simplifies the process of programming or erasing the memory by taking care of all of the special operations that are required to update the memory contents. The end of a program or erase operation can be detected and

any error conditions identified. The command set to control the memory is consistent with the JE-DEC standards.

Two different bus interfaces are supported by the memory:

- The primary interface, the FWH/LPC Interface, uses Intel's proprietary Firmware Hub (FWH) and Low Pin Count (LPC) protocol. This has been designed to remove the need for the ISA bus in current PC Chipsets. The M50FLW080 acts as the PC BIOS on the Low Pin Count bus for these PC Chipsets.
- The secondary interface, the Address/ Address Multiplexed (or A/A Mux) Interface, is designed to be compatible with current Flash Programmers, for production line programming prior to fitting the device in a PC Motherboard.

The memory is supplied with all the bits erased (set to '1').

Figure 2. Logic Diagram (FWH/LPC Interface)

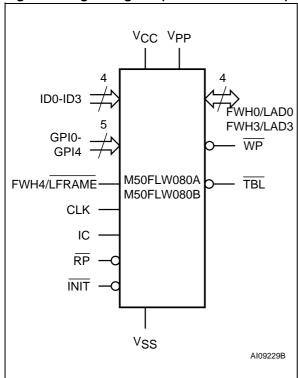


Figure 3. Logic Diagram (A/A Mux Interface)

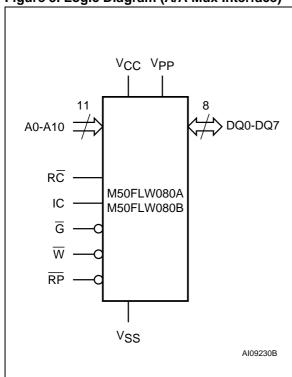



Table 1. Signal Names (FWH/LPC Interface)

rabio ii Oigiiai	Maines (1 WillEl & Interlace)				
FWH0/LAD0- FWH3/LAD3	Input/Output Communications				
FWH4/ LFRAME	Input Communication Frame				
ID0-ID3	Identification Inputs (ID0 and ID1 are Reserved for Future Use (RFU) in LPC mode)				
GPI0-GPI4	General Purpose Inputs				
IC	Interface Configuration				
RP	Interface Reset				
ĪNIT	CPU Reset				
CLK	Clock				
TBL	Top Block Lock				
WP	Write Protect				
RFU	Reserved for Future Use. Leave disconnected				
Vcc	Supply Voltage				
V <sub>PP</sub>	Optional Supply Voltage for Fast Program and Erase Operations				
V <sub>SS</sub>	Ground				
NC	Not Connected Internally				

**Table 2. Signal Names (A/A Mux Interface)** 

Table 2. digital Hames (A/A Max Interface)						
IC	Interface Configuration					
A0-A10	Address Inputs					
DQ0-DQ7	Data Inputs/Outputs					
G	Output Enable					
W	Write Enable					
RC	Row/Column Address Select					
RP	Interface Reset					
V <sub>CC</sub>	Supply Voltage					
V <sub>PP</sub>	Optional Supply Voltage for Fast Program and Erase Operations					
V <sub>SS</sub>	Ground					
NC	Not Connected Internally					

Figure 4. PLCC Connections

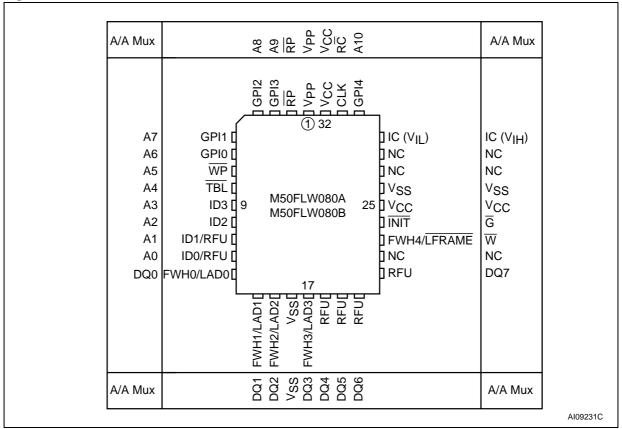

Note: Pins 27 and 28 are not internally connected.

Figure 5. TSOP32 Connections

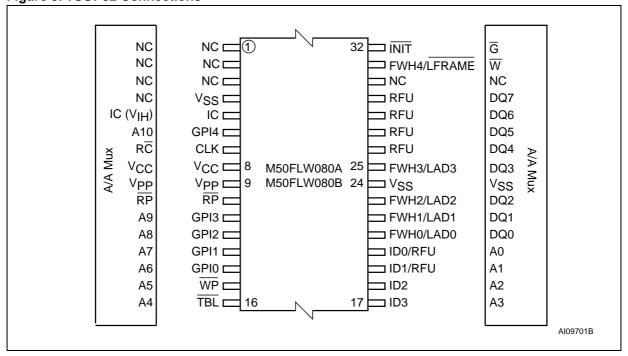


Figure 6. TSOP40 Connections

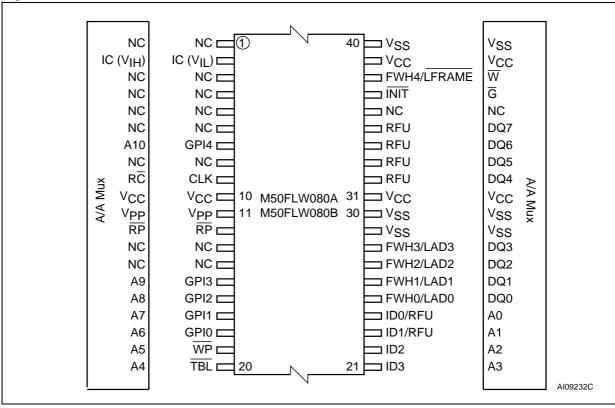


Table 3. Addresses (M50FLW080A)

Table 3. Addresses (MOUFLWOODA)							
Block Size (KByte)	Address Range	Sector Size (KByte)					
64	F0000h-FFFFFh	16 x 4 KBytes					
64	E0000h-EFFFFh	16 x 4 KBytes					
64	D0000h-DFFFFh						
64	C0000h-CFFFh						
64	B0000h-BFFFFh						
64	A0000h-AFFFFh						
64	90000h-9FFFFh						
64	80000h-8FFFFh						
64	70000h-7FFFFh	13 x 64 KBytes					
64	60000h-6FFFFh						
64	50000h-5FFFFh						
64	40000h-4FFFFh						
64	30000h-3FFFFh						
64	20000h-2FFFFh						
64	10000h-1FFFFh						
64	00000h-0FFFFh	16 x 4 KBytes					

Table 4. Addresses (M50FLW080B)

Block Size (KByte)	Address Range	Sector Size (KByte)
64	F0000h-FFFFFh	16 x 4 KBytes
64	E0000h-EFFFFh	
64	D0000h-DFFFFh	
64	C0000h-CFFFFh	
64	B0000h-BFFFFh	
64	A0000h-AFFFFh	
64	90000h-9FFFFh	
64	80000h-8FFFFh	13 x 64 KBytes
64	70000h-7FFFFh	
64	60000h- 6FFFFh	
64	50000h- 5FFFFh	
64	40000h- 4FFFFh	
64	30000h-3FFFFh	
64	20000h-2FFFFh	
64	10000h-1FFFFh	16 x 4 KBytes
64	00000h-0FFFFh	16 x 4 KBytes
of the Block Add	resses	

Note: Also see APPENDIX A., Table 34. and Table 35. for a full listing of the Block Addresses.

#### SIGNAL DESCRIPTIONS

There are two distinct bus interfaces available on this device. The active interface is selected before power-up, or during Reset, using the Interface Configuration Pin, IC.

The signals for each interface are discussed in the Firmware Hub/Low Pin Count (FWH/LPC) Signal Descriptions section and the Address/Address Multiplexed (A/A Mux) Signal Descriptions section, respectively, while the supply signals are discussed in the Supply Signal Descriptions section.

# Firmware Hub/Low Pin Count (FWH/LPC) Signal Descriptions

Please see Figure 2. and Table 1..

**Input/Output Communications (FWH0/LAD0-FWH3/LAD3).** All Input and Output Communications with the memory take place on these pins. Addresses and Data for Bus Read and Bus Write operations are encoded on these pins.

Input Communication Frame (FWH4/LFRAME). The Input Communication Frame (FWH4/LFRAME) signal indicates the start of a bus operation. When Input Communication Frame is Low,  $V_{IL}$ , on the rising edge of the Clock, a new bus operation is initiated. If Input Communication Frame is Low,  $V_{IL}$ , during a bus operation then the operation is aborted. When Input Communication Frame is High,  $V_{IH}$ , the current bus operation is either proceeding or the bus is idle.

**Identification Inputs (ID0-ID3).** Up to 16 memories can be addressed on a bus, in the Firmware Hub (FWH) mode. The Identification Inputs allow each device to be given a unique 4-bit address. A '0' is signified on a pin by driving it Low,  $V_{IL}$ , or leaving it floating (since there is an internal pull-down resistor, with a value of  $R_{IL}$ ). A '1' is signified on a pin by driving it High,  $V_{IH}$  (and there will be a leakage current of  $I_{LI2}$  through the pin).

By convention, the boot memory must have address '0000', and all additional memories are given addresses, allocated sequentially, from '0001'. In the Low Pin Count (LPC) mode, the identification Inputs (ID2-ID3) can address up to 4 memories on a bus. In the LPC mode, the ID0 and ID1 signals are Reserved for Future Use (RFU). The value on address A20-A21 is compared to the hardware strapping on the ID2-ID3 lines to select the memory that is being addressed. For an address bit to be '1', the corresponding ID pin can be left floating or driven Low, VIL (again, with the internal pull-down resistor, with a value of R<sub>IL</sub>). For an address bit to be '0', the corresponding ID pin must be driven High, VIH (and there will be a leakage current of ILI2 through the pin, as specified in Table 24.). For details, see Table 5..

General Purpose Inputs (GPI0-GPI4). The General Purpose Inputs can be used as digital inputs for the CPU to read, with their contents being available in the General Purpose Inputs Register. The pins must have stable data throughout the en-

The pins must have stable data throughout the entire cycle that reads the General Purpose Input Register. These pins should be driven Low,  $V_{IL}$ , or High,  $V_{IH}$ , and must not be left floating.

Interface Configuration (IC). The Interface Configuration input selects whether the FWH/LPC interface or the Address/Address Multiplexed (A/A Mux) Interface is used. The state of the Interface Configuration, IC, should not be changed during operation of the memory device, except for selecting the desired interface in the period before power-up or during a Reset.

To select the FWH/LPC Interface, the Interface Configuration pin should be left to float or driven Low,  $V_{IL}$ . To select the Address/Address Multiplexed (A/A Mux) Interface, the pin should be driven High,  $V_{IH}$ . An internal pull-down resistor is included with a value of  $R_{IL}$ ; there will be a leakage current of  $I_{LI2}$  through each pin when pulled to  $V_{IH}$ . Interface Reset (RP). The Interface Reset (RP) input is used to reset the device. When Interface Reset (RP) is driven Low,  $V_{IL}$ , the memory is in Reset mode (the outputs go to high impedance, and the current consumption is minimized). When RP is driven High,  $V_{IH}$ , the device is in normal operation. After exiting Reset mode, the memory enters Read mode.

**CPU Reset (INIT).** The CPU Reset, INIT, signal is used to Reset the device when the CPU is reset. It behaves identically to Interface Reset, RP, and the internal Reset line is the logical OR (electrical AND) of RP and INIT.

**Clock (CLK).** The Clock, CLK, input is used to clock the signals in and out of the Input/Output Communication Pins, FWH0/LAD0-FWH3/LAD3. The Clock conforms to the PCI specification.

**Top Block Lock (TBL).** The Top Block Lock input is used to prevent the Top Block (Block\_15) from being changed. When Top Block Lock, TBL, is driven Low,  $V_{IL}$ , program and erase operations in the Top Block have no effect, regardless of the state of the Lock Register. When Top Block Lock, TBL, is driven High,  $V_{IH}$ , the protection of the Block is determined by the Lock Registers. The state of Top Block Lock, TBL, does not affect the protection of the Main Blocks (Blocks 0 to 14). For details, see APPENDIX A..

Top Block Lock, TBL, must be set prior to a program or erase operation being initiated, and must not be changed until the operation has completed, otherwise unpredictable results may occur. Similarly, unpredictable behavior is possible if WP is

changed during Program or Erase Suspend, and care should be taken to avoid this.

Write Protect (WP). The Write Protect input is used to prevent the Main Blocks (Blocks 0 to 14) from being changed. When Write Protect, WP, is driven Low, V<sub>IL</sub>, Program and Erase operations in the Main Blocks have no effect, regardless of the state of the Lock Register. When Write Protect, WP, is driven High, V<sub>IH</sub>, the protection of the Block or Sector is determined by the Lock Registers. The state of Write Protect, WP, does not affect the protection of the Top Block (Block 15). For details, see APPENDIX A..

Write Protect,  $\overline{\text{WP}}$ , must be set prior to a Program or Erase operation is initiated, and must not be changed until the operation has completed otherwise unpredictable results may occur. Similarly, unpredictable behavior is possible if  $\overline{\text{WP}}$  is changed during Program or Erase Suspend, and care should be taken to avoid this.

Reserved for Future Use (RFU). Reserved for Future Use (RFU). These pins do not presently have assigned functions. They must be left disconnected, except for ID0 and ID1 (when in LPC mode) which can be left connected. The electrical characteristics for these signals are as described in the "Identification Inputs (ID0-ID3)." section.

# Address/Address Multiplexed (A/A Mux) Signal Descriptions

Please see Figure 3. and Table 2..

Address Inputs (A0-A10). The Address Inputs are used to set the Row Address bits (A0-A10) and the Column Address bits (A11-A19). They are latched during any bus operation by the Row/Column Address Select input, RC.

Data Inputs/Outputs (DQ0-DQ7). The Data Inputs/Outputs hold the data that is to be written to or read from the memory. They output the data stored at the selected address during a Bus Read operation. During Bus Write operations they carry the commands that are sent to the Command Interface of the internal state machine. The Data Inputs/Outputs, DQ0-DQ7, are latched during a Bus Write operation.

**Output Enable (G).** The Output Enable signal, G, controls the output buffers during a Bus Read operation.

Write Enable ( $\overline{W}$ ). The Write Enable signal,  $\overline{W}$ , controls the Bus Write operation of the Command Interface.

Row/Column Address Select (RC). The Row/Column Address Select input selects whether the Address Inputs are to be latched into the Row Address bits (A0-A10) or the Column Address bits (A11-A19). The Row Address bits are latched on the falling edge of RC whereas the Column Address bits are latched on its rising edge.

#### **Supply Signal Descriptions**

The Supply Signals are the same for both interfaces.

**V<sub>CC</sub> Supply Voltage.** The V<sub>CC</sub> Supply Voltage supplies the power for all operations (read, program, erase, etc.).

The Command Interface is disabled when the  $V_{CC}$  Supply Voltage is less than the Lockout Voltage,  $V_{LKO}$ . This is to prevent Bus Write operations from accidentally damaging the data during power up, power down and power surges. If the Program/ Erase Controller is programming or erasing during this time, the operation aborts, and the memory contents that were being altered will be invalid. After  $V_{CC}$  becomes valid, the Command Interface is reset to Read mode.

A 0.1 $\mu$ F capacitor should be connected between the V<sub>CC</sub> Supply Voltage pins and the V<sub>SS</sub> Ground pin to decouple the current surges from the power supply. Both V<sub>CC</sub> Supply Voltage pins must be connected to the power supply. The PCB track widths must be sufficient to carry the currents required during program and erase operations.

**VPP Optional Supply Voltage.** The VPP Optional Supply Voltage pin is used to select the Fast Program (see the Quadruple Byte Program command description in A/A Mux interface and the Double/ Quadruple Byte Program command description in FWH mode) and Fast Erase options of the memory.

When  $V_{PP} = V_{CC}$ , program and erase operations take place as normal. When  $V_{PP} = V_{PPH}$ , Fast Program and Erase operations are used. Any other voltage input to  $V_{PP}$  will result in undefined behavior, and should not be used.

 $V_{PP}$  should not be set to  $V_{PPH}$  for more than 80 hours during the life of the memory.

Vss Ground. Vss is the reference for all the voltage measurements.

Memory Number	ID3	ID2	A21	A20
1 (Boot memory)	V <sub>IL</sub> or float	V <sub>IL</sub> or float	1	1
2	V <sub>IL</sub> or float	V <sub>IH</sub>	1	0
3	V <sub>IH</sub>	V <sub>IL</sub> or float	0	1
4	VIH	VIH	0	0

Table 5. Memory Identification Input Configuration (LPC mode)

#### **BUS OPERATIONS**

The two interfaces, A/A Mux and FWH/LPC, support similar operations, but with different bus signals and timings. The Firmware Hub/Low Pin Count (FWH/LPC) Interface offers full functionality, while the Address/Address Multiplexed (A/A Mux) Interface is orientated for erase and program operations.

See the sections below, The Firmware Hub/Low Pin Count (FWH/LPC) Bus Operations and Address/Address Multiplexed (A/A Mux) Bus Operations, for details of the bus operations on each interface.

# Firmware Hub/Low Pin Count (FWH/LPC) Bus Operations

The M50FLW080 automatically identifies the type of FWH/LPC protocol from the first received nibble (START nibble) and decodes the data that it receives afterwards, according to the chosen FWH or LPC mode. The Firmware Hub/Low Pin Count (FWH/LPC) Interface consists of four data signals (FWH0/LAD0-FWH3/LAD3), one control line (FWH4/LFRAME) and a clock (CLK).

Protection against accidental or malicious data corruption is achieved using two additional signals (TBL and WP). And two reset signals (RP and INIT) are available to put the memory into a known state.

The data, control and clock signals are designed to be compatible with PCI electrical specifications. The interface operates with clock speeds of up to 33MHz.

The following operations can be performed using the appropriate bus cycles: Bus Read, Bus Write, Standby, Reset and Block Protection.

**Bus Read.** Bus Read operations are used to read from the memory cells, specific registers in the Command Interface or Firmware Hub/Low Pin Count Registers. A valid Bus Read operation starts on the rising edge of the Clock signal when the Input Communication Frame, FWH4/LFRAME, is Low, V<sub>IL</sub>, and the correct Start cycle is present on FWH0/LAD0-FWH3/LAD3. On sub-

sequent clock cycles the Host will send to the memory:

- ID Select, Address and other control bits on FWH0-FWH3 in FWH mode.
- Type+Dir Address and other control bits on LAD0-LAD3 in LPC mode.

The device responds by outputting Sync data until the wait states have elapsed, followed by Data0-Data3 and Data4-Data7.

See Table 6. and Table 8., and Figure 7. and Figure 9., for a description of the Field definitions for each clock cycle of the transfer. See Table 26., and Figure 15., for details on the timings of the signals

**Bus Write.** Bus Write operations are used to write to the Command Interface or Firmware Hub/Low Pin Count Registers. A valid Bus Write operation starts on the rising edge of the Clock <u>signal when</u> Input Communication Frame, FWH4/LFRAME, is Low, V<sub>IL</sub>, and the correct Start cycle is present on FWH0/LAD0-FWH3/LAD3. On subsequent Clock cycles the Host will send to the memory:

- ID Select, Address, other control bits, Data0-Data3 and Data4-Data7 on FWH0-FWH3 in FWH mode.
- Cycle Type + Dir, Address, other control bits, Data0-Data3 and Data4-Data7 on LAD0-LAD3.

The device responds by outputting Sync data until the wait states have elapsed.

See Table 7. and Table 9., and Figure 8. and Figure 10., for a description of the Field definitions for each clock cycle of the transfer. See Table 26., and Figure 15., for details on the timings of the signals.

**Bus Abort.** The Bus Abort operation can be used to abort the current bus operation immediately. A Bus Abort occurs when FWH4/LFRAME is driven Low,  $V_{IL}$ , during the bus operation. The device puts the Input/Output Communication pins, FWH0/LAD0-FWH3/LAD3, to high impedance.

Note that, during a Bus Write operation, the Command Interface starts executing the command as soon as the data is fully received. A Bus Abort during the final TAR cycles is not guaranteed to abort the command. The bus, however, will be released immediately.

**Standby.** When FWH4/ $\overline{\text{LFRAME}}$  is High, V<sub>IH</sub>, the device is put into Standby mode, where FWH0/LAD0-FWH3/LAD3 are put into a high-impedance state and the Supply Current is reduced to the Standby level, I<sub>CC1</sub>.

**Reset.** During the Reset mode, all internal circuits are switched off, the device is deselected, and the outputs are put to high-impedance. The device is in the Reset mode when Interface Reset, RP, or CPU Reset, INIT, is driven Low,  $V_{IL}$ . RP or INIT must be held Low,  $V_{IL}$ , for  $t_{PLPH}$ . The memory reverts to the Read mode upon return from the Reset mode, and the Lock Registers return to their default states regardless of their states before Reset. If RP or INIT goes Low,  $V_{IL}$ , during a Program or Erase operation, the operation is aborted and the affected memory cells no longer contain valid data. The device can take up to  $t_{PLRH}$  to abort a Program or Erase operation.

**Block Protection.** Block Protection <u>can</u> be forced using th<u>e sig</u>nals Top Block Lock, TBL, and Write Protect, WP, regardless of the state of the Lock Registers.

# Address/Address Multiplexed (A/A Mux) Bus Operations

The Address/Address Multiplexed (A/A Mux) Interface has a more traditional-style interface. The signals consist of a multiplexed address signals (A0-A10), data signals, (DQ0-DQ7) and three control signals (RC, G, W). An additional signal, RP, can be used to reset the memory.

The Address/Address Multiplexed (A/A Mux) Interface is included for use by Flash Programming equipment for faster factory programming. Only a subset of the features available to the Firmware Hub (FWH)/Low Pin Count (LPC) Interface are

available; these include all the Commands but exclude the Security features and other registers.

The following operations can be performed using the appropriate bus cycles: Bus Read, Bus Write, Output Disable and Reset.

When the Address/Address Multiplexed (A/A Mux) Interface is selected, all the blocks are unprotected. It is not possible to protect any blocks through this interface.

**Bus Read.** Bus Read operations are used to read the contents of the Memory Array, the Electronic Signature or the Status Register. A valid Bus Read operation begins by latching the Row Address and Column Address signals into the memory using the Address Inputs, A0-A10, and the Row/Column Address Select RC. Write Enable (W) and Interface Reset (RP) must be High, V<sub>IH</sub>, and Output Enable, G, Low, V<sub>IL</sub>. The Data Inputs/Outputs will output the value, according to the timing constraints specified in Figure 17., and Table 28..

**Bus Write.** Bus Write operations are used to write to the Command Interface. A valid Bus Write operation begins by latching the Row Address and Column Address signals into the memory using the Address Inputs, A0-A10, and the Row/Column Address Select RC. The data should be <u>set</u> up on the Data Inputs/<u>Outputs</u>; Output Enable, G, and Interface <u>Reset</u>, RP, must be High, V<sub>IH</sub>; and Write Enable, W, must be Low, V<sub>IL</sub>. The Data Inputs/Outputs are latched on the rising edge of Write Enable, W. See <u>Figure 18.</u>, and <u>Table 29.</u>, for details of the timing requirements.


**Output Disable.** The data outputs are high-impedance when the Output Enable,  $\overline{G}$ , is at  $V_{IH}$ .

**Reset.** During the Reset mode, all internal circuits are switched off, the device is deselected, and the outputs are put at high-impedance. The <u>device</u> is in the Reset mode when RP is <u>Low</u>,  $V_{IL}$ . RP must be held Low,  $V_{IL}$  for  $t_{PLPH}$ . If RP goes Low,  $V_{IL}$ , during a Program or Erase operation, the operation is aborted, and the affected memory cells no longer contain valid data. The memory can take up to  $t_{PLRH}$  to abort a Program or Erase operation.

**Table 6. FWH Bus Read Field Definitions** 

Clock Cycle Number	Clock Cycle Count	Field	FWH0- FWH3	Memory I/O	Description
1	1	START	1101b	I	On the rising edge of CLK with FWH4 Low, the contents of FWH0-FWH3 indicate the start of a FWH Read cycle.
2	1	IDSEL	xxxx	ı	Indicates which FWH Flash Memory is selected. The value on FWH0-FWH3 is compared to the IDSEL strapping on the FWH Flash Memory pins to select which FWH Flash Memory is being addressed.
3-9	7	ADDR	xxxx	ı	A 28-bit address is transferred, with the most significant nibble first. For the multi-byte read operation, the least significant bits (MSIZE of them) are treated as Don't Care, and the read operation is started with each of these bits reset to 0. Address lines A20-21 and A23-27 are treated as Don't Care during a normal memory array access, with A22=1, but are taken into account for a register access, with A22=0. (See Table 15.)
10	1	MSIZE	xxxx	ı	This one clock cycle is driven by the host to determine the number of Bytes that will be transferred. M50FLW080 supports: single Byte transfer (0000b), 2-Byte transfer (0001b), 4-Byte transfer (0110b), 16-Byte transfer (0100b) and 128-Byte transfer (0111b).
11	1	TAR	1111b	I	The host drives FWH0-FWH3 to 1111b to indicate a turnaround cycle.
12	1	TAR	1111b (float)	0	The FWH Flash Memory takes control of FWH0-FWH3 during this cycle.
13-14	2	WSYNC	0101b	0	The FWH Flash Memory drives FWH0-FWH3 to 0101b (short wait-sync) for two clock cycles, indicating that the data is not yet available. Two wait-states are always included.
15	1	RSYNC	0000b	0	The FWH Flash Memory drives FWH0-FWH3 to 0000b, indicating that data will be available during the next clock cycle.
16-17	M=2n	DATA	xxxx	0	Data transfer is two CLK cycles, starting with the least significant nibble. If multi-Byte read operation is enabled, repeat cycle-16 and cycle-17 $n$ times, where $n = 2^{MSIZE}$ .
previous +1	1	TAR	1111b	0	The FWH Flash Memory drives FWH0-FWH3 to 1111b to indicate a turnaround cycle.
previous +1	1	TAR	1111b (float)	N/A	The FWH Flash Memory floats its outputs, the host takes control of FWH0-FWH3.

Figure 7. FWH Bus Read Waveforms

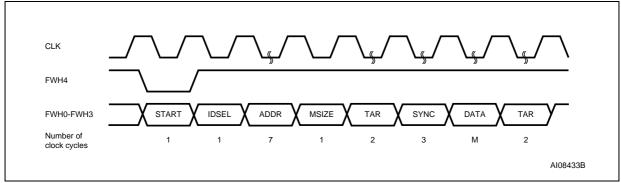

**Table 7. FWH Bus Write Field Definitions** 

Clock Cycle Number	Clock Cycle Count	Field	FWH0- FWH3	Memory I/O	Description
1	1	START	1110b	I	On the rising edge of CLK with FWH4 Low, the contents of FWH0-FWH3 indicate the start of a FWH Write Cycle.
2	1	IDSEL	xxxx	I	Indicates which FWH Flash Memory is selected. The value on FWH0-FWH3 is compared to the IDSEL strapping on the FWH Flash Memory pins to select which FWH Flash Memory is being addressed.
3-9	7	ADDR	xxxx	ı	A 28-bit address is transferred, with the most significant nibble first. Address lines A20-21 and A23-27 are treated as Don't Care during a normal memory array access, with A22=1, but are taken into account for a register access, with A22=0. (See Table 15.)
10	1	MSIZE	XXXX	I	0000(Single Byte Transfer) 0001 (Double Byte Transfer) 0010b (Quadruple Byte Transfer).
11-18	M=2/4/8	DATA	xxxx	I	Data transfer is two cycles, starting with the least significant nibble. (The first pair of nibbles is that at the address with A1-A0 set to 00, the second pair with A1-A0 set to 01, the third pair with A1-A0 set to 10, and the fourth pair with A1-A0 set to 11. In Double Byte Program the first pair of nibbles is that at the address with A0 set to 0, the second pair with A0 set to 1)
previous +1	1	TAR	1111b	I	The host drives FWH0-FWH3 to 1111b to indicate a turnaround cycle.
previous +1	1	TAR	1111b (float)	0	The FWH Flash Memory takes control of FWH0-FWH3 during this cycle.
previous +1	1	SYNC	0000b	0	The FWH Flash Memory drives FWH0-FWH3 to 0000b, indicating it has received data or a command.
previous +1	1	TAR	1111b	0	The FWH Flash Memory drives FWH0-FWH3 to 1111b, indicating a turnaround cycle.
previous +1	1	TAR	1111b (float)	N/A	The FWH Flash Memory floats its outputs and the host takes control of FWH0-FWH3.

Figure 8. FWH Bus Write Waveforms

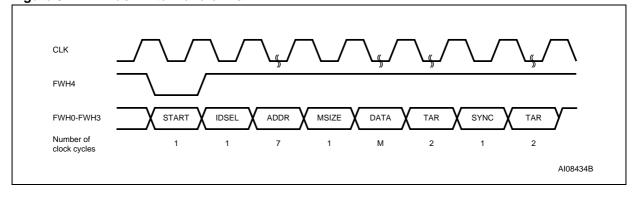


Table 8. LPC Bus Read Field Definitions (1-Byte)

Clock Cycle Number	Clock Cycle Count	Field	LAD0- LAD3	Memory I/O	Description
1	1	START	0000b	I	On the rising edge of CLK with LFRAME Low, the contents of LAD0-LAD3 must be 0000b to indicate the start of a LPC cycle.
2	1	CYCTYPE + DIR	0100b	I	Indicates the type of cycle and selects 1-byte reading. Bits 3:2 must be 01b. Bit 1 indicates the direction of transfer: 0b for read. Bit 0 is Don't Care.
3-10	8	ADDR	XXXX	1	A 32-bit address is transferred, with the most significant nibble first. A23-A31 must be set to 1. A22=1 for memory access, and A22=0 for register access. Table 5. shows the appropriate values for A21-A20.
11	1	TAR	1111b	I	The host drives LAD0-LAD3 to 1111b to indicate a turnaround cycle.
12	1	TAR	1111b (float)	0	The LPC Flash Memory takes control of LAD0-LAD3 during this cycle.
13-14	2	WSYNC	0101b	0	The LPC Flash Memory drives LAD0-LAD3 to 0101b (short wait-sync) for two clock cycles, indicating that the data is not yet available. Two wait-states are always included.
15	1	RSYNC	0000b	0	The LPC Flash Memory drives LAD0-LAD3 to 0000b, indicating that data will be available during the next clock cycle.
16-17	2	DATA	xxxx	0	Data transfer is two CLK cycles, starting with the least significant nibble.
18	1	TAR	1111b	0	The LPC Flash Memory drives LAD0-LAD3 to 1111b to indicate a turnaround cycle.
19	1	TAR	1111b (float)	N/A	The LPC Flash Memory floats its outputs, the host takes control of LAD0-LAD3.

Figure 9. LPC Bus Read Waveforms (1-Byte)

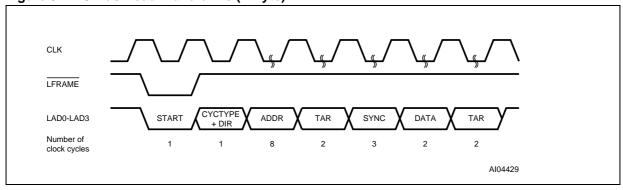


Table 9. LPC Bus Write Field Definitions (1 Byte)

Clock Cycle Number	Clock Cycle Count	Field	LAD0- LAD3	Memory I/O	Description
1	1	START	0000b	I	On the rising edge of CLK with LFRAME Low, the contents of LAD0-LAD3 must be 0000b to indicate the start of a LPC cycle.
2	1	CYCTY PE + DIR	011Xb	I	Indicates the type of cycle. Bits 3:2 must be 01b. Bit 1 indicates the direction of transfer: 1b for write. Bit 0 is don't care (X).
3-10	8	ADDR	xxxx	I	A 32-bit address is transferred, with the most significant nibble first. A23-A31 must be set to 1. A22=1 for memory access, and A22=0 for register access. Table 5. shows the appropriate values for A21-A20.
11-12	2	DATA	XXXX	I	Data transfer is two cycles, starting with the least significant nibble.
13	1	TAR	1111b	I	The host drives LAD0-LAD3 to 1111b to indicate a turnaround cycle.
14	1	TAR	1111b (float)	0	The LPC Flash Memory takes control of LAD0-LAD3 during this cycle.
15	1	SYNC	0000b	0	The LPC Flash Memory drives LAD0-LAD3 to 0000b, indicating it has received data or a command.
16	1	TAR	1111b	0	The LPC Flash Memory drives LAD0-LAD3 to 1111b, indicating a turnaround cycle.
17	1	TAR	1111b (float)	N/A	The LPC Flash Memory floats its outputs and the host takes control of LAD0-LAD3.

Figure 10. LPC Bus Write Waveforms (1 Byte)

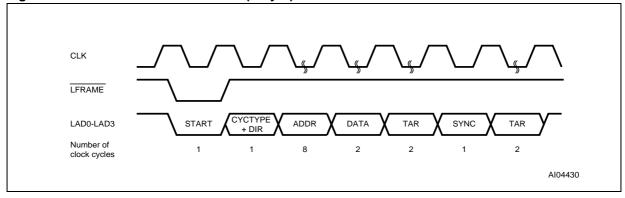


Table 10. A/A Mux Bus Operations

Operation	G	w	RP	V <sub>PP</sub>	DQ7-DQ0
Bus Read	V <sub>IL</sub> V <sub>IH</sub> V <sub>IH</sub> Don't Care		Data Output		
Bus Write	V <sub>IH</sub>	$V_{IL}$	V <sub>IH</sub>	V <sub>CC</sub> or V <sub>PPH</sub>	Data Input
Output Disable	V <sub>IH</sub>	V <sub>IH</sub> V <sub>IH</sub> Don't Care		Hi-Z	
Reset	V <sub>IL</sub> or V <sub>IH</sub>	V <sub>IL</sub> or V <sub>IH</sub>	V <sub>IL</sub>	Don't Care	Hi-Z

#### **COMMAND INTERFACE**

All Bus Write operations to the device are interpreted by the Command Interface. Commands consist of one or more sequential Bus Write operations. An internal Program/Erase Controller handles all timings, and verifies the correct execution of the Program and Erase commands. The Program/Erase Controller provides a Status Register whose output may be read at any time to monitor the progress or the result of the operation.

The Command Interface reverts to the Read mode when power is first applied, or when exiting from Reset. Command sequences must be followed exactly. Any invalid combination of commands will be ignored. See Table 11. for the available Command Codes.

**Table 11. Command Codes** 

Hexa- decimal	Command
10h	Alternative Program Setup, Double/ Quadruple Byte Program Setup, Chip Erase Confirm
20h	Block Erase Setup
32h	Sector Erase Setup
40h	Program, Double/Quadruple Byte Program Setup
50h	Clear Status Register
70h	Read Status Register
80h	Chip Erase Setup
90h	Read Electronic Signature
B0h	Program/Erase Suspend
D0h	Program/Erase Resume, Block Erase Confirm, Sector Erase Confirm
FFh	Read Memory Array

The following commands are the basic commands used to read from, write to, and configure the device. The following text descriptions should be read in conjunction with Table 13..

Read Memory Array Command. The Read Memory Array command returns the device to its Read mode, where it behaves like a ROM or EPROM. One Bus Write cycle is required to issue the Read Memory Array command and return the device to Read mode. Once the command is issued, the device remains in Read mode until another command is issued. From Read mode, Bus Read operations access the memory array.

If the Program/Erase Controller is executing a Program or Erase operation, the device will not accept

any Read Memory Array commands until the operation has completed.

For a multibyte read, in the FWH mode, the address, that was transmitted with the command, will be automatically aligned, according to the MSIZE granularity. For example, if MSIZE=7, regardless of any values that are provided for A6-A0, the first output will be from the location for which A6-A0 are all '0's.

Read Status Register Command. The Read Status Register command is used to read the Status Register. One Bus Write cycle is required to issue the Read Status Register command. Once the command is issued, subsequent Bus Read operations read the Status Register until another command is issued. See the section on the Status Register for details on the definitions of the Status Register bits.

Read Electronic Signature Command. The Read Electronic Signature command is used to read the Manufacturer Code and the Device Code. One Bus Write cycle is required to issue the Read Electronic Signature command. Once the command is issued, the Manufacturer Code and Device Code can be read using conventional Bus Read operations, and the addresses shown in Table 12..

**Table 12. Electronic Signature Codes** 

Co	ode	Address <sup>1</sup>	Data
Manufacturer (	Code	00000h	20h
Device Code	M50FLW080A M50FLW080B	00001h	80h 81h

Note: 1. A22 should be '1', and the ID lines and upper address bits should be set according to the rules illustrated in Table 5., Table 6. and Table 8..

The device remains in this mode until another command is issued. That is, subsequent Bus Read operations continue to read the Manufacturer Code, or the Device Code, and not the Memory Array.

**Program Command.** The Program command can be used to program a value to one address in the memory array at a time.

The Program command works by changing appropriate bits from '1' to '0'. (It cannot change a bit from '0' back to '1'. Attempting to do so will not modify the value of the bit. Only the Erase command can set bits back to '1'. and does so for all of the bits in the block.)

Two Bus Write operations are required to issue the Program command. The second Bus Write cycle latches the address and data, and starts the Program/Erase Controller.

Once the command is issued, subsequent Bus Read operations read the value in the Status Register. (See the section on the Status Register for details on the definitions of the Status Register bits.)

If the address falls in a protected block, the Program operation will abort, the data in the memory array will not be changed, and the Status Register will indicate the error.

During the Program operation, the memory will only accept the Read Status Register command and the Program/Erase Suspend command. All other commands are ignored.

See Figure 22., for a suggested flowchart on using the Program command. Typical Program times are given in Table 18..

Quadruple Byte Program Command (A/A Mux Interface). The Quadruple Byte Program Command is used to program four adjacent Bytes in the memory array at a time. The four Bytes must differ only for addresses A0 and A1. Programming should not be attempted when V<sub>PP</sub> is not at V<sub>PPH</sub>. Five Bus Write operations are required to issue the command. The second, third and fourth Bus Write cycles latch the respective addresses and data of the first, second and third Bytes in the Program/ Erase Controller. The fifth Bus Write cycle latches the address and data of the fourth Byte and starts the Program/Erase Controller. Once the command is issued, subsequent Bus Read operations read the value in the Status Register. (See the section on the Status Register for details on the definitions of the Status Register bits.)

During the Quadruple Byte Program operation, the memory will only accept the Read Status Register and Program/Erase Suspend commands. All other commands are ignored.

Note that the Quadruple Byte Program command cannot change a bit set to '0' back to '1' and attempting to do so will not modify its value. One of the erase commands must be used to set all of the bits in the block to '1'.

See Figure 24., for a suggested flowchart on using the Quadruple Byte Program command. Typical Quadruple Byte Program times are given in Table 18..

**Double/Quadruple Byte Program Command** (FWH Mode). The Double/Quadruple Byte Program Command can be used to program two/four adjacent Bytes to the memory array at a time. The two Bytes must differ only for address A0; the four Bytes must differ only for addresses A0 and A1.

Two Bus Write operations are required to issue the command. The second Bus Write cycle latches the start address and two/four data Bytes and starts the Program/Erase Controller. Once the command is issued, subsequent Bus Read operations read

the contents of the Status Register. (See the section on the Status Register for details on the definitions of the Status Register bits.)

During the Double/Quadruple Byte Program operation the memory will only accept the Read Status register and Program/Erase Suspend commands. All other commands are ignored.

Note that the Double/Quadruple Byte Program command cannot change a bit set to '0' back to '1' and attempting to do so will not modify its value. One of the erase commands must be used to set all of the bits in the block to '1'.

See Figure 23., for a suggested flowchart on using the Double/Quadruple Byte Program command. Typical Double/Quadruple Byte Program times are given in Table 18..

Chip Erase Command. The Chip Erase Command erases the entire memory array, setting all of the bits to '1'. All previous data in the memory array are lost. This command, though, is only available under the A/A Mux interface.

Two Bus Write operations are required to issue the command, and to start the Program/Erase Controller. Once the command is issued, subsequent Bus Read operations read the contents of the Status Register. (See the section on the Status Register for details on the definitions of the Status Register bits.)

Erasing should not be attempted when  $V_{PP}$  is not at  $V_{PPH}$ , otherwise the result is uncertain.

During the Chip Erase operation, the memory will only accept the Read Status Register command. All other commands are ignored.

See Figure 26., for a suggested flowchart on using the Chip Erase command. Typical Chip Erase times are given in Table 18..

**Block Erase Command.** The Block Erase command is used to erase a block, setting all of the bits to '1'. All previous data in the block are lost.

Two Bus Write operations are required to issue the command. The second Bus Write cycle latches the block address and starts the Program/Erase Controller. Once the command is issued, subsequent Bus Read operations read the contents of the Status Register. (See the section on the Status Register for details on the definitions of the Status Register bits.)

If the block, or if at least one sector of the block (for the blocks that are split into sectors), is protected (FWH/LPC only) then the Block Erase operation will abort, the data in the block will not be changed, and the Status Register will indicate the error.

During the Block Erase operation the memory will only accept the Read Status Register and Program/Erase Suspend commands. All other commands are ignored.

See Figure 27., for a suggested flowchart on using the Block Erase command. Typical Block Erase times are given in Table 18..

**Sector Erase Command.** The Sector Erase command is used to erase a Uniform 4-KByte Sector, setting all of the bits to '1'. All previous data in the sector are lost.

Two Bus Write operations are required to issue the command. The second Bus Write cycle latches the Sector address and starts the Program/Erase Controller. Once the command is issued, subsequent Bus Read operations read the contents of the Status Register. (See the section on the Status Register for details on the definitions of the Status Register bits.)

If the Sector is protected (FWH/LPC only), the Sector Erase operation will abort, the data in the Sector will not be changed, and the Status Register will indicate the error.

During the Sector Erase operation the memory will only accept the Read Status Register and Program/Erase Suspend commands. All other commands are ignored.

See Figure 27., for a suggested flowchart on using the Sector Erase Command. Typical Sector Erase times are given in Table 18..

Clear Status Register Command. The Clear Status Register command is used to reset Status Register bits SR1, SR3, SR4 and SR5 to '0'. One Bus Write is required to issue the command. Once the command is issued, the device returns to its previous mode, subsequent Bus Read operations continue to output the data from the same area, as before.

Once set, these Status Register bits remain set. They do *not* automatically return to '0', for example, when a new program or erase command is issued. If an error has occurred, it is essential that any error bits in the Status Register are cleared, by issuing the Clear Status Register command, before attempting a new program or erase command.

**Program/Erase Suspend Command.** The Program/Erase Suspend command is used to pause the Program/Erase Controller during a program or Sector/Block Erase operation. One Bus Write cycle is required to issue the command.

Once the command has been issued, it is necessary to poll the Program/Erase Controller Status bit until the Program/Erase Controller has paused. No other commands are accepted until the Program/Erase Controller has paused. After the Program/Erase Controller has paused, the device continues to output the contents of the Status Register until another command is issued.

During the polling period, between issuing the Program/Erase Suspend command and the Program/ Erase Controller pausing, it is possible for the operation to complete. Once the Program/Erase Controller Status bit indicates that the Program/ Erase Controller is no longer active, the Program Suspend Status bit or the Erase Suspend Status bit can be used to determine if the operation has completed or is suspended.

During Program/Erase Suspend, the Read Memory Array, Read Status Register, Read Electronic Signature and Program/Erase Resume commands will be accepted by the Command Interface. Additionally, if the suspended operation was Sector Erase or Block Erase then the program command will also be accepted. However, it should be noted that only the Sectors/Blocks not being erased may be read or programmed correctly.

See Figure 25., and Figure 28., for suggested flowcharts on using the Program/Erase Suspend command. Typical times and delay durations are given in Table 18..

Program/Erase Resume Command. The Program/Erase Resume command can be used to restart the Program/Erase Controller after a Program/Erase Suspend has paused it. One Bus Write cycle is required to issue the command. Once the command is issued, subsequent Bus Read operations read the contents of the Status Register.

**Table 13. Commands** 

	0	Bus Operations <sup>(1)</sup>									
Command	Cycle	1st		2nd		3rd		4th		5	th
		Addr	Data	Addr	Data	Addr	Data	Addr	Data	Addr	Data
Read Memory Array <sup>(2,10,11)</sup>	1+	Х	FFh	Read Addr	Read Data	(Read Addr2)	(Read Data2)	(Read Addr3)	(Read Data3)	(Read Addr4)	(Read Data4)
Read Status Register <sup>(3,10)</sup>	1+	Х	70h	Х	Status Reg	(X)	(Status Reg)	(X)	(Status Reg)	(X)	(Status Reg)
Read Electronic Signature <sup>(10)</sup>	1+	Х	90h or 98h	Sig Addr	Signat ure	(Sig Addr)	(Signat ure)	(Sig Addr)	(Signat ure)	(Sig Addr)	(Signat ure)
Program / Multiple Byte program (FWH) <sup>(4,9,11)</sup>	2	Х	40h or 10h	Prog Addr	Prog Data						
Quadruple Byte Program (A/A Mux) <sup>(4,12)</sup>	5	Х	30h	A1	Prog Data1	A2	Prog Data2	А3	Prog Data3	A4	Prog Data4
Chip Erase <sup>(4)</sup>	2	Х	80h	Х	10h						
Block Erase <sup>(4)</sup>	2	Х	20h	ВА	D0h						
Sector Erase <sup>(4)</sup>	2	Х	32h	SA	D0h						
Clear Status Register <sup>(5)</sup>	1	Х	50h								
Program/Erase suspend <sup>(6)</sup>	1	Х	B0h								
Program/Erase resume <sup>(7)</sup>	1	Х	D0h								
	1	Х	00h								
	1	Х	01h								
Invalid reserved <sup>(8)</sup>	1	Х	60h								
	1	Х	2Fh								
	1	Х	C0h								

Note: 1. For all commands: the first cycle is a Write. For the first three commands (Read Memory, Read Status Register, Read Electronic Signature), the second and next cycles are READ. For the remaining commands, the second and next cycles are WRITE.

BA = Any address in the Block, SA = Any address in the Sector. X = Don't Care, except that A22=1 (for FWH or LPC mode), and A21 and A20 are set according to the rules shown in Table 5. (for LPC mode)

- 2. After a Read Memory Array command, read the memory as normal until another command is issued.
- 3. After a Read Status Register command, read the Status Register as normal until another command is issued.
- 4. After the erase and program commands read the Status Register until the command completes and another command is issued.
- 5. After the Clear Status Register command bits SR1, SR3, SR4 and SR5 in the Status Register are reset to '0'.
- 6. While an operation is being Program/Erase Suspended, the Read Memory Array, Read Status Register, Program (during Erase Suspend) and Program/Erase Resume commands can be issued.
- 7. The Program/Erase Resume command causes the Program/Erase suspended operation to resume. Read the Status Register until the Program/Erase Controller completes and the memory returns to Read Mode.
- 8. Do not use Invalid or Reserved commands.
- 9. Multiple Byte Program PA= start address, A0 (Double Byte Program) A0 and A1 (Quadruple Byte Program) are Don't Care. PD is two or four Bytes depending on Msize code.
- 10. "1+" indicates that there is one write cycle, followed by any number of read cycles.
- 11. Configuration registers are accessed directly without using any specific command code. A single Bus Write or Bus Read Operation is all that is needed.
- 12. Addresses A1, A2, A3 and A4 must be consecutive addresses, differing only in address bits A0 and A1.

#### STATUS REGISTER

The Status Register provides information on the current or previous Program or Erase operation. The bits in the Status Register convey specific information about the progress of the operation.

To read the Status Register, the Read Status Register command can be issued. The Status Register is automatically read after Program, Erase and Program/Erase Resume commands are issued. The Status Register can be read from any address.

The text descriptions, below, should be read in conjunction with Table 14., where the meanings of the Status Register bits are summarized.

#### Program/Erase Controller Status (Bit SR7).

This bit indicates whether the Program/Erase Controller is active or inactive. When the Program/Erase Controller Status bit is '0', the Program/Erase Controller is active; when the bit is '1', the Program/Erase Controller is inactive.

The Program/Erase Controller Status is '0' immediately after a Program/Erase Suspend command is issued, until the Program/Erase Controller pauses. After the Program/Erase Controller pauses, the bit is '1'.

The end of a Program and Erase operation can be found by polling the Program/Erase Controller Status bit can be polled. The other bits in the Status Register should not be tested until the Program/Erase Controller has completed the operation (and the Program/Erase Controller Status bit is '1').

After the Program/Erase Controller has completed its operation, the Erase Status, Program Status,  $V_{PP}$  Status and Block/Sector Protection Status bits should be tested for errors.

Erase Suspend Status (Bit SR6). This bit indicates that an Erase operation has been suspended, and that it is waiting to be resumed. The Erase Suspend Status should only be considered valid when the Program/Erase Controller Status bit is '1' (Program/Erase Controller inactive). After a Program/Erase Suspend command is issued, the memory may still complete the operation rather than entering the Suspend mode.

When the Erase Suspend Status bit is '0', the Program/Erase Controller is active or has completed its operation. When the bit is '1', a Program/Erase Suspend command has been issued and the memory is waiting for a Program/Erase Resume command.

When a Program/Erase Resume command is issued, the Erase Suspend Status bit returns to '0'.

**Erase Status (Bit SR5).** This bit indicates if a problem has occurred during the erasing of a Sector or Block. The Erase Status bit should be read

once the Program/Erase Controller Status bit is '1' (Program/Erase Controller inactive).

When the Erase Status bit is '0', the memory has successfully verified that the Sector/Block has been erased correctly. When the Erase Status bit is '1', the Program/Erase Controller has applied the maximum number of pulses to the Sector/Block and still failed to verify that the Sector/Block has been erased correctly.

Once the Erase Status bit is set to '1', it can only be reset to '0' by a Clear Status Register command, or by a hardware reset. If it is set to '1', it should be reset before a new Program or Erase command is issued, otherwise the new command will appear to have failed, too.

**Program Status (Bit SR4).** This bit indicates if a problem has occurred during the programming of a byte. The Program Status bit should be read once the Program/Erase Controller Status bit is '1' (Program/Erase Controller inactive).

When the Program Status bit is '0', the memory has successfully verified that the byte has been programmed correctly. When the Program Status bit is '1', the Program/Erase Controller has applied the maximum number of pulses to the byte and still failed to verify that the byte has been programmed correctly.

Once the Program Status bit is set to '1', it can only be reset to '0' by a Clear Status Register command, or by a hardware reset. If it is set to '1', it should be reset before a new Program or Erase command is issued, otherwise the new command will appear to have failed, too.

**V<sub>PP</sub> Status (Bit SR3).** This bit indicates whether an invalid voltage was detected on the V<sub>PP</sub> pin at the beginning of a Program or Erase operation. The V<sub>PP</sub> pin is only sampled at the beginning of the operation. Indeterminate results can occur if V<sub>PP</sub> becomes invalid during a Program or Erase operation.

Once the V<sub>PP</sub> Status bit set to '1', it can only be reset to '0' by a Clear Status Register command, or by a hardware reset. If it is set to '1', it should be reset before a new Program or Erase command is issued, otherwise the new command will appear to have failed, too.

Program Suspend Status (Bit SR2). This bit indicates that a Program operation has been suspended, and that it is waiting to be resumed. The Program Suspend Status should only be considered valid when the Program/Erase Controller Status bit is '1' (Program/Erase Controller inactive). After a Program/Erase Suspend command is issued, the memory may still complete the operation instead of entering the Suspend mode.

When the Program Suspend Status bit is '0', the Program/Erase Controller is active, or has completed its operation. When the bit is '1', a Program/Erase Suspend command has been issued and the memory is waiting for a Program/Erase Resume command.

When a Program/Erase Resume command is issued, the Program Suspend Status bit returns to '0'.

Block/Sector Protection Status (Bit SR1). The Block/Sector Protection Status bit can be used to identify if the Program or Erase operation has tried to modify the contents of a protected block or sector. When the Block/Sector Protection Status bit is reset to '0', no Program or Erase operations have been attempted on protected blocks or sectors

since the last Clear Status Register command or hardware reset. When the Block/Sector Protection Status bit is '1', a Program or Erase operation has been attempted on a protected block or sector.

Once it is set to '1', the Block/Sector Protection Status bit can only be reset to '0' by a Clear Status Register command or by a hardware reset. If it is set to '1', it should be reset before a new Program or Erase command is issued, otherwise the new command will appear to have failed, too.

Using the A/A Mux Interface, the Block/Sector Protection Status bit is always '0'.

**Reserved (Bit SR0).** Bit 0 of the Status Register is reserved. Its value should be masked.

**Table 14. Status Register Bits** 

Operation	SR7	SR6	SR5	SR4	SR3	SR2	SR1
Program active	'0'	X <sup>(1)</sup>	'0'	'0'	'0'	'0'	'0'
Program suspended	'1	X <sup>(1)</sup>	'0'	'0'	'0'	'1'	'0'
Program completed successfully	'1'	X <sup>(1)</sup>	'0'	'0'	'0'	'0'	'0'
Program failure due to V <sub>PP</sub> Error	'1'	X <sup>(1)</sup>	'0'	'1'	'1'	'0'	'0'
Program failure due to Block/Sector Protection (FWH/LPC Interface only)	'1'	X <sup>(1)</sup>	'0'	'1'	'0'	'0'	'1'
Program failure due to cell failure	'1'	X <sup>(1)</sup>	'0'	'1'	'0'	'0'	'0'
Erase active	'0'	'0'	'0'	'0'	'0'	'0'	'0'
Erase suspended	'1'	'1'	'0'	'0'	'0'	'0'	'0'
Erase completed successfully	'1'	'0'	'0'	'0'	'0'	'0'	'0'
Erase failure due to V <sub>PP</sub> Error	'1'	'0'	'1'	'0'	'1'	'0'	'0'
Erase failure due to Block/Sector Protection (FWH/LPC Interface only)	'1'	'0'	'1'	'0'	'0'	'0'	'1'
Erase failure due to failed cell(s) in block or sector	'1'	'0'	'1'	'0'	'0'	'0'	'0'

Note: 1. For Program operations during Erase Suspend, the SR6 bit is '1', otherwise the SR6 bit is '0'.

# FIRMWARE HUB/LOW PIN COUNT (FWH/LPC) INTERFACE CONFIGURATION REGISTERS

When the Firmware Hub Interface/Low Pin Count is selected, several additional registers can be accessed. These registers control the protection status of the Blocks/Sectors, read the General Purpose Input pins and identify the memory using the manufacturer code. See Table 15. for the memory map of the Configuration Registers. The Configuration registers are accessed directly without using any specific command code. A single Bus Write or Bus Read Operation, with the appropriate address (including A22=0), is all that is needed.

#### **Lock Registers**

The Lock Registers control the protection status of the Blocks/Sectors. Each Block/Sector has its own Lock Register. Three bits within each Lock Register control the protection of each Block/Sector: the Write Lock Bit, the Read Lock Bit and the Lock Down Bit.

The Lock Registers can be read and written. Care should be taken, though, when writing. Once the Lock Down Bit is set, '1', further modifications to the Lock Register cannot be made until it is cleared again by a reset or power-up.

See Table 16. for details on the bit definitions of the Lock Registers.

Write Lock. The Write Lock Bit determines whether the contents of the Block/Sector can be modified (using the Program or Erase Command). When the Write Lock Bit is set, '1', the Block/Sector is write protected – any operations that attempt to change the data in the Block/Sector will fail, and the Status Register will report the error. When the Write Lock Bit is reset, '0', the Block/Sector is not

write protected by the Lock Register, and may be modified, unless it is write protected by some other means.

If the Top Block Lock signal,  $\overline{\text{TBL}}$ , is Low,  $V_{\text{IL}}$ , then the Top Block (Block 15) is write protected, and cannot be modified. Similarly, if the Write Protect signal, WP, is Low,  $V_{\text{IL}}$ , then the Main Blocks (Blocks 0 to 14) are write protected, and cannot be modified. For details, see APPENDIX A. and Table 16

After power-up, or reset, the Write Lock Bit is always set to '1' (write-protected).

Read Lock. The Read Lock bit determines whether the contents of the Block/Sector can be read (in Read mode). When the Read Lock Bit is set, '1', the Block/Sector is read protected – any operation that attempts to read the contents of the Block/Sector will read 00h instead. When the Read Lock Bit is reset, '0', read operations are allowed in the Block/Sector, and return the value of the data that had been programmed in the Block/Sector.

After power-up, or reset, the Read Lock Bit is always reset to '0' (not read-protected).

Lock Down. The Lock Down Bit provides a mechanism for protecting software data from simple hacking and malicious attack. When the Lock Down Bit is set, '1', further modification to the Write Lock, Read Lock and Lock Down Bits cannot be performed. A reset, or power-up, is required before changes to these bits can be made. When the Lock Down Bit is reset, '0', the Write Lock, Read Lock and Lock Down Bits can be changed.

**Table 15. Configuration Register Map** 

Mnemonic	Register Name	Memory Address	Default Value	Access	
Lock Registers (For details, see APPENDIX A.)					
GPI_REG	Firmware Hub/Low Pin Count (FWH/LPC) General Purpose Input Register FBC0100h		N/A	R	
MANU_REG	Manufacturer Code Register	FBC0000h	20h	R	

Note: In LPC mode, a most significant nibble, F, must be added to the memory address. For all registers, A22=0, and the remaining address bits should be set according to the rules shown in the ADDR field of Table 6. to Table 9.

**Table 16. Lock Register Bit Definitions** 

Bit	Bit Name	Value	Function <sup>(1)</sup>		
7-3			Reserved		
		'1'	Bus Read operations in this Block or Sector always return 00h.		
2 Read-Lock		'0'	Bus read operations in this Block or Sector return the Memory Array contents. (Default value).		
1	Lock-Down	'1'	Changes to the Read-Lock bit and the Write-Lock bit cannot be performed. Once a '1' is written to the Lock-Down bit it cannot be cleared to '0'; the bit is always reset to '0' following a Reset (using RP or INIT) or after power-up.		
		'0'	Read-Lock and Write-Lock can be changed by writing new values to them. (Default value).		
0	'1'		Register. The		Program and Erase operations in this Block or Sector will set an error in the Status Register. The memory contents will not be changed. (Default value).
	Write-Lock	'0'	Program and Erase operations in this Block or Sector are executed and will modify the Block or Sector contents.		

Note: 1. Applies to the registers that are defined in Table 34. and Table 35..

**Table 17. General Purpose Inputs Register Definition** 

Bit	Bit Name	Value	Function <sup>(1)</sup>		
7-5			Reserved		
4	GPI4	'1'	Input Pin GPI4 is at V <sub>IH</sub>		
4	4   GP14	'0'	Input Pin GPI4 is at V <sub>IL</sub>		
3	CDIa	'1'	Input Pin GPI3 is at V <sub>IH</sub>		
3	3 GPI3	'0'	Input Pin GPI3 is at V <sub>IL</sub>		
2	GPI2	'1'	Input Pin GPI2 is at V <sub>IH</sub>		
	GPIZ	GPIZ	GPIZ	'0'	Input Pin GPI2 is at V <sub>IL</sub>
1	GPI1	'1'	Input Pin GPI1 is at V <sub>IH</sub>		
'	GPII	'0'	Input Pin GPI1 is at V <sub>IL</sub>		
0	CDIO	'1'	Input Pin GPI0 is at V <sub>IH</sub>		
	GPI0	'0'	Input Pin GPI0 is at V <sub>IL</sub>		

Note: 1. Applies to the General Purpose Inputs Register (GPI-REG).

#### Firmware Hub/Low Pin Count (FWH/LPC) General Purpose Input Register

The FWH/LPC General Purpose Input Register holds the state of the General Purpose Input pins, GPI0-GPI4. When this register is read, the state of these pins is returned. This register is read-only. Writing to it has no effect.

The signals on the FWH/LPC Interface General Purpose Input pins should remain constant throughout the whole Bus Read cycle.

#### **Manufacturer Code Register**

Reading the Manufacturer Code Register returns the value 20h, which is the Manufacturer Code for STMicroelectronics. This register is read-only. Writing to it has no effect.

### **PROGRAM AND ERASE TIMES**

The Program and Erase times are shown in Table 18..

**Table 18. Program and Erase Times** 

Parameter	Interface	Test Condition	Min	Typ <sup>(1)</sup>	Max	Unit
Byte Program				10	200	μs
Double Byte Program	FWH	V <sub>PP</sub> = 12V ± 5%		10 <sup>(3)</sup>	200	μs
Quadruple Byte Program	A/A Multiplexed FWH	V <sub>PP</sub> = 12V ± 5%		10 <sup>(4)</sup>	200	μs
Plack Program		V <sub>PP</sub> = 12V ± 5%		0.1 <sup>(5)</sup>	5	
Block Program		V <sub>PP</sub> = V <sub>CC</sub>	10 200 10 <sup>(3)</sup> 200 10 <sup>(4)</sup> 200	5	S	
2 - 1 - 2 - (4 KD + - 2)(2)		V <sub>PP</sub> = 12V ± 5%		0.4	4	
Sector Erase (4 KBytes) <sup>(2)</sup>		V <sub>PP</sub> = V <sub>CC</sub>		10 10 <sup>(3)</sup> 10 <sup>(4)</sup> 0.1 <sup>(5)</sup> 0.4 0.5 0.75	5	S
Block Erase (64 KBytes)		V <sub>PP</sub> = 12V ± 5%		0.75	8	s
Block Erase (04 NBytes)		V <sub>PP</sub> = V <sub>CC</sub>		1	10	5
Chip Erase	A/A Multiplexed	V <sub>PP</sub> = 12V ± 5%		10		s
Program/Erase Suspend to Program pause <sup>(2)</sup>					5	μs
Program/Erase Suspend to Block Erase/ Sector Erase pause <sup>(2)</sup>					30	μs

- Note: 1. T<sub>A</sub> = 25°C, V<sub>CC</sub> = 3.3V
  2. Sampled only, not 100% tested.
  3. Time to program two Bytes.
  4. Time to program four Bytes.
  5. Time obtained executing the Quadruple Byte Program command.

### **MAXIMUM RATING**

Stressing the device above the rating listed in the Absolute Maximum Ratings table may cause permanent damage to the device. These are stress ratings only and operation of the device at these or any other conditions above those indicated in the Operating sections of this specification is not implied. Exposure to Absolute Maximum Rating conditions for extended periods may affect device reliability. Refer also to the STMicroelectronics SURE Program and other relevant quality docu-

**Table 19. Absolute Maximum Ratings** 

Symbol	Parameter	Min.	Max.	Unit
T <sub>STG</sub>	Storage Temperature	-65	150	°C
T <sub>LEAD</sub>	Lead Temperature during Soldering	See note <sup>1</sup>		°C
V <sub>IO</sub>	Input or Output range <sup>2</sup>	-0.50	V <sub>CC</sub> + 0.6	V
V <sub>CC</sub>	Supply Voltage	-0.50	4	V
V <sub>PP</sub>	Program Voltage	-0.6	13	V
V <sub>ESD</sub>	Electrostatic Discharge Voltage (Human Body model) <sup>3</sup>	-2000	2000	V

Note: 1. Compliant with JEDEC Std J-STD-020B (for small body, Sn-Pb or Pb assembly), the ST ECOPACK® 7191395 specification, and the European directive on Restrictions on Hazardous Substances (RoHS) 2002/95/EU

<sup>2.</sup> Minimum voltage may undershoot to -2V for less than 20ns during transitions. Maximum voltage may overshoot to  $V_{CC} + 2V$  for less than 20ns during transitions. 3. JEDEC Std JESD22-A114A (C1=100 pF, R1=1500  $\Omega$ , R2=500  $\Omega$ )

### DC AND AC PARAMETERS

This section summarizes the operating measurement conditions, and the DC and AC characteristics of the device. The parameters in the DC and AC characteristics Tables that follow, are derived from tests performed under the Measurement

Conditions summarized in Table 20., Table 21. and Table 22.. Designers should check that the operating conditions in their circuit match the operating conditions when relying on the quoted parameters.

**Table 20. Operating Conditions** 

Symbol	Parameter	Min.	Max.	Unit
V <sub>CC</sub>	Supply Voltage	3.0	3.6	V
T <sub>A</sub>	Ambient Operating Temperature	-20	85	°C

Table 21. FWH/LPC Interface AC Measurement Conditions

Parameter	Value	Unit
Load Capacitance (C <sub>L</sub> )	10	pF
Input Rise and Fall Times	≤ 1.4	ns
Input Pulse Voltages	0.2 $V_{CC}$ and 0.6 $V_{CC}$	V
Input and Output Timing Ref. Voltages	0.4 V <sub>CC</sub>	V

Table 22. A/A Mux Interface AC Measurement Conditions

Parameter	Value	Unit
Load Capacitance (C <sub>L</sub> )	30	pF
Input Rise and Fall Times	≤ 10	ns
Input Pulse Voltages	0 to 3	V
Input and Output Timing Ref. Voltages	1.5	V

Figure 11. FWH/LPC Interface AC Measurement I/O Waveforms

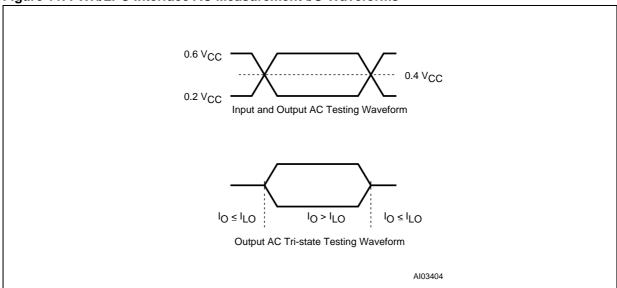


Figure 12. A/A Mux Interface AC Measurement I/O Waveform

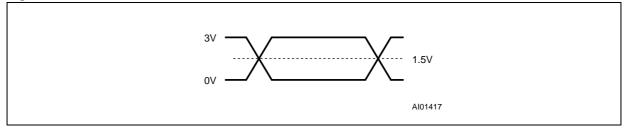


Figure 13. AC Measurement Load Circuit

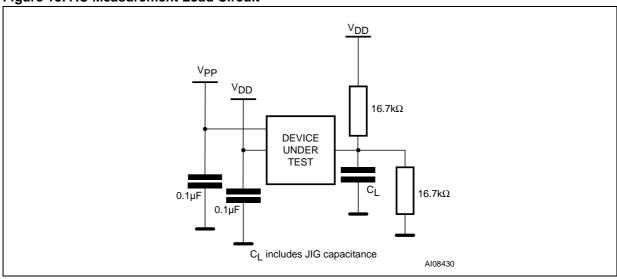


Table 23. Impedance

Symbol	Parameter	Test Condition	Min	Max	Unit
C <sub>IN</sub> <sup>(1)</sup>	Input Capacitance	$V_{IN} = 0V$		13	pF
C <sub>CLK</sub> <sup>(1)</sup>	Clock Capacitance	V <sub>IN</sub> = 0V	3	12	pF
L <sub>PIN</sub> <sup>(2)</sup>	Recommended Pin Inductance			20	nH

Note: 1. Sampled only, not 100% tested.
2. See PCI Specification.
3. T<sub>A</sub> = 25°C, f = 1MHz.

**Table 24. DC Characteristics** 

Symbol	Parameter	Interface	Test Condition	Min	Max	Unit
V <sub>IH</sub>	Input High Voltage	FWH		0.5 V <sub>CC</sub>	V <sub>CC</sub> + 0.5	V
V IH	Input High Voltage	A/A Mux		0.7 V <sub>CC</sub>	V <sub>CC</sub> + 0.3	V
V <sub>IL</sub>	Input Low Voltage	FWH/LPC		-0.5	0.3 V <sub>CC</sub>	V
V IL	input Low voitage	A/A Mux		-0.5	0.8	V
V <sub>IH</sub> (INIT)	INIT Input High Voltage	FWH/LPC		1.1	V <sub>CC</sub> + 0.5	V
V <sub>IL</sub> (INIT)	INIT Input Low Voltage	FWH/LPC		-0.5	0.2 V <sub>CC</sub>	V
I <sub>LI</sub> <sup>(2)</sup>	Input Leakage Current		$0V \le V_{IN} \le V_{CC}$		±10	μΑ
I <sub>LI2</sub>	IC, IDx Input Leakage Current		IC, ID0, ID1, ID2, ID3 <sup>(3)</sup> = V <sub>CC</sub>		200	μA
R <sub>IL</sub>	IC, IDx Input Pull Low Resistor			20	100	kΩ
Voh	Output High Voltage	FWH/LPC	$I_{OH} = -500 \mu A$	0.9 V <sub>CC</sub>		V
VOH	Output Flight Voltage	A/A Mux	I <sub>OH</sub> = -100μA	V <sub>CC</sub> - 0.4		V
V <sub>OL</sub>	Output Low Voltage	FWH/LPC	I <sub>OL</sub> = 1.5mA		0.1 V <sub>CC</sub>	V
VOL	Output Low voltage	A/A Mux	I <sub>OL</sub> = 1.8mA		0.45	V
I <sub>LO</sub>	Output Leakage Current		0V ≤ V <sub>OUT</sub> ≤ V <sub>CC</sub>		±10	μΑ
V <sub>PP1</sub>	V <sub>PP</sub> Voltage			3	3.6	V
V <sub>PPH</sub>	V <sub>PP</sub> Voltage (Fast Erase)			11.4	12.6	V
V <sub>LKO</sub> <sup>(1)</sup>	V <sub>CC</sub> Lockout Voltage			1.8	2.3	V
I <sub>CC1</sub>	Supply Current (Standby)	FWH/LPC	$FWH4/\overline{LFRAME} = 0.9V_{CC}$ $V_{PP} = V_{CC}$ All other inputs 0.9V <sub>CC</sub> to 0.1V <sub>CC</sub> $V_{CC} = 3.6V, f(CLK) = 33MHz$		100	μΑ
I <sub>CC2</sub>	Supply Current (Standby)	FWH/LPC	$FWH4/\overline{LFRAME} = 0.1 \text{ V}_{CC}, \text{ V}_{PP} = \\ \text{V}_{CC} \\ All \text{ other inputs } 0.9 \text{ V}_{CC} \text{ to } 0.1 \text{ V}_{CC} \\ \text{V}_{CC} = 3.6 \text{V}, \text{ f}(CLK) = 33 \text{MHz}$		10	mA
I <sub>CC3</sub>	Supply Current (Any internal operation active)	FWH/LPC	$V_{CC} = V_{CC} \text{ max}, V_{PP} = V_{CC}$ $f(CLK) = 33MHz$ $I_{OUT} = 0mA$		60	mA
I <sub>CC4</sub>	Supply Current (Read)	A/A Mux	$\overline{G} = V_{IH}, f = 6MHz$		20	mA
I <sub>CC5</sub> <sup>(1)</sup>	Supply Current (Program/Erase)	A/A Mux	Program/Erase Controller Active		20	mA
Ірр	V <sub>PP</sub> Supply Current (Read/Standby)		V <sub>PP</sub> ≥ V <sub>CC</sub>		400	μА
, (1)	V <sub>PP</sub> Supply Current		$V_{PP} = V_{CC}$		40	mA
I <sub>PP1</sub> <sup>(1)</sup>	(Program/Erase active)		V <sub>PP</sub> = 12V ± 5%		15	mA
	l		i .			

Note: 1. Sampled only, not 100% tested.
2. Input leakage currents include High-Z output leakage for all bi-directional buffers with tri-state outputs.
3. ID0 and ID1 are RFU in LPC mode.

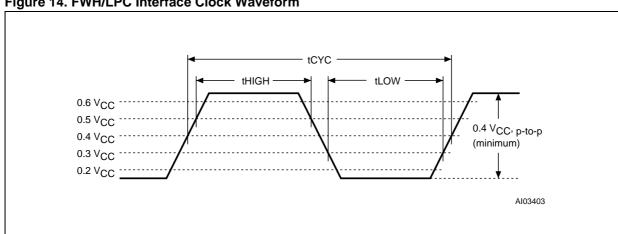


Figure 14. FWH/LPC Interface Clock Waveform

Table 25. FWH/LPC Interface Clock Characteristics

Symbol	Parameter	Test Condition		Value	Unit
t <sub>CYC</sub>	CLK Cycle Time <sup>(1)</sup>		Min	30	ns
tHIGH	CLK High Time		Min	11	ns
t <sub>LOW</sub>	CLK Low Time		Min	11	ns
	CLK Slew Rate peak to	peak to peak	Min	1	V/ns
CLK Siew Rate	peak to peak	Max	4	V/ns	

Note: 1. Devices on the PCI Bus must work with any clock frequency between DC and 33MHz. Below 16MHz devices may be guaranteed by design rather than tested. Refer to PCI Specification.

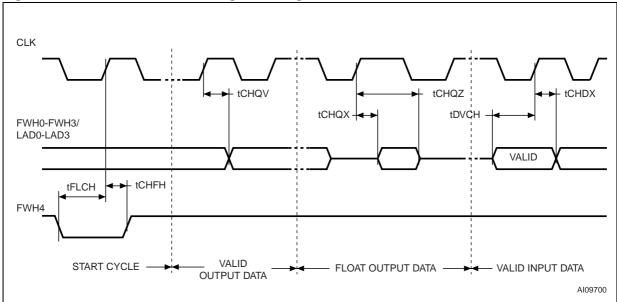


Figure 15. FWH/LPC Interface AC Signal Timing Waveforms


Table 26. FWH/LPC Interface AC Signal Timing Characteristics

Symbol	PCI Symbol	Parameter		Value	Unit
tchqv	t <sub>val</sub>	CLK to Data Out	Min	2	ns
CHQV	vai	CENTO Data Out	Max	11	ns
t <sub>CHQX</sub> <sup>(1)</sup>	t <sub>on</sub>	CLK to Active (Float to Active Delay)	Min	2	ns
t <sub>CHQZ</sub>	t <sub>off</sub>	CLK to Inactive (Active to Float Delay)	Max	28	ns
tavch tdvch	t <sub>su</sub>	Input Set-up Time <sup>(2)</sup>	Min	7	ns
t <sub>CHAX</sub> t <sub>CHDX</sub>	t <sub>h</sub>	Input Hold Time <sup>(2)</sup>	Min	0	ns
t <sub>FLCH</sub>		Input Set-up time on FWH4	Min	10	ns
tCHFH		Input Hold time on FWH4	Min	5	ns

Note: 1. The timing measurements for Active/Float transitions are defined when the current through the pin equals the leakage current specification.

<sup>2.</sup> Applies to all inputs except CLK and FWH4.

Figure 16. Reset AC Waveforms

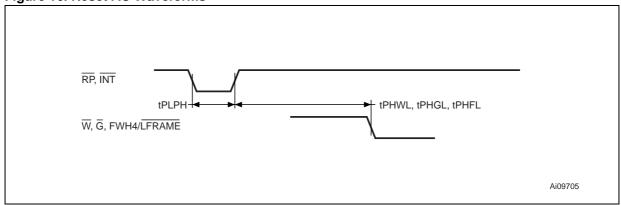

**Table 27. Reset AC Characteristics** 

Symbol	Parameter	Test Condition		Value	Unit
t <sub>PLPH</sub>	RP or INIT Reset Pulse Width		Min	100	ns
	RP or INIT Slew Rate <sup>(1)</sup>	Rising edge only	Min	50	mV/ns
tpHFL	RP or INIT High to FWH4/ LFRAME Low	FWH/LPC Interface only	Min	30	μs
t <sub>PHWL</sub> t <sub>PHGL</sub>	RP High to Write Enable or Output Enable Low	A/A Mux Interface only	Min	50	μs

Note: 1. See Chapter 4 of the PCI Specification.

tAVAV -NEXT ADDR VALID ROW ADDR VALID A0-A10 COLUMN ADDR VALID tAVCL tAVCH tCLAX → tCHAX RCtCHQV G tGLQV tGHQZ tGLQX 🕂 tGHQX -DQ0-DQ7 VALID  $\overline{\mathsf{w}}$ tPHAV RP AI03406

Figure 17. A/A Mux Interface Read AC Waveforms

Table 28. A/A Mux Interface Read AC Characteristics

Symbol	Parameter	Test Condition		Value	Unit
t <sub>AVAV</sub>	Read Cycle Time		Min	250	ns
tavcl	Row Address Valid to RC Low		Min	50	ns
t <sub>CLAX</sub>	RC Low to Row Address Transition		Min	50	ns
tavch	Column Address Valid to RC high		Min	50	ns
t <sub>CHAX</sub>	RC High to Column Address Transition		Min	50	ns
t <sub>CHQV</sub> <sup>(1)</sup>	RC High to Output Valid		Max	150	ns
t <sub>GLQV</sub> <sup>(1)</sup>	Output Enable Low to Output Valid		Max	50	ns
t <sub>PHAV</sub>	RP High to Row Address Valid		Min	1	μs
t <sub>GLQX</sub>	Output Enable Low to Output Transition		Min	0	ns
t <sub>GHQZ</sub>	Output Enable High to Output Hi-Z		Max	50	ns
t <sub>GHQX</sub>	Output Hold from Output Enable High	_	Min	0	ns

Note: 1.  $\overline{G}$  may be delayed up to  $t_{CHQV} - t_{GLQV}$  after the rising edge of  $R\overline{C}$  without impact on  $t_{CHQV}$ .

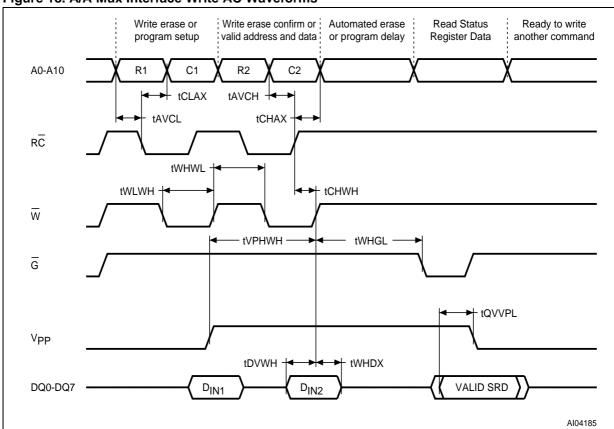


Figure 18. A/A Mux Interface Write AC Waveforms


Table 29. A/A Mux Interface Write AC Characteristics

Symbol	Parameter	Test Condition		Value	Unit
t <sub>WLWH</sub>	Write Enable Low to Write Enable High		Min	100	ns
t <sub>DVWH</sub>	Data Valid to Write Enable High		Min	50	ns
t <sub>WHDX</sub>	Write Enable High to Data Transition		Min	5	ns
t <sub>AVCL</sub>	Row Address Valid to RC Low		Min	50	ns
t <sub>CLAX</sub>	RC Low to Row Address Transition		Min	50	ns
tavch	Column Address Valid to RC High		Min	50	ns
t <sub>CHAX</sub>	RC High to Column Address Transition		Min	50	ns
t <sub>WHWL</sub>	Write Enable High to Write Enable Low		Min	100	ns
tchwh	RC High to Write Enable High		Min	50	ns
t <sub>VPHWH</sub> <sup>(1)</sup>	V <sub>PP</sub> High to Write Enable High		Min	100	ns
twHGL	Write Enable High to Output Enable Low		Min	30	ns
t <sub>WHRL</sub>	Write Enable High to RB Low		Min	0	ns
t <sub>QVVPL</sub> <sup>(1,2)</sup>	Output Valid, RB High to V <sub>PP</sub> Low		Min	0	ns

Note: 1. Sampled only, not 100% tested.
2. Applicable if V<sub>PP</sub> is seen as a logic input (V<sub>PP</sub> < 3.6V).

## **PACKAGE MECHANICAL**

Figure 19. PLCC32 – 32 pin Rectangular Plastic Leaded Chip Carrier, Package Outline

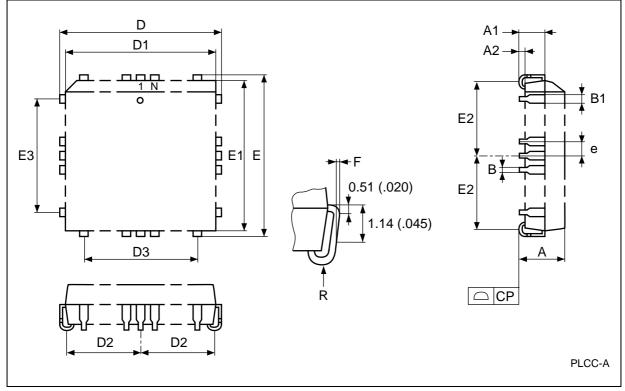

Note: Drawing is not to scale.

Table 30. PLCC32 – 32 pin Rectangular Plastic Leaded Chip Carrier, Package Mechanical Data

Comple ed	millimeters			inches			
Symbol	Тур	Min	Max	Тур	Min	Max	
А		3.18	3.56		0.125	0.140	
A1		1.53	2.41		0.060	0.095	
A2		0.38	_		0.015	_	
В		0.33	0.53		0.013	0.021	
B1		0.66	0.81		0.026	0.032	
СР			0.10			0.004	
D		12.32	12.57		0.485	0.495	
D1		11.35	11.51		0.447	0.453	
D2		4.78	5.66		0.188	0.223	
D3	7.62	_	_	0.300	_	_	
E		14.86	15.11		0.585	0.595	
E1		13.89	14.05		0.547	0.553	
E2		6.05	6.93		0.238	0.273	
E3	10.16	_	_	0.400	_	_	
е	1.27	_	_	0.050	-	_	
F		0.00	0.13		0.000	0.005	
R	0.89	_	_	0.035	_	-	
N	32			32			

TSOP-a

Figure 20. TSOP32 – 32 lead Plastic Thin Small Outline, 8x14 mm, Package Outline

Note: Drawing is not to scale.

Table 31. TSOP32 - 32 lead Plastic Thin Small Outline, 8x14 mm, Package Mechanical Data

Symbol	millimeters				inches	
Symbol	Тур	Min	Max	Тур	Min	Max
Α			1.200			0.0472
A1		0.050	0.150		0.0020	0.0059
A2		0.950	1.050		0.0374	0.0413
α		0	5		0	5
В		0.170	0.270		0.0067	0.0106
С		0.100	0.210		0.0039	0.0083
СР			0.100			0.0039
D		13.800	14.200		0.5433	0.5591
D1		12.300	12.500		0.4843	0.4921
е	0.500	_	_	0.0197	_	_
E		7.900	8.100		0.3110	0.3189
L		0.500	0.700		0.0197	0.0276
N	32			32		

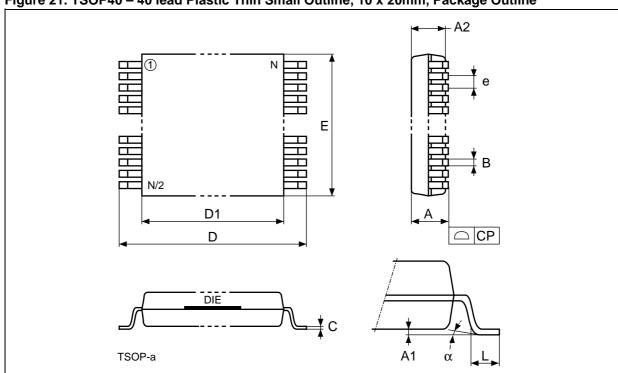


Figure 21. TSOP40 – 40 lead Plastic Thin Small Outline, 10 x 20mm, Package Outline


Note: Drawing is not to scale.

Table 32. TSOP40 - 40 lead Plastic Thin Small Outline, 10 x 20mm, Package Mechanical Data

Symbol	millimeters				inches	
Symbol	Тур	Min	Max	Тур	Min	Max
Α			1.200			0
A1		0.050	0.150		0	0
A2		0.950	1.050		0	0
В		0.170	0.270		0	0
С		0.100	0.210		0	0
СР			0.100			0
D		19.800	20.200		1	1
D1		18.300	18.500		1	1
е	0.500	_	_	0	_	_
E		9.900	10.100		0	0
L		0.500	0.700		0	0
α		0	5		0	5
N	40			40		

#### **PART NUMBERING**

#### **Table 33. Ordering Information Scheme**

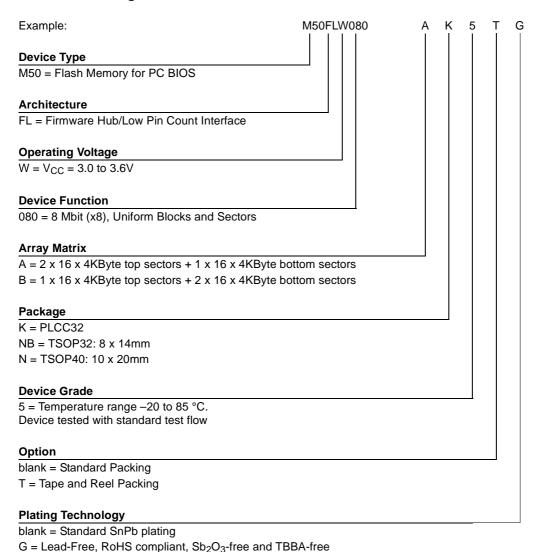

Devices are shipped from the factory with the memory content bits erased to '1'.

For a list of available options (Speed, Package, etc.) or for further information on any aspect of this device, please contact the ST Sales Office nearest to you.

# APPENDIX A. BLOCK AND SECTOR ADDRESS TABLE

Table 34. M50FLW080A Block, Sector and Lock Register Addresses

Block Size (KByte)	Address Range	Block No and Type	Sector Size (KByte)	Sector No	Register Address		
	FF000h- FFFFFh		4	47	FBFF002		
	FE000h- FEFFFh		4	46	FBFE002		
	FD000h- FDFFFh		4	45	FBFD002		
	FC000h- FCFFFh		4	44	FBFC002		
	FB000h- FBFFFh		4	43	FBFB002		
	FA000h- FAFFFh	15	4	42	FBFA002		
	F9000h- F9FFFh		4	41	FBF9002		
64	F8000h- F8FFFh		4	40	FBF8002		
04	F7000h- F7FFFh	(Top)	4	39	FBF7002		
	F6000h- F6FFFh		4	38	FBF6002		
	F5000h- F5FFFh		4	37	FBF5002		
	F4000h- F4FFFh		4	36	FBF4002		
	F3000h- F3FFFh		4	35	FBF3002		
	F2000h- F2FFFh		4	34	FBF2002		
	F1000h- F1FFFh					4	33
	F0000h- F0FFFh		4	32	FBF0002		

Block Size (KByte)	Address Range	Block No and Type	Sector Size (KByte)	Sector No	Register Address	
	EF000h- EFFFFh		4	31	FBEF002	
	EE000h- EEFFFh		4	30	FBEE002	
	ED000h- EDFFFh		4	29	FBED002	
	EC000h- ECFFFh		4	28	FBEC002	
	EB000h- EBFFFh		4	27	FBEB002	
	EA000h- EAFFFh		4	26	FBEA002	
	E9000h- E9FFFh		4	25	FBE9002	
64	E8000h- E8FFFh	14	4	24	FBE8002	
04	E7000h- E7FFFh	(Main)	4	23	FBE7002	
	E6000h- E6FFFh		4	22	FBE6002	
	E5000h- E5FFFh		4	21	FBE5002	
	E4000h- E4FFFh		4	20	FBE4002	
	E3000h- E3FFFh		4	19	FBE3002	
	E2000h- E2FFFh		4	18	FBE2002	
	E1000h- E1FFFh		-	4	17	FBE1002
	E0000h- E0FFFh		4	16	FBE0002	

# M50FLW080A, M50FLW080B

Block Size (KByte)	Address Range	Block No and Type	Sector Size (KByte)	Sector No	Register Address
64	D0000h- DFFFFh	13 (Main)			FBD0002
64	C0000h- CFFFFh	12 (Main)			FBC0002
64	B0000h- BFFFFh	11 (Main)		•	FBB0002
64	A0000h- AFFFFh	10 (Main)		•	FBA0002
64	90000h- 9FFFFh	9 (Main)		•	FB90002
64	80000h- 8FFFFh	8 (Main)		•	FB80002
64	70000h- 7FFFFh	7 (Main)		•	FB70002
64	60000h- 6FFFFh	6 (Main)		•	FB60002
64	50000h- 5FFFFh	5 (Main)		•	FB50002
64	40000h- 4FFFFh	4 (Main)		•	FB40002
64	30000h- 3FFFFh	3 (Main)		•	FB30002
64	20000h- 2FFFFh	2 (Main)		•	FB20002
64	10000h- 1FFFFh	1 (Main)		•	FB10002

Block Size (KByte)	Address Range	Block No and Type	Sector Size (KByte)	Sector No	Register Address	
	0F000h- 0FFFFh	4	15	FB0F002		
	0E000h- 0EFFFh		4	14	FB0E002	
	0D000h- 0DFFFh		4	13	FB0D002	
	0C000h- 0CFFFh		4	12	FB0C002	
	0B000h- 0BFFFh		4	11	FB0B002	
	0A000h- 0AFFFh	0	4	10	FB0A002	
	09000h- 09FFFh		4	9	FB09002	
64	08000h- 08FFFh		4	8	FB08002	
04	07000h- 07FFFh	(Main)	4	7	FB07002	
	06000h- 06FFFh		4	6	FB06002	
	05000h- 05FFFh		4	5	FB05002	
	04000h- 04FFFh		4	4	FB04002	
	03000h- 03FFFh		4	3	FB03002	
	02000h- 02FFFh		4	2	FB02002	
	01000h- 01FFFh			4	1	FB01002
	00000h- 00FFFh		4	0	FB00002	

Note: In LPC mode, a most significant nibble, F, must be added to the memory address. For all registers, A22=0, and the remaining address bits should be set according to the rules shown in the ADDR field of Table 6. to Table 9..

Table 35. M50FLW080B Block, Sector and Lock Register Addresses

Block Size (KByte)	Address Range	Block No and Type	Sector Size (KByte)	Sector No	Register Address
	FF000h- FFFFFh		4	47	FBFF002
	FE000h- FEFFFh		4	46	FBFE002
	FD000h- FDFFFh		4	45	FBFD002
	FC000h- FCFFFh		4	44	FBFC002
	FB000h- FBFFFh		4	43	FBFB002
	FA000h- FAFFFh	15	4	42	FBFA002
	F9000h- F9FFFh		4	41	FBF9002
64	F8000h- F8FFFh		4	40	FBF8002
04	F7000h- F7FFFh	(Top)	4	39	FBF7002
	F6000h- F6FFFh		4	38	FBF6002
	F5000h- F5FFFh		4	37	FBF5002
	F4000h- F4FFFh		4	36	FBF4002
	F3000h- F3FFFh		4	35	FBF3002
	F2000h- F2FFFh		4	34	FBF2002
	F1000h- F1FFFh		4	33	FBF1002
	F0000h- F0FFFh		4	32	FBF0002

Block Size (KByte)	Address Range	Block No and Type	Sector Size (KByte)	Sector No	Register Address
64	E0000h- EFFFFh	14 (Main)			FBE0002
64	D0000h- DFFFFh	13 (Main)			
64	C0000h- CFFFFh	12 (Main)			FBC0002
64	B0000h- BFFFFh	11 (Main)			FBB0002
64	A0000h- AFFFFh	10 (Main)			FBA0002
64	90000h- 9FFFFh	9 (Main)			FB90002
64	80000h- 8FFFFh	8 (Main)			FB80002
64	70000h- 7FFFFh	7 (Main)			FB70002
64	60000h- 6FFFFh	6 (Main)			FB60002
64	50000h- 5FFFFh	5 (Main)			FB50002
64	40000h- 4FFFFh	4 (Main)			FB40002
64	30000h- 3FFFFh	3 (Main)			FB30002
64	20000h- 2FFFFh	2 (Main)			FB20002

# M50FLW080A, M50FLW080B


Block Size (KByte)	Address Range	Block No and Type	Sector Size (KByte)	Sector No	Register Address
	1F000h- 1FFFFh		4	31	FB1F002
	1E000h- 1EFFFh		4	30	FB1E002
	1D000h- 1DFFFh		4	29	FB1D002
	1C000h- 1CFFFh		4	28	FB1C002
	1B000h- 1BFFFh		4	27	FB1B002
	1A000h- 1AFFFh		4	26	FB1A002
	19000h- 19FFFh	1	4	25	FB19002
64	18000h- 18FFFh		4	24	FB18002
04	17000h- 17FFFh	(Main)	4	23	FB17002
	16000h- 16FFFh		4	22	FB16002
	15000h- 15FFFh		4	21	FB15002
	14000h- 14FFFh		4	20	FB14002
	13000h- 13FFFh	2000h- 2FFFh 1000h-	4	19	FB13002
	12000h- 12FFFh		4	18	FB12002
	11000h- 11FFFh		4	17	FB11002
	10000h- 10FFFh		4	16	FB10002

Block Size (KByte)	Address Range	Block No and Type	Sector Size (KByte)	Sector No	Register Address
	0F000h- 0FFFFh		4	15	FB0F002
	0E000h- 0EFFFh		4	14	FB0E002
	0D000h- 0DFFFh		4	13	FB0D002
	0C000h- 0CFFFh		4	12	FB0C002
	0B000h- 0BFFFh		4	11	FB0B002
	0A000h- 0AFFFh	0	4	10	FB0A002
	09000h- 09FFFh		4	9	FB09002
64	08000h- 08FFFh		4	8	FB08002
04	07000h- 07FFFh	(Main)	4	7	FB07002
	06000h- 06FFFh		4	6	FB06002
	05000h- 05FFFh		4	5	FB05002
	04000h- 04FFFh		4	4	FB04002
	03000h- 03FFFh		4	3	FB03002
	02000h- 02FFFh		4	2	FB02002
	01000h- 01FFFh		4	1	FB01002
	00000h- 00FFFh	l l	4	0	FB00002

Note: In LPC mode, a most significant nibble, F, must be added to the memory address. For all registers, A22=0, and the remaining address bits should be set according to the rules shown in the ADDR field of Table 6. to Table 9..

#### APPENDIX B. FLOWCHARTS AND PSEUDO CODES

Figure 22. Program Flowchart and Pseudo Code

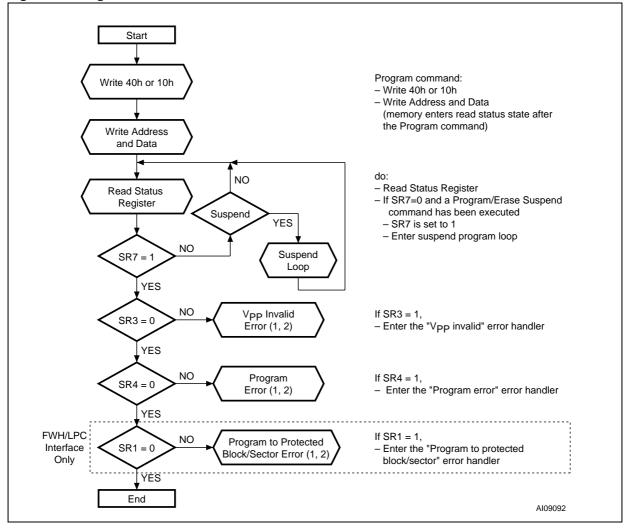

Note: 1. A Status check of SR1 (Protected Block/Sector), SR3 (V<sub>PP</sub> invalid) and SR4 (Program Error) can be made after each Program operation by following the correct command sequence.

If an error is found, the Status Register must be cleared before further Program/Erase Controller operations.

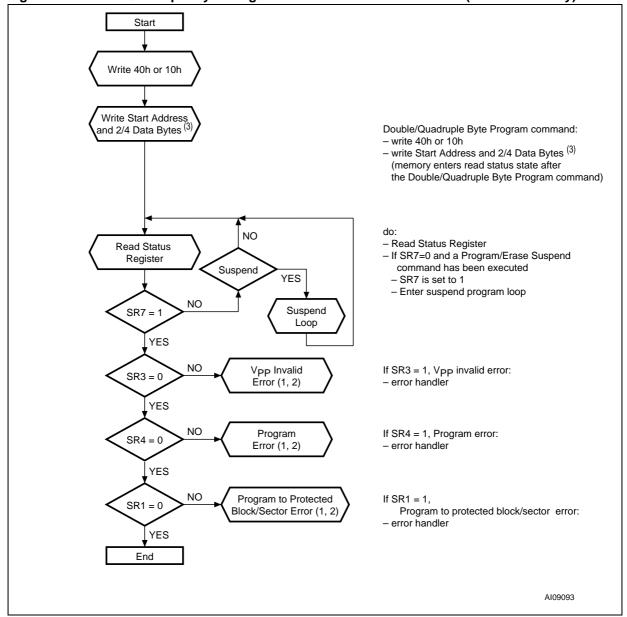


Figure 23. Double/Quadruple Byte Program Flowchart and Pseudo code (FWH Mode Only)

Note: 1. A Status check of SR3 (V<sub>PP</sub> Invalid) and SR4 (Program Error) can be made after each program operation by following the correct command sequence.

2. If an error is found, the Status Register must be cleared before further Program/Erase operations.

For Quadruple Byte Program: Starting at the Start Address, the first data Byte is programmed at the address that has A1-A0 at 00, the second at the address that has A1-A0 at 01, the third at the address that has A1-A0 at 10, and the fourth at the address that has A1-A0 at 11.

A0 and/or A1 are treated as Don't Care (A0 for Double Byte Program and A1-A0 for Quadruple Byte Program).
 For Double Byte Program: Starting at the Start Address, the first data Byte is programmed at the even address, and the second at the odd address.

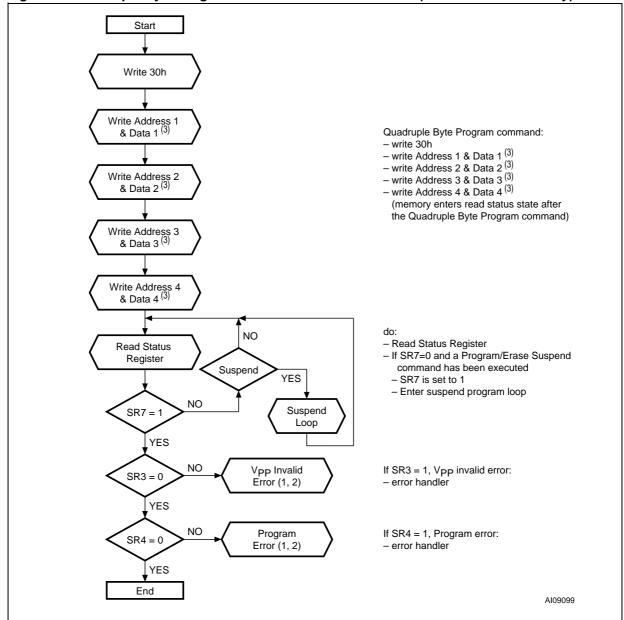


Figure 24. Quadruple Byte Program Flowchart and Pseudo Code (A/A Mux Interface Only)

Note: 1. A Status check of SR3 (V<sub>PP</sub> invalid) and SR4 (Program Error) can be made after each Program operation by following the correct command sequence.

- 2. If an error is found, the Status Register must be cleared before further Program/Erase Controller operations.
- 3. Address 1, Address 2, Address 3 and Address 4 must be consecutive addresses differing only for address bits A0 and A1.

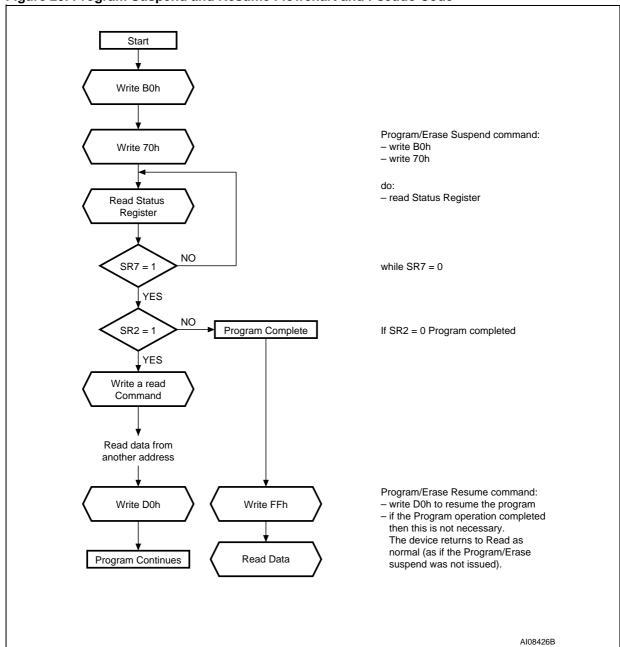


Figure 25. Program Suspend and Resume Flowchart and Pseudo Code

Note: 1. If an error is found, the Status Register must be cleared before further Program/Erase operations.

2. Any address within the bank can equally be used.

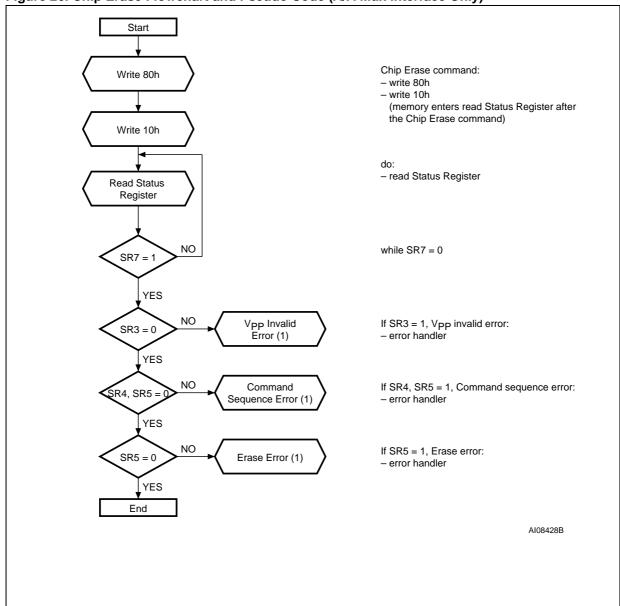


Figure 26. Chip Erase Flowchart and Pseudo Code (A/A Mux Interface Only)

Note: 1. If an error is found, the Status Register must be cleared before further Program/Erase Controller operations.

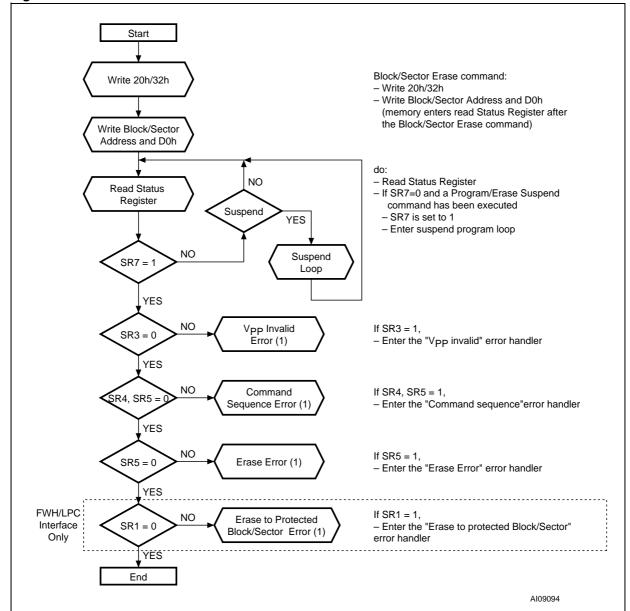


Figure 27. Sector/Block Erase Flowchart and Pseudo Code

Note: 1. If the Block Erase command is used on a block that is split into 4KByte sectors, each of the 16 sectors of the block should be unlocked before performing the erase operation.

2. If an error is found, the Status Register must be cleared before further Program/Erase Controller operations.

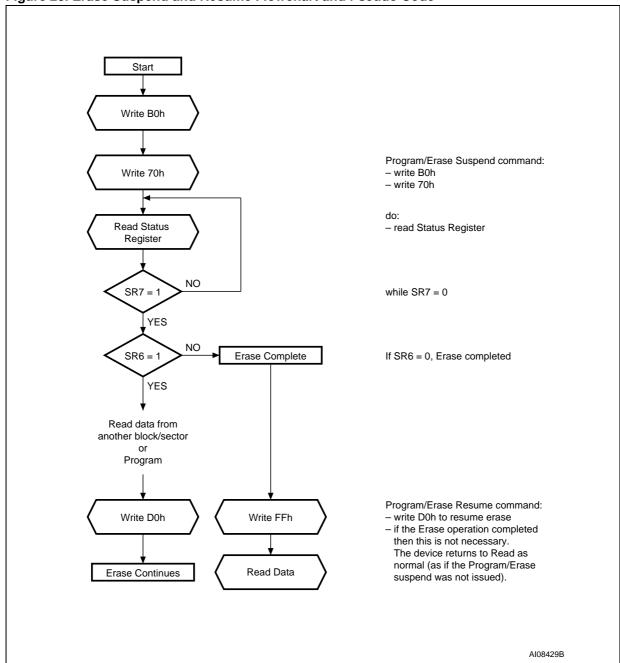


Figure 28. Erase Suspend and Resume Flowchart and Pseudo Code

# M50FLW080A, M50FLW080B

# **REVISION HISTORY**

**Table 36. Document Revision History** 

Date	Version	Revision Details
02-Feb-2004	0.1	First Issue
21-Apr-2004	0.2	TSOP32 package added
24-May-2004	1.0	First public release
18-Aug-2004	2.0	Pins 2 and 5 of the TSOP32 Connections illustration corrected
21-Jun-2005	3.0	Datasheet status changed to Full Datasheet.

Information furnished is believed to be accurate and reliable. However, STMicroelectronics assumes no responsibility for the consequences of use of such information nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of STMicroelectronics. Specifications mentioned in this publication are subject to change without notice. This publication supersedes and replaces all information previously supplied. STMicroelectronics products are not authorized for use as critical components in life support devices or systems without express written approval of STMicroelectronics.

The ST logo is a registered trademark of STMicroelectronics.

All other names are the property of their respective owners

© 2005 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America www.st.com