

Charger Controller with Fuel-Guage & LCD/LED Display

Product Features

- 2-3 cells, NiCd or NiMH battery fast-charger controller for battery-embedded devices
- Precise 7-bit fuel-gauge-counter measures charging and discharging current through battery pack. Make it possible to accurately indicate battery capacity through LCD (PT8A2707-09/2717-19) or LEDs (PT8A2710-12).
- Integrated with a DC/DC step-down controller make it possible for customers to manufacture just one PCB module that can:
 - > Cover different product models that requires different charging current/speed by changing only one resistor;
 - Work with different kinds of AC/DC adapters with wide input voltage ranges.
- Motor also can work in both corded or cordless conditions. When motor is used in cord-mode, the
 charging current to battery is regulated at a maximum value of 1/10 of the fast-charging current. The
 battery is just like being slowly-charged and prevented from being exposed to a prolonged high-current
 charging profile.
- Provide excellent charge and discharge protections.
- Available with different parts to cover products employing slide switch (PT8A2707/10/17), tact switch
 (PT8A2708/09/11/12/18/19) input to control motor ON/OFF. Two-step motor-speed control (70%, 100%) is also
 available in PT8A2708/2711/2718.
- Very low standby current of typical 20μA. Products could typically work in standby-mode for a few months, depends on battery capacity.

Technology Highlights

- Employing 5 major charging states: cool-down / pre-charge / fast charge / trickle charge / stop charge, taking the best care for different battery conditions, especially for aged or dry batteries
- Excellent battery protection and full-charge detection schemes
 - Negative delta voltage detection $(-\Delta V)$ with precision of +/-1mV step
 - Maximum battery voltage detection to turn to maintenance
 - ➤ Rate of change of temperature detection (dT/dt) best for NiMH batteries full-charge termination (use with NTC)
 - Abnormal high battery temperature (55°C) detection to stop charging (use with NTC)
 - Flexible fast charge time-out setting (30mins/60mins/90mins/150mins)
- Fuel-gauge counter takes into account the battery self-discharge compensation based on time.
- Provide excellent battery over-discharge protection through auto-stop motor at once (<0.2s) when
 - > discharging current is higher than preset limit value for 3sec (3 limit values selectable externally)
 - battery pack voltage is lower than No-Power value (adjustable externally)
 - > NTC measures battery pack temperature higher than preset high-temp value(adjustable externally)
- Key delay to reject multiple inputs at Tact switch (about 0.125s ignorance).
- Internal voltage regulator provides better rejection to interference.
- Integrated DC/DC step-down controller to regulate constant charging currents at different charging
- Available with 24-pin SOIC and SSOP lead-free package

Description


The PT8A2707-12/2717-19 integrates charger controller and fuel-gauge into a single-chip. It detects full-charge through - Δ V, dT/dt, safety-timer and maximum battery voltage, and learns the battery capacity from each charging/discharging cycle. Since PT8A2707-12/2717-19 measures charge/discharge current to account for the battery capacity in/out respectively, the battery capacity can be accurately recorded and displayed in 6-level (10%/20%/40%/60%/80%/100%) LED or LCD pattern. The continuous-learning capability enables the devices to take care of battery aging effect so that the capacity level is always accurately displayed throughout the life-span of the battery pack. In the charging control, a DC/DC controller is regulated to regulate constant currents for pre-charge, fast-charge and trickle-charge conditions. The charging current is determined by the value of a current-sense resistor such that it is tunable upon different applications requirements. When motor is turned on during charging, the charge current to battery pack is regulated at 1/10 of the fast-charge current so that motor can draw current from the adapter while battery is charged in a safe and under-controlled condition. The PT8A2707-12/2717-19 employs NTC as the means to measure the battery pack temperature. When a high temperature is measured during charging, the charging current will be cut off. The devices also detect NTC short/open at which all activities will be disabled if any one of these conditions is observed.

Function comparison table

Family members	TACT Switch (ON/OFF)	SLIDE Switch (ON/OFF)	DSTACT Switch (ON(70%)/100% /OFF)	LCD	LED	Motor Speed (70% PWM)	LCD/LED display in idle mode
PT8A2707		$\sqrt{}$		\checkmark			$\sqrt{}$
PT8A2708			$\sqrt{}$	\checkmark			$\sqrt{}$
PT8A2709	$\sqrt{}$			\checkmark			$\sqrt{}$
PT8A2710		$\sqrt{}$			$\sqrt{}$		
PT8A2711			$\sqrt{}$		$\sqrt{}$	$\sqrt{}$	
PT8A2712	$\sqrt{}$				V		
PT8A2717		V					
PT8A2718			V			V	
PT8A2719	V			V			



Flow Chart

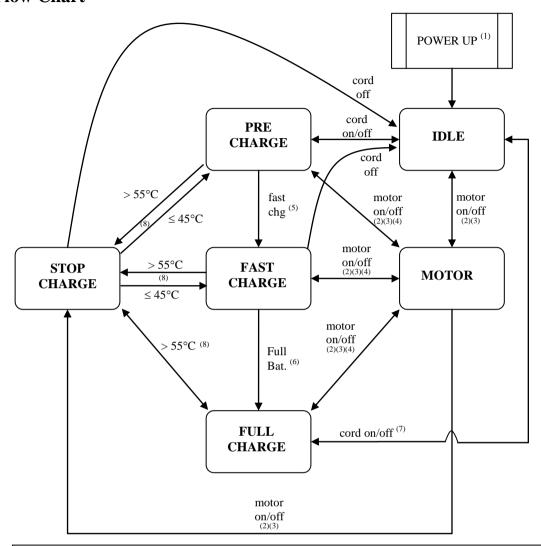

Notes:

- 1) The system goes to idle when it is power-up. The system is waked up when cord is plugged, motor is turned on or both
- 2) Motor is turned on/off by tact switch or slide switch.
- 3) Motor will be turned off automatically when:
 - a) the voltage of the battery pack is lower than 1.8V or (adjustable externally);
 - b) the motor is drawing current more than the preset limit or (adjustable externally);
 - c) the battery pack temperature is higher than 55°C (adjustable externally)
- 4) During charging when motor is turned on, the charging current is regulated at 1/10 of the fast-charging current. When motor is turned off, the system will determine to go back to pre-charge/fast-charge/full-charge according to the battery usage condition (more details could be obtained in the operation description).
- 5) Enter fast-charging when
 - a) battery temperature is less than 45°C
 - b) battery voltage is higher than 2V or after pre-charging for 3 minutes
- 6) Enter full-charge state when one of the following full-charge criteria is reached:
 - a) safety timer timeout (4 external selections)
 - b) max. voltage 3.4V (adjustable externally)
 - c) -\Delta V
 - d) dT/dt (adjustable by component selections)
- 7) If the battery pack is previously fully-charged without any usage or self-discharged enough, the charger goes directly to maintenance (trickle charge) when cord is plugged again.
- 8) Charger stops charging current when battery temperature is higher than 55°C but resume for charging when battery temperature falls below 45°C




Pin Assignment and Description

CHARGE 1		24 VMSTOP	CHARGE 1	$\overline{}$	24 VMSTOP	CHARGE 1	$\overline{}$	24 VMSTOP
CORD 2		23 ISENDC	CORD 2		23 ISENDC	CORD 2		23 ISENDC
TEST 3		22 ISENFG	TEST 3	TEST 3	22 ISENFG	TEST 3		22 ISENFG
BP 4		21 ISENCOM	BP 4		21 ISENCOM	BP 4		21 ISENCOM
L100 5	P	20 CC	L100 5	ъ	20 CC	L100 5	ъ	20 CC
L80 6	T8./	19 VDD	L80 6	T8,	19 VDD	L80 6	T8,	19 VDD
L60 7	PT8A2707/17	18 TIMER	L60 7	PT8A2708/18	18 TIMER	L60 7	PT8A2709/19	18 TIMER
L40 8	07/1	17 VEE	L40 8	08/1	17 VEE	L40 8	09/1	17 VEE
L20 9	17	16 VT	L20 9	$\overline{\infty}$	16 VT	L20 9	9	16 VT
BLI 10		15 VBLOW	BLI 10		15 VBLOW	BLI 10		15 VBLOW
GND 11		14 VB	GND 11		14 VB	GND 11		14 VB
MOTOR 12		13 SLIDE	MOTOR 12		13 DSTACT	MOTOR 12		13 TACT

PT8A2707/17 pins assignment PT8A2708/18 pins assignment PT8A2709/19 pins assignment

Table 1. DTS A 2707-2700 and DTS A 2717-2710 I CD Pottorn Din Description

PIN I/O Name		Table 1: PT8A2707-2709 and PT8A2717-2719 LCD Pattern Pin Description						
2 I CORD External DC supply existence detection 3 I TEST Quick test mode 4 O BP BP for LCD back plane driver 5 O L100 Fuel gauge output (Remaining 100% capacity, full charge indication) 6 O L80 Fuel gauge output (Remaining 80% capacity) 7 O L60 Fuel gauge output (Remaining 60% capacity) 8 O L40 Fuel gauge output (Remaining 40% capacity) 9 O L20 Fuel gauge output (Remaining 40% capacity) 10 O BLI Battery-low output (Remaining 20% capacity) 11 - GND Ground 12 I/O MOTOR Motor driver control SLIDE Slide switch (PT8A2707/17) input to control motor running DSTACT Tact switch (PT8A2708/18) input to control motor running with dual speeds TACT Tact switch (PT8A2709/19) input to control motor running with dual speeds 14 I VB Charging battery voltage sense input 15 I VBLOW Low-battery voltage sense input 16 I VT Temperature sensor (NTC) input 17 O VEE Regulated output voltage 18 O TIMER Charging protection timer 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input Pin Config Current Limit Select input	PIN				Descriptions			
3	1	O	CHARGE			ation		
4		I	CORD		ion			
Society Soci	3	I	TEST	Quick test mode				
6 O L80 Fuel gauge output (Remaining 80% capacity) 7 O L60 Fuel gauge output (Remaining 60% capacity) 8 O L40 Fuel gauge output (Remaining 40% capacity) 9 O L20 Fuel gauge output (Remaining 20% capacity) 10 O BLI Battery-low output (Remaining 20% capacity) 11 - GND Ground 12 I/O MOTOR Motor driver control SLIDE Slide switch (PT8A2707/17) input to control motor running 13 I DSTACT Tact switch (PT8A2708/18) input to control motor running with dual speeds TACT Tact switch (PT8A2709/19) input to control motor running 14 I VB Charging battery voltage sense input 15 I VBLOW Low-battery voltage sense input 16 I VT Temperature sensor (NTC) input 17 O VEE Regulated output voltage 18 O TIMER Charging protection timer 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input Motor stop current limit value select input Motor stop current limit value select input Pin Config Current Limit GND 4.2x charging current	4	O	BP	BP for LCD back plane driver				
7 O L60 Fuel gauge output (Remaining 60% capacity) 8 O L40 Fuel gauge output (Remaining 40% capacity) 9 O L20 Fuel gauge output (Remaining 20% capacity) 10 O BLI Battery-low output (Remaining 20% capacity) 11 - GND Ground 12 I/O MOTOR Motor driver control SLIDE Slide switch (PT8A2707/17) input to control motor running 13 I DSTACT Tact switch (PT8A2708/18) input to control motor running with dual speeds TACT Tact switch (PT8A2709/19) input to control motor running with dual speeds 14 I VB Charging battery voltage sense input 15 I VBLOW Low-battery voltage sense input 16 I VT Temperature sensor (NTC) input 17 O VEE Regulated output voltage 18 O TIMER Charging protection timer 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 24 I VMSTOP Motor stop current limit value select input Motor stop current limit value select input Pin Config Current Limit GND 4.2x charging current	5	O	L100	Fuel gauge output (Remaining 100%	capacity, full charge	e indication)		
8	6	0	L80	Fuel gauge output (Remaining 80%	capacity)			
9 O L20 Fuel gauge output (Remaining 20% capacity) 10 O BLI Battery-low output (Remaining <10% capacity) 11 - GND Ground 12 I/O MOTOR Motor driver control SLIDE Slide switch (PT8A2707/17) input to control motor running BLIDE Slide switch (PT8A2708/18) input to control motor running with dual speeds TACT Tact switch (PT8A2708/18) input to control motor running with dual speeds TACT Tact switch (PT8A2709/19) input to control motor running 14 I VB Charging battery voltage sense input 15 I VBLOW Low-battery voltage sense input 16 I VT Temperature sensor (NTC) input 17 O VEE Regulated output voltage 18 O TIMER Charging protection timer 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 24 I WMSTOP Motor stop current limit value select input Motor stop current limit value select input Pin Config Current Limit GND 4.2x charging current Pin Config Current Limit GND 4.2x charging current	7	0	L60	Fuel gauge output (Remaining 60%	capacity)			
10	8	О	L40	Fuel gauge output (Remaining 40%	capacity)			
11	9	О	L20	Fuel gauge output (Remaining 20%	capacity)			
12 I/O MOTOR Motor driver control	10	0	BLI	Battery-low output (Remaining <10	% capacity)			
SLIDE Slide switch (PT8A2707/17) input to control motor running DSTACT Tact switch (PT8A2708/18) input to control motor running with dual speeds TACT Tact switch (PT8A2709/19) input to control motor running	11	-	GND	Ground				
13	12	I/O	MOTOR	Motor driver control				
TACT Tact switch (PT8A2709/19) input to control motor running 14 I VB Charging battery voltage sense input 15 I VBLOW Low-battery voltage sense input 16 I VT Temperature sensor (NTC) input 17 O VEE Regulated output voltage 18 O TIMER Charging protection timer 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 24 I VMSTOP Motor stop current limit value select input Motor stop current limit value select input Pin Config Current Limit GND 4.2x charging current 9 Pin Config Current Limit O.6-1.0V 5x charging current			SLIDE	Slide switch (PT8A2707/17) input to control motor running				
14 I VB Charging battery voltage sense input 15 I VBLOW Low-battery voltage sense input 16 I VT Temperature sensor (NTC) input 17 O VEE Regulated output voltage 18 O TIMER Charging protection timer 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 24 I WMSTOP Motor stop current limit value select input Pin Config Current Limit GND 4.2x charging current 0.6-1.0V 5x charging current	13	I	DSTACT	Tact switch (PT8A2708/18) input to control motor running with dual speeds				
15			TACT	Tact switch (PT8A2709/19) input to	control motor runnir	ng		
16	14	I	VB	Charging battery voltage sense input	,			
17 O VEE Regulated output voltage 18 O TIMER Charging protection timer 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 24 I VMSTOP Motor stop current limit value select input Motor stop current limit value select input Motor stop current limit value select input O.6-1.0V 5x charging current	15	I	VBLOW	Low-battery voltage sense input				
18	16	I	VT					
19	17	О	VEE	Regulated output voltage				
20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 24 VMSTOP Motor stop current limit value select input Motor stop current limit value select input O.6-1.0V 5x charging current	18	О	TIMER	Charging protection timer				
21	19	-	VDD	Supply voltage				
22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 24 I VMSTOP Motor stop current limit value select input	20	I/O	CC	Compensation capacitor for DC/DC	converter			
23 I ISENDC DC/DC controller current sense input 24 I VMSTOP Motor stop current limit value select input O.6-1.0V 5x charging current	21	I	ISENCOM	Current sense reference plane				
24 I VMSTOP Motor stop current limit value select input Pin Config Current Limit GND 4.2x charging current 0.6-1.0V 5x charging current	22	I	ISENFG	Fuel gauge current sense input				
24 I VMSTOP Motor stop current limit value select input GND 4.2x charging current 0.6-1.0V 5x charging current	23	I	ISENDC		it			
24 I VMSTOP select input 0.6-1.0V 5x charging current					Pin Config	Current Limit		
select input 0.6-1.0V 5x charging current	24	T	MACTOR	Motor stop current limit value	GND	4.2x charging current		
VDD 2v showing symmet	24	1	VMSTOP	select input	0.6-1.0V	5x charging current		
SX charging current					VDD	3x charging current		

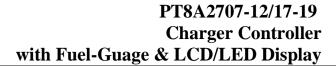



CHARGE 1	\cup	24 VMSTOP	CHARGE 1	\cup	24 VMSTOP	CHARGE 1	\cup	24 VMSTOP
CORD 2		23 ISENDC	CORD 2		23 ISENDC	CORD 2		23 ISENDC
TEST 3		22 ISENFG	TEST 3		22 ISENFG	TEST 3		22 ISENFG
L100 4		21 ISENCOM L100 4 20 CC L80 5	21 ISENCOM	L100 4		21 ISENCOM		
L80 5	ъ		L80 5	PT8A	20 CC	L80 5	ъ	20 CC
L60 6	T8,	19 VDD	L60 6		19 VDD	L60 6	T8,	19 VDD
L40 7	PT8A2710	27 18 TIMER	L40 7	27	18 TIMER	L40 7	PT8A2712	18 TIMER
L20 8	10	17 VEE	L20 8	L20 8 =	17 VEE	L20 8	12	17 VEE
NA 9		16 VT	LTURBO 9		16 VT	NA 9		16 VT
BLI 10		15 VBLOW	BLI 10		15 VBLOW	BLI 10		15 VBLOW
GND 11		14 VB	GND 11		14 VB	GND 11		14 VB
MOTOR 12		13 SLIDE	MOTOR 12		13 DSTACT	MOTOR 12		13 TACT

PT8A2710 pins assignment

PT8A2711 pins assignment

PT8A2712 pins assignment

No		Table 2: PT8A2710-2712 LED Pattern Pin Description						
CORD	PIN	I/O	Name		Descriptions			
TEST		O	CHARGE		PWM DC/DC controller output for constant current regulation			
4		I		External DC supply existence detect	tion			
S		I	TEST	Quick test mode				
Columbia Fuel gauge output (Remaining 60% capacity)		O	L100	Fuel gauge output (Remaining 100%	6 capacity, full charge	e indication)		
7 O L40 Fuel gauge output (Remaining 40% capacity) 8 O L20 Fuel gauge output (Remaining 20% capacity) 9 O NA NA for PT8A2710/12 LTURBO Motor "Turbo-Mode" Indicator (PT8A2711)[Normal speed, OFF] 10 O BLI Battery-low output (Remaining <10% capacity)	5	O	L80	Fuel gauge output (Remaining 80%	capacity)			
Second S	_	O	L60	Fuel gauge output (Remaining 60%	capacity)			
9		O	L40					
LTURBO Motor "Turbo-Mode" Indicator (PT8A2711)[Normal speed, OFF] 10 O BLI Battery-low output (Remaining <10% capacity) 11 - GND Ground 12 I/O MOTOR Motor driver control SLIDE Slide switch (PT8A2710) input to control motor running DSTACT Tact switch (PT8A2711) input to control motor running with dual speeds TACT Tact switch (PT8A2712) input to control motor running 14 I VB Charging battery voltage sense input 15 I VBLOW Low-battery voltage sense input 16 I VT Temperature sensor (NTC) input 17 O VEE Regulated output voltage 18 O TIMER Charging protection timer (1hr/1.5hrs/2.5hrs/4hrs) 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input Motor stop current limit value select input Pin Config Current Limit GND 4.2x charging current Pin Config Current Limit GND 4.2x charging current		O	L20		capacity)			
10 O BLI Battery-low output (Remaining <10% capacity)	9	О	NA	NA for PT8A2710/12				
11			LTURBO	Motor "Turbo-Mode" Indicator (PT	[8A2711][Normal spe	eed, OFF]		
12 I/O MOTOR Motor driver control	10	О	BLI	Battery-low output (Remaining <10	% capacity)			
SLIDE Slide switch (PT8A2710) input to control motor running	11	-	GND	Ground				
I DSTACT Tact switch (PT8A2711) input to control motor running with dual speeds TACT Tact switch (PT8A2712) input to control motor running 14 I VB Charging battery voltage sense input 15 I VBLOW Low-battery voltage sense input 16 I VT Temperature sensor (NTC) input 17 O VEE Regulated output voltage 18 O TIMER Charging protection timer (1hr/1.5hrs/2.5hrs/4hrs) 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 24 I VMSTOP Motor stop current limit value select input Motor stop current limit value select input Pin Config Current Limit GND 4.2x charging current GND 4.2x charging current	12	I/O	MOTOR	Motor driver control				
TACT Tact switch (PT8A2712) input to control motor running 14 I VB Charging battery voltage sense input 15 I VBLOW Low-battery voltage sense input 16 I VT Temperature sensor (NTC) input 17 O VEE Regulated output voltage 18 O TIMER Charging protection timer (1hr/1.5hrs/2.5hrs/4hrs) 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input Motor stop current limit value select input Motor stop current limit value select input Pin Config Current Limit GND 4.2x charging current O.6-1.0V 5x charging current			SLIDE					
14 I VB Charging battery voltage sense input 15 I VBLOW Low-battery voltage sense input 16 I VT Temperature sensor (NTC) input 17 O VEE Regulated output voltage 18 O TIMER Charging protection timer (1hr/1.5hrs/2.5hrs/4hrs) 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 24 Motor stop current limit value select input Motor stop current limit value select input Motor stop current limit value select input Pin Config Current Limit GND 4.2x charging current O.6-1.0V 5x charging current	13	I	DSTACT	Tact switch (PT8A2711) input to control motor running with dual speeds				
15 I VBLOW Low-battery voltage sense input 16 I VT Temperature sensor (NTC) input 17 O VEE Regulated output voltage 18 O TIMER Charging protection timer (1hr/1.5hrs/2.5hrs/4hrs) 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 4 O DC/DC controller current sense input Motor stop current limit value select input Motor stop current limit value select input Select input Pin Config Current Limit GND 4.2x charging current O.6-1.0V 5x charging current			TACT	Tact switch (PT8A2712) input to co	ontrol motor running			
16 I VT Temperature sensor (NTC) input 17 O VEE Regulated output voltage 18 O TIMER Charging protection timer (1hr/1.5hrs/2.5hrs/4hrs) 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 24	14	I	VB	Charging battery voltage sense inpu	t			
17 O VEE Regulated output voltage 18 O TIMER Charging protection timer (1hr/1.5hrs/2.5hrs/4hrs) 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 4 Pin Config Current Limit 4 GND 4.2x charging current 5 one of the product of the prod	15	I	VBLOW	Low-battery voltage sense input				
18 O TIMER Charging protection timer (1hr/1.5hrs/2.5hrs/4hrs) 19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 4 VMSTOP Motor stop current limit value select input Motor stop current limit value select input O.6-1.0V 5x charging current	16	I	VT	Temperature sensor (NTC) input				
19 - VDD Supply voltage 20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 24 VMSTOP Motor stop current limit value select input Pin Config Current Limit GND 4.2x charging current 0.6-1.0V 5x charging current	17	O	VEE					
20 I/O CC Compensation capacitor for DC/DC converter 21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 24 VMSTOP Motor stop current limit value select input Motor stop current limit value select input DC/DC controller current sense input Ocional Select Se	18	О	TIMER		rs/2.5hrs/4hrs)			
21 I ISENCOM Current sense reference plane 22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 24 VMSTOP Motor stop current limit value select input Motor stop current limit value select input Motor stop current limit value select input O.6-1.0V 5x charging current	19	-	VDD	Supply voltage				
22 I ISENFG Fuel gauge current sense input 23 I ISENDC DC/DC controller current sense input 24 I VMSTOP Motor stop current limit value select input Motor stop current limit value select input DE/DC controller current sense input Pin Config Current Limit GND 4.2x charging current 0.6-1.0V 5x charging current	20	I/O	CC	Compensation capacitor for DC/DC	converter			
23 I ISENDC DC/DC controller current sense input Pin Config Current Limit Motor stop current limit value select input Motor stop current limit value select input Solution Select input DC/DC controller current sense input Pin Config Current Limit GND 4.2x charging current 0.6-1.0V 5x charging current	21	I	ISENCOM	Current sense reference plane				
24 I VMSTOP Motor stop current limit value select input Pin Config Current Limit GND 4.2x charging current 0.6-1.0V 5x charging current		I	ISENFG	Fuel gauge current sense input				
24 I VMSTOP Motor stop current limit value select input GND 4.2x charging current 0.6-1.0V 5x charging current	23	I	ISENDC	DC/DC controller current sense input	ut			
select input 0.6-1.0V 5x charging current					Pin Config			
select input 0.6-1.0V 5x charging current	24	т	VMCTOD	Motor stop current limit value	GND			
VDD 3x charging current	Z4	1	VIVISTOP	select input	0.6-1.0V			
					VDD	3x charging current		



Function description (refer to Flow Chart)

1. Battery Voltage Definitions:

Table 3: Battery Voltage Definition

Item	General Setting	Suggested Value	Remark
No-Power value	0.9V-1.0V/cell	1.8-2V for 2cells battery pack	Adjustable externally,
Battery-Low value	1.0V-1.1V/cell	2.0-2.2V for 2cells battery pack	please refer to
Max VB	1.65V-1.7V/cell	3.3-3.4V for 2cells battery pack	'application instruction'

2. Charging Mechanism (cord is connected but motor is off)

When a cord is detected, pre-charge begins. If the battery voltage is higher than Battery-Low threshold (usually set between 0.95V-1.1V/cell) and the battery pack temperature is less than 45°C, fast-charge starts. Otherwise, the battery will be kept in pre-charge status until its voltage is higher than the preset Battery-Low value or a 3 minutes time-out is reached to enter fast-charge mode. If battery temperature is found increasing to 55°C during pre-charge state, battery charging is stopped (DC/DC cuts power) to enter cool down state. Nevertheless, pre-charge will continue in any case until the battery temperature is cooled down below 45°C.

When entering fast-charge mode, if the battery voltage is below a preset voltage level (usually set at about 1.3V-1.4V/cell, measured with charging current), a start-up timer is effective to avoid false triggering of $-\Delta V$ and dT/dt to have early fast-charge termination. During the start-up time, $-\Delta V$ and dT/dt detections are ignored but maximum temperature of 55°C will always be observed to stop fast-charge. The start-up timer is dependent to the external fast-charge timer setting as tabled below. The dT/dt data is valid for battery temperature in range of 35°C to 55°C.

Table 4: Start-up Time

Tuble it built up Time						
Timer	Tmax (User progr	Tmax (User programmable externally)				
Start-up timer for inhibiting	tmax/20					
negative ΔV and dT/dt	tmax (min)	Start-up time (s)				
measurement	30	90				
	60	180				
	90	270				
	150	450				

Fast charge mode is terminated when any one of the following conditions meet:

Minus-delta-V Detection (-ΔV): The battery pack voltage is sampled by high precision A/D converter every 10s, with 0.5s sampling time. For each sampling interval (0.5s), the charging current is cut down. Averaging is performed on the collected data and the result is stored into registers after passing through high-order digital filter. The minus-delta-V is qualified when a voltage drop of about 5mV/cell from the maximum voltage recorded. The second minus-delta-V is qualified when a voltage drop of about 5mV/cell after the first minus-delta-V has been qualified. Every minus-delta-V happened, fuel-gauge increased one level up, and so and so until fuel-gauge is full.

Table 5: Sample Description

	zwoie et sumpie z esemption				
Bypass Start-up timer	VB > 2.6V (measured by sampling)				
VB sampling period (tp) 10s					
VB sampling time	0.5s (fast-charging inhibition)				
BT sampling period (tp)	10s (time-multiplexing with VB sampling) tp=0.5s VB measurement BT measurement				

- 2) **Maximum Battery Voltage Detection:** When the averaged battery pack voltage reaches a preset maximum voltage limit (usually set about 1.6V-1.7V/cell) during the charging interval, fast-charge in terminated.
- Battery Temperature Detection (Max. Temp and dT/dt): The PT8A2707-12/2717-19 employs thermistor(NTC) as battery temperature sensor. When the battery temperature reaches 55°C, fast-charge is terminated and the battery will then go to cool down mode; or the rate of temperature change (dT/dt) reaches preset value, fast-charge is terminated and the battery will then be under trickle-charge mode at a rate of 1/10 of the fast-charge current. If NTC is not employed, the pin "VT" should be biased at an equivalent voltage as for 10°C-20°C or else the PT8A2707-12/2717-19 determines the NTC is opened and will stop all charging activity forever.



PT8A2707-12/17-19 Charger Controller with Fuel-Guage & LCD/LED Display

4) Fast-Charge Timer Cut-Off: The PT8A2707-12/2717-19 comes with 4 timer settings (30mins/60mins/90mins /150mins) selectable externally through resistor divider. The fast-charge timer works as the last protection to prevent over-charging the battery if none of the above 3 terminations takes effect. In general, the timer is chosen according to the required time to fully-charge an empty battery with about 20-30% margins. The timer can be easily calculated at a given charging current and battery capacity.

5) NTC Open or Short

During battery charging, the PT8A2707-12/2717-19 always detects NTC status by measure VT voltage value. If NTC open/short is detected, all charging activities will be stopped and go to stop-charging mode.

After fast-charge, the battery is charged at a rate of 1/10C to compensate for the self-discharge rate so as to maintain the battery capacity always at full as long as the cord is still connected. If the battery temperature continues to rise to 55°C during maintenance, the PT8A2707-12/2717-19 will cut-off the charge current until the battery temperature reduces to below 55°C to resume.

After full-charge is detected, the PT8A2707-12/2717-19 will restore the full-charge status until it measures its capacity drops 5% of charge due to self-discharge (cord was removed) of battery or motor is turned on. During the time the PT8A2707-12/2717-19 keeps the full-charge status internally, if user detaches motor and plugs-in cord to charge the shaver again, the PT8A2707-12/2717-19 will go to trickle-charge mode.

3. Discharging Mechanism (Motor is On while Cord is Not Connected)

SLIDE, TACT and DSTACT are motor running control switch inputs.

- 1) SLIDE Switch Mode: PT8A2707/17/10 uses a pull high slide switch to control motor running through SLIDE pin. When slide switch is closed, the SLIDE pin is pulled high, and the motor is always turned on at 100% speed (full speed), else if slide switch is open, the motor is always turned off to stop motor running.
- 2) TACT Switch Mode: PT8A2709/19/12 uses a pull high tact switch to control motor running through TACT pin. With 1st pressing of TACT switch, the motor is always turned on at 100% speed (full speed), and with 2nd pressing of TACT switch, the motor is always turned off to stop motor running. When using TACT switch mode, the key delay for tact switches to reject multiple inputs are typically about 0.125s.
- 3) **DSTACT Switch Mode:** PT8A2708/18/11 uses a pull high tact switch to control motor running with Dual Speed through DSTACT pin. With 1st pressing tact switch, the motor is turned on at 70% speed, with 2nd pressing of tact switch, the motor is turned to 100% speed (full speed), and motor is turn off to stop running with 3rd pressing of tact switch. When using DSTACT switch mode, the key delay for tact switches to reject multiple inputs are typically about 0.125s.

In above 3 models, battery over-discharge protection is available through auto-stop motor at once (<0.2s) when

- > Battery discharging current is higher than preset current limit for 3sec (there are three limit values selectable refer to 'motor-over-current protection settings')
- Battery pack voltage is lower than the preset No-Power limit value (typically about 0.9-1.0V per cell).
- > NTC measures battery pack temperature higher than the preset limit (usually about 55-60°C)

The motor can be resumed when any of the above criteria is cleared. But for SLIDE switch model, user needs to turn off and turn on SLIDE switch to start motor again; for TACT and DSTACT switch models, the user needs to press the tact switch once to start motor.

4) Battery Low Alarm: The PT8A2707-12/2717-19 detects battery capacity through output voltage level by VBLOW pin. When battery voltage is down to Battery-Low value (battery capacity is below 10%), Battery-Low alarm is alert, and controls Battery-Low LCD screen or LED (which is connected to BLI pin10) to remind user that battery is under low capacity condition. If battery voltage continues go down and decreases to No-Power value, the motor will self shut down to protect battery be over discharged.

The Battery-Low LCD segment and LED indications as below table.

Table 6: Battery Alarm Conditions

Item	Condition	Battery-Low LED	Battery-Low LCD	
No cord	Motor on	on	on	
No cord	Motor off	blinking 5s	on	
Condison	Motor on	on		
Cord is on	Motor off	on		

4. Cord is Connected While Motor is On

When cord is connected while motor is on, or vice versa, there are two scenarios:

1) The motor is turned on and draws more current than the AC/DC adapter can supply: In all cases, the PT8A2707-12/2717-19 will enable the external PMOSFET to fully turn on to supply maximum current to the motor. There are three subcases to observe:



PT8A2707-12/17-19 Charger Controller with Fuel-Guage & LCD/LED Display

- a) If the motor is turned on during the pre-charge state, obviously there is no charging current to battery. The PT8A2707-12/2717-19 will return to discharging mode while fuel-gauge is continuing to count the discharge amount. The discharging is stopped at the same criteria described in the Discharging Mechanism section.
- b) If the motor is turned on during the fast-charge state, the fast-charge safety timer is held. If the motor is turned on less than 5% of the battery maximum capacity, fast-charge resumes with fast-charge timer continue to count (but start-up timer starts from beginning). However, when the motor is accumulatively turned on over 5% of the battery maximum capacity while cord is still connected, the fast-charge timer is cleared and the battery pack will be recharged from pre-charge state again once motor is off.
- c) If the motor is turned on during the trickle-charge state, if the motor is turned on to accumulatively consume less than 5% (not necessarily in single operation) of the battery maximum capacity, the PT8A2707-12/2717-19 resumes trickle-charge state. However, when the motor is turned on over 5% of the battery maximum capacity during the trickle-charge state, the battery pack will be recharged from pre-charge state again after motor is off.

Besides, at any time when the battery pack voltage is lower than the No-Power value or discharging current is higher than the preset limit levels for 3sec, the motor will be stopped and the devices return to charging status.

- 2) The motor is turned on but draws less current than the AC/DC adapter can supply: In all cases, when the battery is not discharged, the PT8A2707-12/2717-19 regulates a charging current of 1/10 of the fast-charge current to battery pack. In this case, the battery pack is under slow charging. Similarly, there are three more situations to observe:
 - a) If the motor is turned on during the pre-charge state, once motor is turned off, the PT8A2707-12/2717-19 will resume back to the pre-charge state.
 - b) If the motor is turned on during the fast-charge state, the fast-charge timer is held until motor is turned off to resume fast-charging.
 - c) If the motor is turned on during the trikle-charge state, once motor is turned off, the PT8A2707-12/2717-19 will resume back to the maintenance state.

In any charging states, if the battery temperature is measured higher than 55°C, the motor is stopped and the 0.1C charging current is cut off. The LED/LCD still displays as in "Charging Mode". The motor will draw current from battery pack until the battery temperature is below 55°C to resume 0.1C charging current. However, no matter whether it is in fast-charging or trickle-charging modes, when the motor is turned on to consume over 5% (accumulatively, not necessarily in single operation) of the battery maximum capacity during battery is over-temperature, the battery pack will be recharged from pre-charge state again after motor is off.

5. Fuel-Gauge Counter

- 1) Charge Counting: Charge activity is detected based on positive voltage difference (VFUEL) between the pins ISENFG and ISENCOM. When voltage of ISENFG is higher than the voltage of ISENCOM, the PT8A2707-12/2717-19 increments its fuel-gauge counter at a rate proportional to VFUEL. VFUEL is sampled and converted into digital data through high-precision A/D converter. When the fuel-gauge counter accumulates up to 99% level but none of the full-charge criteria (-ΔV, dT/dt, safety timer, maximum battery voltage) is detected, the fuel-gauge will wait at 99% level. Right after the battery is fully-charged, the PT8A2707-12/2717-19 displays full-charge and learns the capacity of the battery pack such that the display will be more and more accurate in both charging and discharging cycles later.
- 2) Discharge Counting: Discharge activity is detected based on a negative voltage difference (VFUEL) between the pins ISENFG and ISENCOM. When voltage of ISENFG is lower than the voltage of ISENCOM, the PT8A2707-12/2717-19 decrements its fuel-gauge counter at a rate proportional to VFUEL. VFUEL is sampled and converted into digital data through high-precision A/D converter. In case the fuel-gauge counter rolls to zero count while the battery voltage is still higher than the preset No-Power level, the Battery-Low LED is still flashing while user can still use motor. Motor will be stopped when battery voltage is below the No-Power level. The maximum fuel value is not updated, but will be updated when necessary for next time the battery is fully charged. The fuel value will be adjusted to 10% if the battery voltage gradually falls below Battery-Low threshold.

6. Idle Mode

- 1) **Standby:** When cord is not connected and motor is off, the PT8A2707-12/2717-19 turn to idle state to save power. Some internal circuits are shut-down to keep the standby power at about 20μ A.
- **2) Background Offset Cancellation:** when the PT8A2707-12/2717-19 is waked up by user, an offset cancellation is performed for the internal precise A/D converter before entering cord or motor modes. It normally takes 0.2~0.3s. The PT8A2707-12/2717-19 returns to idle state after use.



PT8A2707-12/17-19 Charger Controller with Fuel-Guage & LCD/LED Display

7. First-Time Power-Up

Initial Fuel Count & First-Time Charging: Upon power-up, the PT8A2707-12/2717-19 resets for all internal memory and resumes all default settings, the fuel-gauge counter will be initialized as zero count. The initialization may take a few seconds before PT8A2707-12/2717-19 boots up to operate normally.

For the first-time charging, the fuel-gauge counter counts up to a default internal maximum fuel value (which is determined by the fast-charge timer selected externally. E.g. a 90mins timer means roughly it is a 1-hour charger, the initial maximum fuel value is assumed for 1hr for 1C charging current. Similarly, a 150min timer is assumed for a 120mins for 0.5C charging current, etc.) measured by the external current sense resistor. Fuel-gauge LCD segments or LEDs are light up according to the initial maximum fuel value. The 100% fuel LCD segment (or LED) keeps on flashing even though the fuel-gauge count reaches the default maximum value. In this moment, the fuel-gauge counter learns the battery capacity by continuing to roll up its counter until fast-charging is completed. This new battery capacity is therefore memorized and used as the maximum value for next charging cycles. Similarly, if full-charge is detected earlier than the counter reaches its initial maximum fuel value, the maximum fuel value is updated but progressively.

8. Fuel-Gauge Display

The PT8A2707/08/09/17/18/19 use LCD screen for the fuel gauge display and PT8A2710/11/ 12 use LEDs for fuel gauge display. For both LCD screen and LED models, there are 3 different display modes: **Charging Mode, Discharging Mode and Idle Mode**, as described in LED/LCD pattern section in pages 12-13.

1) Charging Mode:

- a) Cord Mode with Motor off: When cord is connected, the fuel gauge display is turned on to "Charging Mode". As soon as cord is removed, the fuel-gauge LED display continues to display the fuel gauge level according to the "Discharging Mode" for 5s
- b) Motor-On Mode with Cord: When motor is turned on while cord is plugged in, or vice versa, the PT8A2707-12/2717-19 displays fuel-gauge with accordance to the actual charge or discharge amount. The fuel-gauge always displays in the "Charging Mode" no matter whether there is net current charging into the battery or not. If the motor is drawing less current than the adapter can supply, the DC/DC converter will regulate the battery charging current at a slow-rate (1/10 of the fast charge current). The high-precision ADC in PT8A2707-12/2717-19 is still to calculate this small charging current to add into the fuel-gauge counter.

2) Discharging Mode:

- a) Motor-On Mode without Cord: When motor is turned on while no cord is connected, the fuel gauge is displayed continuously in the "Discharging Mode". After motor is turned off, the fuel-gauge display will still continue to display for 5 seconds.
- b) Motor-On Mode with Cord: The fuel-gauge always displays in the "Charging Mode" no matter whether there is net current charging into the battery or not. If the motor is drawing more current than the adapter can supply, there will be some amount of current being drawn from the battery pack. The high-precision ADC in PT8A2707-12/2717-19 is still capable to calculate this small discharging current to subtract from the fuel-gauge counter.

3) Idle Mode:

LED display will be OFF in idle state. For LCD mode, the display of PT8A2707/08/09 will be continued on until battery has no power; but the display of PT8A2717/18/19 will be off.




LCD output specification

Table 7: LCD Specifications

Pin	Signal Format
BP	64Hz 50% Duty Cycle Square-wave Output Signal Generated from the 32kHz Master Clock
	OFF: In-phase with Back Plane Signal
L100, L80, L60,	ON: 180° Out-of-phase with Back Plane Signal
L40	2Hz-FLASH: Blinking at 2Hz During Charging Mode. Switch between In-phase and Out-of-Phase Output
	Signal at 2Hz
	OFF: In-phase with Back Plane Signal
	ON: 180° Out-of-phase with Back Plane Signal
L20	2Hz-FLASH: Blinking at 2Hz During Charging Mode. Switch between In-phase and Out-of-Phase Output
L20	Signal at 2Hz
	1Hz-FLASH: Blinking at 1Hz During Discharging Mode. Switch between In-phase and Out-of-Phase
	Output Signal at 1Hz
BLI	OFF: In-phase with Back Plane Signal
DLI	ON: 180° Out-of-phase with Back Plane Signal

Figure 1: LCD Signal Phase vs BP Signal Phase for all states

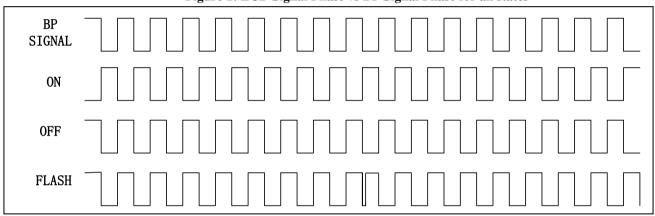



LED/LCD Patterns Summary

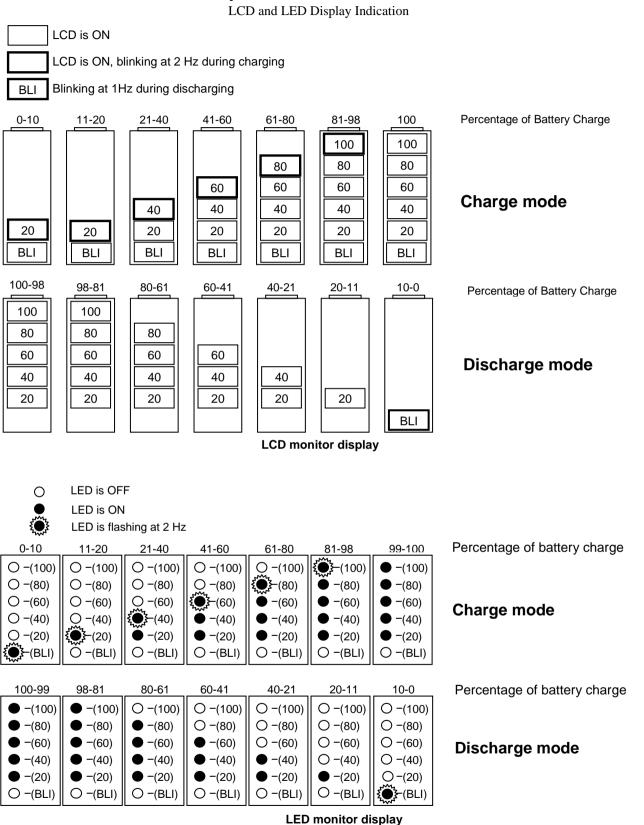


Figure 2: LCD and LED Display



Test Mode Specification

Test pin = 1.65V (or short to VDD), VDD=2.4V, ISENDC = 2.4V, ISENFG = 2.4V, ISENCOM = 2.4V, BP = 0V VT = 0.75V (25° C)

Table 8: for Test Mode

	INF	PUT		Explanation		Output			
State	Timer	VT	Duration	For tester test	charge	BLI	L100	motor	
0			62.5msec						
1	0V	0.75V	62.5msec	(Isendc-Isencom) regulate 7mV	1	1	1	0	
2	0V	0.75V	62.5msec	(Isendc-Isencom) regulate 70mV	1	1	1	0	
3	0V	0.75V	62.5msec	All LEDs turn on	0	0	0	0	
4	0V	0.75V	62.5msec	MOTOR outputs 100Hz 50% duty cycle	0	1	1	50% PWM @ 100Hz	
5	0V	0.75V	62.5msec	BLI turns on if NTC short or open; otherwise L100 turns on	0	1	0	0	
6	0V	0.75V	62.5msec	L100, BLI output refer to timer setting	0	1	1	0	
7			62.5msec						
0			1sec	For manual test					
1	0V	0.75V	1sec	(Isendc-Isencom) regulate 7mV	1	1	1	0	
2	0V	0.75V	1sec	(Isendc-Isencom) regulate 70mV	1	1	1	0	
3	0V	0.75V	1sec	All LEDs turn on	0	0	0	0	
4	0V	0.75V	1sec	MOTOR outputs 100Hz 50% duty cycle	0	1	1	50% PWM @ 100Hz	
5	0V	0.75V	1sec	BLI turns on if NTC short or open; otherwise L100 turns on	0	1	0	0	
6	0V	0.75V	1sec	L100, BLI output refer to timer setting	0	1	1	0	
7			1sec						



Maximum Ratings

Storage Temperature	40°C to +125°C
Supply Voltage to Ground Potential (Input & V_{CC} Only)	-0.5V to $+6.0$ V
Supply Voltage to Ground Potential (Output s & D/O Only)	-0.5V to $+6.0$ V
DC Input Voltage	-0.5V to $+6.0$ V
Power Dissipation	500mW

Note:

Stresses greater than those listed under MAXIMUM RATINGS may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

Recommended operation conditions

Symbol	Description	Min	Туре	Max	Unit
V _{CC}	Operating Voltage	1.8	3.0	5.5	V
V _{IH}	"H" Input Voltage	$0.7V_{CC}$	-	-	V
$V_{\rm IL}$	"L" Input Voltage	-	-	$0.3V_{CC}$	V
T_{A}	Operating temperature	-10	25	70	\mathcal{C}

Electrical Characteristics

(Unless otherwise noted, TA = -10~70 °C, V_{CC} =3.0V)

Symbol	Parameter		Test Conditions	Min	Тур	Max	Unit	
V_{EE}	Regulator Output Voltage		$I_{OUT} = 1mA$	1.6	1.65	1.7	V	
ΔV_{EE}	I	Line regulation	n	1.8≤VCC≤5.5V, No load	-	40	50	mV
ΔV_{LDR}	VEI	E Load regula	ation	$0mA \le I_L \le 1mA$	-	3	10	mV
$V_{\rm IL}$	Input Low Th	reshold for a	ll digital input	-	-	-	0.90	V
V_{IH}	Input High T	hreshold for a	ll digital input	-	2.1	-	-	V
$I_{ m IH}$	Input leakage curr	rent for SLIDE	TACT and Turbo	Т	20	30	100	μА
$ m I_{IL}$		pins		· -	-	-	-1	μΛ
I_{ADC}	ADC In	put Current (VB, VT)	-	-1	-	1	μΑ
			90mins	•	-	0	0.165	
CT_{MAX}	Fast-Charge Ti		60mins	-	0.36	-	0.46	V
CIMAX	voltage Ra	ange	30mins	-	1.19	-	1.29	_
			150mins	-	1.70	-		
	Internal Pre-charge mode and trickle reference for charge mode (1/10CC)		-	4	7	9		
V_{CHARGE}	DC-DC output current	Fast charge mode (1CC)		-	50	70	90	mV
				V _{VMSTOP} = GND	-240	-300	-360	1
V_{DISMAX}	Internal referen	ce for discha	rging protection	V _{VMSTOP} =0.6-1.0V	-280	-350	-420	
				$V_{\text{VMSTOP}} = V_{\text{CC}}$	-168	-210	-252	
D	Duty cycle of M		High speed	-	-	100%	-	
D_{MOTOR}	output for controlling motor speed Low spee		Low speed	-	78%	80%	82%	-
F_{T}	Motor frequency for TE trimming		-	90	100	110	Hz	
F_{MOTOR}	PWM signal frequency for motor driver output		-	90	100	140	Hz	
t_{DLY}	TACT and DSTACT tact switches delay time to active		-	-	125	150	ms	
I_{OL1}	Output Sink Current (L100, L80, L60, L40, L20, BLI or LMON or LTURBO)		V _{CC} =2.4V ,V _{OLI} =0.4V	6	8	-	mA	

To be continued.





Continued.

Symbol	Parameter	Test Conditions	Min	Тур	Max	Unit	
T	O to the Company (MOTOR)	V _{CC} =1.8V , V _{OH2} =1.2V	-10	-13		4	
$I_{ m OH2}$	Output Source Current (MOTOR)	V _{CC} =3.0V, V _{OH2} =1.2V	-13	-18	mA		
I_{OL2}	Output Sink Current (MOTOR)	$V_{CC} = 3.0 \text{V}, V_{OL2} = 0.3 \text{V}$	0.5	2.5	-	mA	
T	O 4 4 S and C mark (CHARCE)	V _{CC} =2.4V , V _{OH3} =1.2V	-5	-10	-	4	
I_{OH3}	Output Source Current (CHARGE)	$V_{CC} = 3.0V$, $V_{OH2} = 1.2V$	-5	-15		mA	
I_{OL3}	Output Sink Current (CHARGE)	$V_{CC} = 3.0 \text{V}, V_{OL3} = 0.3 \text{V}$	2	4	-	mA	
I_{OH4}	Output Source Current (CC pin)	$V_{CC} = 3.0V$, $V_{OH4} = 2.7V$	-10	-25	-50	μΑ	
I _{OL4}	Output Sink Current (CC pin)	$V_{CC} = 3.0 \text{V}, V_{OL4} = 0.3 \text{V}$	0.5	0.8	2	μΑ	
I_{OH5}	Output Source Current for BP	VCC=3.0V, V _{OH5} =2.7V	200	500	-	μΑ	
I_{OL5}	Output Sink Current for BP	VCC=3.0V, V _{OL5} =0.3V	200	550	-	μΑ	
I_{CCQ}	Operation Current	VCC=3.0V	-	2.6	5	mA	
I_{S}	Standby Current	Cord=0, Motor=0	-	-	30	μΑ	
-ΔV	Minus Delta Voltage to Terminate Fast- Charge detected by VB pin (per cell)	-	4	5	7	mV	
VB _{MAX}	Internal reference voltage for Maximum Battery Voltage Protection	-	1.95	2.00	2.08	V	
VB_{LOW}	Internal reference voltage for Low Battery	-	1.6	1.65	1.7	V	
VB _{STOP}	Internal reference voltage for No Power to Stop Motor	-	1.40	1.45	1.50	V	
V_{CORD}	Threshold voltage for Cord on /off	-	0.55	0.60	0.65	V	
Fosc	Frequency of Internal Oscillator	-	29	32	35	kHz	
ΔVΤ	VT voltage change value for dT/dt protection	CTMAX=90mins, Measure 90s CTMAX=60mins, Measure 60s CTMAX=30mins, Measure 30s CTMAX=150mins, Measure 150s	13.5	15	16.5	mV	
VT _{MAX}	VT voltage for Maximum Battery Temperature 55°C or NTC short	-	0.355	0.375	0.395	V	
VT _{NTCO}	VT voltage for NTC open	-	1.05	1.10	1.15	V	



Application Circuit

1) Typical 2-Cell 1-hr Fast-Charge Application Circuit for PT8A2707/17

(SLIDE Switch Model with LCD display)

AC/DC Adapter: 4V 650mA, Battery Capacity: 650-730mAh, Safety charge timer: 1.5hrs

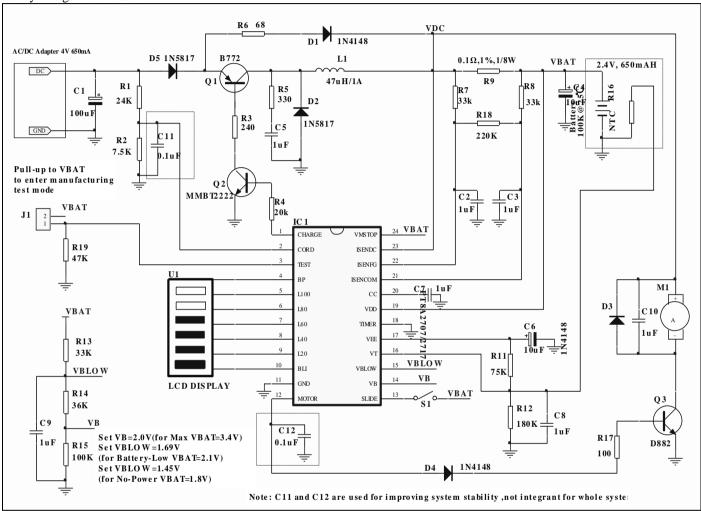


Figure 3: PT8A2707/17 LCD Display SLIDE Switch Application Circuit



2) Typical 2-Cell 1-hr Fast-Charge Application Circuit for PT8A2708/18

(DSTACT Switch Model with LCD display)

AC/DC Adapter: 4V 650mA, Battery Capacity: 650-730mAh, Safety charge timer: 1.5hrs

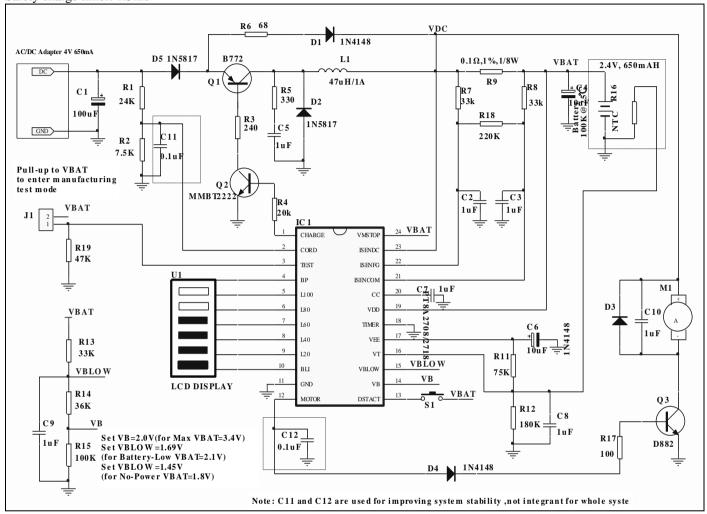


Figure 4: PT8A2708/18 LCD Display Dual-speed DSTACT Switch Application Circuit



3) Typical 2-Cell 1-hr Fast-Charge Application Circuit for PT8A2709/19

(TACT Switch Model with LCD display)

AC/DC Adapter: 4V 650mA, Battery Capacity: 650-730mAh, Safety charge timer: 1.5hrs

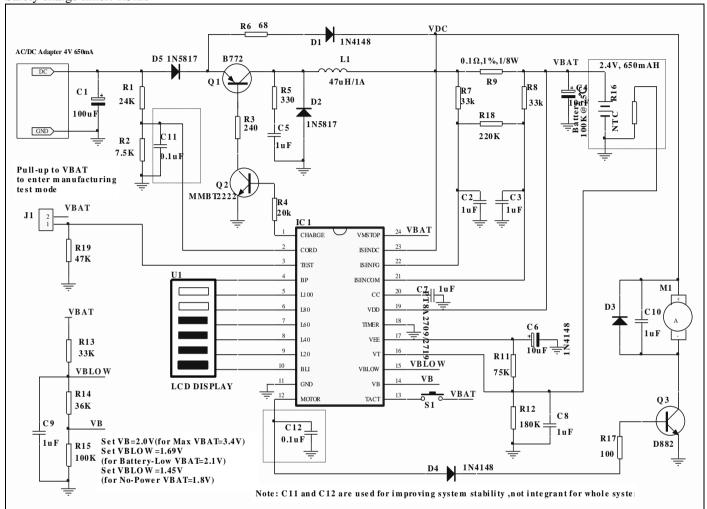


Figure 5: PT8A2709/19 LCD Display TACT Switch Application Circuit



4) Typical 2-Cell 1-hr Fast-Charge Application Circuit for PT8A2710

(SLIDE Switch Model with LED display)

AC/DC Adapter: 4V 650mA, Battery Capacity: 650-730mAh, Safety charge timer: 1.5hrs

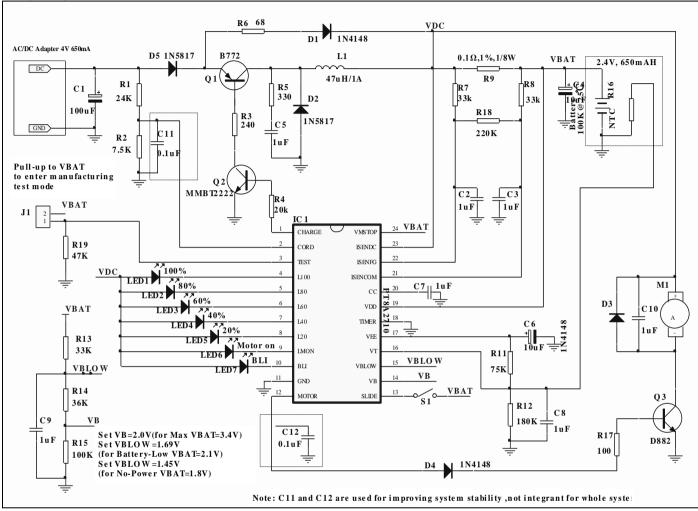


Figure 6: PT8A2710 LED Display SLIDE Switch Application Circuit



5) Typical 2-Cell 1-hr Fast-Charge Application Circuit for PT8A2711

(DSTACT Switch Model LED display)

AC/DC Adapter: 4V 650mA, Battery Capacity: 650-730mAh, Safety charge timer: 1.5hrs

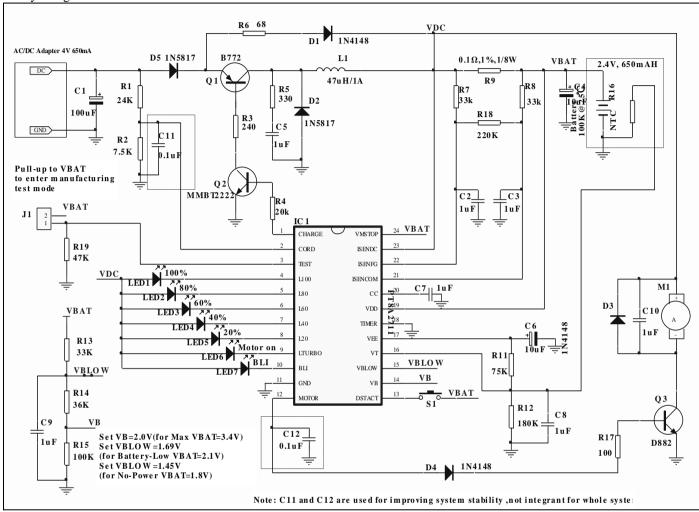


Figure 7: PT8A2711 LED Display Dual-speed DSTACT Switch Application Circuit



6) Typical 2-Cell 1-hr Fast-Charge Application Circuit for PT8A2712

(TACT Switch Model with LED display)

AC/DC Adapter: 4V 650mA, Battery Capacity: 650-730mAh, Safety charge timer: 1.5hrs

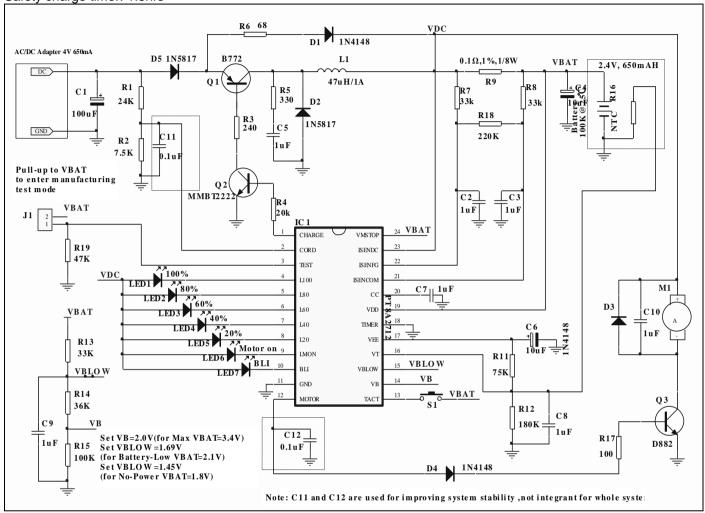


Figure 8: PT8A2712 LED Display TACT Switch Application Circuit



7) Typical 2-Cell 1-hr 1.4A Fast-Charge Application Circuit for PT8A2711

(DSTACT Switch Model LED display) AC/DC Adapter: 4.5V 1500mA, Battery Capacity: 1300mAh, Safety charge timer: 1.5hrs

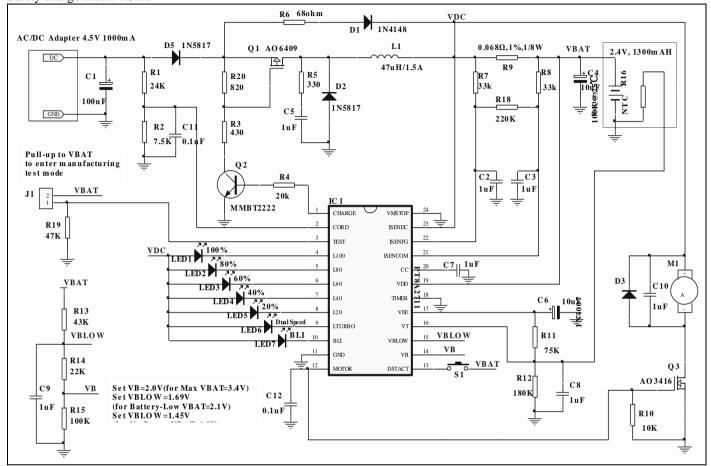


Figure 9: PT8A2711 1.4A fast-charge Application Circuit



Application instruction

1. Self-Discharge Calibration

During the idle state, the self-discharge rate of batteries is calibrated in the fuel-gauge counter. The self-discharge calibration rate is fixed at 1/128C per day, which corresponds to the NiMH battery characteristics at which the battery pack will be completely self-charged to zero in about 4 months in a storage temperature of about 20-35°C.

2. Setting Battery Temperature Measurement

The PT8A2707-12/2717-19 employs a thermistor with negative temperature coefficient to measure the battery's temperature. Since most thermistors are inherently nonlinear with respect to temperature, in order to reduce the effect of nonlinearity, a resistor-divider network in parallel with the thermistor is recommended. A typical application circuit is shown on the right side. The resistor-divider consists of RX and RY, which can be selected to adjust the peak temperature threshold (e.g. 55°C) as well as dT/dt slope according to the characteristics of the employed thermistors. (The calculation methods will be provided in datasheet later)

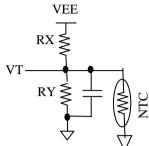


Figure 10

3. Setting Charging Current

The PT8A2707-12/2717-19 employs two internal references for DC/DC bulk converter to achieve constant current charging disregards to the input power supply voltages. For fast-charging, an internal reference voltage of 70mV is employed to compare with the voltage drop across the sensing resistor. For pre-charging or maintenance trickle-charging, an internal reference voltage of 7mV is employed to compare the voltage drop across the sensing resistor to achieve 1/10 of the fast-charging current. For example, when controlling a 700mA charging control, a 0.10Ω 1/8W sensing resistor is required. When it is in the pre-charging or trickle-charge status, the current is controlled at 70mA (This is already excluding the additional current that may flow from the adapter to LCD screen or LEDs or even to the motor when loaded unless motor is drawing all current from adapter). When a higher charging current would be used for 1-hr charging for a higher capacity battery, the sensing resistor should be scaled proportionally to maintain the same reference voltages. For examples:

Table 9: Charge Sensing Resistor Selection

Charging Current	Pre-Charging & Maintenance Current	Sensing Resistor			
700mA	70mA	0.10Ω, 1/8W			
1.03A	100mA	$0.068\Omega, 1/8W$			
1.3A	130mA	$0.054\Omega, 1/8W$			
1.6A	160mA	0.044Ω, 1/8W			

Basically, the sense resistor is inversely proportional to the charging current. The power dissipation is maintained at about 0.07W.

4. Setting dT/dt value to stop fast-charge

The PT8A2707-12/2717-19 employs thermistor (NTC) as battery temperature sensor. When the rate of temperature change (dT/dt) reaches certain value, fast-charge is terminated. When design external NTC sampling circuit, user should consider that appropriate dT/dt value is depended on fast charge time and battery type. Table 16 shows the dT/dt value for different fast charge time. Suggested NTC sampling circuit is based on this table and dT/dt characteristics of the devices.

Table 10: Rate of Temperature Change (dT/dt) to Terminate Fast-Charge

Fast charge time and measure time	dT/dt
T _{FCMAX} =90mins, Measure 90s	0.9°C/min
T _{FCMAX} =60mins, Measure 60s	1.38°C/min
T _{FCMAX} =30mins, Measure 30s	2.76°C/min
T _{FCMAX} =150mins, Measure 150s	0.54°C/min

5. Setting Motor-Over-Current Protection Threshold

By setting the VMSTOP pin, three motor-over-current voltage thresholds can be selected as follows:

Table 11: Motor-Over-Current Setting

VMSTOP	Over-Current Reference Voltage				
GND	300mV across sensing resistor				
0.6-1.0V	350mV across sensing resistor				
VDD	210mV across sensing resistor				



Table 12: Design	Reference fo	r Current Limit
------------------	--------------	-----------------

Charging Current	Sensing Resistor	VMSTOP Setting	Motor-over-current limit
		GND	$3.0 \text{A} (300 \text{mV} / 0.1 \Omega)$
700mA	0.10Ω , $1/8$ W	0.6-1.0V	$3.5A (350 \text{mV}/0.1\Omega)$
		VDD	$2.1A (210 \text{mV}/0.1\Omega)$
		GND	4.4A (300mV/0.068Ω)
1A	68mΩ, 1/8W	0.6-1.0V	$5A (350 \text{mV} / 0.068 \Omega)$
		VDD	$3A (210 \text{mV}/0.068\Omega)$
		GND	6.8A (300mV/0.044Ω)
1.6A	44mΩ, 1/8W	0.6-1.0V	$8A (350 \text{mV}/0.044 \Omega)$
		VDD	$4.8A (210 \text{mV}/0.044\Omega))$

6. Setting Maximum Battery Protection and Low-Battery Detection Thresholds

The ratio of RA: (RB+RC) sets the maximum battery detection and $-\triangle V$ detection window (+/-0.3V).

The ratio of (RA+RB): RC sets the Battery-Low detection threshold.

VB and VBLOW contain individual comparators with fixed internal reference.

VB internal comparator reference voltage 2.0V (V_{MB} comparator works when VBAT is above 2.4V)

VBLOW internal comparator reference voltage 1.45V (No-Power threshold)

VBLOW internal comparator second reference voltage 1.65V (Battery-Low threshold)

 $-\Delta V$ detection reference voltage range at VB = 1.5V to 2.1V

$$1.45V = V_{BL} \cdot \left(\frac{R_B + R_C}{R_A + R_B + R_C}\right)$$
$$2.0V = V_{MB} \cdot \left(\frac{R_C}{R_A + R_B + R_C}\right)$$

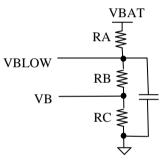


Figure 11

Example #1:

No-Power threshold =VBL=1.8V, Maximum Battery Voltage=VMB=3.4V

Assuming RC= $100k\Omega$, RA and RB can be calculated as follows:

 $RB = 36k\Omega$, $RA = 33k\Omega$

In this setting, $-\Delta V$ is measured for battery voltage from 2.55V to 3.58V. (The internal ADC measures -8mV such that at the 2-cell battery pack the actual $-\Delta V$ is 10mV (i.e. -5mV/cell). For the Battery-Low threshold, it will be about 2.0V

Example #2:

No-Power threshold =VBL=2.0V, Maximum Battery Voltage=VMB=3.5V

Assuming RC=100k Ω , RA and RB can be calculated as follows:

RB= $27k\Omega$, RA= $48k\Omega$

In this setting, $-\Delta V$ is measured for battery voltage from 2.625V to 3.675V. (The internal ADC measures -8mV such that at the 2-cell battery pack the actual $-\Delta V$ is 10mV (i.e. -5mV/cell). For the Battery-Low threshold, it will be about 2.25V

Example #3:

No-power threshold=VBL=2.7V (0.9V/cell), Maximum Battery Voltage=VMB=5.1V (1.7V/cell)

Assuming RC=100k Ω , RA and RB can be calculated as follows:


 $RB = 36k\Omega$, $RA = 118k\Omega$

In this setting, $-\Delta V$ is measured for battery voltage from 3.85V to 5.35V. (The internal ADC measures -8mV such that at the 3-cell battery pack the actual $-\Delta V$ is 15mV (i.e. -5mV/cell). For the Battery-Low threshold, it will be about 3.3V




Mechanical Information

SE (Lead free SOIC-24)

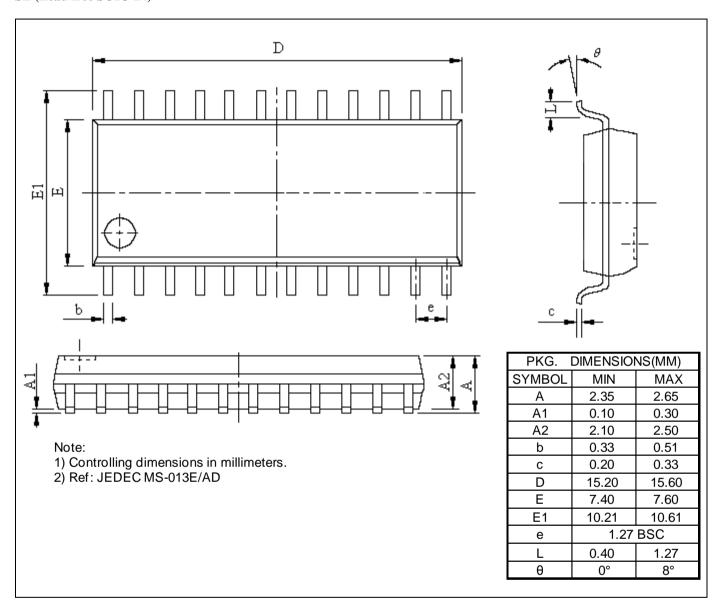



HE (Lead free SSOP-24)

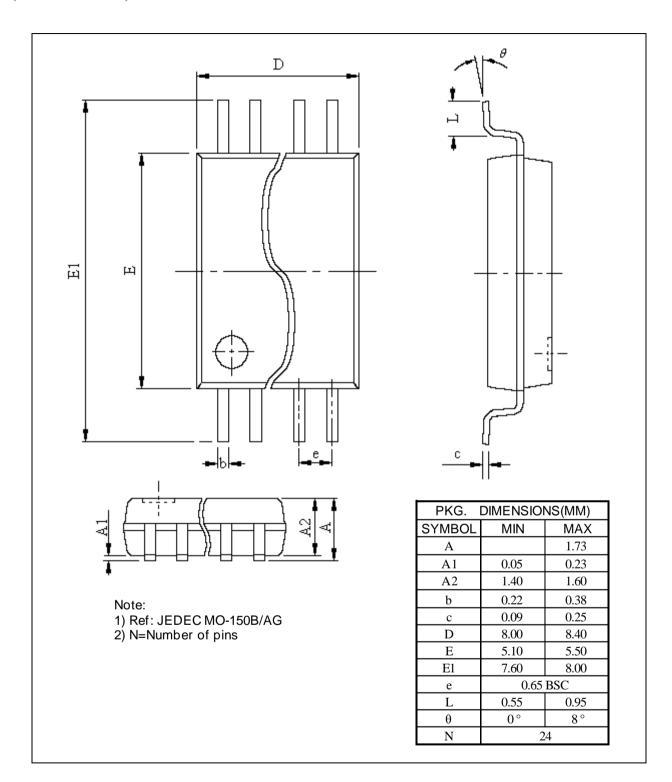



Ordering Information

Part No.	Package Code	Package
PT8A2707SE*	S	Lead free and Green 24-pin SOIC
PT8A2708SE*	S	Lead free and Green 24-pin SOIC
PT8A2709SE*	S	Lead free and Green 24-pin SOIC
PT8A2710SE*	S	Lead free and Green 24-pin SOIC
PT8A2711SE*	S	Lead free and Green 24-pin SOIC
PT8A2712SE	S	Lead free and Green 24-pin SOIC
PT8A2717SE*	S	Lead free and Green 24-pin SOIC
PT8A2718SE*	S	Lead free and Green 24-pin SOIC
PT8A2719SE*	S	Lead free and Green 24-pin SOIC
PT8A2707HE*	Н	Lead free and Green 24-pin SSOP
PT8A2708HE*	Н	Lead free and Green 24-pin SSOP
PT8A2709HE*	Н	Lead free and Green 24-pin SSOP
PT8A2710HE*	Н	Lead free and Green 24-pin SSOP
PT8A2711HE*	Н	Lead free and Green 24-pin SSOP
PT8A2712HE	Н	Lead free and Green 24-pin SSOP
PT8A2717HE*	Н	Lead free and Green 24-pin SSOP
PT8A2718HE*	Н	Lead free and Green 24-pin SSOP
PT8A2719HE	Н	Lead free and Green 24-pin SSOP

Note:

- E = Pb-free and Green
- Adding X Suffix= Tape/Reel
- *Contact Pericom for availability.

Pericom Semiconductor Corporation • 1-800-435-2336 • <u>www.pericom.com</u>

Pericom reserves the right to make changes to its products or specifications at any time, without notice, in order to improve design or performance and to supply the best possible product. Pericom does not assume any responsibility for use of any circuitry described other than the circuitry embodied in Pericom product. The company makes no representations that circuitry described herein is free from patent infringement or other rights, of Pericom.