

CFS50-AGV02X04 CFS50

MOTOR FEEDBACK SYSTEMS ROTARY INCREMENTAL WITH COMMUTATION



CFS50-AGV02X04 | CFS50

MOTOR FEEDBACK SYSTEMS ROTARY INCREMENTAL WITH COMMUTATION



Ordering information

Туре	Part no.		
CFS50-AGV02X04	1055093		
Other models and accessories -> www.sick.com/CFS50			

Illustration may differ

Detailed technical data

Performance			
Number of lines per revolution	2,000 ¹⁾		
Measuring step	90° /number of lines		
Commutation signals	4 pole pairs (See diagram, different commutation on request)		
Reference signal, number	1		
Reference signal, position	90° electric, logically gated with A and B		
Operating speed 6,000 min ⁻¹			
¹⁾ Number of lines from 1 1,000 and > 4,096 65,536 on request.			
Interfaces			
Communication interface	TTL/RS422		
Electrical data			
Supply voltage range	4.5 V DC 5.5 V DC		
Operating power consumption (no load)	≤ 60 mA ¹⁾		
Maximum output frequency	≤ 820 kHz		

¹⁾ Without load.

Mechanical data

Shaft version	Tapered shaft
Flange type / stator coupling	Resolver support
Dimensions	See dimensional drawing
Weight	0.1 kg
Moment of inertia of the rotor	10 gcm ²
Operating speed	12,000 min ⁻¹
Angular acceleration	≤ 200,000 rad/s²
Operating torque	0.2 Ncm
Start up torque	0.4 Ncm
Permissible shaft movement, radial stat- ic/dynamic	± 0.5 mm / ± 0.1 mm
Permissible shaft movement, axial stat- ic/dynamic	± 0.75 mm / ± 0.2 mm
Angular motion perpendicular to the rota- tional axis, static	± 0.005 mm/mm

CFS50-AGV02X04 | CFS50

MOTOR FEEDBACK SYSTEMS ROTARY INCREMENTAL WITH COMMUTATION

Angular motion perpendicular to the rota- tional axis, dynamic	± 0.0025 mm/mm
Life of ball bearings	3.6 x 10^9 revolutions
Connection type	Stranded cable, 15-pin, radial
Ambient data	
Operating temperature range	-20 °C +115 °C
Storage temperature range	-40 °C +125 °C, without package
Relative humidity/condensation	90 %, Condensation not permitted
Resistance to shocks	100 g, 10 ms (according to EN 60068-2-27)
Frequency range of resistance to vibrations	20 g, 10 Hz 2,000 Hz (according to EN 60068-2-6)
EMC	According to EN 61000-6-2 and EN 61000-6-3 $^{1)}$
Enclosure rating	IP40 (according to IEC 60529)


¹⁾ The EMC according to the standards quoted is achieved when the motor feedback system is mounted in an electrically conductive housing, which is connected to the central earthing point of the motor controller via a cable screen. The GND-(0 V) connection of the supply voltage is also grounded here. If other shielding concepts are used, users must perform their own tests.


Classifications

ECI@ss 5.0	27270501
ECI@ss 5.1.4	27270501
ECI@ss 6.0	27270590
ECI@ss 6.2	27270590
ECI@ss 7.0	27270501
ECI@ss 8.0	27270501
ECI@ss 8.1	27270501
ECI@ss 9.0	27270501
ETIM 5.0	EC001486
ETIM 6.0	EC001486
UNSPSC 16.0901	41112113


CFS50-AGV02X04 | CFS50 MOTOR FEEDBACK SYSTEMS ROTARY INCREMENTAL WITH COMMUTATION

Dimensional drawing (Dimensions in mm (inch))

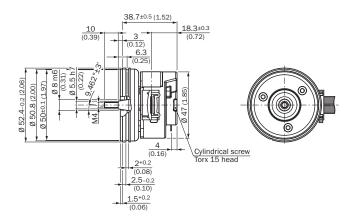

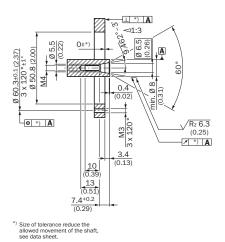

Proposed fitting

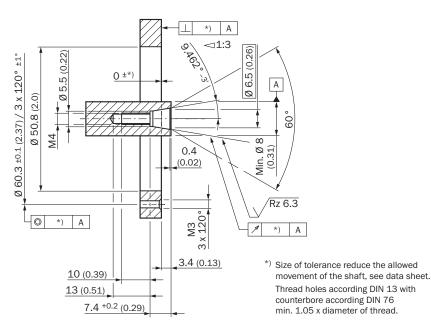


MOTOR FEEDBACK SYSTEMS ROTARY INCREMENTAL WITH COMMUTATION

PIN assignment


PIN	Color	Signal
1	Blue	Ground connection (GND)
2	Red	Supply voltage 5 V ± 10 % (U _s)
3	Yellow	Reference signal inverted (Z)
4	Purple	Reference signal (Z)
5	Brown	Increment signal inverted (Ā)
6	White	Increment signal (A)
7	Black	Increment signal inverted (B)
8	Pink	Increment signal (B)
9	White/Red	Commutation signal inverted (T)
10	White/Gray	Commutation signal (T)
11	White/Blue	Commutation signal inverted (S)
12	White/Yellow	Commutation signal (S)
13	White/Pink	Commutation signal inverted (R)
14	White/Green	Commutation signal (R)
15	Gray	Electronic setting of the commutation signals (SET0)

Diagram

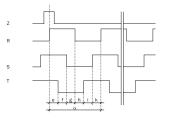

Polpairs	Number of poles	e, f, g, h, i, k	α
2	4	30°	180°
3	6	20°	120°
4	8	15°	90°
6	12	10°	60°
8	16	7.5°	45°
The angle information is related to a mechanical shaft rotation. Flank precision of the signals R, S, T ±1°.			

At constant speed, looking at the input shaft, and clockwise rotation



At constant rotational speed with regard to the input shaft and rotation in clockwise direction.

By connecting the two signals A and B, an output signal arises whose period durations tx1 ... tx4 have varying lengths. The differences are determined:

The Universities are operating to by the pulse/pulse ratio tolerance of the individual channels • by the tolerance in the 90° phase shift between A and B • by the frequency The times tt_____. the frequency The times tt_____. the diselity have to amount to 1/4 of the particular period duration T. The typical output frequency of the encoder is defined so that the max, time tx is smaller than 1.5 x T/4.

Recommended accessories

Other models and accessories → www.sick.com/CFS50

	Brief description	Туре	Part no.
Plug connecto	rs and cables		
	Head A: female connector, JST, 8-pin, straight Head B: male connector, M23, 17-pin, straight Cable: Incremental, unshielded, 1 m	DSL-2317-G01MJB7	2071332

CFS50-AGV02X04 | CFS50

MOTOR FEEDBACK SYSTEMS ROTARY INCREMENTAL WITH COMMUTATION



Brief description

Head A: female connector, terminal box, 8-pin, straight Head B: male connector, M23, 17-pin, straight Cable: Incremental, unshielded, 1 m

Туре	Part no.
DSL-2317-G01MJC7	2071331

SICK AT A GLANCE

SICK is one of the leading manufacturers of intelligent sensors and sensor solutions for industrial applications. A unique range of products and services creates the perfect basis for controlling processes securely and efficiently, protecting individuals from accidents and preventing damage to the environment.

We have extensive experience in a wide range of industries and understand their processes and requirements. With intelligent sensors, we can deliver exactly what our customers need. In application centers in Europe, Asia and North America, system solutions are tested and optimized in accordance with customer specifications. All this makes us a reliable supplier and development partner.

Comprehensive services complete our offering: SICK LifeTime Services provide support throughout the machine life cycle and ensure safety and productivity.

For us, that is "Sensor Intelligence."

WORLDWIDE PRESENCE:

Contacts and other locations -www.sick.com



Online data sheet

