

# ROITHNER LASERTECHNIK GIRDH

WIEDNER HAUPTSTRASSE 76 IO40 VIENNA AUSTRIA TEL. +43 I 586 52 43 -0, FAX. -44, OFFICE@ROITHNER-LASER.COM



# SPL785-20-4-PD

## 01 E100 E0 4



## TECHNICAL DATA

# **Pigtailed Coaxial Laser Diode**

## **Features**

- 785 nm
- SM Fiber
- Coaxial package
- Built-in PD

## **Applications**

- · Medical laser treatment
- Printing



## **Electrical Connection**

	Bottom View	Bottom View		
10 03	p-type		2	
LD PD	PIN	Function		
LD Y PD	1	LD Anode		
	2	LD Cathode, PD Anode		
	3	PD Cathode		
°2				

## Specifications (25°C)

Туре	Min.	Тур.	Max.	Unit			
Optical Specification							
Output Power P <sub>F</sub>	-	20	30	mW			
Center Wavelength λ <sub>C</sub>	775	785	795	nm			
Spectral Width Δλ	-	-	-	nm			
Fiber Characteristics							
Fiber Core Size	-	4	-	μm			
Fiber Length	-	0.8	1.0	m			
Connector	F	C/ST/SMA-90					
Electrical Specification							
Slope Efficiency E <sub>S</sub>	-	1.1	-	mW/mA			
Threshold Current Ith	-	35	-	mA			
Operation Current I <sub>O</sub>	-	115	-	mA			
Operation Voltage V <sub>f</sub>	-	2.0	-	V			
Monitor Current I <sub>m</sub>	-	0.5	-	mA			
PD Reverse Voltage	-	30	-	V			
Package Style	Coaxial						
Absolute Maximum Ratings							
Reverse Voltage V <sub>r</sub>	2.0			V			
Operating Temperature T <sub>Op</sub>	-10 +50			°C			
Storage Temperature T <sub>stg</sub>	-40 +85			°C			
Lead Soldering Temperature (10 sec.)	260		°C				

The above specifications are for reference purpose only and subjected to change without prior notice.




# ROITHNER LASERTECHNIK GIRDH

WIEDNER HAUPTSTRASSE 76





## Package Dimensons (Unit: mm)

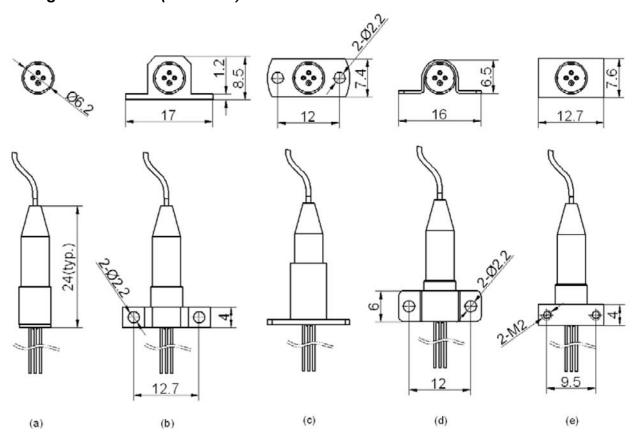



## Safety of Laser light

Laser Light can damage the human eyes and skin. Do not expose the eye or skin directly to any laser light and/or through optical lens. When handling the LDs, wear appropriate safety glasses to prevent laser light, even any reflections from entering to the eye. Focused laser beam through optical instruments will increase the chance of eye hazard.



• These LDs are emitting invisible light.

#### **Cautions**

### 1. Operating methode

- This LD shall change its forward voltage requirement and optical ouput power according to temperature change. Also, the LD will require more operation current to maintain same ouput power as it degrades. In order to maintain output power, use of APC (Automatic Power Control) is recommended. Which use monitor feedback to adjust the operation current.
- Confirm that electrical spike current generated by swithing on and off does not exceed the
  maximum operating current level specified herein above as absolute maximum rating. Also,
  employ appropriat countermeasures to reduce chattering and/or overshooting in the circuit.

## 2. Static Electricity

• Static electricity or electrical surges will reduce and degrade the reliability of the LDs. It is recommended to use a wrist trap or anti-electrostatic glove when handeling the product.

#### 3. Absolute Maximum Rating

Active layer of LDs shall have high current density and generate high electric field during its
operation. In order to prevent excessive damage, the LD must be operated strictly below
absolute maximum rating.

