

DATA SHEET

This gas analyzer (ZKJ) is capable of measuring the concentrations of NO, SO₂, CO₂, CO, CH₄, N₂O and O₂ components in sample gas.

e-Front runners

NO, SO₂, CO₂, CO, CH₄ and N₂O are measured by nondispersion infrared method (NDIR), while O₂ is measured by built-in type paramagnetic method sensor or externalmount type zirconia method sensor. A maximum of 5 components including O₂ (max. 4 components except for O₂ measurement) are simultaneously measurable.

The mass flow type twin detector of high sensitivity and reliability adopted in the infrared ray method detection block makes the measurement hardly affected by interfering components.

In addition, a microprocessor is built in and a large-size liquid crystal display is equipped for easier operation, higher accuracy and more functions.

Optimum as an analyzer unit of measurement system for combustion exhaust gas from refuse incinerator and boiler, or gas from different industrial furnaces.

FEATURES

1. Measure five components including O₂ simultaneously and continuously

Simultaneously and continuously measures up to four components out of NO, SO₂, CO, CO₂, CH₄ and N₂O, plus O₂, or up to totally five components.

- Hardly affected by interference by other gases The mass flow type twin detector of high sensitivity and reliability adopted makes the measurement hardly affected by interfering components, ensuring a stable operation.
- Equipped with abundant functions
 O₂ conversion, average value computation, automatic calibration, one touch calibration, upper/lower limit alarm, remote measurement range changeover, range identification signal output, etc. incorporated can configure applications to match particular uses.
- Easy-to-see large LCD unit The large LCD unit adopted allows observing easily the indication of all measured components and computation values.

The interactive operation facilitates setting.

- 19 inch rack mount structure The mainframe unitized to 19 inch rack type and electrical signal input/output terminal unit also unitized easily configure a gas analyzer system.
- 6. Maximum range ratio is 1 to 25 Measuring ranges are changeable.
- 7. Drift +/-1% FS/week (more than 0 to 200ppm range)



SPECIFICATIONS

Standard Specifications

Principle of measurement:

NO, SO₂, CO₂, CO, CH₄, N₂O;

- Non-dispersion infrared-ray absorption method
 - Single light source and double beams (double-beam system)
- O₂ ; Paramagnetic O₂ sensor (built in) or zirconia O₂ sensor (externally installed)

Measurable gas components and measuring range:

| | Minimum range | Maximam range |
|---------------------------|---------------|---------------|
| NO | 0 – 50ppm | 0 – 5000ppm |
| SO ₂ | 0 – 50ppm | 0 – 10vol% |
| CO ₂ | 0 – 20ppm | 0 – 100vol% |
| CO | 0 – 50ppm | 0 – 100vol% |
| CH ₄ | 0 – 200ppm | 0 – 100vol% |
| N ₂ O | 0 – 200ppm | 0 – 2000ppm |
| O₂ (built in) | 0 – 5vol% | 0 – 25vol% |
| O₂ (External Zirconia) | 0 – 5vol% | 0 – 25vol% |

- Max. 5 components measurement including O₂.
- Measuring range ratio $\leq 1:5 (O_2)$
 - ≤ 1:25

(except for O₂)

- Measuring ranges are changeable between the specified minimum and maximum range Settable one range or two ranges
- \bullet When only N₂O analyzer is used, make sure not to contain any components other than N₂O.

Multicomponent analyzers including N₂O analyzer + CO₂ analyzer are used for sludge incineration. In this case, the range of N₂O is 0 to 200ppm/500ppm, and the range of CO₂ is 0 to 10%/20%.

*For measurable components and possible combinations of measuring ranges, refer to Tables 1-(1) to (3).



EDS3-123m Date May. 23, 2011

ZKJ

ZKJ

Measured value indication:

Digital indication in 4 digits

- (LCD with back light)
- Instantaneous value of each component
- Instantaneous value after O₂ conversion (only in NO, SO₂, CO measurement with O₂)
- Average value after O₂ conversion (only in NO, SO₂, CO measurement with O₂)
- O2 average value

Analog output signals:

- * Inputs/outputs of analog signals are possible by combining with the input/ output terminal module.
- 4 to 20mA DC or 0 to 1V DC, non-isolated output ; 12 points max. max.load550 Ω . for 4 to 20 mA DC min.load 100k Ω . for 0 to 1V DC
- * Refer to Table 2, for the channel No. of displayed values and analog output signals.

Analog input signal:

- For signal input from externally installed O2 sensor.
 - Signal requirement;
 - (1) Signal from Fuji's Zirconia O₂ sensor (TYPE: ZFK7)
 - (2) 0 to 1V DC from an O_2 sensor Input section is not isolated. This feature is effective when an O_2 sensor is not built in.
 - (Depend on O_2 input signal, measured concentration indication and O_2 conversion.)

Relay contact output:

- 1a contact (250V AC/2A, resistive load)
 Instrument error, calibration error,
 range identification, auto calibration
 status, pump ON/OFF, peak alarm.
 1c contact (250V AC/2A, resistive load)
- selectable 6 outputs)
 - High/Low limit alarm contact output. Power disconnection alarm.
- * All relay contacts are isolated mutually and from the internal circuit.
- Contact input: No-voltage contact (ON/0V, OFF/5V

DC, 5mA flowing at ON)

- Remote range switch, auto calibration remote start, remote holding, average value resetting, pump ON/ OFF
- Isolated from the internal circuit with photocoupler. Contact inputs are not isolated from one another.

Transmission output:

- Solenoid valve drive signal for automatic calibration. Transistor output (100mA or less) Power supply: Voltage rating ; 100V to 240V AC
- Allowable range; 85V to 264V AC Frequency ; 50Hz/60Hz Power consumption; 250VA max. Inlet ; Conform to EN60320 Protection Class 1

Operating conditions:

Ambient temperature; -5°C to 45°C Ambient humidity ; 90% RH max., non-condensing

Storage conditions:

Ambient temperature; -20°C to 60°C Ambient humidity ; 100% RH max.,

non-condensing

| Dimensions (H x | W x D): |
|-------------------|---|
| | Analyzer main unit; |
| | 177 x 483 x 600mm |
| | Input/output terminal module; |
| | 164 x 318 x 55mm |
| Mass: | Approx. 22 kg (only Analyzer) |
| Finish color: | Front panel; Off-white (Munsell 10Y7.5/0.5 |
| | or equivalent) |
| | Casing; Plating, Steel-blue (gray) |
| Enclosure: | Steel casing, for indoor use |
| Material of gas- | contacting parts: |
| | Gas inlet/outlet; SUS304 |
| | Sample cell; SUS304, chloroprene rubber |
| | Infrared-ray transmitting window; CaF ₂ |
| | O2 sensor sample cell : SUS316 |
| | Internal piping; Toaron, Teflon |
| Gas inlet/outlet: | Rc ¹ /4 or NPT ¹ /4 internal thread |

Purge gas flow rate:1L/min (when required)

| Standard Fu | nctions |
|------------------|--|
| Output signal ho | - |
| | Output signals are held during manual and auto calibrations by activation of holding (turning "ON" its setting). The values to be held are the ones just before start calibration mode or setting value. |
| | It is selectable. Indication of instantaneous values will not be held. |
| Remote output I | - |
| | Output signal is held at the latest value or setting value by short-circuiting the remote output holding input terminals. Holding is maintained while the termi- nals are short-circuited. Indication of instantaneous values will not be held. |
| Switch ranges : | |
| Manuali | The switch ranges is available in manu- al, auto, and remote modes. Only pre- set switch method is effective. |
| Manual: Auto: | Allows range to switch by key operation. Allows range to switch from low to high range when 90%FS or more is available in the low range. Allows range to switch from high to low range when 80%FS or less is avail- |
| Remote: | able in the low range. No-voltage contact input (for measur- able components) Allows range to switch via an external signal when remote range switch input is received. When the contact input terminals for |
| Range identifica | each component are short-circuited, the first range is selected, and it is switched to the second range when the terminals are open. |
| | The present measuring range is identi- |
| Auto calibration | fied by a contact signal. The contact output terminals for each component are short-circuited when the first range is selected, and when the second range is selected, the ter- minals are open. |
| | Auto calibration is carried out periodi- |
| Auto calibrat | cally at the preset cycle. When a standard gas cylinder for calibration and a solenoid valve for opening/closing the gas flow line are prepared externally by the customer, calibration will be carried out with the solenoid valve drive contacts for zero calibration and each span calibration turned on/off sequentially at the set auto calibration timing. ion cycle setting: Auto calibration cycle is set. Sotting in variable within 1 to 00 hours (in |
| Gas flow time | Setting is variable within 1 to 99 hours (in increments of 1 hour) or 1 to 40 days (in increments of 1 day). e setting: |
| | The time for flowing each calibration gas in auto calibration is set. |

Settable within 60 to 900 seconds (in increments of 1 second) Auto calibration remote start: Auto calibration is carried out only once according to an external input signal. Calibration sequence is settable in the same way as the general auto calibration. Auto calibration is started by opening the auto calibration remote start input terminals after short-circuiting for 1.5 seconds or longer. Auto zero calibration: Auto zero calibration is carried out periodically at the preset cycle. This cycle is independent on "Auto calibradion" cycle. When zero calibration gas and solenoid valve for opening/closing the calibration gas flow line are prepared externally by the customer, zero calibration will be carried out with the solenoid valve drive contact for zero calibration turned on/off at the set auto zero calibration timing. Auto zero calibration cycle setting: Auto zero calibration cycle is set. Setting is variable within 1 to 99 hours (in increments of 1 hour) or Setting is variable within 1 to 40 days (in increments of 1 day) Gas flow time setting: The timing for flowing zero gas in auto zero calibration is set. Settable 60 to 900 seconds (in increments of 1 second) High/Low limit alarm: Alarm contact output turns on when measurement value reach to the preset high or low limit alarm value.

Contacts close when the channel value of each channel becomes larger than the high alarm limit value or smaller than the low alarm limit value.

Instrument error contact output: Contacts close at occurrence of analyzer error No. 1, 3 or 10. Calibration error contact output:

Contacts close at occurrence of manual or auto calibration error (any of errors No. 4 to 9).

Auto calibration status contact outputs:

Contacts close during auto calibration.

Pump ON/OFF contact output:

During measurement, this contact close. While calibration gas is flowing, this contact open. This contact is connected in power supply of pump, and stop the sample gas while calibration gas flowing.

ZKJ

Optional Functions

O₂ conversion: Conversion of measured NO, SO₂ and CO gas concentrations into values at standard O₂ concentration

Conversion formula:
$$C = \frac{21-On}{21-Os} \times Cs$$

- C : Sample gas concentration after O₂ conversion
- Cs : Measured concentration of sample gas
- Os: Measured O₂ concentration (Limit settable, 1 to 20%O₂)
- On: Standard O₂ concentration (value changeable by setting; 0 to 19%O₂)

Average value after O₂ conversion and O₂ average valu

Used for averaging is the moving average method in which sampling is carried out at intervals of 30 seconds.

(Output is updated every 30 seconds. It is the average value in the determined period of time just before the latest updating.)

Averaging time is settable within 1 to 59 minutes (in increments of 1 minute) or 1 to 4 hours (in increments of 1 hour).

Average value resetting:

The above-mentioned output of average value is started from the initial state by opening the average value resetting input terminals after short-circuiting for 1.5 seconds or longer.

Output is reset by short-circuiting and restarted by opening.

CO concentration peak count alarm:

(added only for CO/O2 measurement)

Alarm output turns on according to the preset concentration and count. Whenever the instantaneous value of CO exceeds the preset concentration value, count increments. If the count

exceeds the preset value in one hour, the alarm contacts close.

Communication function:

RS-232C (9pins D-sub) Half-duplex bit serial Start-stop synchronization Modbus[™] protcol Contents: Read/Wright parameters Read measurement concentration and instrument status Remark: When connecting via RS-485 interface, a RS-232C ↔ RS-485

converter should be used.

Performance

| Repeatability | : ±0.5% of full scale |
|------------------|--------------------------------------|
| Linearity | : $\pm 1\%$ of full scale |
| Zero drift | : ±1% of full scale/week |
| | (±2% of full scale/week; range be |
| | tween 0 to 50ppm and 0 to 200ppm) |
| | (±2% of full scale/day; smaller than |
| | 0 to 50ppm range) |
| Span drift | : ±2% of full scale/week |
| | (±2% of full scale/day; smaller than |
| | 0 to 50ppm range) |
| Response time | : |
| (for 90% FS resp | oonse) |
| | |

| 15 sec electrical response |
|--------------------------------------|
| Within 60 seconds including replace- |
| ment time of sampling gas (when gas |
| flow rate is 0.5L/min) |
| Gas replacement time depends on the |
| number of measuring components, and |
| measuring range |
| |

| Flow rate | : 0.5L / min ±0.2L / min | | | | | |
|-----------------|--|--|--|--|--|--|
| Temperature | : 0 to 50°C | | | | | |
| Pressure | : 10 kPa or less (Gas outlet side should be open to the atmospheric air.) | | | | | |
| Dust | : 100µg/Nm ³ or less in particle size of 1µm or less | | | | | |
| Mist | : Unallowable | | | | | |
| Moisture | : Below a level where saturation occurs at 2°C (condensation unallowable). | | | | | |
| Corrosive comp | onent: | | | | | |
| | 1 ppm or less | | | | | |
| Standard gas fo | r calibration: | | | | | |
| | Zero gas ; Dry N ₂ | | | | | |
| | Span gas ; Each sample gas having concentration 90 to 100% of its measuring range (recommended). Gas beyond concentration 100%FS is unusable. In case a zirconia O₂ analyzer is installed externally and calibration is carried out | | | | | |
| | on the same calibration gas line: Zero gas ; Dry air or atmospheric air (provided without CO ₂ sen sor) | | | | | |
| | Span gas ; For other than O ₂ measure ment, each sample gas having concentration 90 to 100% of its measuring range. For O ₂ measurement, O gas of 1 to 2 vol%. | | | | | |
| | gas of 1 to 2 vor70. | | | | | |

Installation Requirements

- Indoor use. (Select a place where the equipment does not receive direct sunshine, draft/rain or radiation from hot substances. If such a place cannot be found, a roof or cover should be prepared for protection.)
- Avoide a place where receives heavy vibration
- Select a place where atmospheric air is clean

EC Directive Compliance

The product conforms to the requirements of the Low Voltage Directive 73/23/EEC and EMC directive 89/336/ EEC (as amended by Directive 92/31/EEC), both as amended by Directive 93/68/EEC.


It conforms to following standards for product safety and electromagnetic compatibility ;

| EN61010-1 : 2001 | Safety requirements for electrical |
|------------------|------------------------------------|
| | equipment for measurement, control |
| | and laboratory use. |
| | "Installation Category II" |
| | "Pollution Degree 2" |
| | |


EN61326-1 : 1997, AI: 1998, A2: 2001 Electrical equipment for measurement, control and laboratory use — EMC re-

quirements. *The product mounted in a steel enclosure conforms to the requirements of EMC directive. ZKJ

Principle diagram of NDIR type measurement (For NO, SO₂, CO₂, CO, CH₄, N₂O)

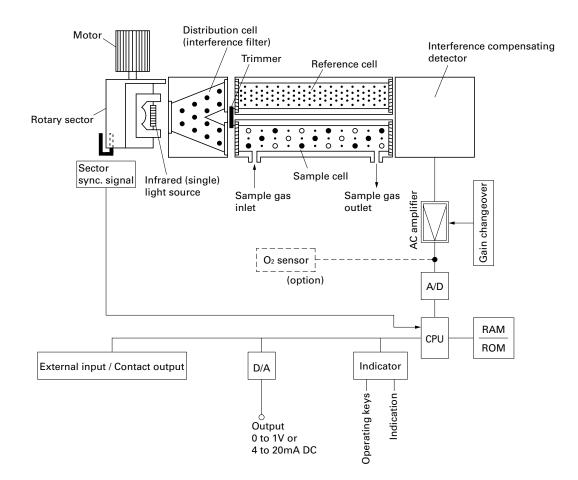


Principle diagram of paramagnetic type measurement (For O₂)

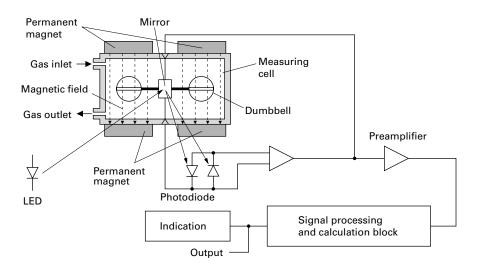

Example configuration of gas sampling system

The following illustrates a typical system configuration for five component gas measurement for monitoring combustion exhaust gas from boiler, refuse incinerator, etc.

Contact FUJI ELECTRIC for system configuration matching the particular use or further information.

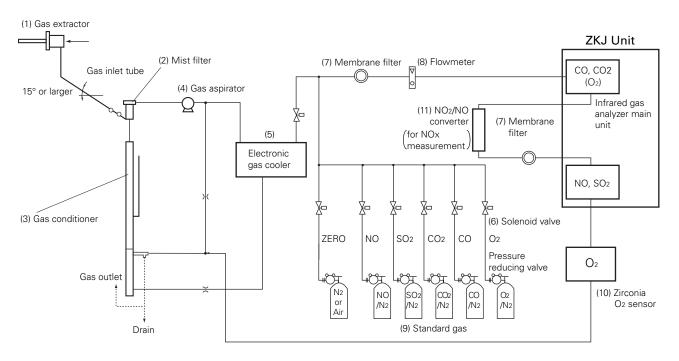

Functions of Individual Components

- (1) Gas extractor: Gas extractor with a heating type stainless steel filter of standard mesh 40µm (2) Mist filter: For separation of drain and removal of dust and mist (3) Safety drain trap: Prevention of drain from being sucked and composite operation of constantpressure bubbler (4) Gas aspirator: For aspiration of sample gas (sample gas flow rate approx. 2L/min) (5) Electronic gas cooler: Dries the moisture in sample gas to a dew point of approx. 3°C. (6) Solenoid valve: Used for introducing calibration gas.
- (7) Membrane filter:

PTFE filter used to eliminate fine dust particles and permit monitoring of dust adhering condition on the front panel of the gas analyzer.

- (8) Flowmeter: Adjusts and monitors the flow rate of sample gas.
- (9) Standard gas: Reference gas used for calibrating zero and span of the analyzer. Total 6 cylinders required for air, zero gas, span gas NO, SO₂, CO, CO₂ and O₂.

(10)Zirconia O2 sensor:

- (This is not necessary in case when the zirconia type O₂ sensor is built-in.) External zirconia oxygen sensor used for measuring the oxygen concentration (0 to 25%) in sample gas.
 (11)Converter: Added to NOx analyzer. A special catalyst material for efficient conversion of NO₂ gas to NO is used.
- *(Note) For each gas sampling device, refer to the separate Data Sheet for each gas sampling device.

CODE SYMBOLS

— Digit No. of code

| | 1 | | | | | |
|----------|--|---|---|---|------------|----------------|
| Digit | -Custom a | | cription | | note | |
| 4 | <custom sp<br="">Standard</custom> | pecifications | | | | F |
| 5 | | le compone | nt (SO ₂ , CO ₂ , | CO, CH ₄ , N ₂ O) > | | |
| | 1st | 2nd | 3rd | 4th | 1 | |
| | componet | componet | componet | componet | - | |
| | NO | | | | | P |
| | SO ₂ CO ₂ | | | | | |
| | CO | | | | | В |
| | CH₄ | | | | | E |
| | NO | SO ₂ | | | | F |
| | NO | со | | | | Н |
| | CO ₂ | CO | | | | G |
| | NO NO | SO ₂ | CO CO ₂ | со | | |
| | N2O | SO ₂ | | | note 10 | Q |
| | N ₂ O | CO ₂ | | | note 10 | R |
| | NO | N ₂ O | CO ₂ | | note 10 | S |
| | SO ₂ | N ₂ O | CO ₂ | | note 10 | T |
| | N ₂ O | CO ₂ | со | | note 10 | |
| | CH₄ | N ₂ O | CO ₂ | | note 10 | V |
| 6 | NO | SO ₂ | N ₂ O | CO ₂ | note 10 | W |
| 0 | None | le compone | nt (O2)> | | | Y |
| | | conia type (| D2 sensor (Mo | odel : ZFK7) | note 1b) | Å |
| | External O ₂ | | | | note 1a)b) | B |
| | Built-in par | , amagnetic t | ype O₂ sensc | or | | С |
| 7 | <gas inlet="" o<="" td=""><td>outlet></td><td></td><td></td><td></td><td></td></gas> | outlet> | | | | |
| | Rc ¹ /4 | | | | noto 0-1 | 0 |
| | Rc ¹ /4, with NPT ¹ /4 | purging | | | note 2a) | 1 |
| | NPT ^{1/4} NPT ¹ /4, with | n puraina | | | note 2a) | 3 |
| | Resin(ø6) | purging | | | note 2b) | $\ddot{4}$ |
| 8 | <revision of<="" td=""><td>:ode></td><td></td><td></td><td></td><td>4</td></revision> | :ode> | | | | 4 |
| 9 | <accessori< td=""><td>es></td><td></td><td></td><td></td><td></td></accessori<> | es> | | | | |
| | None | | | | | Y |
| | | | to caliblatior | n, with cable | | A |
| | With slide r | | ard, and cab | la | | |
| 10 | | | supply cable | | note 3 | |
| | | | ble rated 125 | | | J |
| | In English, | Power cable | rated 125V | (UL) | | E |
| | | | ly rated 250V | / (CEE) | | U |
| 11 | | | component | | note 4 | |
| 12 | Minimum r | | Maximum | | noto F | 1 E |
| | 0 to 20ppm 0 to 50ppm | | 0 to 500pp 0 to 1000p | | note 5 | A F |
| | 0 to 100ppm | | 0 to 2000 | | | BG |
| | 0 to 200ppr | | 0 to 500p | | | CE |
| | 0 to 200ppr | | 0 to 2000 | | | C G |
| | 0 to 200ppr | | 0 to 5000p | opm | | СН |
| | 0 to 500ppr | | 0 to 1% | | | 트긠 |
| | 0 to 1000pp | | 0 to 2% | | | F K G L |
| | 0 to 2000pp 0 to 5000pp | | 0 to 5% 0 to 10% | | | HM |
| | 0 to 1% | ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,, | 0 to 20% | | | JN |
| | 0 to 2% | | 0 to 10% | | | КМ |
| | 0 to 2% | | 0 to 50% | | | КР |
| | 0 to 10% | | 0 to 20% | | | MN |
| 10 | 0 to 10% | | 0 to 100% | | not- 1 | MR |
| 13 14 | <measuring Minimum r</measuring | | d component Maximum | | note 4 | |
| ' | None | ango | None | i lange | | Y - Y |
| | 0 to 50ppm | | 0 to 1000p | opm | | A - F |
| | 0 to 100ppr | n | 0 to 2000 | opm | | B - G |
| | 0 to 200ppr | | 0 to 500pp | | | C - E |
| | 0 to 200ppr | | 0 to 2000p | | | C - G C - H |
| | 0 to 200ppr 0 to 500ppr | | 0 to 5000p 0 to 1% | ш | | E - J |
| | 0 to 500ppr | | 0 to 1% | | | F - K |
| | 0 to 5000pp | | 0 to 10% | | | H - M |
| | 0 to 1% | | 0 to 20% | | | J - N |
| | 0 to 2% | | 0 to 50% | | | K - P |
| | 0 to 10% | | 0 to 20% | | | M - N M - P |
| 15 | 0 to 10% | a ranges 2 | 0 to 100% component | | note 4 | M - R |
| 15 | Minimum r | | Maximum | | 1018 4 | |
| | None | | None | | | YY |
| | 0 to 50ppm | | 0 to 1000p | | | A F |
| | 0 to 100ppr | | 0 to 1000 | | | BF |
| | 0 to 100ppr | | 0 to 2000p | | | BG |
| | 0 to 200ppr | | 0 to 500pp | | | C E C G |
| | 0 to 200ppr 0 to 200ppr | | 0 to 2000p 0 to 5000p | | | CGCH |
| | 0 to 200ppr | | 0 to 5000 | | | EJ |
| | 0 to 1000pp | | 0 to 2% | | | F K |
| | 0 to 2000pp | om | 0 to 5% | | | GL |
| | 0 to 5000pp | om | 0 to 10% | | | нм |
| | 0 to 1% | | 0 to 20% | | | JN |
| | 0 to 2% | | 0 to 10% | | | KP |
| | 0 to 10% 0 to 10% | | 0 to 20% 0 to 100% | | | M N M R |
| L | | | | | I | |

| | | | | 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 1 | 7 18 19 20 | 21 22 23 | - Digit No. |
|-------|---|-------------------------|------------|--|------------|----------|-------------|
| Digit | Descrip | tion | note | Z K J F 4 - - | | - | of code |
| 17 | | | note 4 | | | | |
| 18 | Minimum range | Maximum range | | | | | |
| | None | None | | | YY | | |
| | 0 to 50ppm | 0 to 1000ppm | | | 4 F | | |
| | 0 to 100ppm | 0 to 2000ppm | | | 3 G | | |
| | 0 to 200ppm | 0 to 500ppm | | | CE | | |
| | 0 to 200ppm | 0 to 2000ppm | | | GG | | |
| | 0 to 200ppm | 0 to 5000ppm | | | СН | | |
| | 0 to 500ppm | 0 to 1% | | | EJ | | |
| | 0 to 1000ppm | 0 to 2% | | | F K | | |
| | 0 to 5000ppm | 0 to 10% | | | IM | | |
| | 0 to 1% | 0 to 20% | | | JN | | |
| | 0 to 2% | 0 to 50% | | | K P | | |
| | 0 to 10% | 0 to 20% | | n l | MN : | | |
| | 0 to 10% | 0 to 100% | | r I | /IR | | |
| 19 | <o2 1st="" analyzer,="" range=""></o2> | | note 4 | | | | |
| 20 | Minimum range | Maximum range | | | | | |
| | None | None | | | ΥY | | |
| | 0 to 5% | 0 to 25% | | | LV | | |
| | 0 to 10% | 0 to 25% | | | ΜV | | |
| | Other | | | | ΖZ | | |
| 21 | <output></output> | | | | | | |
| | 4 to 20mA DC | | | | | A | |
| | 0 to 1V DC | | | | | В | |
| | 4 to 20mA DC + Commu | | | | | С | |
| | 0 to 1V DC + Communic | | | | | D | |
| 22 | <o2 and="" ave<="" conversion="" o2="" td=""><td>rage value output></td><td>note 6</td><td></td><td></td><td></td><td></td></o2> | rage value output> | note 6 | | | | |
| | None | | note 7 | | | Y | |
| | With O2 conversion output | ut | | | | A | |
| | With peak alarm | | | | | В | |
| | With O2 conversion output | | | | | С | |
| 23 | <adjustment, des<="" range="" td=""><td></td><td></td><td></td><td></td><td></td><td></td></adjustment,> | | | | | | |
| | For combustion exhaust | | note 8a) | | | В | |
| | For combustion exhaust | | | | | E | |
| | For combustion exhaust | t gas (specified range) | note 8a)b) | | | F | |
| | Unit mg/m ³ | | | | | | |
| | For combustion exhaust | t gas, Unit mg/m³ | note 8b) | | | G | |
| | Others | | note 9 | | | Z | l |

Note 1 a) When "B" is specified at the 6th digit, O₂ sensor signal has to be set as 0-1V DC linear corresponding to full scale. b) External Zirconia O2 sensor and external O2 analyzer are not included in the scope of supply, and has to be separately ordered.

Select appropriate code according to operationg power supply voltage in the final destination. Measuring range can be selected within either the minimum or maximum range. Note 4 (Within min. or max. range, you can change the actual range settings locally.) Initial setting from Fuji factory is Min. range for the 1st range, and Max. range for the 2nd range. When range preset at Fuji factory is required, please select "specified range" at 23rd digit and inform Fuji of specified range table. Refer to Table 1, for possible combination of measuring components and ranges in the data sheet.

"1E" can be specified at 11th & 12th digits, ONLY for CO2 measurement. Note 5

In this case, be sure to select "with purging" at 7th digit.

Note 6 O_2 conversion is calculated only for NO, SO₂ and CO.

Both average value output after O₂ calculation and O₂ average value output are provided at the same time. a) Peak count alarm can be added only for CO measurement. **Note 7** When "Y" is specified at the 6th digit, 22nd digit always has to be specified as "Y".

Note 8 a) If you would like Fuji to deliver ZKJ analyzer with specific range setting, select "specified range" and separately inform Fuji of the actual range of each component together with your purchase order.

b) In case that the measurement unit is specified as "mg/m3," it is necessary to select "unit : mg/m3" (Code "F" or "G") at the 23rd digit.

Please refer to the table shown below for the corresponding range code based on "mg/m3".

| | | | Corresponding range in mg/m ³ or g/m ³ | | | | | | |
|------------|------------|------------|--|-------------------------|------------------------|-------------------------|------------------------|-------------------------|--|
| In ppm | | | N | 0 | | SO ₂ | CO | | |
| Range code | Min. range | Max. range | Min. range | lin. range Max. range | | Max. range | Min. range | Max. range | |
| AF | 0-50ppm | 0-1000ppm | 0-70mg/m ³ | 0-1300mg/m ³ | 0-150mg/m ³ | 0-2800mg/m ³ | 0-65mg/m ³ | 0-1250mg/m ³ | |
| BG | 0-100ppm | 0-2000ppm | 0-140mg/m ³ | 0-2600mg/m ³ | 0-300mg/m ³ | 0-5500mg/m ³ | 0-130mg/m ³ | 0-2500mg/m ³ | |
| CH | 0-200ppm | 0-5000ppm | 0-280mg/m ³ | 0-6600mg/m ³ | 0-600mg/m ³ | 0-14g/m ³ | 0-250mg/m ³ | 0-6250mg/m ³ | |

Note 9 When "Z" is specified at the 23rd digit, a gas composition table of actual measued gas has to be sent to Fuji together with your purchase order.

Note 10 When only N_2O analyzer is used, make sure not to contain any components other than N_2O . Multicomponent analyzers including N₂O analyzer + CO₂ analyzer are used for sludge incineration. In this case, the range of N₂O is 0 to 200ppm/500ppm, and the range of CO₂ is 0 to 10%/20%.

Note 2 a) When "H", "L" and "M" with purging are specified at 5th digit, only one set of gas inlet/outlet is provided. In this case, NO₂/NO converter cannot be mounted in between of two measuring cells. b) Resin coupling with purging cannot be manufactued.

Note 3 Rated voltage and plug type of the attached power cable is different depending on the code "J," "E" and "U" in the 10th digit.

Table 1. Measurable component and range – availability check table –

- (1) Components of single-component analyzer and double-component analyzer (NO/CO), and
 - CO of three-component analyzer (NO/SO₂/CO)

As shown in the range code, when "P", "A", "D", "B", and "E" are specified at 5th digit, each component is given at 11th and 12th digits. When "H" is specified, NO is given at 11th and 12th digits and CO at 13th and 14th digits. When "L" is specified, CO is given at 15th and16th digits.

| | Range code | 1E | AF | BG | СН | EJ | FK |
|--------------------------|-----------------|----|----------------------|----|-----------------------|----|-------------------|
| Code symbol 5th digit | Rang | | 0-50ppm 0-1000ppm | | 0-200ppm 0-5000ppm | | 0-1000ppm 0-2% |
| P,H | NO | | 0 | 0 | 0 | | |
| А | SO ₂ | | 0 | 0 | 0 | 0 | |
| D | CO ₂ | 0 | 0 | 0 | 0 | 0 | 0 |
| B,H,L | CO | | 0 | 0 | 0 | 0 | 0 |
| E | CH4 | | | | 0 | 0 | 0 |

| | Range code | | GL | HM | JN | KM | KP | MR | CG |
|-------------|------------------|-------|------|-----------|-------|-------|-------|--------|-----------|
| Code symbol | | Range | | 0-5000ppm | | | | 0-10% | 0-200ppm |
| 5th digit | Components | | 0-5% | 0-10% | 0-20% | 0-10% | 0-50% | 0-100% | 0-2000ppm |
| P,H | NO | | | | | | | | |
| А | SO ₂ | | | | | 0 | | | |
| D | CO ₂ | | 0 | 0 | 0 | | 0 | 0 | |
| B,H,L | CO | | | 0 | 0 | | 0 | 0 | |
| E | CH4 | | 0 | 0 | 0 | | 0 | 0 | |
| Q | N ₂ O | | | | | | | | 0 |

⊖: Measurable

(2) NO/SO₂ of double-component analyzer (NO/SO₂), three-component analyzer (NO/SO₂/CO) and four-component analyzer (NO/SO₂/CO₂/CO)

| | | Measurable components | 2nd component SO ₂ | | |
|-----------------------|-------------------------------------|-------------------------------------|-------------------------------|-----------------------|-----------------------|
| | | Code symbol, 13th, and 14th digits. | AF | BG | СН |
| Measurable components | Code symbol, 11th, and 12th digits. | 2nd 1st | 0-50ppm 0-1000ppm | 0-100ppm 0-2000ppm | 0-200ppm 0-5000ppm |
| 1st component, | AF | 0-50ppm 0-1000ppm | 0 | 0 | |
| NO | BG | 0-100ppm 0-2000ppm | 0 | 0 | |
| | СН | 0-200ppm 0-5000ppm | | | 0 |

Selection of NO/SO₂ when "F", "L", and "M" are specified at 5th digit of the code symbol.

○ : Combination is available.

(3) CO₂/CO of double-component analyzer (CO₂/CO) and 4-component analyzer (NO/SO₂/CO₂/CO)

| | | Measurable components | | | | | | | | | |
|--------------------------|---------------|-----------------------|----------------------|-----------------------|-----------------------|------------------|-------------------|--------------------|---------------|----|-----------------|
| | | Range code | AF | BG | СН | EJ | FK | HM | JN | KP | MR |
| Measurable components | Range code | 2nd 1st | 0-50ppm 0-1000ppm | 0-100ppm 0-2000ppm | 0-200ppm 0-5000ppm | 0-500ppm 0-1% | 0-1000ppm 0-2% | 0-5000ppm 0-10% | 0-1% 0-20% | | 0-10% 0-100% |
| 1st component, | AF | 0-50ppm 0-1000ppm | 0 | 0 | 0 | | | | | | |
| CO ₂ | BG | 0-100ppm 0-2000ppm | 0 | 0 | 0 | 0 | | | | | |
| | СН | 0-200ppm 0-5000ppm | 0 | 0 | 0 | 0 | | | | | |
| | EJ | 0-500ppm 0-1% | | | | 0 | 0 | | | | |
| | FK | 0-1000ppm 0-2% | | | | | 0 | | | | |
| | GL | 0-2000ppm 0-5% | | | | | | 0 | | | |
| | нм | 0-5000ppm 0-10% | | | | | | 0 | 0 | | |
| | JN | 0-1% 0-20% | | | | | | | 0 | 0 | |
| | КР | 0-2% 0-50% | | | | | | | | 0 | |
| | MP | 0-10% 0-100% | | | | | | | | | 0 |
| | MN | 0-10% 0-20% | 0 | 0 | 0 | 0 | | | | | |

When "G" is specified at 5th digit, CO_2 is given at 11th and 12th digits, and CO at 13th and 14th digits. When "M" is specified, CO_2 is given at 15th and 16th digits, and CO at 17th and 17th digits.

 \bigcirc : Combination is available.

(4) N2O/CO2 of 2-component analyzer N2O/CO2, 3-component analyzer NO/N2O/CO2, SO2/N2O/CO2, N2O/CO2, CO2/CO, CH4/N2O/CO2 and 4-component analyzer (NO/SO2/N2O/CO2)

Range code: When code symbol is "R" or "U", N₂O is 11th and 12th digit, CO₂ is 13th and 14th digit. When code symbol is "S", "T" or "V", N₂O is 13th and 14th digit, CO₂ is 15th and 16th digit When code symbol is "W", N₂O is 15th and 16th digit, CO₂ is 17th and 18th digit

| | | Measurable components | 2nc compone | - |
|-----------------------|---------------|-----------------------|----------------|-------|
| | | Range code | MN | 1 |
| Measurable components | Range code | | 0-10% | 0-20% |
| 1st component, N2O | CE | 0-200ppm 0-500ppm | 0 | |

 \bigcirc : Combination is available.

(5) CO₂ range selection of 3-component analyzer (N₂O/CO₂/CO)

Range code: N_2O is 11th and 12th digit, CO_2 is 13th and 14th, CO is 15th and 16th digit. The range code of CO_2 is "MN".

| | | Measurable components | 2nd component, CO |
|-----------------------|---------------|-----------------------|-----------------------|
| | | Range code | BF |
| Measurable components | Range code | | 0-100ppm 0-1000ppm |
| 1st component, N2O | CE | 0-200ppm 0-500ppm | 0 |

 \bigcirc : Combination is available.

(6) SO₂ range selection of 3-component analyzer (SO₂/N₂O/CO₂)

Range code: SO₂ is 11th and 12th digit, N₂O is 13th and 14th, CO₂ is 15th and 16th digit. The range code of CO₂ is "MN".

| | | ine range eee | |
|-----------------------------------|---------------|--------------------------|-----------------------|
| | | Measurable components | 2nd component, N₂O |
| | | Range code | CE |
| Measurable components | Range code | | 0-200ppm 0-500ppm |
| 1st component, SO ₂ | AF | 0-50ppm 0-1000ppm | 0 |
| | | | |

 \bigcirc : Combination is available.

(7) CH4 range selection of 3-component analyzer (CH4/N2O/CO2)

Range code: CH₄ is 11th and 12th digit, N₂O is 13th and 14th, CO₂ is 15th and 16th digit. The range code of CO₂ is "MN".

| | | Measurable components | 2nd component, N2O |
|-----------------------|---------------|--------------------------|-----------------------|
| | | Range code | CE |
| Measurable components | Range code | | 0-200ppm 0-500ppm |
| 1st component, CH4 | СН | 0-200ppm 0-5000ppm | 0 |

 \bigcirc : Combination is available.

(8) NO/SO₂/N₂O and 4-component analyzer (NO/SO₂/N₂O/CO₂)


Range code: NO is 11th and 12th digit, SO₂ is 13th and 14th, N₂O is 15th and 16th , CO₂ is 17th and 18th digit. The range code of CO₂ is "MN".


| | | Measurable components | 2nd component, SO₂ | 3nd component, N₂O |
|--------------------------|---------------|--------------------------|-----------------------|-----------------------|
| | | Range code | AF | CE |
| Measurable components | Range code | | 0-50ppm 0-1000ppm | 0-200ppm 0-500ppm |
| 1st component, NO | AF | 0-50ppm 0-1000ppm | 0 | 0 |
| | BG | 0-100ppm 0-2000ppm | 0 | 0 |

 \bigcirc : Combination is available.


OUTLINE DIAGRAM (Unit: mm)

<Analyzer main unit>

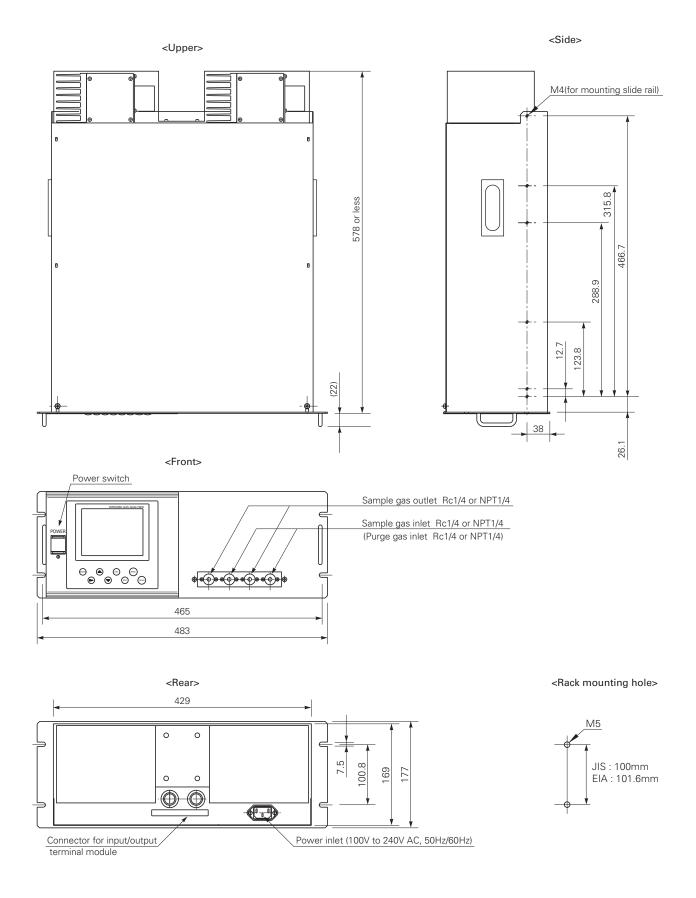


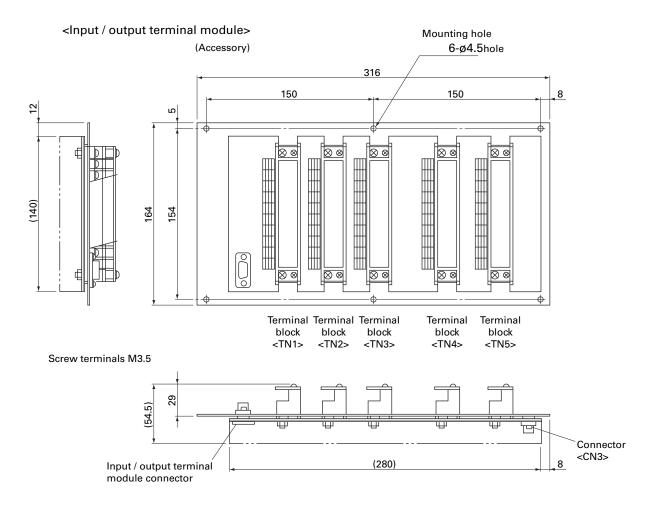

<Cable for connecting input / output terminal> (Accessory)



<Dimensions for mounting input / output terminal module>

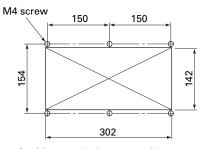


Cut M4 screw holes at 6 positions. Drill a rectangular hole of 302×142 mm or more in the center.

OUTLINE DIAGRAM OF ACCESSORY SLIDE RAIL (Unit: mm)

Model : 305A-24/Accuride International Inc. compatible.

* The slide rails are attached to this equipment when designated.

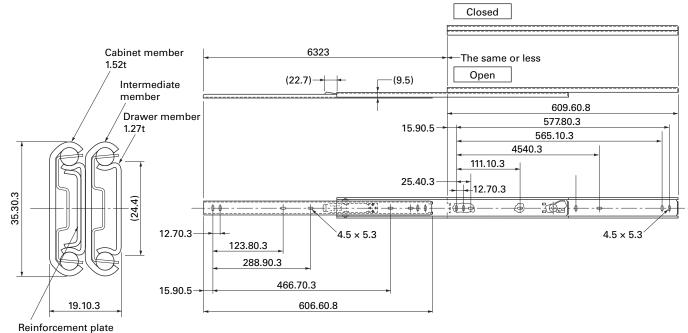


19-inch rack mounting method:


The mass of the instrument should be supported at the bottom of the unit (or the side of the unit when mounted with the slide rails).

Also, for facilitate maintenance, a structure which allows extraction of the main unit by using the slide rail is recommended.


Slide rail mounted type

Guide rail mounted type

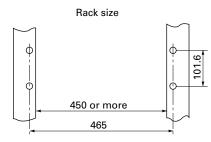


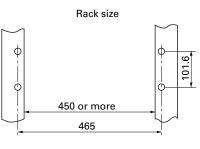


Mounting diagram

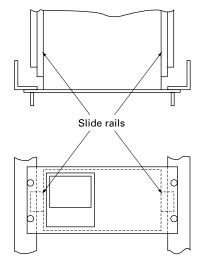




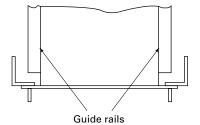






Guide rails For the guide rail mounted type, a maintenance space (200mm or more) should be provided upper the main unit.

EXTERNAL CONNECTION DIAGRAM

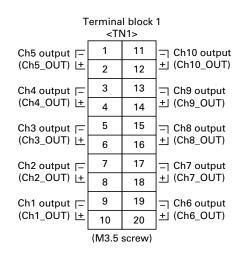


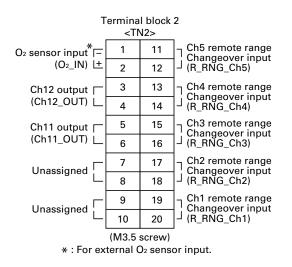

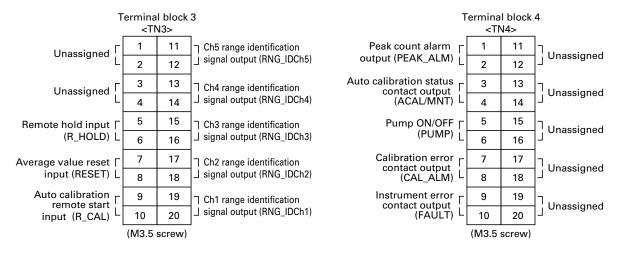

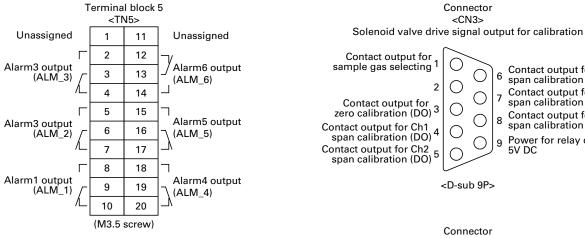

<CN2> For serial communication



<CN3>

О 6

()8

7 ()

9

Contact output for Ch3

Contact output for Ch4

Contact output for Ch5

span calibration (DO)

span calibration (DO)

span calibration (DO)

Power for relay drive 5V DC

С

Ο

С

С


- Note 1) Unassigned terminals are used for internal connection. So they should not be used as repeating terminals either.
- Note 2) The allocation of eaCh Channel (Ch1 to Ch12) depends on measured gas components. Refer to the table on the next page.

Dedicated relay board


This relay board receives signals from connector CN3 of the ZKJ I/O terminal module and activates the calibration solenoid valve directly.

 Relay contact : 1 normally closed contact Contact capacity; 250V/2A AC (resistive load)

OUTLINE DIAGRAM (Unit: mm)

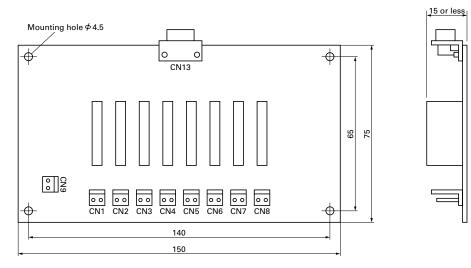

CONNECTIONS

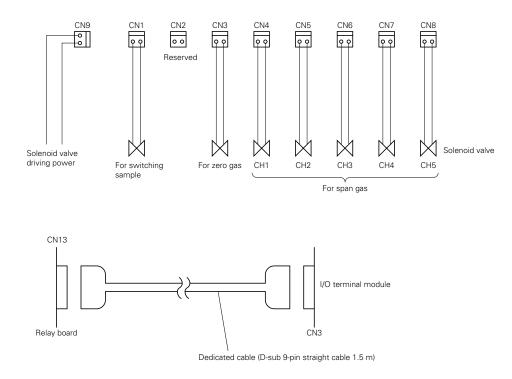

Recommended connector

•CN1 to CN9 : Housing ; VHR-2N (Nihon Solderless Terminal) Contact ; SVH-21T-1.1 (Nihon Solderless Terminal)

Contact action

•During calibration

•During measurement : CN1 ; ON

Others ; OFF : CN1 ; OFF Others ; Contact corresponding to calibration timing is

ON

Table 2. Correspondence between measurement channels and measured value

The following table gives measurement channels and their contents according to the code symbols.

| | Code symbol h digit 6th digit 22nd digit | | Contents |
|---------------|---|-----------------|--|
| P | | ZZNU UIGIL Y | Ch1: NO |
| A | Y | Y | Ch1: SO ₂ |
| <u>D</u> | Y | Y | Ch1: CO ₂ |
| B | Y | Y | Ch1: CO |
| E | Y | Y | Ch1: CH4 |
| F | Y | Y | Ch1: NO, Ch2: SO ₂ |
| <u>г</u> Н | Y | Y | Ch1: NO, Ch2: CO |
| G | Y | Y | Ch1: CO ₂ , Ch2: CO |
| L | Y | Y | Ch1: NO, Ch2: SO ₂ , Ch3: CO |
| | Y | Y | , , , |
| M P | | | Ch1: NO, Ch2: SO ₂ , Ch3: CO ₂ , Ch4: CO |
| | A, B, C | A | Ch1: NOx, Ch2: O ₂ , Ch3: Converted NOx, Ch4: Converted NOx average, Ch5: O ₂ average |
| A | A, B, C | A | Ch1: SO ₂ , Ch2: O ₂ , Ch3: Converted SO ₂ , Ch4: Converted SO ₂ average, Ch5: O ₂ average |
| B F | A, B, C | A | Ch1: CO, Ch2: O ₂ , Ch3: Converted CO, Ch4: Converted CO average, Ch5: O ₂ average |
| F | A, B, C | A | Ch1: NOx, Ch2: SO ₂ , Ch3: O ₂ , Ch4: Converted NOx, Ch5: Converted SO ₂ , |
| | | | Ch6: Converted NOx average, Ch7: Converted SO ₂ average, Ch8: O ₂ average |
| Н | A, B, C | A | Ch1: NOx, Ch2: CO, Ch3: O ₂ , Ch4: Converted NOx, Ch5: Converted CO, |
| | | <u> </u> | Ch6: Converted NOx average, Ch7: Converted CO average, Ch8: O2 average |
| G | A, B, C | A | Ch1: CO ₂ , Ch2: CO, Ch3: O ₂ , Ch4: Converted CO, Ch5: Converted CO average, |
| | | <u> </u> | |
| L | A, B, C | A | Ch1: NOx, Ch2: SO ₂ , Ch3: CO, Ch4: O ₂ , Ch5: Converted NOx, Ch6: Converted SO ₂ , |
| | | | Ch7: Converted CO, Ch8: Converted NOx average, Ch9: Converted SO ₂ average, |
| | | <u> </u> | Ch10: Converted CO average, Ch11: O₂ average |
| Μ | A, B, C | A | Ch1: NOx, Ch2: SO ₂ , Ch3: CO ₂ , Ch4: CO, Ch5: O ₂ , Ch6: Converted NOx, |
| | | | Ch7: Converted SO ₂ , Ch8: Converted CO, Ch9: Converted NOx average, |
| | | | Ch10: Converted SO ₂ average, Ch11: Converted CO average, Ch12: O ₂ average |
| В | A, B, C | В | Ch1: CO, Ch2: O ₂ |
| Н | A, B, C | В | Ch1: NO, Ch2: CO, Ch3: O ₂ |
| G | A, B, C | В | Ch1: CO ₂ , Ch2: CO, Ch3: O ₂ |
| L | A, B, C | В | Ch1: NO, Ch2: SO ₂ , Ch3: CO, Ch4: O ₂ |
| Μ | A, B, C | В | Ch1: NO, Ch2: SO ₂ , Ch3: CO ₂ , Ch4: CO, Ch5: O ₂ |
| В | A, B, C | С | Ch1: CO, Ch2: O ₂ , Ch3: Converted CO, Ch4: Converted CO average, Ch5: O ₂ average |
| Н | A, B, C | С | Ch1: NOx, Ch2: CO, Ch3: O ₂ , Ch4: Converted NOx, Ch5: Converted CO, |
| | | | Ch6: Converted NOx average, Ch7: Converted CO average, Ch8: O_2 average |
| G | A, B, C | С | Ch1: CO ₂ , Ch2: CO, Ch3: O ₂ , Ch4: Converted CO, Ch5: Converted CO average, |
| | | | Ch6: O₂ average |
| L | A, B, C | С | Ch1: NOx, Ch2: SO ₂ , Ch3: CO, Ch4: O ₂ , Ch5: Converted NOx, Ch6: Converted SO ₂ , |
| | | | Ch7: Converted CO, Ch8: Converted NOx average, Ch9: Converted SO2 average, |
| | | | Ch10: Converted CO average, Ch11: O₂ average |
| Μ | A, B, C | С | Ch1: NOx, Ch2: SO ₂ , Ch3: CO ₂ , Ch4: CO, Ch5: O ₂ , Ch6: Converted NOx, |
| | | | Ch7: Converted SO ₂ , Ch8: Converted CO, Ch9: Converted NO _x average, |
| | | | Ch10: Converted SO ₂ average, Ch11: Converted CO average, Ch12: O ₂ average |
| 0 | Y | Y | Ch1:N ₂ O |
| R | Y | Y | Ch1:N ₂ O, Ch2:CO ₂ |
| S | Y | Y | Ch1:NO, Ch2:N ₂ O, Ch3:CO ₂ |
| T | Y | Y | Ch1:SO ₂ , Ch2:N ₂ O, Ch3:CO ₂ |
| U | Y | Y | Ch1:N ₂ O, Ch2:CO ₂ , Ch3:CO |
| V | Y | Y | Ch1:CH4, Ch2:N2O, Ch3:CO2 |
| W | Y | Y | Ch1:CH4, Ch2:N2O, Ch3:CO2 Ch1:NO, Ch2:SO2, Ch3:N2O, Ch4:CO2 |
| | | | |
| S | A, B, C | Y | Ch1:NO, Ch2:N ₂ O, Ch3:CO ₂ ,Ch4:O ₂ |
| T | A, B, C | Y | Ch1:SO ₂ , Ch2:N ₂ O, Ch3:CO ₂ ,Ch4:O ₂ |
| U | A, B, C | Ү, В | Ch1:N ₂ O, Ch2:CO ₂ , Ch3:CO, Ch4:O ₂ |
| V | A, B, C | Υ | Ch1:CH ₄ , Ch2:N ₂ O, Ch3:CO ₂ ,Ch4:O ₂ |
| W | A, B, C | Υ | Ch1:NO, Ch2:SO ₂ , Ch3:N ₂ O, Ch4:CO ₂ , Ch5:O ₂ |
| S | A, B, C | А | Ch1:NOx, Ch2:N ₂ O, Ch3:CO ₂ , Ch4:O ₂ , Ch5:Converted NOx, Ch6:Converted NOx average, |
| | | | Ch7:O₂average |
| Т | A, B, C | A | Ch1:SO ₂ , Ch2:N ₂ O, Ch3:CO ₂ ,Ch4:O ₂ , Ch5:Converted SO ₂ , Ch6:Converted SO ₂ average, |
| | | | Ch7:O₂average |
| U | A, B, C | A, C | Ch1:N ₂ O, Ch2:CO ₂ , Ch3:CO, Ch4:O ₂ , Ch5:Converted CO, Ch6:Converted CO average, |
| - | ., 5, 6 | | Ch7:O ₂ average |
| V | A, B, C | A | Ch1:CH4, Ch2:N2O, Ch3:CO2,Ch4:O2,Ch5:O2 average |
| Ŵ | A, B, C | A | Ch1:NOx, Ch2:SO ₂ , Ch3:N ₂ O, Ch4:CO ₂ , Ch5:O ₂ , Ch6:Converted NOx, Ch7:Converted SO ₂ , |
| •• | 1, , , , , , , , | | Ch8:Converted NOx average, Ch9:Converted SO ₂ average, Ch10:O ² average |

Exclusive Zirconia O² Sensor (to be purchased separately)

For O_2 correction, the gas analyzer ZKJ can accept linealized 0 to 1V DC signal coming from analyzer calibrated 0 to 25% O_2 full scale. If the analyzer is not available, Fuji can supply exclusive Zirconia O_2 sensor Model ZFK. Measuring method:

Zirconia system Measurable component and measuring range:

| | Measurable | component | Rang | ge | | |
|--------------------------------------|-------------|-----------------------|--|--|--|--|
| | O2 | Oxygen | 0 to 25 | vol% | | |
| Rep | eatability: | Within : | ± 0.5% of | f full scale | | |
| Linearity: Within ± 1% of full scale | | | | | | |
| Zer | o drift: | Within : | ± 1% of f | ull scale/week | | |
| Spa | n drift: | Within : | ± 2% of f | ull scale/week | | |
| Res | ponse time | e: Approx. | 20 secor | nds (for 90% response) | | |
| Mea | asured gas | | | | | |
| | | | .25L / min | | | |
| | | | principle, r error due versus th concentrati (SO2 of 250 | nia system, due to its may produce a measuring to relative concentration e com-bustible O ₂ gas ion. Also, a corrosive gas 0 ppm or more, etc.) may fe of the sensor. | | |
| Gas | inlet/outle | | | | | |
| | | Rc ¹ /4 or | NPT ¹ /4 | | | |
| Pow | /er supply: | Rated vo | oltage | ; 100 to 115V AC or | | |
| | | | | 200 to 240V AC | | |
| | | | | ; 50Hz/60Hz | | |
| | | Max. rat | ted power | ; 215VA (during power ON) | | |
| | | | | 65VA (during steady- | | |
| | | | | state operation) | | |
| Enc | losure: | Steel ca | asing, for | indoor application | | |
| | cation: | | | cation (LED) | | |
| Tem | nperature a | • | | | | |
| | | | | 1a contact, | | |
| | | Contact load) | capacity | 220V, 1A AC (resistive | | |
| Out | er dimensi | ons (H x W | / x D): | | | |
| | | 141 x 1 | 70 x 190m | nm | | |
| Mas | ss {weight} | : Approx. | 3kg | | | |
| Fini | sh color: | Munsel | I 5Y 7/1 | | | |
| | | | | | | |
| | | | | | | |



CODE SYMBOLS

| 1 2 3 4 5 6 7 8 Z F K 7 Y Y 4 | 9 | 10 11 12 13 Y 0 Y Y | Description |
|----------------------------------|---|------------------------|---|
| 7YY | | | Measuring method Zirconia method |
| 9 B C | | | Power supply 100 to 115V AC 50/60Hz(Standard) 200 to 240V AC 50/60Hz(Standard) 200 to 240V AC 50/60Hz(CE mark) |
| | 1 | 3 | Gas inlet/outlet size Rc ¹ /4 NPT ¹ /4 |

SCOPE OF DELIVERY

- Gas analyzer ... 1 unit
- Input /output terminal module for external mounting ... 1 set
- Connection cable (1m) between main unit and input / output terminal module ... 1 pc
- Power cable (standard inlet type 2m) ... 1 pc
- Spare fuses (250V, 3.15A AC, delay type) ... 2 pcs
- Instruction manual ... 1 copy
- Slide rails ... 2 pcs (when with slide rails are selected)
- Relay board ... 1 pc (when with relay board are selected)
- Ceble foe relay board ... 1 pc (when with relay board are selected)


ORDERING INFORMATION

- 1. Code symbols
- 2. Application and composition of sample gas


Items to be prepared separately

- Various sampling devices (refer to Data Sheets for the sampling devices)
- Dedicated zirconia O2 sensor (see Page 16)

OUTLINE DIAGRAM (Unit:mm)

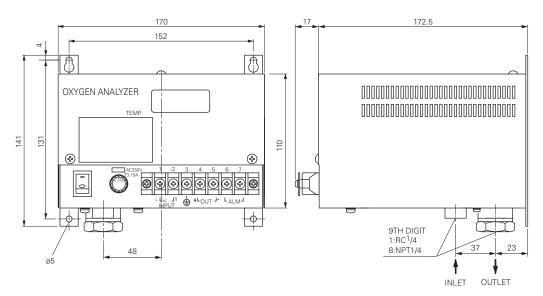

EXTERNAL CONNECTION DIAGRAM



▲ Caution on Safety
 *Before using this product, be sure to read its instruction manual in advance.

Fuji Electric Co., Ltd.

International Sales Div Sales Group Gate City Ohsaki, East Tower, 11-2, Osaki 1-chome, Shinagawa-ku, Tokyo 141-0032, Japan http://www.fujielectric.com Phone: 81-3-5435-7280, 7281 Fax: 81-3-5435-7425 http://www.fjielectric.com/products/instruments/